

Toyota Motor Europe NV/SA Address: Avenue du bourget 60 -1140 Brussels, Belgium

2015 TOYOTA MOTOR CORPORATION All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corportation

# Pictorial index

# Search by illustration

For safety and security	Make sure to read through them (Main topics: Child seat, theft deterrent system)	1
Vehicle status information and indicators	Reading driving-related information (Main topics: Meters, multi-information display)	2
Before driving	Opening and closing the doors and windows, adjustment before driving (Main topics: Keys, doors, seats, power windows)	3
Driving	Operations and advice which are necessary for driving (Main topics: Starting hybrid system, refueling)	4
Interior features	Usage of the interior features (Main topics: Air conditioner, storage features)	5
Maintenance and care	Caring for your vehicle and maintenance procedures (Main topics: Interior and exterior, light bulbs)	6
When trouble arises	What to do in case of malfunction and emergency (Main topics: 12-volt battery discharge, flat tire)	7
Vehicle specifications	Vehicle specifications, customizable features (Main topics: Fuel, oil, tire inflation pressure)	8

Inday	_		-		
		-	ᆈ	_	
		rı	"	-	×

Search by symptom	
Search alphabetically	

For	your information6		Multi-information display 109
	ding this manual9		Energy monitor/consumption
	to search10		screen119
Picto	orial index12		
1	For safety and security	3	Before driving
1-1.	For safe use	3-1.	Key information
	Before driving32		Keys126
	For safe driving33	3-2.	Opening, closing and locking the doors
	Seat belts35		Side doors129
	SRS airbags39		Back door134
	Exhaust gas precautions 47		Smart entry & start system .147
1-2.	Child safety	3-3.	Adjusting the seats
	Airbag manual on-off system 48		Front seats <b>152</b>
	Riding with children49		Rear seats153
	Child restraint systems50		Driving position memory 155
1-3.	Emergency assistance		Head restraints158
	eCall66	3-4.	Adjusting the steering wheel
1-4.	Hybrid system		and mirrors
	Hybrid system features79		Steering wheel160
	Hybrid system precautions 82		Inside rear view mirror161
1-5.	Theft deterrent system		Digital Rear-view Mirror 162
	Immobilizer system87		Outside rear view mirrors171
	Double locking system88	3-5.	Opening, closing the win-
	Alarm89		dows and moon roof
,	Vehicle status information		Power windows173
	and indicators		Panoramic moon roof176
2-1.	Instrument cluster	4	Driving
	Warning lights and indicators 94		
	Gauges and meters (with 4.2-	4-1.	Before driving
	inch display)99		Driving the vehicle182
	Gauges and meters (with 7-inch		Cargo and luggage188
	display) 103		

	Trailer towing (for Azerbaijan and Georgia)189		PKSB (Parking Support Brake)	
	Trailer towing (except for Azerbaijan and Georgia)190		Parking Support Brake function (static objects)306	
4-2.	Driving procedures		Parking Support Brake function	
	Power (ignition) switch199		(rear-crossing vehicles) 309	
	EV drive mode203		Driving mode select switch .311	1
	Hybrid transmission205		Trail Mode (AWD vehicles).313	
	Turn signal lever209		GPF (Gasoline Particulate Filter)	2
	Parking brake210		system314	
	Brake Hold213		Driving assist systems315	
4-3.	Operating the lights and wip-	4-6.	Driving tips	3
	ers		Hybrid Electric Vehicle driving	
	Headlight switch216		tips <b>322</b>	
	AHB (Automatic High Beam)		Winter driving tips324	4
	218		Utility vehicle precautions 327	
	Fog light switch221	5	Interior features	5
		9	interior reatures	
	Windshield wipers and washer			
	Rear window wiper and washer	5-1.	Using the air conditioning	6
	222	5-1.	system and defogger	6
4-4.	Rear window wiper and washer	5-1.		
4-4.	Rear window wiper and washer	5-1.	system and defogger Automatic air conditioning system332	6
	Rear window wiper and washer 225 Refueling	5-1.	system and defogger Automatic air conditioning sys-	
	Rear window wiper and washer		system and defogger  Automatic air conditioning system	
	Rear window wiper and washer		system and defogger  Automatic air conditioning system	7
	Rear window wiper and washer	5-2.	system and defogger  Automatic air conditioning system	7
	Rear window wiper and washer	5-2.	system and defogger  Automatic air conditioning system	7
	Rear window wiper and washer	5-2.	system and defogger  Automatic air conditioning system	7
	Rear window wiper and washer	5-2.	system and defogger  Automatic air conditioning system	7
	Rear window wiper and washer	5-2. 5-3.	system and defogger  Automatic air conditioning system	7
	Rear window wiper and washer	5-2. 5-3.	Automatic air conditioning system	7
	Rear window wiper and washer	5-2. 5-3.	system and defogger Automatic air conditioning system	7
	Rear window wiper and washer	5-2. 5-3.	Automatic air conditioning system	7

.....291

in an emergency ......418

6	Maintenance and care		If the vehicle is submerged or water on the road is rising <b>419</b>
		7-2.	Steps to take in an emergency
6-1.	Maintenance and care		If your vehicle needs to be towed
	Cleaning and protecting the vehicle exterior364 Cleaning and protecting the		If you think something is wrong
	vehicle interior367		If a warning light turns on or a
6-2.	Maintenance		warning buzzer sounds427
	Maintenance requirements .370		If a warning message is dis-
6-3.	Do-it-yourself maintenance		played436
	Do-it-yourself service precautions372		If you have a flat tire (vehicles without spare tire)440
	Hood		If you have a flat tire (vehicles with spare tire)451
	Positioning a floor jack375 Engine compartment377		If the hybrid system will not start460
	12-volt battery382		If you lose your keys461
	Tires		If the fuel filler door cannot be opened462
	Wheels391 Air conditioning filter393		If the electronic key does not operate properly462
	Cleaning the hybrid battery (traction battery) air intake vent and		If the 12-volt battery is discharged464
	filter396		If your vehicle overheats469
	Wiper insert replacement400		If the vehicle becomes stuck
	Electronic key battery403		472
	Checking and replacing fuses405	8	Vehicle specifications
	Light bulbs408		
		8-1.	Specifications
7	When trouble arises		Maintenance data (fuel, oil level, etc.)476
7-1.	Essential information		Fuel information486
	Emergency flashers418	8-2.	Customization
	If your vehicle has to be stopped		Customizable features488

### 8-3. Initialization

Items to initialize .....500

### Index

What to do if... (Troubleshooting) ......502
Alphabetical Index .....505

1

2

3

1

5

6

7

R

### For your information

### Main Owner's Manual

Please note that this manual applies to all models and explains all equipment, including options. Therefore, you may find some explanations for equipment not installed on your vehicle.

All specifications provided in this manual are current at the time of printing. However, because of the Toyota policy of continual product improvement, we reserve the right to make changes at any time without notice.

Depending on specifications, the vehicle shown in the illustrations may differ from your vehicle in terms of equipment.

# Accessories, spare parts and modification of your Toyota

Both genuine Toyota and a wide variety of other spare parts and accessories for Toyota vehicles are currently available in the market. Should it be determined that any of the genuine Toyota parts or accessories supplied with the vehicle need to be replaced, Toyota recommends that genuine Toyota parts or accessories, be used to replace them. Other parts or accessories of matching quality can also be used. Toyota cannot accept any liability

or guarantee spare parts and accessories which are not genuine Toyota products, nor for replacement or installation involving such parts. In addition, damage or performance problems resulting from the use of non-genuine Toyota spare parts or accessories may not be covered under warranty.

Also, remodeling like this will have an effect on advanced safety equipment such as Toyota Safety Sense and there is a danger that it will not work properly or the danger that it may work in situations where it should not be working.

### Installation of an RF-transmitter system

The installation of an RF-transmitter system in your vehicle could affect electronic systems such as:

- Hybrid system
- Multiport fuel injection system/sequential multiport fuel injection system
- Toyota Safety Sense
- Cruise control system
- Anti-lock brake system
- SRS airbag system
- Seat belt pretensioner system

Be sure to check with any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for precautionary measures or special instructions regard-

ing installation of an RF-transmitter system.

Further information regarding frequency bands, power levels, antenna positions and installation provisions for the installation of RF-transmitters, is available on request at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

High voltage parts and cables on the Hybrid Electric Vehicles emit approximately the same amount of electromagnetic waves as the conventional gasoline powered vehicles or home electronic appliances despite of their electromagnetic shielding.

Unwanted noise may occur in the reception of the radio frequency transmitter (RF-transmitter).

### Vehicle data recording

The vehicle is equipped with sophisticated computers that will record certain data, such as:

- Engine speed/Electric motor speed (traction motor speed)
- Accelerator status
- · Brake status
- · Vehicle speed
- Operation status of the driving assist systems
- Images from the cameras
   Your vehicle is equipped with
   cameras. Contact any authorized
   Toyota retailer or Toyota authorized repairer, or any reliable

- repairer for the location of recording cameras.
- Hybrid battery (traction battery) status

The recorded data varies according to the vehicle grade level, options and destinations with which it is equipped.

These computers do not record conversations or sounds, and only record images outside of the vehicle in certain situations.

### Data usage

Toyota may use the data recorded in this computer to diagnose malfunctions, conduct research and development, and improve quality.

Toyota will not disclose the recorded data to a third party except:

- With the consent of the vehicle owner or with the consent of the lessee if the vehicle is leased
- In response to an official request by the police, a court of law or a government agency
- · For use by Toyota in a lawsuit
- For research purposes where the data is not tied to a specific vehicle or vehicle owner
- Recorded image information can be erased by any authorized Toyota retailer or Toyota authorized repairer

The image recording function can be disabled. However, if the function is disabled, data from when the system operates will not be available.

### Scrapping of your Toyota

The SRS airbag and seat belt pretensioner devices in your Toyota contain explosive chemicals. If the vehicle is scrapped with the airbags and seat belt pretensioners left as they are, this may cause an accident such as fire. Be sure to have the systems of the SRS airbag and seat belt pretensioner removed and disposed of by a qualified service shop or any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer, before you scrap your vehicle.

# A

### WARNING

# General precautions while driving

Driving under the influence: Never drive your vehicle when under the influence of alcohol or drugs that have impaired your ability to operate your vehicle. Alcohol and certain drugs delay reaction time, impair judgment and reduce coordination, which could lead to an accident that could result in death or serious injury.

Defensive driving: Always drive defensively. Anticipate mistakes that other drivers or pedestrians might make and be ready to avoid accidents.

Driver distraction: Always give your full attention to driving. Anything that distracts the driver, such as adjusting controls, talking on a cellular phone or reading can result in a collision with resulting death or serious injury to you, your occupants or others.

### General precaution regarding children's safety

Never leave children unattended in the vehicle, and never allow children to have or use the key.

Children may be able to start the vehicle or shift the vehicle into neutral. There is also a danger that children may injure themselves by playing with the side windows, the panoramic moon roof, or other features of the vehicle. In addition, heat build-up or extremely cold temperatures inside the vehicle can be fatal to children.


# Reading this manual

# Explains symbols used in this manual


# Symbols in this manual

Symbols	Meanings
	WARNING:
A	Explains something that, if not obeyed, could cause death or serious injury to people.
	NOTICE:
$\triangle$	Explains something that, if not obeyed, could cause damage to or a malfunction in the vehicle or its equipment.
123	Indicates operating or working procedures. Follow the steps in numerical order.

# Symbols in illustrations

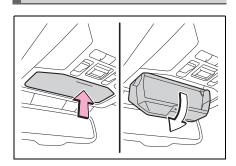


Symbols	Meanings
	Indicates the action (pushing, turning, etc.) used to operate switches and other devices.
	Indicates the outcome of an operation (e.g. a lid opens).

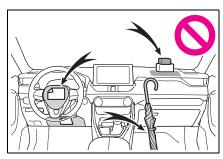


Symbols	Meanings
<b>*</b>	Indicates the component or position being explained.
0	Means Do not, Do not do this, or Do not let this happen.

# How to search

- Searching by name
- Alphabetical index: →P.505

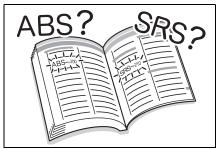

- Searching by installation position
- Pictorial index: →P.12

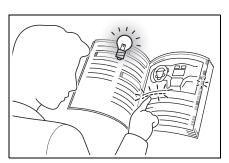


- Searching by symptom or sound
- What to do if... (Troubleshooting): →P.502




### ■ Searching by title

● Table of contents: →P.2

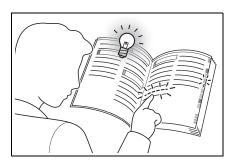

# Pictorial index

# **■**Exterior

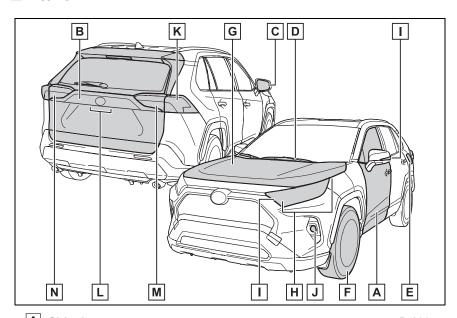

Α	Side doors	P.129
	Locking/unlocking	P.129
	Opening/closing the side windows	P.173
	Locking/unlocking by using the mechanical key	P.462
	Warning messages	P.436
В	Back door	P.134
	Locking/unlocking	P.135
	Opening from inside the cabin*1	P.137
	Opening from outside	P.136, 137
	Warning messages	P.436
С	Outside rear view mirrors	P.171
	Adjusting the mirror angle	P.171
	Folding the mirrors	P.172
	Defogging the mirrors	P.334
D	Windshield wipers	P.222

Precautions against winter season
To prevent freezing (windshield wiper de-icer)*1P.336
Precautions against car wash (Rain-sensing windshield wipers)*1. P.365
Replacing the wiper insertP.400
E Fuel filler door
Refueling method
Fuel type/fuel tank capacity
F Tires
Tire size/inflation pressure
Winter tires/tire chain
Checking/rotation/tire pressure warning system
Coping with flat tiresP.440, 451
G HoodP.374
OpeningP.374
Engine oil
Coping with overheat
Warning messages
Light bulbs of the exterior lights for driving
(Replacing method: P.408, Watts: P.485)
H Headlights/front position lights/daytime running lights P.216
I Turn signal lightsP.209
J Front fog lights <sup>*1</sup> P.221
K Stop lights/tail lights/turn signal lightsP.209, 216
L License plate lightsP.216
M Tail light
Shifting the shift lever to R
N Tail light

# 14 Pictorial index


# Back-up light

Shifting the shift lever to R	P.205
Rear fog light <sup>*2</sup>	P.221

<sup>\*1:</sup> If equipped

 $<sup>^{\</sup>star 2}$ : It may be located on the opposite side depending on the target region.

# ■Instrument panel (Left-hand drive vehicles)

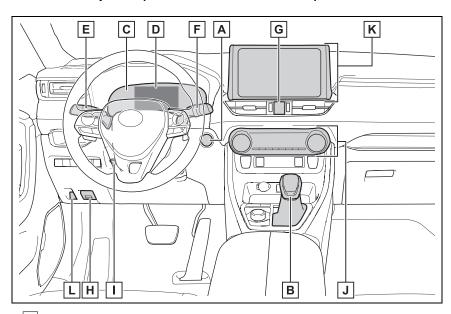


Power switch	P.199
Starting the hybrid system/changing the modes	P.199, 201
Emergency stop of the hybrid system	P.418
When the hybrid system will not start	P.460
Warning messages	P.436
Shift lever	P.205
Changing the shift position	P.206
Precautions against towing	P.421
When the shift lever does not move	P.207
Meters	P.99, 103
Reading the meters/adjusting the instrument cluster light	
P.99, 1	101, 103, 107
Warning lights/indicator lights	P.94
When the warning lights come on	P.427
Multi-information display	P.109
	Starting the hybrid system/changing the modes

#### 16 Pictorial index

Owner's Manual".

	Display	P.109
	Energy monitor	P.119
	When the warning messages are displayed	P.436
E	Turn signal lever Headlight switch	
	Headlights/front position lights/tail lights/ license plate lights/daytime running lights	P.216
	Front fog lights <sup>*1</sup> /rear fog light <sup>*1</sup>	P.221
F	Windshield wiper and washer switch	P.222
	Rear window wiper and washer switch	P.225
	Usage	P.222, 225
	Adding washer fluid	P.381
	Warning messages	P.436
G	Emergency flasher switch	P.418
Н	Hood lock release lever	P.374
1	Tilt and telescopic steering lock release lever	P.160
	Adjustment	P.160
J	Air conditioning system	P.332
	Usage	P.332
	Rear window defogger	P.334
K	Audio system*1, 2	
L	Fuel filler door opener switch	P.228
*1: If eq	uipped	
*2: Refe	er to "Navigation and Multimedia System Owner's Manual"	or "Multimedia


# ■Switches (Left-hand drive vehicles)

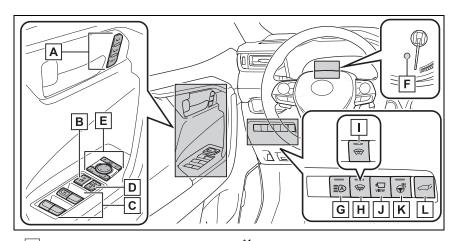

Α	Driving position memory switches	P.155
В	Window lock switch	P.175
С	Power window switches	P.173
D	Door lock switches	P.132
Ε	Outside rear view mirror switches	P.171
F	"ODO TRIP" switch	P.101, 107
G	Automatic High Beam switch*1	P.218
Н	Windshield wiper de-icer switch*1	P.336
I	Heated Windshield Defroster switch*1	<sup>1</sup> P.336
J	Camera switch*1, 2	
K	Heated steering wheel switch*1	P.339
L	Power back door switch*1	P.137

<sup>1:</sup> If equipped


<sup>\*2:</sup> Refer to "Navigation and Multimedia System Owner's Manual" or "Multimedia Owner's Manual".

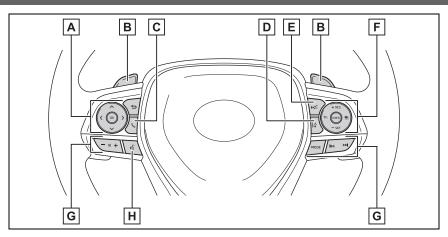

Α	Meter control switches	P.110
В	Paddle shift switches <sup>*1</sup>	P.207
С	Phone switch*2	
D	LTA (Lane Tracing Assist) switch*1	P.242
Ε	Vehicle-to-vehicle distance switch*1	P.261
F	Cruise control switches*1	
	Dynamic radar cruise control with full-speed range <sup>*1</sup>	P.256
	Cruise control <sup>*1</sup>	P.268
	Speed limiter main switch*1	P.271
G	Audio remote control switches*2	
Н	Talk switch*1, 2	


<sup>\*1:</sup> If equipped

 $<sup>^{\</sup>star 2}\!\!:\!$  Refer to "Navigation and Multimedia System Owner's Manual" or "Multimedia Owner's Manual".

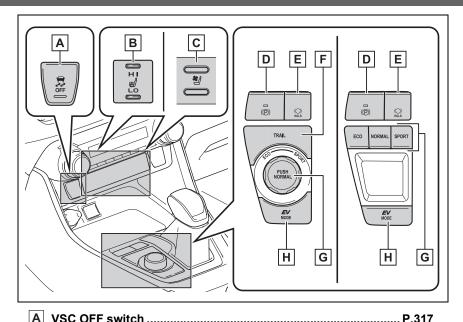

A VSC OFF SWILCH	P.317
B Front seat heater switches*	P.339
C Front seat heater and seat ventilator switches*	P.340
D Parking brake switch	P.210
Applying/releasing	P.210
Precautions against winter season	P.325
Warning buzzer/message	P.433, 436
E Brake hold switch	P.213
F Trail Mode switch*	P.313
G Driving mode select switch	P.311
H EV drive mode switch	P.203
*: If equipped	


# ■Interior (Left-hand drive vehicles)

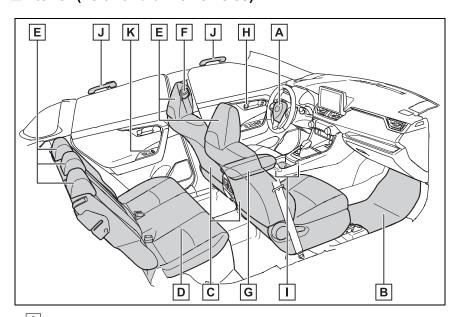

Α	SRS airbags	P.39
В	Floor mats	P.32
С	Front seats	P.152
D	Rear seats	P.153
Ε	Head restraints	P.158
F	Seat belts	P.35
G	Console box	P.345
Н	Inside lock buttons	P.132
Ι	Cup holders	P.346
J	Assist grips	P.362
K	Rear seat heater switches*	P.339

<sup>\*:</sup> If equipped

# ■Ceiling (Left-hand drive vehicles)

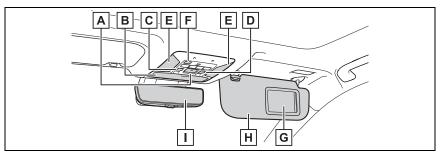

Α	"SOS" button*1	P.66
В	Auxiliary box <sup>*1</sup>	P.347
С	Panoramic moon roof switch*1	P.176
D	Electronic sunshade switch*1	P.176
Ε	Interior lights <sup>*2</sup> Personal lights	
F	Intrusion sensor and tilt sensor cancel switch*1	P.90
G	Vanity mirrors	P.353
Н	Sun visors <sup>*3</sup>	P.353
Ι	Inside rear view mirror*1	P.161
	Digital Rear-view Mirror*1	P.162


<sup>\*1:</sup> If equipped

 $<sup>^{\</sup>star 2}\!\!:$  The illustration shows the front, but they are also equipped in the rear.

 $<sup>^{*3}</sup>$ : NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur. ( $\rightarrow$ P.54)



# ■Instrument panel (Right-hand drive vehicles)

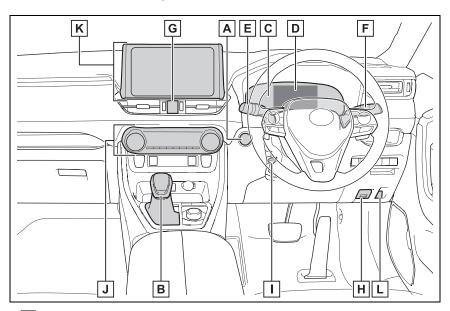

Α	Power switch	P.199
	Starting the hybrid system/changing the modes	P.199, 201
	Emergency stop of the hybrid system	P.418
	When the hybrid system will not start	P.460
	Warning messages	P.436
В	Shift lever	P.205
	Changing the shift position	P.206
	Precautions against towing	P.421
	When the shift lever does not move	P.207
С	Meters	P.99, 103
	Reading the meters/adjusting the instrument cluster light	101, 103, 107
	Warning lights/indicator lights	
	When the warning lights come on	P.427
D	Multi-information display	P.109


#### 24 Pictorial index

	Display	P.109
	Energy monitor	P.119
	When the warning messages are displayed	P.436
Ε	Turn signal lever Headlight switch	
	Headlights/front position lights/tail lights/ license plate lights/daytime running lights	P.216
	Front fog lights*1/rear fog light	P.221
F	Windshield wiper and washer switch	P.222
	Rear window wiper and washer switch	P.225
	Usage	P.222, 225
	Adding washer fluid	P.381
	Warning messages	P.436
G	Emergency flasher switch	P.418
Н	Hood lock release lever	P.374
I	Tilt and telescopic steering control lever	P.160
	Adjustment	
J	Adjustment	P.160
J	•	P.160
J	Air conditioning system	P.160 P.332 P.332
J	Air conditioning system Usage	P.160 P.332 P.332
	Air conditioning system	P.160 P.332 P.332 P.334

<sup>\*1:</sup> If

 $<sup>^{\</sup>star 2}\!\!:\!$  Refer to "Navigation and Multimedia System Owner's Manual" or "Multimedia Owner's Manual".


# ■Switches (Right-hand drive vehicles)

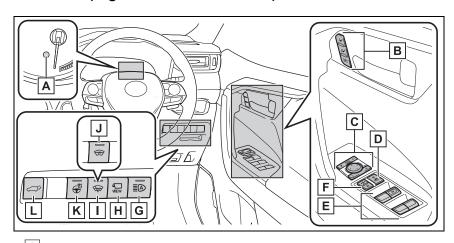

A "ODO TRIP" switch
B Driving position memory switches*1P.155
C Outside rear view mirror switches P.171
D Window lock switch
E Power window switches
F Door lock switches
G Automatic High Beam switch*1P.218
H Camera switch*1, 2
■ Windshield wiper de-icer switch*1
J Heated Windshield Defroster switch*1P.336
K Heated steering wheel switch*1
L Power back door switch*1P.137

<sup>1:</sup> If equipped

<sup>\*2:</sup> Refer to "Navigation and Multimedia System Owner's Manual" or "Multimedia Owner's Manual".

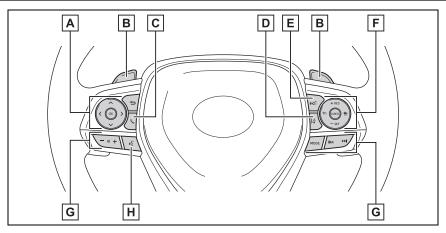


Α	Meter control switches	2.110
В	Paddle shift switches <sup>*1</sup> I	2.207
С	Phone switch*2	
D	LTA (Lane Tracing Assist) switch*1	2.242
Ε	Vehicle-to-vehicle distance switch*1	2.261
F	Cruise control switches*1	
	Dynamic radar cruise control with full-speed range*1	2.256
	Cruise control <sup>*1</sup>	<sup>2</sup> .268
	Speed limiter main switch*1	<sup>2</sup> .271
G	Audio remote control switches*2	
Н	Talk switch*1, 2	

ii laik Switc

<sup>\*1:</sup> If equipped


 $<sup>^{\</sup>star 2}\!\!:\!$  Refer to "Navigation and Multimedia System Owner's Manual" or "Multimedia Owner's Manual".

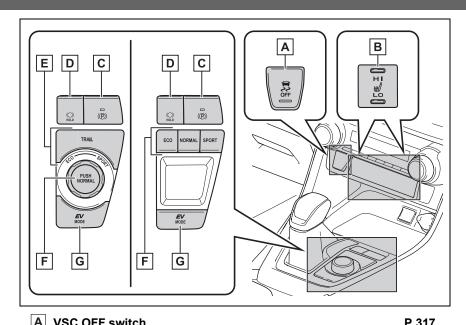

P.31/
P.339
P.210
P.210
P.325
P.433, 436
P.213
P.313
P.311
P.203


<sup>\*:</sup> If equipped

# ■Interior (Right-hand drive vehicles)

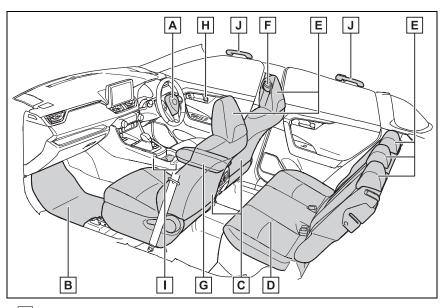

Α	SRS airbags	P.39
В	Floor mats	P.32
С	Front seats	P.152
D	Rear seats	P.153
Ε	Head restraints	P.158
F	Seat belts	P.35
G	Console box	P.345
Н	Inside lock buttons	P.132
1	Cup holders	P.346
J	Assist grips	P.362

# ■Ceiling (Right-hand drive vehicles)

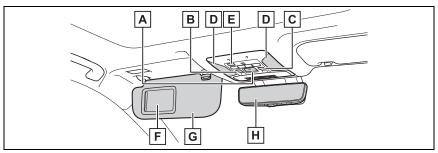

A "SOS" button	P.66
B Panoramic moon roof switch*1	P.176
C Electronic sunshade switch*1	P.176
D Interior lights <sup>*2</sup>	P.341
Personal lights	P.342
E Intrusion sensor and tilt sensor cancel switch*1	P.90
F Vanity mirrors	P.353
G Sun visors <sup>*3</sup>	P.353
H Inside rear view mirror*1	
Digital Rear-view Mirror <sup>*1</sup>	P.162
*1: If equipped	

 $<sup>^{*2}</sup>$ : The illustration shows the front, but they are also equipped in the rear.

<sup>\*3:</sup> NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur. (→P.54)



# For safety and security

1-1.	For safe use
	Before driving32
	For safe driving33
	Seat belts35
	SRS airbags39
	Exhaust gas precautions 47
1-2.	Child safety
	Airbag manual on-off system
	48
	Riding with children49
	Child restraint systems 50
1-3.	Emergency assistance
	eCall66
1-4.	Hybrid system
	Hybrid system features79
	Hybrid system precautions . 82
1-5.	Theft deterrent system
	Immobilizer system87
	Double locking system88
	Alarm89


### **Before driving**

Observe the following before starting off in the vehicle to ensure safety of driving.


### Installing floor mats

Use only floor mats designed specifically for vehicles of the same model and model year as your vehicle. Fix them securely in place onto the carpet.

Insert the retaining hooks (clips) into the floor mat eyelets.

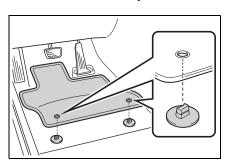

2 Turn the upper knob of each retaining hook (clip) to secure the floor mats in place.

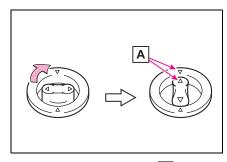

Always align the  $\triangle$  marks  $\overline{\mathbf{A}}$  .

The shape of the retaining hooks (clips) may differ from that shown in the illus-

tration.



### WARNING

Observe the following precautions. Failure to do so may cause the driver's floor mat to slip, possibly interfering with the pedals while driving. An unexpectedly high speed may result or it may become difficult to stop the vehicle. This could lead to an accident, resulting in death or serious injury.

- When installing the driver's floor mat
- Do not use floor mats designed for other models or different model year vehicles, even if they are Toyota Genuine floor mats.
- Only use floor mats designed for the driver's seat.
- Always install the floor mat securely using the retaining hooks (clips) provided.
- Do not use two or more floor mats on top of each other.
- Do not place the floor mat bottomside up or upside-down.

### Before driving

 Check that the floor mat is securely fixed in the correct place with all the provided retaining hooks (clips). Be especially careful to perform this check after cleaning the floor.




# **WARNING**

With the hybrid system stopped and the shift lever in P, fully depress each pedal to the floor to make sure it does not interfere with the floor mat.

# For safe driving

For safe driving, adjust the seat and mirror to an appropriate position before driving.

### Correct driving posture

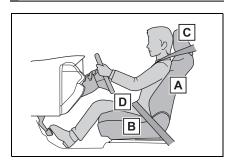

- Adjust the angle of the seatback so that you are sitting straight up and so that you do not have to lean forward to steer. (→P.152)
- B Adjust the seat so that you can depress the pedals fully and so that your arms bend slightly at the elbow when gripping the steering wheel. (→P.152)
- C Lock the head restraint in place with the center of the head restraint closest to the top of your ears. ( $\rightarrow$ P.158)
- D Wear the seat belt correctly. (→P.36)

## A

### **WARNING**

Observe the following precautions. Failure to do so may result in death or serious injury.

- Do not adjust the position of the driver's seat while driving.
   Doing so could cause the driver to lose control of the vehicle.
- Do not place a cushion between the driver or passenger and the seatback. A cushion may prevent correct posture from being achieved, and reduce the effectiveness of the seat belt and head restraint.
- Do not place anything under the front seats.
   Objects placed under the front seats may become jammed in the seat tracks and stop the seat from locking in place. This may lead to an accident and the adjustment mechanism may also be damaged.
- Always observe the legal speed limit when driving on public roads.
- When driving over long distances, take regular breaks before you start to feel tired.
   Also, if you feel tired or sleepy while

Also, if you feel tired or sleepy while driving, do not force yourself to continue driving and take a break immediately.

### Correct use of the seat belts

Make sure that all occupants are wearing their seat belts before driving the vehicle. ( $\rightarrow$ P.36)

Use a child restraint system appropriate for the child until the child becomes large enough to properly wear the vehicle's seat belt.  $(\rightarrow P.50)$ 

### Adjusting the mirrors

Make sure that you can see backward clearly by adjusting the inside rear view mirror (if equipped), Digital Rear-view Mirror (if equipped) and outside rear view mirrors properly. (→P.161, 162, 171)

### Seat belts

Make sure that all occupants are wearing their seat belts before driving the vehicle.

#### A

#### WARNING

Observe the following precautions to reduce the risk of injury in the event of sudden braking, sudden swerving or an accident.

Failure to do so may cause death or serious injury.

#### Wearing a seat belt


- Ensure that all passengers wear a seat belt.
- Always wear a seat belt properly.
- Each seat belt should be used by one person only. Do not use a seat belt for more than one person at once, including children.
- Toyota recommends that children be seated in the rear seat and always use a seat belt and/or an appropriate child restraint system.
- To achieve a proper seating position, do not recline the seat more than necessary. The seat belt is most effective when the occupants are sitting up straight and well back in the seats.
- Do not wear the shoulder belt under your arm.
- Always wear your seat belt low and snug across your hips.

#### ■ Pregnant women

Obtain medical advice and wear the seat belt in the proper way.  $(\rightarrow P.36)$ 

Women who are pregnant should position the lap belt as low as possible over the hips in the same manner as other occupants, extending the shoulder belt completely over the shoulder and avoiding belt contact with the rounding of the abdominal area.

If the seat belt is not worn properly, not only the pregnant woman, but also the fetus could suffer death or serious injury as a result of sudden braking or a collision.

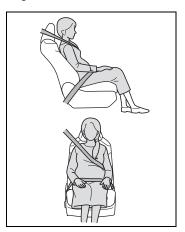


#### ■People suffering illness

Obtain medical advice and wear the seat belt in the proper way.  $(\rightarrow P.36)$ 

- When children are in the vehicle →P.63
- Seat belt damage and wear
- Do not damage the seat belts by allowing the belt, plate, or buckle to be jammed in the door.

- Inspect the seat belt system periodically. Check for cuts, fraying, and loose parts. Do not use a damaged seat belt until it is replaced. Damaged seat belts cannot protect an occupant from death or serious injury.
- Ensure that the belt and plate are locked and the belt is not twisted. If the seat belt does not function correctly, immediately contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Replace the seat assembly, including the belts, if your vehicle has been involved in a serious accident, even if there is no obvious damage.
- Do not attempt to install, remove, modify, disassemble or dispose of the seat belts. Have any necessary repairs carried out by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. Inappropriate handling may lead to incorrect operation.

#### Correct use of the seat belts

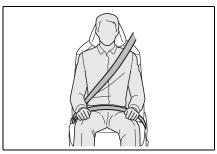

 Extend the shoulder belt so that it comes fully over the shoulder, but does not come into contact with the neck or slide off the shoulder.

- Position the lap belt as low as possible over the hips.
- Adjust the position of the seatback. Sit up straight and well back in the seat.
- Do not twist the seat belt.

#### ■ Child seat belt usage


The seat belts of your vehicle were principally designed for persons of adult size.

- Use a child restraint system appropriate for the child, until the child becomes large enough to properly wear the vehicle's seat belt. ( $\rightarrow$ P.50)
- When the child becomes large enough to properly wear the vehicle's seat belt, follow the instructions regarding seat belt usage. (→P.35)

#### ■ Seat belt regulations

If seat belt regulations exist in the country where you reside, please contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for seat belt replacement or installation.

#### Fastening and releasing the seat belt

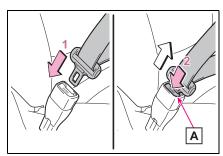


To fasten the seat belt, push the plate into the buckle until a click sound is heard.

2 To release the seat belt, press the release button A.

#### ■ Emergency locking retractor (ELR)

The retractor will lock the belt during a sudden stop or on impact. It may also lock if you lean forward too quickly. A slow, easy motion will allow the belt to extend so that you can move around fully.

### Adjusting the seat belt shoulder anchor height (front seats)

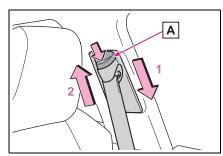

- Push the seat belt shoulder anchor down while pressing the release button A.
- 2 Push the seat belt shoulder anchor up while pressing the release button A .

Move the height adjuster up and down as needed until you hear a click.

### **WARNING**


#### Adjustable shoulder anchor

Always make sure the shoulder belt is positioned across the center of your shoulder. The belt should be kept away from your neck, but not falling off your shoulder. Failure to do so could reduce the amount of protection in an accident and cause death or serious injuries in the event of a sudden stop, sudden swerve or accident.

### Seat belt pretensioners (front and outboard rear seats)

The pretensioners help the seat belts to quickly restrain the occupants by retracting the seat belts when the vehicle is subjected to certain types of severe frontal or side collision.

The pretensioners do not activate in the event of a minor frontal impact, a minor side impact, a rear impact or a vehicle rollover.

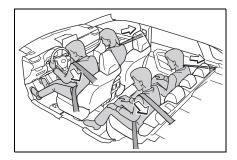

#### Replacing the belt after the pretensioner has been activated

If the vehicle is involved in multiple collisions, the pretensioner will activate for the first collision, but will not activate for the second or subsequent collisions.

#### ■ Seat belt pretensioners

If the pretensioner has activated, the SRS warning light will come on. In that case, the seat belt cannot be used again and must be replaced at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
Failure to do so may cause death or


serious injury.

### SRS airbags

The SRS airbags inflate when the vehicle is subjected to certain types of severe impacts that may cause significant injury to the occupants. They work together with the seat belts to help reduce the risk of death or serious injury.

#### SRS airbag system

#### ■ Location of the SRS airbags

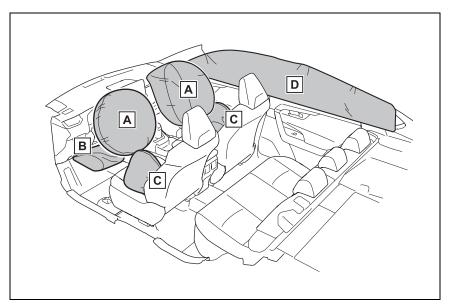

#### ▶ SRS front airbags

A SRS driver airbag/front passenger airbag

Can help protect the head and chest of the driver and front passenger from impact with interior components

**B** SRS knee airbag

Can help provide driver protection


- ▶ SRS side and curtain shield airbags
- C SRS side airbags

Can help protect the torso of the front seat occupants

D SRS curtain shield airbags

Can help protect primarily the head of occupants in the outboard seats

#### ■ SRS airbag system components

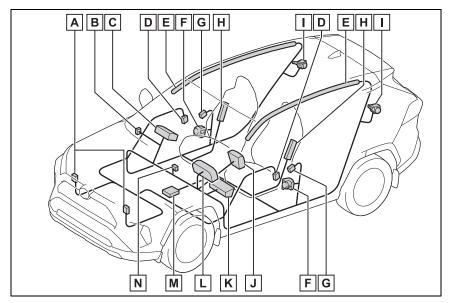

- A Front impact sensors
- **B** Airbag manual on-off switch (if equipped)
- C Front passenger airbag
- D Side impact sensors (front door)
- E Curtain shield airbags
- F Seat belt pretensioners and force limiters (front seats)
- **G** Side impact sensors (front)
- H Side airbags
- I Seat belt pretensioners and force limiters (outboard rear seats)
- J Driver airbag
- K Knee airbag
- L SRS warning light
- M Airbag sensor assembly
- N "PASSENGER AIR BAG" indicator lights

The main SRS airbag system components are shown above. The SRS airbag system is controlled by the airbag sensor assembly. As the airbags deploy, a chemical reaction in the inflators quickly fills the airbags with nontoxic gas to help restrain the motion of the occupants.

#### ■ If the SRS airbags deploy (inflate)

- Slight abrasions, burns, bruising etc., may be sustained from SRS airbags, due to the extremely high speed deployment (inflation) by hot gases.
- A loud noise and white powder will be emitted.
- Parts of the airbag module (steering wheel hub, airbag cover and inflator) as well as the front seats, parts of the front and rear pillars, and roof side rails, may be hot for several minutes. The airbag itself may also be hot.
- The windshield may crack.
- The hybrid system will be stopped and fuel supply to the engine will be stopped. (→P.86)
- All of the doors will be unlocked.
   (→P.130)
- Vehicles with Secondary Collision Brake: The brakes and stop lights will be controlled automatically. (→P.316)
- The interior lights will turn on automatically. (→P.342)
- The emergency flashers will turn on automatically. (→P.418)
- Vehicles with eCall: If any of the following situations occur, the system is designed to send an emergency call to the eCall control center, notifying them of the vehicle's location (without needing to push the "SOS" button) and an agent will attempt to speak with the occupants to ascertain the level of emergency and assistance required. If the occupants are unable to communicate, the agent automatically treats the call as an emergency and helps to dispatch the necessary emergency services. (→P.66)
- · An SRS airbag is deployed.
- A seat belt pretensioner is activated.

 The vehicle is involved in a severe rear-end collision.

## SRS airbag deployment conditions (SRS front airbags)

■ The SRS front airbags will deploy in the event of an impact that exceeds the set threshold level (the level of force corresponding to an approximately 20 - 30 km/h [12 - 18 mph] frontal collision with a fixed wall that does not move or deform).

However, this threshold velocity will be considerably higher in the following situations:

- If the vehicle strikes an object, such as a parked vehicle or sign pole, which can move or deform on impact
- If the vehicle is involved in an underride collision, such as a collision in which the front of the vehicle underrides, or goes under, the bed of a truck
- Depending on the type of collision, it is possible that only the seat belt pretensioners will activate.


#### SRS airbag deployment conditions (SRS side and curtain shield airbags)

- The SRS side and curtain shield airbags will deploy in the event of an impact that exceeds the set threshold level (the level of force corresponding to the impact force produced by an approximately 1500 kg [3300 lb.] vehicle colliding with the vehicle cabin from a direction perpendicular to the vehicle orientation at an approximate speed of 20 30 km/h [12 18 mph]).
- Both SRS curtain shield airbags may also deploy in the event of a severe frontal collision.

#### Conditions under which the SRS airbags may deploy (inflate), other than a collision

The SRS front airbags and SRS curtain shield airbags may also deploy if a serious impact occurs to the underside of your vehicle. Some examples are shown in the illustration.


- Hitting a curb, edge of pavement or hard surface
- Falling into or jumping over a deep hole
- Landing hard or falling

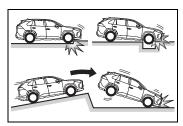

#### ■ Types of collisions that may not deploy the SRS airbags (SRS front airbags)

The SRS front airbags do not generally inflate if the vehicle is involved in a side or rear collision, if it rolls over, or if it is involved in a low-speed frontal collision. But, whenever a collision of any type causes sufficient forward deceleration of the vehicle, deployment of the SRS front airbags may occur.


- Collision from the side
- Collision from the rear
- Vehicle rollover

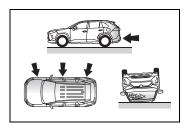

#### ■ Types of collisions that may not deploy the SRS airbags (SRS side and curtain shield airbags)


The SRS side and curtain shield airbags may not activate if the vehicle is subjected to a collision from the side at certain angles, or a collision to the side of the vehicle body other than the passenger compartment.

- Collision from the side to the vehicle body other than the passenger compartment
- Collision from the side at an angle

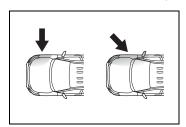


The SRS side airbags do not generally inflate if the vehicle is involved in a frontal or rear collision, if it rolls over, or if it is involved in a low-speed side collision.

- Collision from the front
- Collision from the rear
- Vehicle rollover

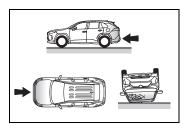

The SRS curtain shield airbags do not generally inflate if the vehicle is involved in a rear collision, if it rolls over, or if it is involved in a low-speed side or low-speed frontal collision.


- Collision from the rear
- Vehicle rollover

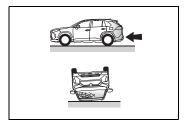


■ When to contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer

In the following cases, the vehicle will require inspection and/or repair. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.

- Any of the SRS airbags have been inflated.
- The front of the vehicle is damaged or deformed, or was involved in an accident that was not severe enough to cause the SRS front airbags to inflate.




A portion of a door or its surrounding area is damaged, deformed or has had a hole made in it, or the vehicle was involved in an accident that was not severe enough to cause the SRS side and curtain shield airbags to inflate.

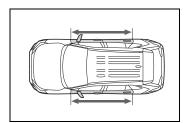


The pad section of the steering wheel,


dashboard near the front passenger airbag or lower portion of the instrument panel is scratched, cracked, or otherwise damaged.

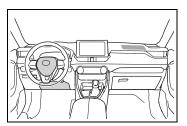

 The surface of the seats with the SRS side airbag is scratched, cracked, or otherwise damaged.

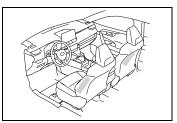

The portion of the front pillars, rear pillars or roof side rail garnishes (padding) containing the SRS curtain shield airbags inside is scratched, cracked, or otherwise damaged.

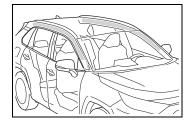

#### SRS airbag precautions

Observe the following precautions regarding the SRS airbags. Failure to do so may cause death or serious injury.

- The driver and all passengers in the vehicle must wear their seat belts
  - The SRS airbags are supplemental devices to be used with the seat belts.
- The SRS driver airbag deploys with considerable force, and can cause death or serious injury especially if the driver is very close to the air-


Since the risk zone for the driver's airbag is the first 50 - 75 mm (2 - 3 in.) of inflation, placing yourself 250 mm (10 in.) from your driver airbag provides you with a clear margin of safety. This distance is measured from the center of the steering wheel to your breastbone. If you sit less than 250 mm (10 in.) away now, you can change your driving position in several ways:

- Move your seat to the rear as far as you can while still reaching the pedals comfortably.
- · Slightly recline the back of the seat. Although vehicle designs vary, many drivers can achieve the 250 mm (10 in.) distance, even with the driver seat all the way forward, simply by reclining the back of the seat somewhat. If reclining the back of your seat makes it hard to see the road, raise yourself by using a firm, non-slippery cushion, or raise the seat if your vehicle has that feature.

If your steering wheel is adjustable, tilt it downward. This points the airbag toward your chest instead of your head and neck.

The seat should be adjusted as recommended above, while still maintaining control of the foot pedals, steering wheel, and your view of the instrument panel controls.

- The SRS front passenger airbag also deploys with considerable force, and can cause death or serious injury especially if the front passenger is very close to the airbag. The front passenger seat should be as far from the airbag as possible with the seatback adjusted, so the front passenger sits upright.
- Improperly seated and/or restrained infants and children can be killed or seriously injured by a deploying airbag. An infant or child who is too small to use a seat belt should be properly secured using a child restraint system. Tovota strongly recommends that all infants and children be placed in the rear seats of the vehicle and properly restrained. The rear seats are safer for infants and children than the front passenger seat. (→P.50)
- Do not sit on the edge of the seat or lean against the dashboard.

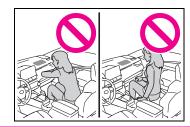

Do not allow a child to stand in front of the SRS front passenger airbag unit or sit on the knees of a front passenger.



- Do not allow the front seat occupants to hold items on their knees.
- Do not lean against the door, the roof side rail or the front, side and rear pillars.




Do not allow anyone to kneel on the passenger seat toward the door or put their head or hands outside the vehicle.



Do not attach anything to or lean anything against areas such as the dashboard, steering wheel pad and lower portion of the instrument panel.

These items can become projectiles when the SRS driver, front passenger and knee airbags deploy.

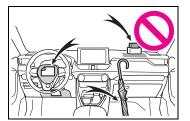

Do not attach anything to areas such as a door, windshield, side window, front or rear pillar, roof side rail and assist grip. (Except for the speed limit label →P.443)



- Do not hang coat hangers or other hard objects on the coat hooks. All of these items could become projectiles and may cause death or serious injury, should the SRS curtain shield airbags deploy.
- If a vinyl cover is put on the area where the SRS knee airbag will deploy, be sure to remove it.

- Do not use seat accessories which cover the parts where the SRS side airbags inflate as they may interfere with inflation of the SRS airbags. Such accessories may prevent the SRS side airbags from activating correctly, disable the system or cause the SRS side airbags to inflate accidentally, resulting in death or serious injury.
- Do not strike or apply significant levels of force to the area of the SRS airbag components or the front doors. Doing so can cause the SRS airbags to malfunction.
- Do not touch any of the component parts immediately after the SRS airbags have deployed (inflated) as they may be hot.
- If breathing becomes difficult after the SRS airbags have deployed, open a door or window to allow fresh air in, or leave the vehicle if it is safe to do so. Wash off any residue as soon as possible to prevent skin irritation.
- If the areas where the SRS airbags are stored, such as the steering wheel pad and front and rear pillar garnishes, are damaged or cracked, have them replaced by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

#### Modification and disposal of SRS airbag system components

Do not dispose of your vehicle or perform any of the following modifications without consulting any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. The SRS airbags may malfunction or deploy (inflate) accidentally, causing death or serious injury.

- Installation, removal, disassembly and repair of the SRS airbags
- Repairs, modifications, removal or replacement of the steering wheel, instrument panel, dashboard, seats or seat upholstery, front, side and rear pillars, roof side rails, front door panels, front door trims or front door speakers
- Modifications to the front door panel (such as making a hole in it)
- Repairs or modifications of the front fender, front bumper, or side of the occupant compartment
- Installation of a grille guard (bull bars, kangaroo bar, etc.), snow plows or winches
- Modifications to the vehicle's suspension system
- Installation of electronic devices such as RF-transmitter and CD players

#### **Exhaust gas precautions**

#### Harmful substance to the human body is included in exhaust gases if inhaled.

### A

#### WARNING

Exhaust gases contain harmful carbon monoxide (CO), which is colorless and odorless. Observe the following precautions.

Failure to do so may cause exhaust gases to enter the vehicle and may lead to an accident caused by lightheadedness, or may lead to death or a serious health hazard.

#### Important points while driving

- Keep the back door closed.
- If you smell exhaust gases in the vehicle even when the back door is closed, open the side windows and have the vehicle inspected at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.

#### ■When parking

- If the vehicle is in a poorly ventilated area or a closed area, such as a garage, stop the hybrid system.
- Do not leave the vehicle with the hybrid system operating for a long time.
  - If such a situation cannot be avoided, park the vehicle in an open space and ensure that exhaust fumes do not enter the vehicle interior.
- Do not leave the hybrid system operating in an area with snow build-up, or where it is snowing. If snowbanks build up around the vehicle while the hybrid system is operating, exhaust gases may collect and enter the vehicle.

#### ■ Exhaust pipe


The exhaust system needs to be checked periodically. If there is a hole or crack caused by corrosion, damage to a joint or abnormal exhaust noise, be sure to have the vehicle inspected and repaired by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

## Airbag manual on-off system\*

#### \*: If equipped

This system deactivates the front passenger airbag.
Only deactivate the airbag when using a child restraint system on the front passenger seat.

#### System components

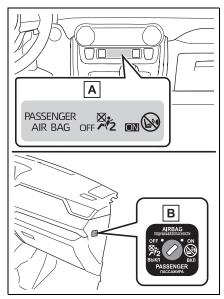

### A "PASSENGER AIR BAG" indicator lights


"PASSENGER AIR BAG" and "ON" indicator lights turn on when the airbag system is on, and about after 60 seconds they go off (only when the power switch is in ON).

B Airbag manual on-off switch

## Deactivating the airbags for the front passenger

Insert the mechanical key into the cylinder and turn to the "OFF" position.

The "OFF" indicator light turns on (only when the power switch is in ON).

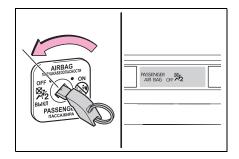

## ■ "PASSENGER AIR BAG" indicator information

If any of the following problems occur, it is possible that there is a malfunction in the system. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

- The "OFF" indicator does not illuminate when the airbag manual on-off switch is set to "OFF".
- The indicator light does not change when the airbag manual on-off switch is switched to "ON" or "OFF".

#### When installing a child restraint system

For safety reasons, always install a child restraint system in a rear seat. In the event that the rear seat cannot be used, the front seat can be used as long as the airbag manual on-off system is set to "OFF"

If the airbag manual on-off system is left on, the strong impact of the airbag deployment (inflation) may cause serious injury or even death.

#### ■When a child restraint system is not installed on the front passenger seat

Ensure that the airbag manual on-off system is set to "ON". If it is left off, the airbag may not deploy in the event of an accident, which may result in serious injury or even death.

### Riding with children

Observe the following precautions when children are in the vehicle.

Use a child restraint system appropriate for the child, until the child becomes large enough to properly wear the vehicle's seat belt.

- It is recommended that children sit in the rear seats to avoid accidental contact with the shift lever, wiper switch, etc.
- Use the rear door child-protector lock or the window lock switch to avoid children opening the door while driving or operating the power window accidentally. (→P.133, 175)
- Do not let small children operate equipment which may catch or pinch body parts, such as the power window, hood, back door, seats, etc.

#### When children are in the vehicle

Never leave children unattended in the vehicle, and never allow children to have or use the key.

Children may be able to start the vehicle or shift the vehicle into neutral. There is also a danger that children may injure themselves by playing with the side windows, panoramic moon roof (if equipped) or other features of the vehicle. In addition, heat build-up or extremely cold temperatures inside the vehicle can be fatal to children.

#### **Child restraint systems**

Before installing a child restraint system in the vehicle, there are precautions that need to be observed, different types of child restraint systems, as well as installation methods, etc., written in this manual.

- Use a child restraint system when riding with a small child that cannot properly use a seat belt. For the child's safety, install the child restraint system to a rear seat. Be sure to follow the installation method that is in the operation manual enclosed with the restraint sys-
- The use of a Toyota genuine child restraint system is recommended, as it is safer to use in this vehicle. Toyota genuine child restraint systems are made specifically for Toyota vehicles. They can be purchased at a Toyota dealer.

#### Table of contents

Points to remember: P.51

When using a child restraint sys-

tem: P.52

Child restraint system compatibility for each seating position: P.55

Child restraint system installation

method: P.61

· Fixed with a seat belt: P.62

- · Fixed with an ISOFIX lower anchorage: P.63
- Using a top tether anchorage: P.64

#### Points to remember

- Prioritize and observe the warnings, as well as the laws and regulations for child restraint systems.
- Use a child restraint system until the child becomes large enough to properly wear the vehicle's seat belt.
- Choose a child restraint system appropriate to the age and size of the child.
- Note that not all child restraint systems can fit in all vehicles. Before using or purchasing a child restraint system, check the compatibility of the child restraint system with seat positions. (→P.55)

#### **⚠** WARNING

#### When a child is riding

Observe the following precautions. Failure to do so may result in death or serious injury.

For effective protection in automobile accidents and sudden stops, a child must be properly restrained, using a seat belt or child restraint system which is correctly installed. For installation details, refer to the operation manual enclosed with the child restraint system. General installation instructions are provided in this manual.

- Toyota strongly urges the use of a proper child restraint system that conforms to the weight and size of the child, installed on the rear seat. According to accident statistics, the child is safer when properly restrained in the rear seat than in the front seat.
- Holding a child in your or someone else's arms is not a substitute for a child restraint system. In an accident, the child can be crushed against the windshield or between the holder and the interior of the vehicle.
- Handling the child restraint system

If the child restraint system is not properly fixed in place, the child or other passengers may be seriously injured or even killed in the event of sudden braking, sudden swerving, or an accident.

- If the vehicle were to receive a strong impact from an accident, etc., it is possible that the child restraint system has damage that is not readily visible. In such cases, do not reuse the restraint system.
- Depending on the child restraint system, installation may be difficult or impossible. In those cases, check whether the child restraint system is suitable for installment in the vehicle ( $\rightarrow$ P.55). Be sure to install and observe the usage rules after carefully reading the child restraint system fixing method in this manual, as well as the operation manual enclosed with the child restraint system.
- Keep the child restraint system properly secured on the seat even if it is not in use. Do not store the child restraint system unsecured in the passenger compartment.

#### A

#### WARNING

 If it is necessary to detach the child restraint system, remove it from the vehicle or store it securely in the luggage compartment.

## When using a child restraint system

When installing a child restraint system to a front passenger seat

For the safety of a child, install a child restraint system to a rear seat. When installing a child restraint system to the front passenger seat is unavoidable, adjust the seat as follows and install the child restraint system:

 Adjust the seatback angle to the most upright position.

Vehicles without airbag manual on-off switch: If there is a gap between the child seat and the seatback, adjust the seatback angle until good contact is achieved.

Vehicles with airbag manual on-off switch: When installing a forward-facing child seat, if there is a gap between the child seat and the seatback, adjust the seatback angle until good contact is achieved.

- Move the front seat fully rearward. If the passenger seat height can be adjusted, move it to the upper most position.
- If the head restraint interferes with the child restraint system installation and the head

restraint can be removed, remove the head restraint. Otherwise, put the head restraint in the upper most position.





#### A


#### **WARNING**

### When using a child restraint system

Observe the following precautions. Failure to do so may result in death or serious injury.


 Vehicles without airbag manual onoff switch: Never use a rear-facing child restraint system on the front passenger seat.

The force of the rapid inflation of the front passenger airbag can cause death or serious injury to children in the event of an accident.

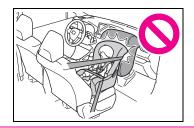



Vehicles with airbag manual on-off switch: Never use a rear-facing child restraint system on the front passenger seat when the airbag manual on-off switch is on. (→P.48) The force of the rapid inflation of the front passenger airbag can cause death or serious injury to children in the event of an accident.

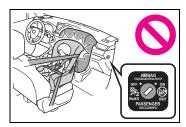

There is a label(s) on the passenger side sun visor, indicating it is forbidden to attach a rear-facing child restraint system to the front passenger seat. Details of the label(s) are shown in the illustration below.





Only put a forward-facing child restraint system on the front seat when unavoidable. When installing a forward-facing child restraint on the front passenger seat, move the seat as far back as possible. Failing to do so may result in death or serious injury if the airbags deploy (inflate).



Do not allow the child to lean his/her head or any part of his/her body against the door or the area of the seat, front or rear pillars, or roof side rails from which the SRS side airbags or SRS curtain shield airbags deploy even if the child is seated in the child restraint system. It is dangerous if the SRS side airbags and curtain shield airbags inflate, and the impact could cause death or serious injury to the child.



When a junior seat is installed, always ensure that the shoulder belt is positioned across the center of the child's shoulder. The belt should be kept away from the child's neck, but not so that it could fall off the child's shoulder.

#### A

#### **WARNING**

- Use a child restraint system suitable to the age and size of the child and install it to the rear seat.
- If the driver's seat interferes with the child restraint system and prevents it from being attached correctly, attach the child restraint system to the right-hand rear seat (left-hand drive vehicles) or the lefthand rear seat (right-hand drive vehicles).



 Adjust the front passenger seat so that it does not interfere with the child restraint system.

# Child restraint system compatibility for each seating position

Child restraint system compatibility for each seating position


Compatibility of each seating position with child restraint systems (→P.56) displays the type of child restraint systems that can be used and possible seating positions for installation using symbols. Also, the recommended child restraint system that is suitable for your child can be selected.

Otherwise, check [Recommended child restraint systems and Com-

patibility table] for recommended child restraint systems. (→P.59) Check the selected child restraint system together with the following [Before confirming the compatibility of each seating position with child restraint systems].

- Before confirming the compatibility of each seating position with child restraint systems
- 1 Checking the child restraint system standards.
  Use a child restraint system that conforms to UN(ECE) R44\*1 or UN(ECE) R129\*1, 2.
  The following approval mark is

The following approval mark is displayed on child restraint systems which are conformed. Check for an approval mark attached to the child restraint system.

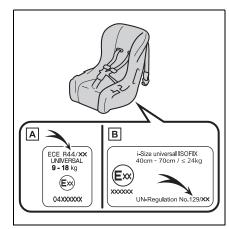


Example of the displayed regulation

A UN(ECE) R44 approval mark\*3

The weight range of the child


who is applicable for an UN(ECE) R44 approval mark is indicated.

- B UN(ECE) R129 approval mark\*3
  The height range of the child
  who is applicable as well as
  available weights for an
  UN(ECE) R129 approval mark
  is indicated.
- 2 Checking the category of the child restraint system.
  Check the approval mark of the child restraint system for which of the following categories the child restraint system is suitable.
  Also, if there are any uncertainties, check the user's guide included with the child restraint system or contact the retailer of the child restraint system.
- "universal"
- · "semi-universal"
- · "restricted"
- · "vehicle specific"

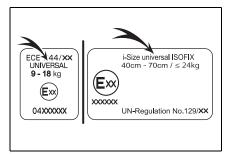



- \*1: UN(ECE) R44 and UN(ECE) R129 are U.N. regulations for child restraint systems.
- \*2: The child restraint systems mentioned in the table may not be available outside of the EU area.


- \*3: The displayed mark may differ depending on the product.
- Compatibility of each seating position with child restraint systems
- ▶ Left-hand drive vehicles

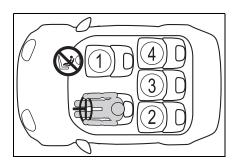

▶ Right-hand drive vehicles

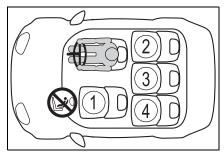

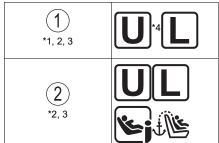

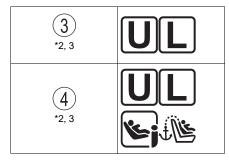



Suitable for fixed with vehicle seat belt "universal" category child restraint system.



Suitable for child restraint systems given on recommended child restraint systems and compatibility table ( $\rightarrow$ P.59).



Suitable for i-Size and ISOFIX child restraint system.




Includes a top tether anchorage point.



Vehicles without airbag manual on-off switch: Never use a rearfacing child restraint system on the front passenger seat.

Vehicles with airbag manual on-off switch: Never use a rearfacing child restraint system on the front passenger seat when the airbag manual on-off switch is on.

- \*1: Move the front seat fully rearward. If the passenger seat height can be adjusted, move it to the upper most position.
- \*2: Adjust the seatback angle to the most upright position. When installing a forward-facing child seat, if there is a gap between the child seat and the seatback, adjust the seatback angle until good contact is achieved.

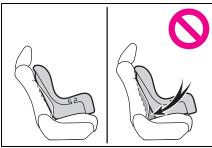

- \*3: If the head restraint interferes with your child restraint system, and the head restraint can be removed, remove the head restraint. Otherwise, put the head restraint in the upper most position.
- \*4: Vehicles without airbag manual onoff switch: Use only a front-facing child restraint system. Vehicles with airbag manual on-off switch: Use only a front-facing child restraint system when the airbag manual on-off switch is on.

#### ■ Detail information for child restraint systems installation

Seating position						
Seat position num- ber	1					
	Vehicles without airbag	Vehicles with air- bag manual on-off switch		2	3	4
	manual on-off	Airbag manual on- off switch				
	switch	ON	OFF			
Seating position suitable for universal belted (Yes/No)	Yes Forward facing only	Yes Forward facing only	Yes	Yes	Yes	Yes
i-Size seating position (Yes/No)	No	No	No	Yes	No	Yes
Seating position suitable for lateral fixture (L1/L2/No)	No	No	No	No	No	No
Suitable rearward facing fixture (R1/R2X/R2/R3/No)	No	No	No	R1, R2X, R2, R3	No	R1, R2X, R2, R3
Suitable forward facing fixture (F2X/F2/F3/No)	No	No	No	F2X, F2, F3	No	F2X, F2, F3
Suitable junior seat fixture (B2/B3/No)	No	No	No	B2, B3	No	B2, B3

ISOFIX child restraint systems are divided into different "fixture". The child restraint system can be used in the seating positions for "fixture" mentioned in the table above. For kind of "fixture" relation, confirm the following table. If your child restraint system has no kind of "fixture" (or if you cannot find information in the table below), please refer to the child restraint system "vehicle list" for compatibility information or ask the retailer of your child seat.

Fixture	Description
F3	Full-height, forward-facing child restraint systems
F2	Reduced-height forward-facing child restraint systems
F2X	Reduced-height forward-facing child restraint systems
R3	Full-size, rearward-facing child restraint systems
R2	Reduced-size, rearward-facing child restraint systems
R2X	Reduced-size, rearward-facing child restraint systems
R1	Rearward-facing infant seat
L1	Left lateral-facing (carrycot) infant seat
L2	Right lateral-facing (carrycot) infant seat
B2	Junior seat
В3	Junior seat

### ■ Recommended child restraint systems and Compatibility table

Mass groups	Recommended Child Restraint System	Seating position					
		1				3	4
		Vehi- cles bag manual on- without off switch 2		2			
		airbag manual on-off switch	Airbag manual on-off switch				
			ON	OFF			
0, 0+ Up to 13 kg (28 lb.)	G0+, BABY SAFE PLUS (Yes/No)	No	No	Yes	Yes	Yes	Yes
I 9 to 18 kg (20 to 39 lb.)	TOYOTA DUO PLUS (Yes/No)	Yes Belt fix only	Yes Belt fix only	Yes Belt fix only	Yes	Yes Belt fix only	Yes


	Recommended Child Restraint System	Seating position					
		1					
Mass groups		Vehi- cles without	bag ma	with air- nual on- witch	2	3	4
		airbag manual on-off	Airbag manual on-off switch				
		switch	ON	OFF			
II, III 15 to 36 kg (34 to 79 lb.)	KIDFIX XP SICT (Yes/No)	Yes Belt fix only	Yes Belt fix only	Yes Belt fix only	Yes	No	Yes
	MAXI PLUS (Yes/No)	Yes Belt fix only	Yes Belt fix only	Yes Belt fix only	Yes	No	Yes

The child restraint systems mentioned in the table may not be available outside the EU area.

When securing some types of child restraint systems in rear seat, it may not be possible to properly use the seat belts in positions next to the child restraint without interfering with it or affecting seat belt effectiveness. Be sure your seat belt fits snugly across your shoulder and low on your hips. If it does not, or if it interferes with the child restraint, move to a different position. Failure to do so may result in death or serious injury.

- When installing a child restraint in the rear seats, adjust the front seat so that it does not interfere with the child or child restraint system.
- When installing a child seat with

- support base, if the child seat interferes with the seatback when latching it into the support base, adjust the seatback rearward until there is no interference.
- If the seat belt shoulder anchor is ahead of the child seat belt guide, move the seat cushion forward.

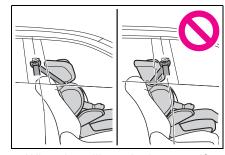

• When installing a junior seat, if

the child in your child restraint system is in a very upright position, adjust the seatback angle to the most comfortable position. And if the seat belt shoulder anchor is ahead of the child seat belt guide, move the seat cushion forward.

### Child restraint system installation method

Confirm with the operation manual enclosed with the child restraint system about the installation of the child restraint system.

ln:	Page	
Seat belt attachment		P.62
ISOFIX lower anchorage attachment		P.63
Top tether anchorage attachment	TOP-TETHER	P.64

## Child restraint system fixed with a seat belt

## ■ Installing child restraint system using a seat belt

Install the child restraint system in accordance to the operation manual enclosed with the child restraint system.

If the child restraint system on hand is not within the "universal" category (or the necessary information is not in the table), refer to the "Vehicle List" provided by the child restraint system maker for various possible installation positions, or check the compatibility after asking the retailer of the child seat.  $(\rightarrow P.55, 56)$ 


- If installing the child restraint system to the front passenger seat is unavoidable, refer to P.52 for the front passenger seat adjustment.
- Adjust the seatback angle to the most upright position. When installing a forward-facing child seat, if there is a gap between the child seat and the seatback, adjust the seatback angle until good contact is achieved.
- 3 If the head restraint interferes with the child restraint system installation and the head restraint can be removed, remove the head restraint. Otherwise, put the head restraint in

the upper most position.  $(\rightarrow P.158)$ 

4 Run the seat belt through the child restraint system and insert the plate into the buckle. Make sure that the belt is not twisted. Securely fix the seat belt to the child restraint system in accordance to the directions enclosed with the child restraint system.



5 If your child restraint system is not equipped with a lock-off (a seat belt locking feature), secure the child restraint system using a locking clip.

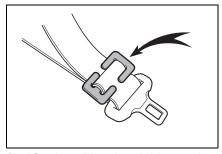

6 After installing the child restraint system, rock it back and forth to ensure that it is installed securely. (→P.63)

#### Removing a child restraint system installed with a seat belt

Press the buckle release button and fully retract the seat belt.

When releasing the buckle, the child restraint system may spring up due to the rebound of the seat cushion. Release the buckle while holding down the child restraint system.

Since the seat belt automatically reels itself, slowly return it to the stowing position.

#### When installing a child restraint system

You may need a locking clip to install the child restraint system. Follow the instructions provided by the manufacturer of the system. If your child restraint system does not provide a locking clip, you can purchase the following item from any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer: Locking clip for child restraint system

(Part No. 73119-22010)

### A

#### **WARNING**

## ■ When installing a child restraint system

Observe the following precautions. Failure to do so may result in death or serious injury.


Do not allow children to play with the seat belt. If the seat belt becomes twisted around a child's neck, it may lead to choking or other serious injuries that could result in death. If this occurs and the buckle cannot be unfastened, scissors should be used to cut the belt.

- Ensure that the belt and plate are securely locked and the seat belt is not twisted.
- Shake the child restraint system left and right, and forward and backward to ensure that it has been securely installed.
- After securing a child restraint system, never adjust the seat.
- When a junior seat is installed, always ensure that the shoulder belt is positioned across the center of the child's shoulder. The belt should be kept away from the child's neck, but not so that it could fall off the child's shoulder.
- Follow all installation instructions provided by the child restraint system manufacturer.

# Child restraint system fixed with an ISOFIX lower anchorage

## ■ ISOFIX lower anchorages (ISOFIX child restraint system)

Lower anchorages are provided for the outboard rear seats. (Tags displaying the location of the anchorages are attached to the seats.)

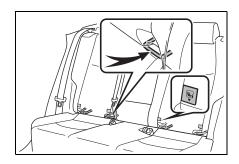

#### Installation with ISOFIX lower anchorage (ISOFIX child restraint system)


Install the child restraint system in accordance to the operation manual enclosed with the child restraint system.

If the child restraint system on hand is not within the "universal" category (or the necessary information is not in the table), refer to the "Vehicle List" provided by the child restraint system maker for various possible installation positions, or check the compatibility after asking the retailer of the child seat.  $(\rightarrow P.55, 56)$ 

- Adjust the seatback angle to the most upright position. When installing a forward-facing child seat, if there is a gap between the child seat and the seatback, adjust the seatback angle until good contact is achieved.
- 2 If the head restraint interferes with the child restraint system installation and the head restraint can be removed, remove the head restraint. Otherwise, put the head restraint in the upper most position. (→P.158)
- 3 Check the positions of the exclusive fixing bars, and install the child restraint system to the seat.

The bars are installed in the clearance between the seat cushion and seat-

back.

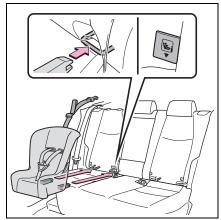

**4** After installing the child restraint system, rock it back and forth to ensure that it is installed securely. (→P.63)



#### **WARNING**

## ■ When installing a child restraint system

Observe the following precautions. Failure to do so may result in death or serious injury.


- After securing a child restraint system, never adjust the seat.
- When using the lower anchorages, be sure that there are no foreign objects around the anchorages and that the seat belt is not caught behind the child restraint system.
- Follow all installation instructions provided by the child restraint system manufacturer.

## Using a top tether anchorage

#### ■ Top tether anchorages

Top tether anchorages are pro-

vided for the outboard rear seats. Use top tether anchorages when fixing the top strap.

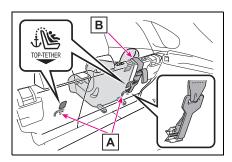


- A Top tether anchorages
- B Top strap

#### ■ Fixing the top strap to the top tether anchorages

Install the child restraint system in accordance to the operation manual enclosed with the child restraint system.

1 Adjust the head restraint to the upmost position.


If the head restraint interferes with the child restraint system or top strap installation and the head restraint can be removed, remove the head restraint. (→P.158)

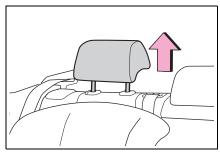

2 Latch the hook onto the top tether anchorage and tighten the top strap.

Make sure the top strap is securely latched. (→P.63)

When installing the child restraint system with the head restraint being raised, be sure to have the top strap pass underneath the head restraint.

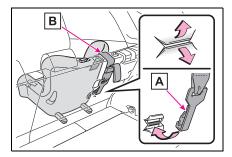

- A Hook
- B Top strap



#### **WARNING**

#### ■When installing a child restraint system

Observe the following precautions. Failure to do so may result in death or serious injury.

- Firmly attach the top strap and make sure that the belt is not twisted.
- Do not attach the top strap to anything other than the top tether anchorages.
- After securing a child restraint system, never adjust the seat.
- Follow all installation instructions provided by the child restraint system manufacturer.
- When installing the child restraint system with the head restraint being raised, after the head restraint has been raised and then the top tether anchorage has been fixed, do not lower the head restraint.


### eCall\*1, 2

- \*1: If equipped
- \*2: Operates within the eCall coverage. The system name differs depending on the country.

eCall is a telematics service that uses Global Navigation Satellite System (GNSS) data and embedded cellular technology to enable the following emergency calls to be made: Automatic emergency calls (Automatic Collision Notification) and manual emergency calls (by pressing the "SOS" button). This service is required by European Union Regulations.

#### System components

#### ▶ Type A

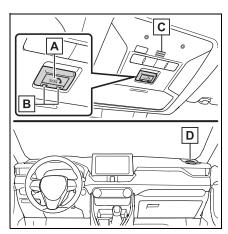

- A "SOS" button
- **B** Indicator lights


#### **C** Microphone

#### D Speaker

\*: This button is intended for communication with the eCall system operator.

Other SOS buttons available in other systems of a motor vehicle do not relate to the device and are not intended for communication with the eCall system operator.

#### ▶ Type B

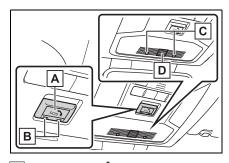

- A "SOS" button
- **B** Indicator lights
- **C** Microphone
- **D** Speaker
- \*: This button is intended for communication with the eCall system operator.

  Other SOS buttons available in other systems of a motor vehicle do not relate to the device and are not intended for communication with the eCall system operator.

## Emergency Notification Services

#### ■ Automatic Emergency Calls

If any airbag deploys, the system is designed to automatically call the


eCall control center.\* The answering operator receives the vehicle's location, the time of the incident and the vehicle VIN, and attempts to speak with the vehicle occupants to assess the situation. If the occupants are unable to communicate, the operator automatically treats the call as an emergency and contacts the nearest emergency services provider (112 system etc.) to describe the situation and request that assistance be sent to the location.

\*: In some cases, the call cannot be made. (→P.68)

#### ■ Manual Emergency Calls

In the event of an emergency, press the "SOS" button to call the eCall control center.\* The answering operator will determine your vehicle's location, assess the situation, and dispatch the necessary assistance required.

Make sure to open the cover before pressing the "SOS" button.

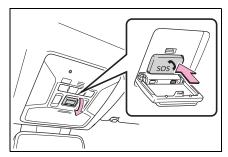

If you accidentally press the "SOS" button, tell the operator that you are not experiencing an emergency.

\*: In some cases, the call cannot be made. (→P.68)

#### Indicator lights

When the power switch is turned to ON, the red indicator light will illuminate for 10 seconds. Then, the green indicator light will illuminate for 2 seconds and remain illuminated if the system is functioning properly.

The indicator lights indicate the following:

- If the green indicator light illuminates and stays on, the system is enabled.
- If the green indicator light flashes twice per second, an automatic or manual Emergency Call is being made.
- If the red indicator light illuminates at any time other than immediately after the power switch is turned to ON, the system may be malfunctioning or the backup battery may be depleted.
- If the red indicator light blinks for approximately 30 seconds during an Emergency Call, the call has been disconnected or the cellular network signal is weak.

The service life of the backup battery does not exceed 3 years.

### Free/Open Source Software Information

This product contains Free/Open

Source Software (FOSS).

The license information and/or the source code of such FOSS can be found at the following URL.

http://www.opensourceautomotive.com/ dcm/toyota/

### **₩ARNING**

#### ■When the Emergency Call may not be made

- It may not be possible to make Emergency Calls in any of the following situations. In such cases, report to emergency services provider (112 system etc.) by other means such as nearby public phones.
- Even when the vehicle is in the cellular phone service area, it may be difficult to connect to the eCall control center if the reception is poor or the line is busy. In such cases, even though the system attempts to connect to the eCall control center, you may not be able to connect to the eCall control center to make Emergency Calls and contact emergency services.
- · When the vehicle is out of the cellular phone service area, the Emergency Calls cannot be made.
- When any related equipment (such as the "SOS" button panel, indicator lights, microphone, speaker, DCM, antenna, or any wires connecting the equipment) is malfunctioning, damaged or broken, the Emergency Call cannot be made.

- During an Emergency Call, the system makes repeated attempts to connect to the eCall control center. However, if it cannot connect to the eCall control center due to poor radio wave reception, the system may not be able to connect to the cellular network and the call may finish without connecting. The red indicator light will blink for approximately 30 seconds to indicate this disconnection.
- If the battery's voltage decreases or there is a disconnection, the system may not be able to connect to the eCall control center.
- The Emergency Call system might not work outside of EU area, depending on the available infrastructure in the country.
- ■When the Emergency Call system is replaced with a new one

The Emergency Call system should be registered. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

#### For your safety

- Please drive safely. The function of this system is to assist you in making the Emergency Call in case of accidents such as traffic accidents or sudden medical emergencies, and it does not protect the driver or passengers in any way. Please drive safely and fasten your seatbelts at all times for your safety.
- In case of an emergency, make lives the top priority.
- If you smell anything burning or other unusual smells, leave the vehicle and evacuate to a safe area immediately.

- If the airbags deploy when the system is operating normally, the system makes emergency call. The system also makes emergency call when the vehicle is struck from the rear or rolls over, even if the airbags do not deploy.
- For safety, do not make the Emergency Call while driving. Making calls during driving may cause mishandling of the steering wheel, which may lead to unexpected accidents. Stop the vehicle and confirm the safety of your surroundings before making the Emergency Call.
- When changing fuses, please use the specified fuses. Using other fuses may cause ignition or smoke in the circuit and lead to a fire.
- Using the system while there is smoke or an unusual smell may cause a fire. Stop using the system immediately and consult any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.



#### NOTICE

#### ■To prevent damage


Do not pour any liquids onto the "SOS" button panel, etc. and do not impact it.

■ If the "SOS" button panel, speaker or microphone malfunctions during an Emergency Call or manual maintenance check

It may not be possible to make Emergency Calls, confirm the system status, or communicate with the eCall control center operator. If any of the above equipment is damaged, please consult any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

#### System overview of added service

#### ■ Data processing flow

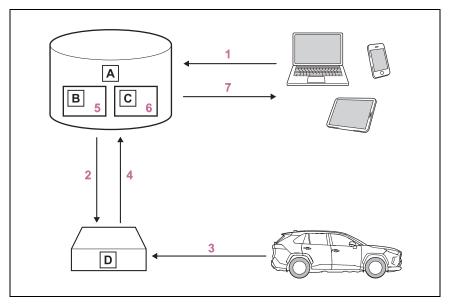

- A Server
- **B** Storage
- **C** Processing
- **D** DCM
- 1 Activation of data sharing is done by enabling a service on the "MyT by Toyota" app or purchasing a service that requires data collection.
- 2 Server activates the service in the DCM and defines which vehicle data to collect.
- 3 Defined vehicle data is collected by the DCM.
- 4 Data is shared with the server.
- 5 Data is stored in the server.
- 6 Data is processed in the server for fulfilling the service.
- 7 Processed data is presented to the customer.

For a list of eligible services in your region please visit the Toyota website or contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

# Implementing Regulation

Impleme	enting Regulation Annex1 PART3 User Information	Conformity
1. DESCRIPT	TON OF THE ECALL IN-VEHICLE SYSTEM	
1.1.	Overview of the 112-based eCall in-vehicle system, its operation and functionalities	0
1.2.	The 112-based eCall service is a public service of general interest and is accessible free of charge.	0
1.3.	The 112-based eCall in-vehicle system is activated by default. It is activated automatically by means of in-vehicle sensors in the event of a severe accident. It will also be triggered automatically when the vehicle is equipped with a TPS system which does not function in the event of a severe accident.	Ο
1.4.	The 112-based eCall in-vehicle system can also be triggered manually, if needed. Instructions for manual activation of the system	0
1.5.	In the event of a critical system failure that would disable the 112-based eCall in-vehicle system, the following warning will be given to the occupants of the vehicle	0
2. INFORMA	TION ON DATA PROCESSING	

# 72 1-3. Emergency assistance

Impleme	nting Regulation Annex1 PART3 User Information	Conformity
2.1.	Any processing of personal data through the 112-based eCall in-vehicle system shall comply with the personal data protection rules provided for in Directives 95/46/EC and 2002/58/EC, and in particular, shall be based on the necessity to protect the vital interests of the individuals in accordance with Article 7(d) of Directive 95/46/EC.	Ο
2.2.	Processing of such data is strictly limited to the purpose of handling the emergency eCall to the single European emergency number 112.	0
2.3. Тур	es of data and its recipients	
2.3.1.	The 112-based eCall in-vehicle system may collect and process only the following data: Vehicle Identification Number, Vehicle type (passenger vehicle or light commercial vehicle), Vehicle propulsion storage type (gasoline/diesel/CNG/LPG/electric/hydrogen), Vehicle last three locations and direction of travel, Log file of the automatic activation of the system and its timestamp, Any additional data (if applicable)	Ο
2.3.2.	Recipients of data processed by the 112-based eCall in-vehicle system are the relevant public safety answering points designated by the respective public authorities of the country on which territory they are located, to first receive and handle eCalls to the single European emergency number 112.Additional information (if available):	Ο

Implementir	ng Regulation Annex1 PART3 User Information	Conformity
2.4. Arrang	ements for data processing	
2.4.1.	The 112-based eCall in-vehicle system is designed in such a way as to ensure that the data contained in the system memory is not available outside the system before an eCall is triggered. Additional remarks (if any):	0
2.4.2.	The 112-based eCall in-vehicle system is designed in such a way as to ensure that it is not traceable and not subject to any constant tracking in its normal operation status. Additional remarks (if any):	0
2.4.3.	The 112-based eCall in-vehicle system is designed in such a way as to ensure that data in the system internal memory is automatically and continuously removed.	0
2.4.3.1.	The vehicle location data is constantly overwritten in the internal memory of the system so as always to keep maximum of the last three up-to-date locations of the vehicle necessary for the normal functioning of the system.	0
2.4.3.2.	The log of activity data in the 112-based eCall invehicle system is kept for no longer than necessary for attaining the purpose of handling the emergency eCall and in any case not beyond 13 hours from the moment an emergency eCall was initiated.	0

# 74 1-3. Emergency assistance

Implementing	Regulation Annex1 PART3 User Information	Conformity
2.5. Modaliti	es for exercising data subject's rights	
2.5.1.	The data subject (the vehicle's owner) has a right of access to data and as appropriate to request the rectification, erasure or blocking of data, concerning him or her, the processing of which does not comply with the provisions of Directive 95/46/EC. Any third parties to whom the data have been disclosed have to be notified of such rectification, erasure or blocking carried out in compliance with this Directive, unless it proves impossible or involves a disproportionate effort.	0
2.5.2.	The data subject has a right to complain to the competent data protection authority if he or she considers that his or her rights have been infringed as a result of the processing of his or her personal data.	0
2.5.3.	Contact service responsible for handling access requests (if any): →P.75	0

<sup>3.</sup> INFORMATION ON THIRD PARTY SERVICES AND OTHER ADDED VALUE SERVICES (IF FITTED)

Implementing	Regulation Annex1 PART3 User Information	Conformity
3.1.	Description of the operation and the functionalities of the TPS system/added value service	→P.70
3.2.	Any processing of personal data through the TPS system/other added value service shall comply with the personal data protection rules provided for in Directives 95/46/EC and 2002/58/EC.	0
3.2.1.	Legal basis for the use of TPS system and/or added value services and for processing data through them	The European Union General Data Protection Regulation
3.3.	The TPS system and/or other added value services shall process personal data only on the base of the explicit consent of the data subject (the vehicle's owner or owners).	0
3.4.	Modalities for data processing through TPS system and/or other added value services, including any necessary additional information regarding traceability, tracking and processing of personal data	→P.70
3.5.	The owner of a vehicle equipped with a TPS eCall system and/or other added value service in addition to the 112-based eCall in-vehicle system has the right to choose to use the 112-based eCall in-vehicle system rather than the TPS eCall system and the other added value service.	0
3.5.1.	Contact details for handling TPS eCall system deactivation requests	N/A

# ■ Service responsible for handling access requests

Country	Contact information
Austria	datenschutz@toyota-frey.at
Belgium/Luxembourg	privacy@toyota.be
Croatia	dpcp@toyota.hr

# 76 1-3. Emergency assistance

Country	Contact information
Czech Republic /Hungary/Slovakia	adatvedelem@toyota-ce.com
Denmark	toyota@toyota.dk.og
Estonia	privacy@toyota.ee
Finland	tietosuoja@toyota.fi
France	delegue.protectiondonnees@toyota-europe.com
Germany	Toyota.Datenschutz@toyota.de
Great Britain	privacy@tgb.toyota.co.uk
Greece	customer@toyota.gr
Iceland	personuvernd@toyota.is
Ireland	customerservice@toyota.ie
Italy	tmi.dpo@toyota-europe.com
Netherlands	www.toyota.nl/klantenservice
Norway	personvern@toyota.no
Poland	klient@toyota.pl
Portugal	gestaodadospessoais@toyotacaetano.pt
Romania	relatii.clienti@toyota.ro
Slovenia	dpcp@toyota.si
Spain	clientes@toyota.es / dpo@toyota.es.
Sweden	integritet@toyota.se
Switzerland	info@toyota.ch

#### ■ Certification for eCall

Manufacturer: Continental Automotive Singapore Pte Ltd

Address: 80 Boon Keng Road, Continental Building Singapore 339780

Model: 19EU NCBOX / 19EU CBOX

Operation frequency (MHz):

GSM 900: Tx: 880 - 915 Rx: 925.0 - 960.0

GSM 1800 : Tx: 1710.2 - 1784.8 Rx: 1805.2 - 1879.8 WCDMA Band 1: Tx: 1920 - 1980 Rx: 2110 - 2170 WCDMA Band 8 : Tx: 880 - 915 Rx: 925 - 960

LTE 1: Tx: 1920 - 1980 Rx: 2110 - 2170 LTE 3: Tx: 1710 - 1785 Rx: 1805 - 1880 LTE 7: Tx: 2500 - 2570 Rx: 2620 - 2690 LTE 8: Tx: 880 - 915 Rx: 925 - 960 LTE 20: Tx: 832 - 862 Rx: 791 - 821 LTE 26: Tx: 814 - 849 Rx: 859 - 894 GNSS Receiver Frequency: 1559 - 1610

Maximum output power:

GSM 900 2W GSM 1800 1W

WCDMA Band 1: 0.25W WCDMA Band 8: 0.25W

LTE Band 1, 3, 7, 8, 20, 26: 0.2W



The latest "DECLARATION of CONFORMITY" (DoC) is available at the following address: https://www.continental-homologation.com/

Hereby, Continental Automotive Singapore declares that the radio equipment type is in compliance with Directive 2014/53/EU.

#### **■** Consumer Protection Law

שם המוצר וייעודו המסחרי: יחידת תקשורת לרכב שם היצרן וכתובתו: קונטיננטל אוטומוטיב רפובליקת צ'כיה

סימן מסחרי רשום: Continental

19 שם דגם: EU CBOX

ארץ ייצור: צ'כיה שנת ייצור: 2019

שם המוצר וייעודו המסחרי: יחידת תקשורת לרכב

שם היצרן וכתובתו: קונטיננטל אוטומוטיב רפובליקת צ'כיה

ימן מסחרי רשום: Continental

שם דגם: 19 EU NCBOX ארץ ייצור: צ'כיה


. שנת ייצור: 2019

# **Hybrid system features**

Your vehicle is a Hybrid Electric Vehicle. It has characteristics different from conventional vehicles. Be sure you are closely familiar with the characteristics of your vehicle, and operate it with care.

The hybrid system combines the use of a gasoline engine and an electric motor (traction motor) according to driving conditions, improving fuel efficiency and reducing exhaust emissions.

### System components

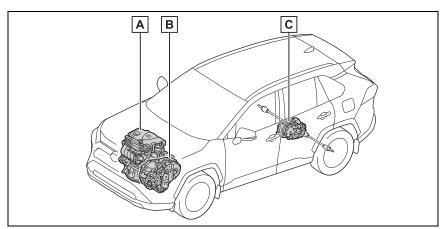

The illustration is an example for explanation and may differ from the actual item.

- A Gasoline engine
- B Front electric motor (traction motor)
- Rear electric motor (traction motor)\*
- \*: AWD models only

### ■ When stopped/during start off

The gasoline engine stops\* when the vehicle is stopped. During start off, the electric motor (traction motor) drives the vehicle. At slow speeds or when traveling down a gentle slope, the engine is stopped\* and the electric motor (traction

motor) is used.

When the shift lever is in N, the hybrid battery (traction battery) is not being charged.

\*: When the hybrid battery (traction battery) requires charging or the engine is warming up, etc., the gasoline engine will not automatically stop.

(→P.80)

#### ■ During normal driving

The gasoline engine is predominantly used. The electric motor (traction motor) charges the hybrid battery (traction battery) as necessary.

#### ■ When accelerating sharply

When the accelerator pedal is depressed heavily, the power of the hybrid battery (traction battery) is added to that of the gasoline engine via the electric motor (traction motor).

# When braking (regenerative braking)

The wheels operate the electric motor (traction motor) as a power generator, and the hybrid battery (traction battery) is charged.


#### ■ Regenerative braking

- In the following situations, kinetic energy is converted to electric energy and deceleration force can be obtained in conjunction with the recharging of the hybrid battery (traction battery).
- The accelerator pedal is released while driving with the shift lever in D or S.
- The brake pedal is depressed while driving with the shift lever in D or S.
- While the GPF system (→P.314) is operating to regenerate the exhaust gas filter, the hybrid battery (traction battery) may not be recharged.

#### **■EV** indicator

The EV indicator comes on when the vehicle is driven using only the electric motor (traction motor) or the gasoline engine is stopped.

The on/off operation of the EV indicator can be changed.  $(\rightarrow P.115)$ 

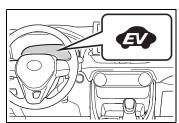

# Conditions in which the gasoline engine may not stop

The gasoline engine starts and stops automatically. However, it may not stop automatically in the following conditions\*:

- During gasoline engine warm-up
- During hybrid battery (traction battery) charging
- When the temperature of the hybrid battery (traction battery) is high or low
- When the heater is switched on
- \*: Depending on the circumstances, the gasoline engine may also not stop automatically in other situations.

# ■ Charging the hybrid battery (traction battery)

As the gasoline engine charges the hybrid battery (traction battery), the battery does not need to be charged from an outside source. However, if the vehicle is left parked for a long time the hybrid battery (traction battery) will slowly discharge. For this reason, be sure to drive the vehicle at least once every few months for at least 30 minutes or 16 km (10 miles). If the hybrid battery (traction battery) becomes fully discharged and you are unable to start the hybrid system, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

#### ■ Charging the 12-volt battery

→P.466

#### After the 12-volt battery has discharged or when the terminal has been removed and installed during replace, etc.

The gasoline engine may not stop even if the vehicle is being driven by the hybrid battery (traction battery). If this continues for a few days, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

#### Sounds and vibrations specific to a Hybrid Electric Vehicle

There may be no engine sound or vibration even though the vehicle is able to move with the "READY" indicator is illuminated. For safety, make sure to shift the shift lever to P and apply the parking brake when parked.

The following sounds or vibrations may occur when the hybrid system is operating and are not a malfunction:

- Motor sounds may be heard from the engine compartment.
- Sounds may be heard from the hybrid battery (traction battery) under the rear seats when the hybrid system starts or stops.
- Relay operating sounds such as a snap or soft clank will be emitted from the hybrid battery (traction battery), under the rear seats, when the hybrid system is started or stopped.
- Sounds from the hybrid system may be heard when the back door is open.
- Sounds may be heard from the transmission when the gasoline engine starts or stops, when driving at low speeds, or during idling.
- Engine sounds may be heard when accelerating sharply.
- Sounds may be heard due to regenerative braking when the brake pedal is depressed or as the accelerator pedal is released.
- Vibration may be felt when the gasoline engine starts or stops.
- Cooling fan sounds may be heard

from the air intake vent under the rear seat.

# Maintenance, repair, recycling, and disposal

Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer regarding maintenance, repair, recycling and disposal. Do not dispose of the vehicle yourself.

### Acoustic Vehicle Alerting System

When driving with the gasoline engine stopped, a sound, which changes in accordance with the driving speed, will be played in order to warn people nearby of the vehicle's approach. The sound will stop when the vehicle speed exceeds approximately 25 km/h (16 mph).

#### ■ Acoustic Vehicle Alerting System

In the following cases, the Acoustic Vehicle Alerting System may be difficult for surrounding people to hear.

- In very noisy areas
- In the wind or the rain

Also, as the Acoustic Vehicle Alerting System is installed on the front of the vehicle, it may be more difficult to hear from the rear of the vehicle compared to the front.


#### ■If "Proximity Notification System Malfunction Visit Your Dealer" is displayed on the multi-information display

The system may be malfunctioning. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

# **Hybrid system precautions**

Take care when handling the hybrid system, as it is a high voltage system (about 650V at maximum) as well as contains parts that become extremely hot when the hybrid system is operating. Obey the warning labels attached to the vehicle.

### System components

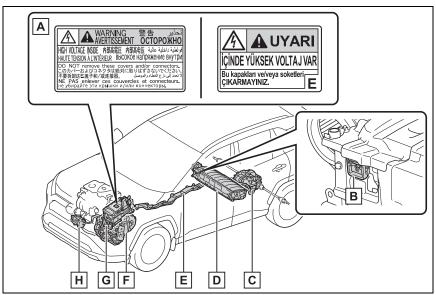

The illustration is an example for explanation and may differ from the actual item.

- A Warning label
- **B** Service plug
- C Rear electric motor (traction motor)\*
- D Hybrid battery (traction battery)
- E High voltage cables (orange)
- F Front electric motor (traction motor)
- G Power control unit
- H Air conditioning compressor

\*: AWD models only

#### ■ Running out of fuel

When the vehicle has run out of fuel and the hybrid system cannot be started, refuel the vehicle with at least enough gasoline to make the low fuel level warning light (→P.433) go off. If there is only a small amount of fuel, the hybrid system may not be able to start. (The standard amount of fuel is about 8.8 L [2.3 gal., 1.9 Imp.gal.], when the vehicle is on a level surface. This value may vary when the vehicle is on a slope. Add extra fuel when the vehicle is inclined.)

#### ■ Electromagnetic waves

- High voltage parts and cables on Hybrid Electric Vehicles incorporate electromagnetic shielding, and therefore emit approximately the same amount of electromagnetic waves as conventional gasoline powered vehicles or home electronic appliances.
- Your vehicle may cause sound interference in some third party-produced radio parts.

#### ■ Hybrid battery (traction battery)

The hybrid battery (traction battery) has a limited service life. The lifespan of the hybrid battery (traction battery) can change in accordance with driving style and driving conditions.

# ■ Starting the hybrid system in an extremely cold environment

When the hybrid battery (traction battery) is extremely cold (below approximately -30°C [-22°F]) under the influence of the outside temperature, it may not be possible to start the hybrid system. In this case, try to start the hybrid system again after the temperature of the hybrid battery increases due to the outside temperature increase etc.

#### **■** Declaration of conformity

This model conforms to hydrogen emissions according to regulation ECE100 (Battery electric vehicle safety).


### A

#### **WARNING**

#### High voltage precautions

This vehicle has high voltage DC and AC systems as well as a 12-volt system. DC and AC high voltage is very dangerous and can cause severe burns and electric shock that may result in death or serious injury.

- Never touch, disassemble, remove or replace the high voltage parts, cables or their connectors.
- The hybrid system will become hot after starting as the system uses high voltage. Be careful of both the high voltage and the high temperature, and always obey the warning labels attached to the vehicle.
- Never try to open the service plug access hole located underneath the rear seats. The service plug is used only when the vehicle is serviced and is subject to high voltage.

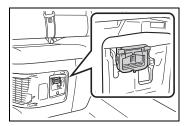

#### ■ Road accident cautions

Observe the following precautions to reduce the risk of death or serious injury:

- Pull your vehicle off the road, shift the shift lever to P, apply the parking brake, and turn the hybrid system off.
- Do not touch the high voltage parts, cables and connectors.

### **WARNING**

- If electric wires are exposed inside or outside your vehicle, an electric shock may occur. Never touch exposed electric wires.
- If a fire occurs in the Hybrid Electric Vehicle, leave the vehicle as soon as possible. Never use a fire extinguisher that is not meant for electric fires. Using even a small amount of water may be dangerous.
- If your vehicle needs to be towed, do so with front wheels (2WD models) or four wheels (AWD models) raised. If the wheels connected to the electric motor (traction motor) are on the ground when towing, the motor may continue to generate electricity. This may cause a fire. (→P.421)
- Carefully inspect the ground under the vehicle. If you find that liquid has leaked onto the ground, the fuel system may have been damaged. Leave the vehicle as soon as possi-
- ► AXAH52L/AXAH52R/AXAH54L/AX AH54R models
- If a fluid leak occurs, do not touch the fluid as it may be strong alkaline electrolyte from the hybrid battery (traction battery). If it comes into contact with your skin or eyes, wash it off immediately with a large amount of water or, if possible, boric acid solution. Seek immediate medical attention.
- The model code is indicated on the manufacturer's label. (→P.477)

- ► AXAL52L/AXAL52R/AXAL54L/AXA L54R models
- Do not touch the battery if liquid is leaking from or adhering to it. If electrolyte (carbonic-based organic electrolyte) from the hybrid battery (traction battery) comes into contact with the eyes or skin, it could cause blindness or skin wounds. In the unlikely event that it comes into contact with the eyes or skin, wash it off immediately with a large amount of water, and seek immediate medical attention.
- If electrolyte is leaking from the hybrid battery (traction battery), do not approach the vehicle. Even in the unlikely event that the hybrid battery (traction battery) is damaged, the internal construction of the battery will prevent a large amount of electrolyte from leaking out. However, any electrolyte that does leak out will give off a vapor. This vapor is an irritant to skin and eyes and could cause acute poisoning if inhaled.
- Do not bring burning or high-temperature items close to the electrolyte. The electrolyte may ignite and cause a fire.
- The model code is indicated on the manufacturer's label. (→P.477)
- Hybrid battery (traction battery)
- AXAL52L/AXAL52R/AXAL54L/AXA L54R models\*: Your vehicle contains a sealed lithium-ion battery.
- \*: The model code is indicated on the manufacturer's label. (→P.477)

### **WARNING**

Never resell, hand over or modify the hybrid battery. To prevent accidents, hybrid batteries that have been removed from a disposed vehicle are collected through any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. Do not dispose of the battery yourself.

Unless the battery is properly collected, the following may occur, resulting in death or serious injury:


- The hybrid battery may be illegally disposed of or dumped, and it is hazardous to the environment or someone may touch a high voltage part, resulting in an electric shock.
- The hybrid battery is intended to be used exclusively with your Hybrid Electric Vehicle. If the hybrid battery is used outside of your vehicle or modified in any way, accidents such as electric shock, heat generation, smoke generation, an explosion and electrolyte leakage may occur.

When reselling or handing over your vehicle, the possibility of an accident is extremely high because the person receiving the vehicle may not be aware of these dangers.

If your vehicle is disposed of without the hybrid battery having been removed, there is a danger of serious electric shock if high voltage parts, cables and their connectors are touched. In the event that your vehicle must be disposed of, the hybrid battery must be disposed of by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer or a qualified service shop. If the hybrid battery is not disposed of properly, it may cause electric shock that can result in death or serious injury.

### **Hybrid battery (traction bat**tery) air intake vent

There is an air intake vent under the right side of the rear seat for the purpose of cooling the hybrid battery (traction battery). If the vent is blocked, charging/discharging of the hybrid battery (traction battery) may become limited.

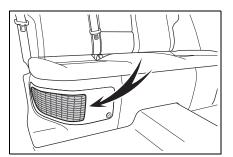

#### NOTICE

#### Hybrid battery (traction battery) air intake vent

- Make sure not to block the air intake vent with anything, such as a seat cover, plastic cover, or luggage. If the vent is blocked, the charging/discharging of the hybrid battery (traction battery) may become limited.
- When dust etc. has accumulated in the air intake vent, clean it with a vacuum cleaner to prevent the vent from clogging.
- Clean the air intake vent regularly to prevent the charging/discharging of the hybrid battery (traction battery) from being restricted.
- Do not get water or foreign materials in the air intake vent as this may cause a short circuit and damage the hybrid battery (traction battery).

### $\Lambda$

#### **NOTICE**

- Do not carry large amounts of water such as water cooler bottles in the vehicle. If water spills onto the hybrid battery (traction battery), the battery may be damaged. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- There is a filter installed to the air intake vent. When the filter remains noticeably dirty even after cleaning the air intake vent, filter cleaning or replacement is recommended. For information regarding filter cleaning or replacement, refer to P.397.
- If "Maintenance Required for Traction Battery Cooling Parts See Owner's Manual" is shown on the multi-information display, the air intake vent and filter may be clogged. Refer to P.396 for information on how to clean the air intake vent.

### **Emergency shut off system**


When a certain level of impact is detected by the impact sensor, the emergency shut off system blocks the high voltage current and stops the fuel pump to minimize the risk of electrocution and fuel leakage. If the emergency shut off system activates, your vehicle will not restart. To restart the hybrid system, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

#### Hybrid warning message

A message is automatically dis-

played when a malfunction occurs in the hybrid system or an improper operation is attempted.

If a warning message is shown on the multi-information display, read the message and follow the instructions.

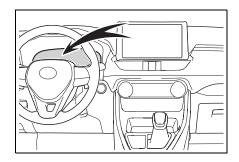

■ If a warning light comes on, a warning message is displayed, or the 12-volt battery is disconnected

The hybrid system may not start. In this case, try to start the system again. If the "READY" indicator does not come on, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

# **Immobilizer system**

The vehicle's keys have builtin transponder chips that prevent the hybrid system from starting if a key has not been previously registered in the vehicle's on-board computer.


Never leave the keys inside the vehicle when you leave the vehicle.

This system is designed to help prevent vehicle theft but does not guarantee absolute security against all vehicle thefts.

### Operating the system

The indicator light flashes after the power switch has been turned to OFF to indicate that the system is operating.

The indicator light goes off after the power switch has been turned to ACC or ON to indicate that the system has been canceled.

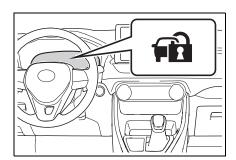

#### ■ System maintenance

The vehicle has a maintenance-free type immobilizer system.

# ■ Conditions that may cause the system to malfunction

- If the grip portion of the key is in contact with a metallic object
- If the key is in close proximity to or touching a key to the security system (key with a built-in transponder chip) of another vehicle

## <u>^</u>

#### **NOTICE**

# ■ To ensure the system operates correctly


Do not modify or remove the system. If modified or removed, the proper operation of the system cannot be guaranteed.

### Double locking system

#### \*: If equipped

Unauthorized access to the vehicle is prevented by disabling the door unlocking function from both the interior and exterior of the vehicle.

Vehicles employing this system have labels on the front side windows.

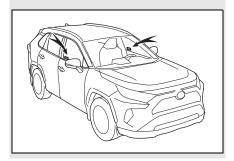

# Setting/canceling the double locking system

#### ■ Setting

Turn the power switch to OFF, have all the passengers exit the vehicle and ensure that all the doors are closed.

Using the entry function (if equipped):

Touch the sensor area on the front outside door handle twice within 5 seconds.

Using the wireless remote control:

Press twice within 5 seconds.

#### ■ Canceling

Using the entry function (if equipped): Hold the front outside door handle.

Using the wireless remote control:

Press





#### WARNING

# ■ Double locking system precaution

Never activate the double locking system when there are people in the vehicle because all the doors cannot be opened from inside the vehicle.

### Alarm\*

#### \*: If equipped

The alarm uses light and sound to give an alert when an intrusion is detected.

The alarm is triggered in the following situations when the alarm is set:

- A locked door is unlocked or opened in any way other than using the entry function (if equipped) or wireless remote control. (The doors will lock again automatically.)
- The hood is opened.
- The intrusion sensor detects something moving inside the vehicle. (Example: an intruder breaks a window and gets into the vehicle.)
- The tilt sensor detects a change of vehicle inclination.

# Setting/canceling/stopping the alarm system

# ■ Items to check before locking the vehicle

To prevent unexpected triggering of the alarm and vehicle theft, make sure of the following:


- Nobody is in the vehicle.
- The side windows and panoramic moon roof (if equipped) are closed before the alarm is set.

 No valuables or other personal items are left in the vehicle.

#### ■ Setting

Close the doors and hood, and lock all the doors using the entry function (if equipped) or wireless remote control. The system will be set automatically after 30 seconds.

The indicator light changes from being on to flashing when the system is set.

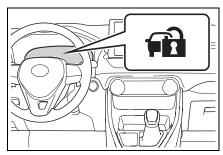

#### ■ Canceling or stopping

Do one of the following to deactivate or stop the alarm:

- Unlock the doors using the entry function (if equipped) or wireless remote control.
- Start the hybrid system. (The alarm will be deactivated or stopped after a few seconds.)


#### ■ System maintenance

The vehicle has a maintenance-free type alarm system.


### ■Triggering of the alarm

The alarm may be triggered in the following situations: (Stopping the alarm deactivates the alarm system.)


 The doors are unlocked using the mechanical key.

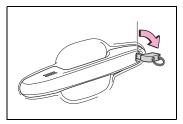

A person inside the vehicle opens a door or hood, or unlocks the vehicle using an inside lock button.

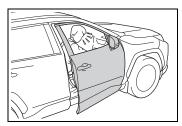

The 12-volt battery is recharged or replaced when the vehicle is locked. (→P.464)

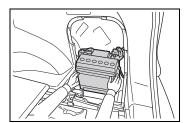

#### Alarm-operated door lock

In the following cases, depending on the situation, the door may automatically lock to prevent improper entry into the vehicle:

- When a person remaining in the vehicle unlocks the door and the alarm is activated.
- While the alarm is activated, a person remaining in the vehicle unlocks the door.
- When recharging or replacing the 12volt battery.

#### **■** Customization (if equipped)

The alarm can be set to deactivate when the mechanical key is used to unlock.

(Customizable features: →P.489)



#### **NOTICE**

# ■ To ensure the system operates correctly

Do not modify or remove the system. If modified or removed, the proper operation of the system cannot be guaranteed.

# Intrusion sensor and tilt sensor

- The intrusion sensor and tilt sensor detection
- The intrusion sensor detects intruders or movement in the vehicle.
- The tilt sensor detects changes in vehicle inclination, such as when the vehicle is towed away.

This system is designed to deter and prevent vehicle theft but does not guarantee absolute security against all intrusions.

#### Setting the intrusion sensor and tilt sensor

The intrusion sensor and tilt sensor will be set automatically when the alarm is set.  $(\rightarrow P.89)$ 


# ■ Canceling the intrusion sensor and tilt sensor

If you are leaving pets or other moving things inside the vehicle, make sure to disable the intrusion sensor and tilt sensor before setting the alarm, as they will respond to movement inside the vehicle.

- 1 Turn the power switch to OFF.
- 2 Press the intrusion sensor and tilt sensor cancel switch.

Press the switch again to re-enable the intrusion sensor and tilt sensor.


Each time the intrusion sensor and tilt sensor are canceled/set, a message will be shown on the multi-information display.

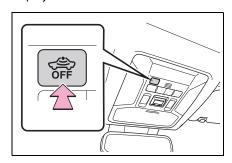

- Canceling and automatic reenabling of the intrusion sensor and tilt sensor
- The alarm will still be set even when the intrusion sensor and tilt sensor are canceled.
- After the intrusion sensor and tilt sensor are canceled, pressing the power switch or unlocking the doors using the entry function (if equipped) or wireless remote control will re-enable the intrusion sensor and tilt sensor.
- The intrusion sensor and tilt sensor will automatically be re-enabled when the alarm system is reactivated.
- ■Intrusion sensor detection considerations

The sensor may trigger the alarm in the following situations:

People or pets are in the vehicle.

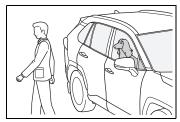


A side window or panoramic moon roof (if equipped) is open.

In this case, the sensor may detect the following:


- Wind or the movement of objects such as leaves and insects inside the vehicle
- Ultrasonic waves emitted from devices such as the intrusion sensors of other vehicles
- The movement of people outside the vehicle




 Unstable items, such as dangling accessories or clothes hanging on the coat hooks, are in the vehicle.

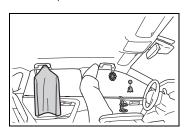

The vehicle is parked in a place where extreme vibrations or noises occur, such as in a parking garage.

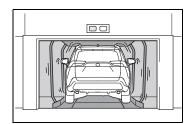

 Ice or snow is removed from the vehicle, causing the vehicle to receive repeated impacts or vibrations.

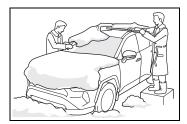

- The vehicle is inside an automatic or high-pressure car wash.
- The vehicle experiences impacts, such as hail, lightning strikes, and other kinds of repeated impacts or vibrations.

#### ■ Tilt sensor detection considerations

The sensor may trigger the alarm in the following situations:

- The vehicle is transported by a ferry, trailer, train, etc.
- The vehicle is parked in a parking garage.
- The vehicle is inside a car wash that moves the vehicle.
- Any of the tires loses air pressure.
- The vehicle is jacked up.
- An earthquake occurs or the road caves in.

### A

#### **NOTICE**

- To ensure the intrusion sensor functions correctly
- To ensure that the sensors operate properly, do not touch or cover them.



 Do not spray air fresheners or other products directly into the sensor holes.



- Installing accessories other than genuine Toyota parts or leaving objects between the driver's seat and front passenger's seat may reduce the detection performance.
- The intrusion sensor may be canceled when the electronic key is near the vehicle.

# Vehicle status informa-

# tion and indicators

2

2-1.	Instrument cluster
	Warning lights and indicators

94
Gauges and meters (with 4.2-inch display)99
Gauges and meters (with 7-inch display)103
Multi-information display109

Energy monitor/consumption screen.....119


# **Warning lights and indicators**

The warning lights and indicators on the instrument cluster, center panel and outside rear view mirrors inform the driver of the status of the vehicle's various systems.

### Instrument cluster

For the purpose of explanation, the following illustrations display all warning lights and indicators illuminated.

#### ■ With 4.2-inch display

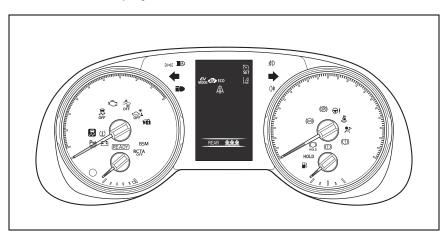


The units used on the meters and some indicators may differ depending on the target region.

### ■ With 7-inch display


The display of the speedometer can be selected from two types, analog or digital. ( $\rightarrow$ P.115)

### ▶ When analog speedometer is displayed

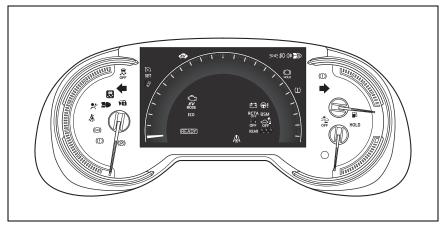

The units used on the meters and some indicators may differ depending on the target region.

▶ When digital speedometer is displayed

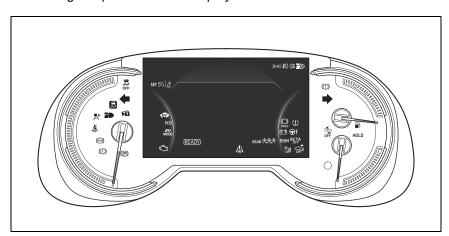

The units used on the meters and some indicators may differ depending on the target region.

### Warning lights

Warning lights inform the driver of malfunctions in the indicated vehicle's systems.



Brake system warning light\*1 (→P.427)



Brake system warning  $light^{*1} (\rightarrow P.427)$ 



Charging system warning light\*1 ( $\rightarrow$ P.428)



High coolant temperature warning light\*2 (→P.428) Hybrid system overheat



warning light\*2 (→P.428) Low engine oil pressure



warning light\*2 (→P.428) Malfunction indicator



 $lamp^{*1} (\to P.429)$ 



SRS warning light\*1 (→P.429)



ABS warning light\*1 (→P.429)



Electric power steering system warning light\*1 (→P.429)



PCS warning light\*1 (if (Flashes or illu- equipped) (→P.430) minates)



LTA indicator (if equipped) (→P.430)



Toyota parking assistsensor OFF indicator\*3 (if equipped) (→P.431) (Flashes)



PKSB OFF indicator\*1 (if equipped) ( $\rightarrow$ P.431)



RCTA OFF indicator\*1 (if equipped)

(Flashes)

 $(\to P.432)$ 



Slip indicator light\*1 (→P.432)



Inappropriate pedal operation warning light\*2 (→P.432)



Brake hold operated indicator<sup>\*1</sup> (→P.433)



Parking brake indicator (→P.433)



Tire pressure warning light\*1 (if equipped) (→P.433)



Low fuel level warning light (→P.433) Driver's and front pas-



senger's seat belt reminder light (→P.434) Rear passengers' seat



belt reminder lights (→P.434)

- 1: These lights turn on when the power switch is turned to ON to indicate that a system check is being performed. They will turn off after the hybrid system is on, or after a few seconds. There may be a malfunction in a system if the light does not come on, or turn off. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- \*2: This light illuminates on the multiinformation display with a message.

\*3: Toyota parking assist-sensor OFF indicator turns on when the power switch is turned to ON while the Toyota parking assist-sensor function is on. It will turn off after a few seconds.



#### WARNING

# If a safety system warning light does not come on

Should a safety system light such as the ABS and SRS warning light not come on when you start the hybrid system, this could mean that these systems are not available to help protect you in an accident, which could result in death or serious injury. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately if this occurs.

#### Indicators

The indicators inform the driver of the operating state of the vehicle's various systems.



Turn signal indicator (→P.209)



Tail light indicator (→P.216)



Headlight high beam indicator (→P.217)



Automatic High Beam indicator (if equipped) (→P.218)



Front fog light indicator (if equipped) (→P.221)



Rear fog light indicator (if equipped) (→P.221)



Smart entry & start system indicator<sup>\*1</sup> (→P.199)



Cruise control indicator (→P.256, 268)



control indicator (if equipped) (→P.256) Cruise control "SET"

Dynamic radar cruise



indicator (→P.256, 268) Speed limiter indicator



(if equipped) (→P.271)
LTA indicator\*2 (if



equipped) (→247) Toyota parking assistsensor OFF indicator<sup>\*3,</sup> <sup>4</sup> (if equipped) (→P.292)



PKSB OFF indicator\*3, 5 (if equipped) (→P.302)



Slip indicator light<sup>\*5</sup> (→P.316)



VSC OFF indicator\*<sup>3, 5</sup> (→P.317)



PCS warning light\*3,5 (if equipped) (→P.236)
BSM outside rear view mirror indicators\*5,6 (if equipped) (→P.273)
BSM indicator (if



-"E

BSM indicator (if equipped) (→P.273)



(if equipped) (→P.273) Brake hold standby indicator\*5 (→P.213)

RCTA OFF indicator\*3,5



Brake hold operated indicator<sup>\*5</sup> (→P.213)





Security indicator (→P.87, 89)



"READY" indicator (→P.199)



Low outside temperature indicator\*<sup>7</sup> (→P.100, 106)



EV indicator (→P.80)



Parking brake indicator (→P.210)



EV drive mode indicator (→P.203)



Eco drive mode indicator ( $\rightarrow$ P.311)



Sport mode indicator (→P.311)



Trail Mode indicator (if equipped) (→P.313)

"PASSENGER AIR BAG"



indicator<sup>\*5, 8</sup> (if equipped) (→P.48)

- \*1: This light illuminates on the multiinformation display with a message.
- \*2: Depending on the operating conditions of the system, the color and state (illuminated/blinking) of the indicator change.
- \*3: The light comes on when the system is turned off.
- \*4: Toyota parking assist-sensor OFF indicator turns on when the power switch is turned to ON while the Toyota parking assist-sensor function is on. It will turn off after a few seconds.
- \*5: These lights turn on when the power switch is turned to ON to indicate that a system check is being per-

formed. They will turn off after the hybrid system is on, or after a few seconds. There may be a malfunction in a system if the lights do not turn on, or turn off. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

- \*6: This light illuminates on the outside rear view mirrors.
- \*7: When the outside temperature is approximately 3°C (37°F) or lower, the indicator will flash for approximately 10 seconds, then stay on.
- \*8: This light illuminates on the center panel.

#### BSM (Blind Spot Monitor) outside rear view mirror indicators (if equipped)

In order to confirm operation, the BSM outside rear view mirror indicators illuminate in the following situations:

- When the power switch is turned to ON while the BSM function is enabled on the screen of the multi-information display.
- When the BSM function is enabled on the screen of the multi-information display while the power switch is in ON.

If the system is functioning correctly, the BSM outside rear view mirror indicators will turn off after a few seconds.


If the BSM outside rear view mirror indicators do not illuminate or do not turn off, there may be a malfunction in the system.

If this occurs, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

# Gauges and meters (with 4.2-inch display)

#### The meters display various drive information.

### Meter display

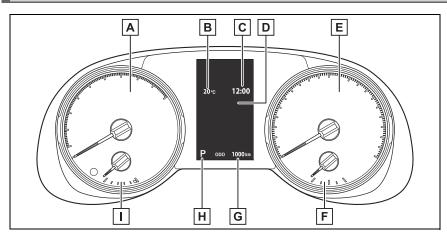

The units used on the meter and display may differ depending on the target region.

A Hybrid System Indicator

Displays the Hybrid System Indicator (→P.100)

- **B** Outside temperature (→P.100)
- C Clock (→P.101)
- D Multi-information display

Presents the driver with a variety of driving-related data (→P.109)

Displays warning messages if a malfunction occurs (→P.436)

**E** Speedometer

Displays the vehicle speed

F Fuel gauge

Displays the quantity of fuel remaining in the tank

G Odometer, trip meter and instrument cluster light control display

Odometer:

Displays the total distance that the vehicle has been driven

Trip meter:

Displays the distance the vehicle has been driven since the meter was last reset.

Trip meters "A" and "B" can be used to record and display different distances independently.

Instrument cluster light control:

Displays the brightness of the instrument cluster lights that can be adjusted.

H Shift position and shift range indicator

Displays the selected shift position or selected shift range (→P.205)


I Engine coolant temperature gauge

Displays the engine coolant temperature

# ■ The meters and display illuminate when

The power switch is in ON.

#### Hybrid System Indicator

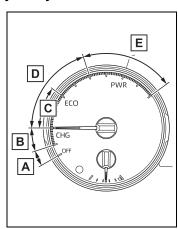

#### A READY OFF area

Shows that the hybrid system is not operating.

**B** Charge area

Shows regeneration status.

Regenerated energy will be used to charge the hybrid battery (traction battery).

C Hybrid Eco area

Shows that gasoline engine power is not being used very often.

The gasoline engine will automatically stop and restart under various conditions.

### D Eco area

Shows that the vehicle is being driven in an Eco-friendly manner.

By keeping the indicator needle within Eco area, more Eco-friendly driving can be achieved.

#### E Power area

Shows that an Eco-friendly driving range is being exceeded (during full power driving etc.)

\*: When used in this manual, "regeneration" refers to the conversion of energy created by the movement of the vehicle into electrical energy.

In the following situation, the Hybrid System Indicator does not operate.

- "READY" indicator is not illuminated.
- The shift lever is in a range other than D or S.

#### ■ Outside temperature display

- In the following situations, the correct outside temperature may not be displayed, or the display may take longer than normal to change.
- When stopped, or driving at low speeds (less than 20 km/h [12 mph])
- When the outside temperature has changed suddenly (at the entrance/exit of a garage, tunnel, etc.)

- When "--" or "E" is displayed, the system may be malfunctioning. Take your vehicle to any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Displays the outside temperature within the range of -40°C (-40°F) to 50°C (122°F).
- When the outside temperature is approximately 3°C (37°F) or lower, the indicator 🕍 will flash for approximately 10 seconds, then stay on.
- Liquid crystal display

→P.110

## A

#### **WARNING**

# ■ The information display at low temperatures

Allow the interior of the vehicle to warm up before using the liquid crystal information display. At extremely low temperatures, the display monitor may respond slowly, and display changes may be delayed.

For example, there is a lag between the driver's shifting and the new shift range appearing on the display. This lag could cause the driver to downshift again, causing rapid and excessive engine braking and possibly an accident resulting in death or injury.



#### NOTICE


# ■ To prevent damage to the engine and its components

The engine may be overheating if the engine coolant temperature gauge is in the red zone ("H"). In this case, immediately stop the vehicle in a safe place, and check the engine after it has cooled completely. (→P.469)

# Using the "ODO TRIP" switch

Switches the items of the odometer, trip meter A, trip meter B and the brightness of the instrument cluster lights by pressing the "ODO TRIP" switch.

- When the trip meter is displayed, pressing and holding the switch will reset the trip meter.
- When the instrument cluster light control display is displayed, pressing and holding the switch will adjust the brightness of the instrument cluster lights.

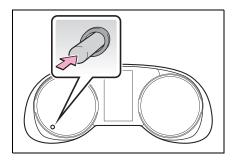

# ■ Instrument cluster brightness adjustment

The instrument cluster brightness levels when the tail lights are on and off can be adjusted individually. However, when the surroundings are bright (daytime, etc.), turning on the tail lights will not change the instrument cluster brightness

#### Adjusting the clock

The clock can be adjusted on either the multi-information display or the navigation/multimedia system.

Vehicles without navigation system or multimedia system

By displaying the "Clock :00" screen from the screen of the multi-information display, you can change the following settings

- Resetting the minutes display
- Changing the clock between 12hour display and 24-hour display.
- Adjusting the time

related to the clock.

- To reset the minutes display
- 1 Press or of the meter control switches on the steering wheel and select .
- 2 Press or of the meter control switches on the steering wheel and select "Clock :00".

By pressing of the meter control switches on the "Clock :00" screen, you can set "Minutes" to 00.

 Minutes from 0 to 29 are rounded down.

(For example, from 1:00 to 1:29 are displayed as 1:00)

 From 30 to 59 minutes are rounded up.

(For example, from 1:30 to 1:59 are displayed as 2:00)

#### ■ To adjust the time

1 Press or of the meter control switches on the steering wheel and select .

- 2 Press or of the meter control switches on the steering wheel and select "Clock :00".
- 3 On the "Clock :00" screen, press and hold of of the meter control switches.
- 5 Press the or of the meter control switches to change the display contents.

When the setting is completed, press

- to return to the previous screen.
- Vehicles with navigation system or multimedia system

Refer to "Navigation and multimedia system Owner's manual" or "Multimedia Owner's Manual".


# Gauges and meters (with 7-inch display)

#### The meters display various drive information.

### Meter display

The display of the speedometer can be selected from two types, analog or digital. ( $\rightarrow$ P.115)

#### ▶ Analog speedometer

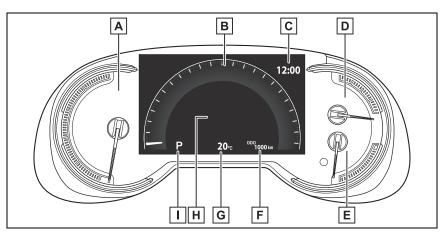

The units used on the meter and display may differ depending on the target region.

A Hybrid System Indicator

Displays the Hybrid System Indicator (→P.106)

**B** Speedometer

Displays the vehicle speed

- **C** Clock (→P.107)
- **D** Fuel gauge

Displays the quantity of fuel remaining in the tank

E Engine coolant temperature gauge

Displays the engine coolant temperature

F Odometer, trip meter and instrument cluster light control display

Odometer:

Displays the total distance that the vehicle has been driven

Trip meter:

#### 104 2-1. Instrument cluster

Displays the distance the vehicle has been driven since the meter was last reset. Trip meters "A" and "B" can be used to record and display different distances independently.

Instrument cluster light control:

Displays the brightness of the instrument cluster lights that can be adjusted.

G Outside temperature (→P.106)

H Multi-information display


Presents the driver with a variety of driving-related data (→P.109)

Displays warning messages if a malfunction occurs (→P.436)

I Shift position and shift range indicator

Displays the selected shift position or selected shift range (→P.205)

#### Digital speedometer

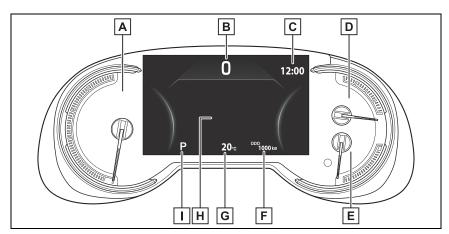

The units used on the meter and display may differ depending on the target region.

A Hybrid System Indicator

Displays the Hybrid System Indicator (→P.106)

**B** Speedometer

Displays the vehicle speed

**C** Clock (→P.107)

**D** Fuel gauge

Displays the quantity of fuel remaining in the tank

E Engine coolant temperature gauge

Displays the engine coolant temperature

F Odometer, trip meter and instrument cluster light control display

Odometer:

Displays the total distance that the vehicle has been driven

Trip meter:

Displays the distance the vehicle has been driven since the meter was last reset.

Trip meters A and B can be used to record and display different distances independently.

Instrument cluster light control:

Displays the brightness of the instrument cluster lights that can be adjusted.

G Outside temperature (→P.106)

H Multi-information display

Presents the driver with a variety of driving-related data (→P.109)

Displays warning messages if a malfunction occurs (→P.436)

I Shift position and shift range indicator

Displays the selected shift position or selected shift range (→P.205)


# ■ The meters and display illuminate when

The power switch is in ON.

#### ■When changing driving mode


- Speedometer color is changed following the selected driving mode. (→P.311)
- AWD models: Speedometer color is changed following the selected driving mode or when Trail Mode is turned on. (→P.311, 313)
- If the units of measure for speedometer can be changed (if equipped)

The other units of measure is also displayed as shown in the illustrations.

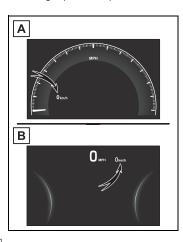

- A Analog speedometer
- B Digital speedometer

#### ■ Hybrid System Indicator

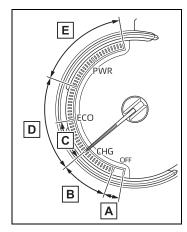

#### A READY OFF area

Shows that the hybrid system is not operating.

#### B Charge area

Shows regeneration\* status. Regenerated energy will be used to charge the hybrid battery (traction battery).

#### C Hybrid Eco area

Shows that gasoline engine power is not being used very often.

The gasoline engine will automatically stop and restart under various conditions.

#### D Eco area

Shows that the vehicle is being driven in an Eco-friendly manner.

By keeping the indicator needle within Eco area, more Eco-friendly driving can be achieved.

#### E Power area

Shows that an Eco-friendly driving range is being exceeded (during full power driving etc.)

\*: When used in this manual, "regeneration" refers to the conversion of energy created by the movement of the vehicle into electrical energy.

In the following situation, the Hybrid System Indicator does not operate.

- "READY" indicator is not illuminated.
- The shift lever is in a range other than D or S.

#### Outside temperature display

- In the following situations, the correct outside temperature may not be displayed, or the display may take longer than normal to change.
- When stopped, or driving at low speeds (less than 20 km/h [12 mph])
- When the outside temperature has changed suddenly (at the entrance/exit of a garage, tunnel, etc.)
- When "--" or "E" is displayed, the system may be malfunctioning. Take your vehicle to any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Displays the outside temperature within the range of -40°C (-40°F) to 50°C (122°F).
- When the outside temperature is approximately 3°C (37°F) or lower, the indicator / will flash for approximately 10 seconds, then stay on.

### ■ Liquid crystal display

→P.110

### ■ Customization

Settings (e. g. meter display) can be changed on the screen of the multi-information display. (→P.115)

#### **WARNING**

#### ■The information display at low temperatures

Allow the interior of the vehicle to warm up before using the liquid crystal information display. At extremely low temperatures, the display monitor may respond slowly, and display changes may be delayed.

For example, there is a lag between the driver's shifting and the new shift range appearing on the display. This lag could cause the driver to downshift again, causing rapid and excessive engine braking and possibly an accident resulting in death or injury.



#### NOTICE

#### ■To prevent damage to the engine and its components


The engine may be overheating if the engine coolant temperature gauge is in the red zone ("H"). In this case, immediately stop the vehicle in a safe place, and check the engine after it has cooled completely. (→P.469)

#### Using the "ODO TRIP" switch

Switches the items of the odometer, trip meter A, trip meter B and the brightness of the instrument cluster lights by pressing the "ODO TRIP" switch.

- When the trip meter is displayed, pressing and holding the switch will reset the trip meter.
- When the instrument cluster light control display is displayed, pressing and holding the switch will adjust the brightness of the

instrument cluster lights.

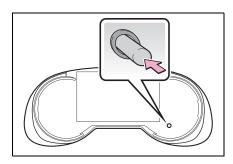

#### ■Instrument cluster brightness adjustment

The instrument cluster brightness levels when the tail lights are on and off can be adjusted individually. However, when the surroundings are bright (daytime, etc.), turning on the tail lights will not change the instrument cluster bright-

#### Adjusting the clock

The clock can be adjusted on either the multi-information display or the navigation/multimedia system.

Vehicles without navigation system or multimedia system

By displaying the "Clock :00" screen from the screen of the multi-information display, you can change the following settings related to the clock.

- Resetting the minutes display
- Changing the clock between 12hour display and 24-hour format.
- Adjusting the time

#### ■ To reset the minutes display

- 1 Press or of the meter control switches on the steering wheel and select.
- 2 Press or of the meter control switches on the steering wheel and select "Clock :00".

By pressing of the meter control switches on the "Clock :00" screen, you can set "Minutes" to 00.

 Minutes from 0 to 29 are rounded down.

(For example, from 1:00 to 1:29 are displayed as 1:00)

 From 30 to 59 minutes are rounded up.

(For example, from 1:30 to 1:59 are displayed as 2:00)

#### ■ To adjust the time

- 1 Press or of the meter control switches on the steering wheel and select .
- 2 Press or of the meter control switches on the steering wheel and select "Clock :00".
- 3 On the "Clock :00" screen, press and hold of the meter control switches.
- Select the "12H/24H", "Time" or "Minutes" by operating 
   ✓ or

   ✓ of the meter control switches.

5 Press the or of the meter control switches to change the display contents.

When the setting is completed, press

- to return to the previous screen.
- ► Vehicles with navigation system or multimedia system

Refer to "Navigation and multimedia system Owner's manual" or "Multimedia Owner's Manual".


#### **Multi-information display**

The multi-information display is used to display fuel efficiency related information and various types of driving-related information. The multi-information display can also be used to change the display settings and other settings.

#### Display contents

Following information is displayed on the multi-information display.

#### ■ Vehicles with 4.2-inch display

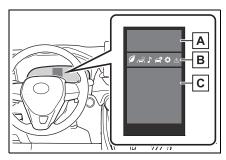

A Driving support system information

Displays recognized signs while the RSA system (if equipped) is operating. (→P.252)

Displays an image when the following systems are operating and a menu icon

other than is selected:


- LTA (Lane Tracing Assist) (if equipped) (→P.242)
- Dynamic radar cruise control with fullspeed range (if equipped) (→P.256)
- Cruise control (if equipped) (→P.268)
- Speed limiter (if equipped) (→P.271)

- B Menu icons (→P.110)
- C Information display area

A variety of information can be displayed by selecting a menu icon.

Additionally, warning or suggestion/advice pop-up displays will be displayed in some situations.

#### ■ Vehicles with 7-inch display

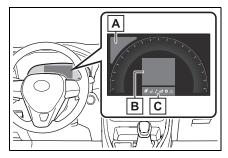

A Driving support system information

Displays recognized signs while the RSA system (if equipped) is operating. (→P.252)

Displays an image when the following systems are operating and a menu icon

other than is selected:

- LTA (Lane Tracing Assist) (if equipped) (→P.242)
- Dynamic radar cruise control with fullspeed range (if equipped) (→P.256)
- Cruise control (if equipped) (→P.268)
- Speed limiter (if equipped) (→P.271)
- **B** Information display area

A variety of information can be displayed by selecting a menu icon.

Additionally, warning or suggestion/advice pop-up displays will be displayed in some situations.

C Menu icons (→P.110)

### ■The multi-information display is displayed when

The power switch is in ON.

#### ■When changing driving mode


- Background color of the multi-information display is changed following the selected driving mode. (→P.311)
- AWD models: Background color of the multi-information display is changed following the selected driving mode or when Trail Mode is turned on. (→P.311, 313)

#### ■ Liquid crystal display

Small spots or light spots may appear on the display. This phenomenon is characteristic of liquid crystal displays, and there is no problem continuing to use the display.

#### Changing the display

The multi-information display is operated using the meter control switches.

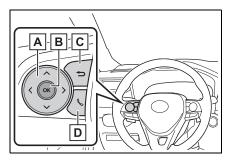

- A Scroll the screen\*/switch the display\*/move the cursor
- Press: Enter/Set
  Press and hold: Reset/Display
  customizable items
- C Return to the previous screen
- D Call sending/receiving and his-

tory display (if equipped)
Linked with the hands-free system, sending or receiving call is displayed. For details regarding the hands-free system, refer to "Navigation and multimedia system owner's manual" or "Multimedia Owner's Manual".

\*: On screens where the screen can be scrolled and the display can be switched, a scroll bar or a round icon that shows the number of registered screens is displayed.



#### **WARNING**

#### Caution for use while driving

For safety, avoid operating the meter control switch while driving as much as possible, and do not look continuously at the multi-information display while driving. Stop the vehicle and operate the meter control switch. Failure to do so may cause a steering wheel operation error, resulting in an unexpected accident.

#### Menu icons

Information related to each icon can be displayed by selecting the icon with the meter control switches.

Some of the information may be displayed automatically depending on the situation.


Icon	Display
	Driving information display (→P.111)
	Driving support system information display (→P.113)

Icon	Display
<b>\</b>	Audio system-linked display (if equipped) (→P.114)
<b>6</b>	Vehicle information display (→P.114)
<b>\$</b>	Settings display (→P.115)
$\triangle$	Warning message display (→P.118)

#### **Driving information display**

Select to display fuel consumption data in various forms.

■ Speedometer display/Distance to empty (4.2-inch display)

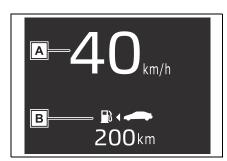

A Speedometer display


Displays the vehicle speed.

**B** Distance to empty

Displays the driving range with remaining fuel. (→P.113)

#### **■ Fuel Economy**

Following information is displayed.

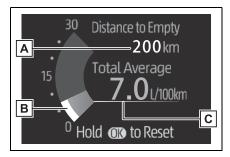

A Distance to empty

Displays the driving range with remaining fuel. (→P.113)

**B** Current fuel economy

Displays the instantaneous current fuel Economy.


C Average fuel economy

Displays the average fuel economy since the function was reset or the average fuel economy after starting or refueling.\*1, 2, 3


The average fuel economy selected by "Fuel Economy" on the screen is displayed. (→P.115)

- \*1: Use the displayed fuel consumption as a reference only.
- \*2: Average fuel economy since the function was reset can be reset by pressing and holding ...
- \*3: Average fuel economy after starting is reset each time the hybrid system stops.
- ECO Accelerator Guidance/"Eco Score"

Displays a reference operation range for using the accelerator pedal according to driving conditions, and a score result that evaluates the current driving status.

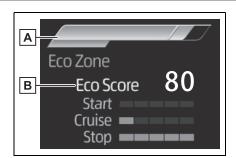

- A ECO Accelerator Guidance
- B "Eco Score"
- ▶ ECO Accelerator Guidance

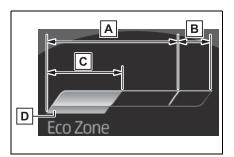

#### A ECO area

Shows that the vehicle is being driven in an Eco-friendly manner.

#### **B** Power area

Shows that an Eco-friendly driving range is being exceeded (during full power driving etc.).

- C Current acceleration
- D Reference operation range


A zone is displayed in blue under the Eco area which can be used as a reference operation range for using the accelerator pedal according to driving conditions such as starting off and cruising.

The ECO Accelerator Guidance display changes according to the driving status,

such as when starting off or cruising. It is easier to drive in an Eco-friendly manner by driving according to the display showing the accelerator pedal operations and staying within the reference operation range.

#### ▶ "Eco Score"

The driving status for the following 3 situations are evaluated in 5 levels: Smooth start-off acceleration ("Start"), driving without sudden acceleration ("Cruise") and smooth stopping ("Stop"). Each time the vehicle is stopped, a score result is displayed out of a perfect score of 100 points.

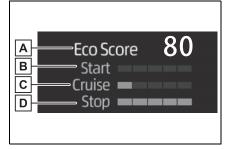

- A Score result
- B "Start"
- C "Cruise"
- D "Stop"

3 situations are displayed with each icon while driving.

How to read the bar display:

Score	Bar display
Unrated	


Score	Bar display	
Low		
High		

After starting off, "Eco Score" display does not start until the vehicle speed exceeds approximately 20 km/h (12 mph).

The "Eco Score" is reset each time the vehicle starts off to start a new evaluation.

When the hybrid system stops, the current total score result is displayed.\*

- \*: The score result is displayed only when "Eco Score" is selected for "Trip Summary". (→P.115)
- **EV Ratio/EV Driving Ratio**

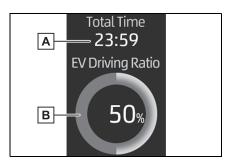

- A Elapsed time after starting
  Displays the elapsed time since hybrid system was started.\*
- **B** EV driving ratio after starting Displays the percentage of EV driving since the hybrid system was started.\*
- \*: It is reset each time the hybrid system stops.

#### **■** Distance to empty

This distance is computed based on

- your average fuel consumption. As a result, the actual distance that can be driven may differ from that displayed.
- When only a small amount of fuel is added to the tank, the display may not be updated. When refueling, turn the power switch to OFF. If the vehicle is refueled without turning the power switch to OFF, the display may not be updated.
- When "Refuel" is displayed, the remaining fuel amount is low and the distance that can be driven with the remaining fuel cannot be calculated. Refuel immediately.

### ■ ECO Accelerator Guidance/"Eco Score" will not operate when

The ECO Accelerator Guidance/"Eco Score" will not operate in the following situations:

- The Hybrid System Indicator is not operating.
- The vehicle is being driven using the dynamic radar cruise control with fullspeed range.

### Driving support system information display

Driving support system information display

Select to display the operational status of the following systems:

- LTA (Lane Tracing Assist)<sup>\*</sup>
   (→P.242)
- Dynamic radar cruise control with full-speed range<sup>\*</sup> (→P.256)
- Cruise control<sup>\*</sup> (→P.268)
- Speed limiter<sup>\*</sup> (→P.271)
- \*: If equipped

### ■ Navigation system-linked display (if equipped)

Select to display the following navigation system-linked information.

- Route guidance
- Compass display

## Audio system-linked display (if equipped)

Select to enable selection of an audio source or track on the display.

#### Vehicle information display

#### Drive information

2 items that are selected using the "Drive Info Items" setting (average speed, distance and total time) can be displayed vertically.

The displayed information changes according to the "Drive Info Type" setting (since the system was started or between resets). (→P.115)

Use the displayed information as a reference only.

Following items will be displayed.


- "Trip"
- "Average Speed": Displays the average vehicle speed since hybrid system start\*
- "Distance": Displays the distance driven since hybrid system start
- "Total Time": Displays the elapsed time since hybrid system start
- \*: These items are reset each time the

hybrid system stops.

- "Total"
- "Average Speed": Displays the average vehicle speed since the display was reset\*
- "Distance": Displays the distance driven since the display was reset
- "Total Time": Displays the elapsed time since the display was reset\*
- \*: To reset, display the desired item and press and hold ...
- Energy monitor

→P.119

### AWD system display (AWD models)

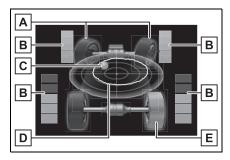

A Front tire direction display

Displays the operation amount and direction of the steering wheel via changes to the front tires on the display.

- **B** Torque distribution display Displays the drive status of each wheel in 6 steps from 0 to 5.
- C G-force display\*

Displays the size and direction of the Gforce applied to the vehicle via changes to the position of the ball on the display.

D Maximum G-force course\*

This item is linked with the G-force display and the course of the past movement of the ball is displayed.

Press and hold or to reset the record.

E Wheel spin display

When a tire is spinning, its icon on the display changes its color and blinks.

\*: This item is displayed only when driving mode is set to sport mode.

#### Settings display

Vehicle settings and the content displayed on the screen can be changed by using the meter control switches.

#### **■** Setting procedure

- 1 Operate or of the meter control switches and select .
- 2 Operate or of the meter control switches and select the desired item.
- If the function is turned on and off or the volume, etc. is changed on the setting screen, the setting is changed each time is pressed.
- For functions that allow operation contents, display contents, etc., of function to be selected, the setting screen is displayed by pressing and holding . When the setting screen is displayed, select the setting or desired value (time, etc.) with .

- 3 After changing the settings, press of the meter control switches.
- "Clock :00" (if equipped) (→P.101, 107)

Select to set up the clock setting.

### ■ 🏠 LTA (Lane Tracing Assist) (if equipped) (→P.242)

Select to set up the following items.

"Lane Center"

Select to enable/disable the lane centering function.

"Steering Assist"

Select to enable/disable steering wheel assistance.

"Sensitivity"

Select to set the lane departure alert sensitivity.

"Sway Warning"

Select to enable/disable the vehicle sway warning.

"Sway Sensitivity"

Select to set the vehicle sway warning sensitivity.

### ■ 🏂 PCS (Pre-Collision System) (if equipped) (→P.234)

Select to set up the following items.

• PCS on/off

Select to enable/disable the pre-collision system.

"Sensitivity"

Select to change the pre-collision warning timing.

#### ■ ⓐ<sub>//•</sub> BSM (Blind Spot Monitor) (if equipped) (→P.273)

Select to set up the following items.

• BSM (Blind Spot Monitor) on/off

Select to enable/disable the BSM system.

"Brightness"

Select to switch the brightness of the outside rear view mirror indicators. ( $\rightarrow$ P.273)

"Sensitivity"

Select to change the alert timing for an approaching vehicle.

#### ■ Py (Toyota parking assistsensor) (if equipped) (→P.291)

Select to set up the following items.

 Toyota parking assist-sensor on/off

Select to enable/disable the Toyota parking assist-sensor.

• "Volume"

Select to set the volume of the buzzer which sounds when the Toyota parking assist-sensor is operated.

#### ■ RCTA (Rear Crossing Traffic Alert) (if equipped) (→P.273)

 RCTA (Rear Crossing Traffic Alert) on/off

Select to enable/disable the RCTA system

"Volume"

Select to change the RCTA buzzer volume.

# ■ ★ PKSB (Parking Support Brake System) (if equipped) (→P.300)

Select to enable/disable the Parking Support Brake function.

### ■ PSA (Road Sign Assist) (if equipped) (→P.252)

Select to set up the following items.

Road Sign Assist on/off

Select to enable/disable the RSA system.

"Notification method"

Select to change each notification method used to notify the driver when the system recognizes excess speed, no overtaking and no-entry sign.

"Notification Level"

Select to change each notification level used to notify the driver when the system recognizes a speed limit sign.

#### ■ DRCC(RSA) (if equipped) (→P.264)

Select to enable/disable the Dynamic Radar Cruise Control with Road Sign Assist.

### ■ ♣ Vehicle Settings

 PBD (Power Back Door) (if equipped) (→P.137)

Select to set up the following items.

System settings

Select to enable/disable the power back door system.

"Hands Free"

Select to enable/disable the Hands Free Power Back Door.

· "Opening Adjustment" Select the open position when power back door is fully open.

· "Volume"

Select to set the volume of the buzzer which sounds when the power back door system operates.

- \*: Vehicles with Hands Free Power Back Door
- "TPWS" (Tire Pressure Warning System) (if equipped) (→P.387)
- · "Set Pressure"

Select to initialize the tire pressure warning system.

· "Change Wheel"

Select to change the tire pressure warning system sensor ID code set. To enable this function, a second set of tire pressure warning system sensor ID codes must be registered by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. For information regarding changing the registered ID code set, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

"Rear Seat Reminder" (→P.131)

Select to enable/disable the rear seat reminder function.

### ■ (∑) Settings

"Language"

Select to change the language on the multi-information display.

"Units"

Select to change the units of measure displayed.

"Meter Type" (7-inch display)

Select to change the speedometer display.

• **EV** (EV indicator) (→P.80)

Select to enable/disable the EV indica-

(Driving information display)

Select to set up the following items.

- · "Hybrid System" Select to enable/disable the ECO Accelerator Guidance (→P.111).
- · "Fuel Economy" Select to change the display on Fuel Economy (→P.111).
- \( \text{(Audio settings) (if equipped)} \)

Select to enable/disable screen.



- (Vehicle information display settings)
- "Display Contents" Select to set up the following items.

"Energy monitor":

Select to enable/disable the Energy monitor (→P.119)

AWD (AWD models):

Select to enable/disable the AWD system display (→P.114).

- · "Drive Info Type" Select to change the drive information type display between trip and total. (→P.114).
- · "Drive Info Items"

Select to set the items on the upper and lower side of the drive information screen from three items, average speed, distance and total time.

"Trip Summary"

Select to set the items displayed when the power switch is turned off.

#### "Pop-Up Display" (if equipped)

Select to enable/disable the following pop-up displays, which may appear in some situations.

- · Intersection guidance display of the navigation system-linked system (if equipped)
- · Incoming call display of the handsfree phone system (if equipped)
- Audio operation (if equipped)
- · Volume operation (if equipped)
- Voice control (if equipped)
- "MID OFF"

A blank screen is displayed

"Default Settings"

Select to reset the meter display settings.

#### ■ Suspension of the settings display

- In the following situations, operation of the settings display will be temporarily suspended.
- When a warning message appears on the multi-information display
- · When the vehicle begins to move
- Settings for functions not equipped to the vehicle are not displayed.
- When a function is turned off, the related settings for that function are not selectable.

#### **WARNING**

#### Cautions during setting up the display

As the hybrid system needs to be operating during setting up the display, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.



#### **NOTICE**

#### During setting up the display

To prevent 12-volt battery discharge, ensure that the hybrid system is operating while setting up the display features.

#### Warning message display

Select to display warning messages and measures to be taken if a malfunction is detected.  $(\to P.436)$ 

#### Convenience Services (Suggestion function)

Displays suggestions to the driver in the following situations. To select a response to a displayed suggestion, use the meter control switches.

#### ■ Suggestion to turn on the headlights

If the headlight switch is in other than **E**O or AUTO, and the vehicle speed is 5 km/h (3 mph) or higher for a certain amount of time when

the surroundings are dark, a suggestion message will be displayed.

### Suggestion to turn off the headlights

If the headlights are left on for a certain amount of time after the power switch has been turned off, a suggestion message will be displayed.

When the headlight switch is in the AUTO position:

The message asking if you wish to turn the headlights off is displayed. To turn the headlights off, select "Yes".

If the driver's door is opened after the power switch is turned off, this suggestion message will not be displayed.

#### Suggestion to close the power windows (linked to windshield wiper operation)

If the windshield wipers are operated with a power window open, a suggestion message will be displayed asking if you wish to close the power windows. To close all of the power windows, select "Yes".

#### ■ Customization


Convenience Services (Suggestion function) can be turned on/off. (Customizable features: →P.489)

### **Energy monitor/consumption screen**

You can view the status of your vehicle on the multi-information display and the audio system screen\* (if equipped).

\*: For navigation system or multimedia system

#### System components

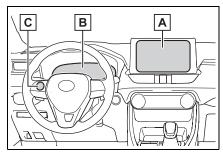

- A Audio system screen (if equipped)
- B Multi-information display
- © Meter control switches (→P.110)

#### Energy monitor

The energy monitor can be used to check the vehicle drive status, hybrid system operation status and energy regeneration status.

#### ■ Display

► Multi-information display

Press or of the meter control switches on the steering wheel



and select , and then press

or to select the energy monitor display.

- ▶ Audio system screen (without navigation function)
- 1 Press the "MENU" button.
- 2 Select "Info" on the "Menu" screen.

If a screen other than "Energy monitor" is displayed, select "Energy".

- Audio system screen (with navigation function)
- 1 Press the "MENU" button.
- 2 Select "Info" on the "Menu" screen.
- 3 Select "ECO" on the "Information" screen.

If a screen other than "Energy monitor" is displayed, select "Energy".

#### ■ Reading the display

The arrows will appear in accordance with the energy flow. When there is no energy flow, arrows will not be displayed.


The color of the arrows will change as follows

Green: When the hybrid battery (traction battery) is regenerated or charged.

Yellow: When the hybrid battery (traction battery) is in use.


Red: When the gasoline engine is in use.

▶ Multi-information display

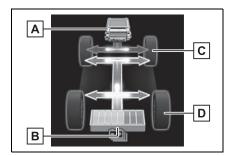

The image shows all the arrows as an example. The actual display will vary depending on conditions.

- A Gasoline engine
- **B** Hybrid battery (traction battery)
- C Front tire
- D Rear tire\*
- \*: For FF vehicles, the arrows to D are not displayed.
- Audio system screen

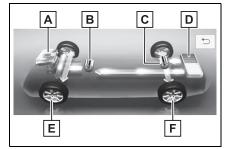


The image shows all the arrows as an example. The actual display will vary depending on conditions.

- A Gasoline engine
- B Front electric motor (traction motor)
- C Rear electric motor (traction

motor) (AWD vehicles only)

- D Hybrid battery (traction battery)
- E Front tire
- F Rear tire\*
- \*: For FF vehicles, the arrows to F are not displayed.
- Audio system screen ("Home" screen)

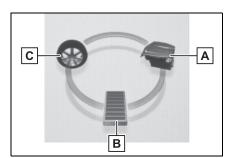


The image shows all the arrows as an example. The actual display will vary depending on conditions.

- A Gasoline engine
- B Hybrid battery (traction battery)
- C Tire

#### ■ Hybrid battery (traction battery) status

The display changes in 8 levels according to the remaining charge amount of the hybrid battery (traction battery).

- The figure shows the multi-information display as an example for explanation.
- These images are examples only, and may vary slightly from actual conditions.

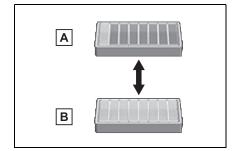

- A Low
- **B** High

### ■ Remaining charge amount warning of hybrid battery (traction battery)

- The buzzer sounds intermittently when the hybrid battery (traction battery) remains without charging while the shift lever is in N, or the remaining charge amount drops below a certain level. If the remaining charge amount drops further, the buzzer sounds continuously.
- When a warning message is shown on the multi-information display and the buzzer sounds, follow the instructions displayed on the screen to perform troubleshooting.

#### Consumption

#### ■ Display

- Audio system without navigation function
- 1 Press the "MENU" button.
- 2 Select "Info" on the "Menu" screen.
- **3** Select "Trip information" or "History".
- Audio system with navigation function
- 1 Press the "MENU" button.

- 2 Select "Info" on the "Menu" screen.
- 3 Select "ECO" on the "Information" screen.
- **4** Select "Trip information" or "History".

#### **■** Trip information

If a screen other than "Trip information" is displayed, select "Trip information".

The image is an example only, and may vary slightly from actual conditions.



- A Fuel consumption in the past 15 minutes
- B Regenerated energy in the past 15 minutes

One symbol indicates 50 Wh. Up to 5 symbols are shown.

- C Current fuel consumption
- D Resetting the consumption data
- E Average vehicle speed since the hybrid system was started
- F Elapsed time since the hybrid system was started
- G Cruising range (→P.123)


Average fuel consumption for the past

15 minutes is divided by color into past averages and averages attained since the power switch was last turned to ON. Use the displayed average fuel consumption as a reference.

#### ■ History

If a screen other than "History" is displayed, select "History".

The image is an example only, and may vary slightly from actual conditions.

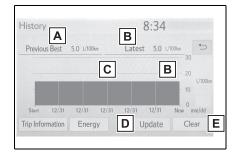

- A Best recorded fuel consumption
- **B** Latest fuel consumption
- C Previous fuel consumption record
- · Without navigation function:

Displays the daily average fuel consumption. (Instead of the date, "Trip 1" through "Trip 5" will be displayed.)

• With navigation function:

Displays the daily average fuel consumption.

- D Updating the latest fuel consumption data
- E Resetting the history data

The average fuel consumption history is divided by color into past averages and the average fuel consumption since the last time updated. Use the displayed average fuel consumption as

a reference.

#### **■** Updating the history data

Update the latest fuel consumption by selecting "Update" to measure the current fuel consumption again.

#### ■ Resetting the data

The fuel consumption data can be deleted by selecting "Clear".

#### ■ Cruising range

Displays the estimated maximum distance that can be driven with the quantity of fuel remaining.

This distance is computed based on your average fuel consumption. As a result, the actual distance that can be driven may differ from that displayed.

C	L
(	D
5	5
Ē	Š
(	ע
2	2
Ε	3
3	≤
Ε	3


### Before driving

3-1.	Key information	
	Keys126	
3-2.	Opening, closing and locking the doors	
	Side doors129	
	Back door134	
	Smart entry & start system147	
3-3.	Adjusting the seats	
	Front seats <b>152</b>	
	Rear seats153	
	Driving position memory 155	
	Head restraints158	
3-4.	Adjusting the steering wheel and mirrors	
	Steering wheel160	
	Inside rear view mirror161	
	Digital Rear-view Mirror 162	
	Outside rear view mirrors .171	
3-5.	Opening, closing the win- dows and moon roof	
	Power windows173	
	Panoramic moon roof 176	

#### Keys

#### Key types

The following keys are provided with the vehicle.

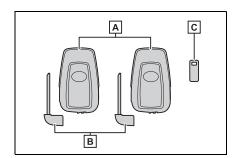

- A Electronic keys
- Operating the smart entry & start system (→P.147)
- Operating the wireless remote control function (→P.127)
- **B** Mechanical keys
- C Key number plate

#### ■When riding in an aircraft

When bringing an electronic key onto an aircraft, make sure you do not press any buttons on the electronic key while inside the aircraft cabin. If you are carrying an electronic key in your bag etc., ensure that the buttons are not likely to be pressed accidentally. Pressing a button may cause the electronic key to emit radio waves that could interfere with the operation of the aircraft.

#### ■ Electronic key battery depletion

- The standard battery life is 1 to 2 years.
- If the battery becomes low, an alarm will sound in the cabin and a message will be displayed on the multi-information display when the hybrid system stops.

- To reduce key battery depletion when the electronic key is to not be used for long periods of time, set the electronic key to the battery-saving mode. (→P.148)
- As the electronic key always receives radio waves, the battery will become depleted even if the electronic key is not used. The following symptoms indicate that the electronic key battery may be depleted. Replace the battery when necessary.
- The smart entry & start system or the wireless remote control does not operate.
- · The detection area becomes smaller.
- The LED indicator on the key surface does not turn on.

You can replace the battery by yourself ( $\rightarrow$ P.403). However, as there is a danger that the electronic key may be damaged, it is recommended that replacement is carried out by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

- To avoid serious deterioration, do not leave the electronic key within 1 m (3 ft.) of the following electrical appliances that produce a magnetic field:
- TVs
- Personal computers
- Cellular phones, cordless phones and battery chargers
- Table lamps
- Induction cookers

#### If a message regarding the state of the electronic key or power switch mode, etc. is shown

To prevent trapping the electronic key inside the vehicle, leaving the vehicle carrying the electronic key on your person without turning the power switch to OFF or other passengers from unintentionally taking the key out of the vehicle, etc., a message that prompts the user to confirm the state of the electronic key or power switch mode may be shown on the multi-information display. In those cases, follow the instructions on the dis-

play immediately.

#### ■If "Key Battery Low Replace Key Battery" is displayed on the multiinformation display

The electronic key has a low battery. Replace the electronic key battery. (→P.403)

- Replacing the battery
- →P.403

### Confirmation of the registered key number

The number of keys already registered to the vehicle can be confirmed. Ask any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for details.

#### ■If "A New Key has been Registered Contact Your Dealer for Details" is displayed on the multi-information display

This message will be displayed each time the driver's door is opened when the doors are unlocked from the outside for approximately 10 days after a new electronic key has been registered. If this message is displayed but you have not had a new electronic key registered, ask any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer to check if an unknown electronic key (other than those in your possession) has been registered.



#### **NOTICE**

#### ■To prevent key damage

- Do not drop the keys, subject them to strong shocks or bend them.
- Do not expose the keys to high temperatures for long periods of time.
- Do not get the keys wet or wash them in an ultrasonic washer, etc.
- Do not attach metallic or magnetic materials to the keys or place the keys close to such materials.


- Do not disassemble the keys.
- Do not attach a sticker or anything else to the surface of the electronic keys.
- Do not place the keys near objects that produce magnetic fields, such as TVs, audio systems and induction cookers
- Do not place the keys near medical electrical equipment such as lowfrequency therapy equipment or microwave therapy equipment, and do not receive medical attention with the keys on your person.
- Carrying the electronic key on your person

Carry the electronic key 10 cm (3.9 in.) or more away from electric appliances that are turned on. Radio waves emitted from electric appliances within 10 cm (3.9 in.) of the electronic key may interfere with the key, causing the key to not function properly.

- In case of a smart entry & start system malfunction or other keyrelated problems
- →P.462
- ■When an electronic key is lost
- →P.461

#### Wireless remote control

The electronic keys are equipped with the following wireless remote control:

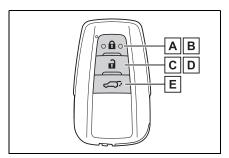

- $\blacksquare$  Locks all the doors ( $\rightarrow$ P.129)
- B Closes the side windows<sup>\*1</sup> and the panoramic moon roof<sup>\*1, 2</sup> (→P.129)
- C Unlocks all the doors (→P.129)
- D Opens the side windows<sup>\*1</sup> and the panoramic moon roof<sup>\*1, 2</sup> (→P.129)
- E Opens and closes the power back door\*2 (→P.137)
- \*1: These settings must be customized at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- \*2: If equipped


### Using the mechanical key

To take out the mechanical key, slide the release lever  $\boxed{\mathbf{A}}$  and take the key out.

The mechanical key can only be inserted in one direction, as the key only has grooves on one side. If the key cannot be inserted in a lock cylinder, turn it over and re-attempt to insert it.

After using the mechanical key, store it in the electronic key. Carry the

mechanical key together with the electronic key. If the electronic key battery is depleted or the entry function does not operate properly, you will need the mechanical key. (→P.462)

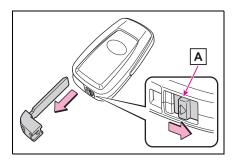

#### When required to leave the vehicle's key with a parking attendant

Lock the glove box as circumstances demand. (→P.345)
Remove the mechanical key for your own use and provide the attendant with the electronic key only.

### ■If you lose your keys

→P.461

#### ■ If a wrong key is used

The key cylinder rotates freely to isolate inside mechanism.


#### **Side doors**

The vehicle can be locked and unlocked using the entry function, wireless remote control or door lock switch.

### Unlocking and locking the doors from the outside

Using the entry function (vehicles with smart entry & start system equipped with entry function)

Carry the electronic key to enable this function.

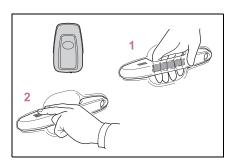

**1** Grip the front door handle to unlock the doors.


Make sure to touch the sensor on the back of the handle.

The doors cannot be unlocked for 3 seconds after the doors are locked.

2 Touch the lock sensor (the indentation on the upper part of the door handle) to lock the doors.

Check that the door is securely locked.

### ■ Using the wireless remote control

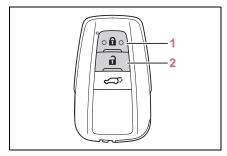

#### 1 Locks all the doors

Check that the door is securely locked. Press and hold to close the side windows and panoramic moon roof (if equipped).\*


2 Unlocks all the doors

Press and hold to open the side windows and panoramic moon roof (if equipped).\*

- \*: These settings must be customized at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Switching the door unlock function (vehicles with smart entry & start system equipped with entry function)

It is possible to set which doors the entry function unlocks using the wireless remote control.

- 1 Turn the power switch to OFF.
- 2 Cancel the intrusion sensor and tilt sensor of the alarm system to prevent unintended triggering of the alarm while changing the settings. (if equipped) (→P.90)
- When the indicator light on the key surface is not on, press and hold



The setting changes each time an operation is performed, as shown below. (When changing the setting continuously, release the buttons, wait for at least 5 seconds, and repeat step 3.)

	. ,
Multi-information display/Beep	Unlocking function
(Left-hand drive vehicles)	Holding the driver's door handle unlocks only the driver's door.
(Right-hand drive vehicles) Exterior: Beeps 3 times Interior: Pings once	Holding the front passenger's door handle or pressing the back door opener switch unlocks all the doors.
Exterior: Beeps twice Interior: Pings once	Holding either front door handle or pressing the back door opener switch unlocks all the doors.

Vehicles with alarm: To prevent unintended triggering of the alarm, unlock the doors using the wireless remote control and open and close a door once after the settings have been changed. (If a door is not opened within 30 seconds

after is pressed, the doors will be locked again and the alarm will automatically be set.)

In a case that the alarm is triggered, immediately stop the alarm. ( $\rightarrow$ P.89)

#### Impact detection door lock release system

In the event that the vehicle is subject to a strong impact, all the doors are unlocked. Depending on the force of the impact or the type of accident, however, the system may not operate.

#### ■ Operation signals

Doors: The emergency flashers flash to indicate that the doors have been locked/unlocked using the entry function (if equipped) or wireless remote control. (Locked: Once; Unlocked: Twice)

Side windows and panoramic moon roof (if equipped): A buzzer sounds to indicate that the side windows and panoramic moon roof are operating using the wireless remote control.


#### ■ Security feature

If a door is not opened within approximately 30 seconds after the vehicle is unlocked using the entry function (if equipped) or wireless remote control, the security feature automatically locks the vehicle again. (However, depending on the location of the electronic key, the key may be detected as being in the vehicle. In this case, vehicle may be unlocked.)

When the door cannot be locked by the lock sensor on the upper part of the door handle (vehicles with smart entry & start system equipped with entry function)

If the door will not lock even when the topside sensor area is touched, try touching both the topside and underside sensor areas at the same time.

When gloves are being worn, remove the gloves.

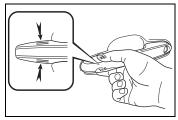

#### **■** Door lock buzzer

A buzzer sounds continuously for 5 seconds in the following situations. Fully close all the doors and lock the vehicle once more.

- If an attempt to lock the doors using the smart entry & start system is made when a door other than the door you are locking is open.
- If an attempt to lock the doors using the wireless remote control is made when a door is open.

#### ■ Setting the alarm (if equipped)

Locking the doors will set the alarm system.  $(\rightarrow P.89)$ 

■ Conditions affecting the operation of the smart entry & start system or wireless remote control

→P.148

- If the smart entry & start system or the wireless remote control does not operate properly
- Use the mechanical key to lock and unlock the doors. (→P.463)
- Replace the key battery with a new one if it is depleted. (→P.403)

#### ■ If the 12-volt battery is discharged

The doors cannot be locked and unlocked using the smart entry & start system or wireless remote control. Lock or unlock the doors using the mechanical key. (→P.463)

#### ■ Rear seat reminder function

- In order to remind you not to forget luggage, etc. in the rear seat, when the power switch is turned to OFF after any of the following conditions are met, a buzzer will sound and a message will be displayed on the multi-information display for approximately 6 seconds.
- The hybrid system is started within 10 minutes after opening and closing a rear door.
- A rear door has been opened and closed after the hybrid system was started.

However, if a rear door is opened and then closed within approximately 2 seconds, the rear seat reminder function may not operate.

The rear seat reminder function deter-

mines that luggage, etc. has been placed in a rear seat based on opening and closing of a rear door. Therefore, depending on the situation, the rear seat reminder function may not operate and you may still forget luggage, etc. in the rear seat, or it may operate unnecessarily.

The rear seat reminder function can be enabled/disabled. (→P.489)

#### ■ Customization

Settings (e.g. unlocking function using a key) can be changed. (Customizable features: →P.491)

#### WARNING

#### ■ To prevent an accident

Observe the following precautions while driving the vehicle.

Failure to do so may result in a door opening and an occupant could be thrown out of the vehicle, resulting in death or serious injury.

- Ensure that all doors are properly closed.
- Do not pull the inside handle of the doors while driving.
   Be especially careful for the front doors, as the doors may be opened even if the inside lock buttons are in locked position.
- Set the rear door child-protector locks when children are seated in the rear seats

#### ■When opening or closing a door

Check the surroundings of the vehicle such as whether the vehicle is on an incline, whether there is enough space for a door to open and whether a strong wind is blowing. When opening or closing the door, hold the door handle tightly to prepare for any unpredictable movement.

#### A


#### WARNING

■ When using the wireless remote control or mechanical key and operating the power windows or panoramic moon roof (if equipped)

Operate the power window or panoramic moon roof after checking to make sure that there is no possibility of any passenger having any of their body parts caught in the side window or panoramic moon roof. Also, do not allow children to operate the wireless remote control or mechanical key. It is possible for children and other passengers to get caught in the side window or panoramic moon roof.


### Unlocking and locking the doors from the inside

Using the door lock switch

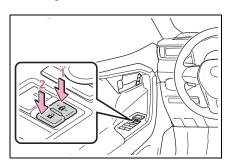

- 1 Locks all the doors
- 2 Unlocks all the doors

#### ■ Using the inside lock buttons

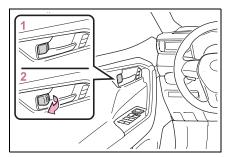

- 1 Locks the door
- 2 Unlocks the door

The front doors can be opened by pulling the inside handle even if the lock buttons are in the lock position.

#### Locking the front doors from the outside without a key

- 1 Move the inside lock button to the lock position.
- Close the door while pulling the door handle.

The door cannot be locked if the power switch is in ACC or ON, or the electronic key is left inside the vehicle.

Depending on the position of the electronic key, the key may not be detected correctly and the door may be locked.

#### ■ Open door warning buzzer

If the vehicle speed reaches 5 km/h (3 mph), a buzzer sounds to indicate that the door(s) or the hood is not fully closed.


The open door(s) or hood is displayed on the multi-information display.

#### When all the doors are locked with the entry function or wireless remote control

- The doors cannot be unlocked with the door lock switch.
- The door lock switch can be reset by unlocking all the doors with the entry function or wireless remote control.

## Rear door child-protector lock

The door cannot be opened from inside the vehicle when the lock is set.

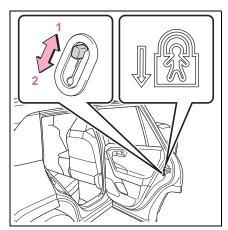

- 1 Unlock
- 2 Lock

These locks can be set to prevent children from opening the rear doors. Push down on each rear door switch to lock both rear doors.

# Automatic door locking and unlocking systems

The following functions can be set or canceled:

For instructions on customizing, refer to P.488.

Function	Operation
Speed linked door locking function	All doors are automatically locked when vehicle speed is approximately 20 km/h (12mph) or higher.
Shift position linked door lock- ing function	All doors are automatically locked when shifting the shift lever to position other than P.
Shift position linked door unlock- ing function	All doors are auto- matically unlocked when shifting the shift lever to P.
Driver's door linked door unlock- ing function	All doors are automatically unlocked when driver's door is opened within approximately 45 seconds after turning the power switch to OFF.

#### **Back door**

The back door can be locked/unlocked and opened/closed by the following procedures.

#### A

#### **WARNING**

Observe the following precautions. Failure to do so may result in death or serious injury.

#### ■ Before driving

- Make sure that the back door is fully closed.
  - If the back door is not fully closed, it may open unexpectedly while driving and hit near-by objects or luggage in the luggage compartment may be thrown out, causing an accident.
- Do not allow children to play in the luggage compartment.
   If a child is accidentally locked in the luggage compartment, they could get heat exhaustion or other injuries.
- Do not allow a child to open or close the back door.
   Doing so may cause the back door to operate unexpectedly, or cause the child's hands, head, or neck to be caught by the closing back door.

#### Important points while driving

- Keep the back door closed while driving.
  - If the back door is left open, it may hit near-by objects or luggage in the luggage compartment may be thrown out, causing an accident.
- Never let anyone sit in the luggage compartment.
   In the event of sudden braking, sudden swerving or a collision, they are susceptible to death or serious injury.

#### Back door handles

Do not hang any object to the back door handles.

If any object is hung, the back door may suddenly shut, causing parts of the body to be caught, resulting in death or serious injury.

#### Operating the back door

Observe the following precautions. Failure to do so may cause parts of the body to be caught, resulting in death or serious injury.

- Remove any heavy loads, such as snow and ice, from the back door before opening it. Failure to do so may cause the back door to suddenly shut again after it is opened.
- When opening or closing the back door, thoroughly check to make sure the surrounding area is safe.
- If anyone is in the vicinity, make sure they are safe and let them know that the back door is about to open or close.
- Use caution when opening or closing the back door in windy weather as it may move abruptly in strong wind.
- Vehicles without power back door: The back door may suddenly shut if it is not opened fully. It is more difficult to open or close the back door on an incline than on a level surface, so beware of the back door unexpectedly opening or closing by itself. Make sure that the back door is fully open and secure before using the luggage compartment.



#### **WARNING**

- Vehicles with power back door: The back door may suddenly shut if it is not opened fully, while on a steep incline. Make sure that the back door is secured before using the luggage compartment.
- When closing the back door, take extra care to prevent your fingers, etc. from being caught.



- Vehicles without power back door: When closing the back door, make sure to press it lightly on its outer surface. If the back door handle is used to fully close the back door, it may result in hands or arms being caught.
- Do not pull on the back door damper stay (vehicles without power back door) (→P.137) or back door spindle (vehicles with power back door) (→P.144) to close the back door, and do not hang on the back door damper stay (vehicles without power back door) or back door spindle (vehicles with power back door).


Doing so may cause hands to be caught or the back door damper stay (vehicles without power back door) or back door spindle (vehicles with power back door) to break, causing an accident.

Vehicles without power back door: If a bicycle carrier or similar heavy object is attached to the back door, it may suddenly shut again after being opened, causing someone's hands, head or neck to be caught and injured. When installing an accessory part to the back door, using a genuine Toyota part is recommended.

#### Unlocking and locking the back door from the outside

■ Using the entry function (vehicles with smart entry & start system equipped with entry function)

Carry the electronic key to enable this function.

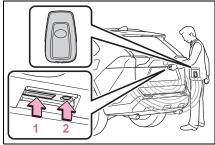

Unlocks all the doors

The doors cannot be unlocked for 3 seconds after the doors are locked.

2 Locks all the doors

Check that the door is securely locked.

■ Using the wireless remote control

→P.129

#### ■ Operation signals

The emergency flashers flash to indicate that the doors have been

locked/unlocked using the entry function (if equipped) or wireless remote control. (Locked: once; Unlocked: twice)

#### ■ Security feature

If a door is not opened within approximately 30 seconds after the vehicle is unlocked using the entry function or wireless remote control, the security feature automatically locks the vehicle again. (However, depending on the location of the electronic key, the key may be detected as being in the vehicle. In this case, vehicle may be unlocked.)

## Unlocking and locking the back door from the inside


#### ■ Using the door lock switch

→P.132

# Opening/closing the back door (vehicles without power back door)

#### Open


Raise the back door while pressing up the back door opener switch.

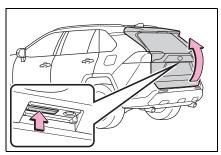

#### **■** Close

Lower the back door using the back door handle A, and make sure to push the back door down from the outside to close it.

Be careful not to pull the back door sideways when closing the back door with the handle.

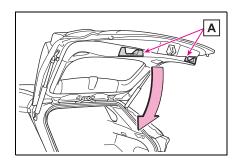

#### **■**Luggage compartment light


- The luggage compartment light turns on when the back door is opened.
- When the power switch is turned to OFF, the light will go off automatically after 20 minutes.

### ■ If the back door opener is inoperative


The back door can be unlocked from the inside.

1 Remove the cover.


To prevent damage, cover the tip of the screwdriver with a rag.




2 Loosen the screw.

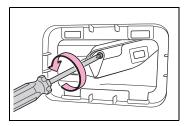

3 Turn the cover.

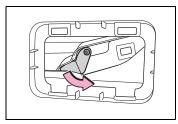

4 Move the lever.

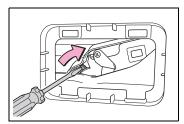

- 5 When installing, reverse the steps listed.
- Open door warning buzzer → P.132




#### NOTICE

#### ■ Back door damper stays

The back door is equipped with damper stays that hold the back door in place.

Observe the following precautions. Failure to do so may cause damage to the back door damper stay, resulting in malfunction.



- Do not attach any foreign objects, such as stickers, plastic sheets, or adhesives to the damper stay rod.
- Do not touch the damper stay rod with gloves or other fabric items.

- Do not attach any accessories other than genuine Toyota parts to the back door.
- Do not place your hand on the damper stay or apply lateral forces to it.

# Opening/closing the back door (vehicles with power back door)


#### Using the wireless remote control

Press and hold the switch.

The power back door automatically opens/closes.

Unlock the back door before operating.

Pressing the switch while the power back door is opening/closing stops the operation. When the switch is pressed and held again during the halted operation, the back door will perform the reverse operation.

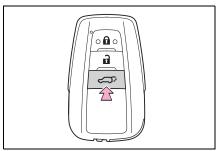


#### Using the power back door switch on the instrument panel

Press and hold the switch.

The power back door automatically opens/closes.

Unlock the back door before operating.

Pressing the switch while the power back door is opening/closing stops the operation. When the switch is pressed and held again during the halted operation, the back door will perform the reverse operation.

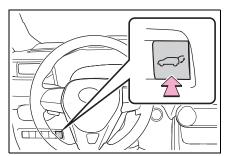


#### Using the back door opener switch

When the back door is unlocked: Press the back door opener switch.

When the back door is locked: While carrying the electronic key on your person, press and hold the back door opener switch.

The power back door automatically opens.

Pressing the switch while the power back door is opening/closing stops the operation.

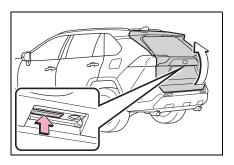


### ■ Using the power back door switch on the back door

Press the switch.

The power back door automatically closes.


Pressing the switch while the power back door is operating will stop the operation. When the switch is pressed again during the halted operation, the back door will perform the reverse operation.

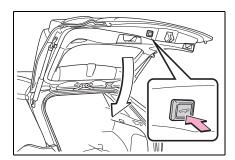

#### ■ Using the back door handles

Lower the back door using the back door handle  $\boxed{\mathbf{A}}$  .

The back door closing assist (→P.140) will be activated, and the power back door will fully close automatically.

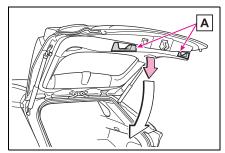


Using the kick sensor (vehicles with Hands Free Power Back Door)

The Hands Free Power Back Door

enables automatic opening and closing of the power back door by putting your foot near the lower center part of the rear bumper and moving it away from the rear bumper. When operating the Hands Free Power Back Door, make sure that the power switch is in OFF, the Hands Free Power Back Door operation is enabled ( $\rightarrow$ P.115) and you are carrying an electronic key.

While carrying an electronic key, stand within the smart entry & start system operation range, approximately 30 to 50 cm (11.8 to 19.7 in.) from the rear bumper.

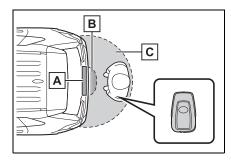


- A Kick sensor
- B Hands Free Power Back Door operation detection area
- © Smart entry & start system operation detection area (→P.147)
- Perform a kick operation by moving your foot to within approximately 10 cm (3.9 in.) of the rear bumper and then pulling it back.

Perform the entire kick operation within 1 second.

The back door will not start operating while a foot is detected under the rear bumper.

Operate the Hands Free Power Back Door without contacting the rear bumper with your foot.

If another electronic key is in the cabin or luggage compartment, it may take slightly longer than normal for the operation to occur.

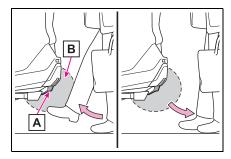

- A Kick sensor
- B Hands Free Power Back Door operation detection area
- 3 When the kick sensor detects that your foot is pulled back, a buzzer will sound and the back door will automatically fully open/close.

If a foot is moved under the rear bumper while the back door is opening/closing, the back door will stop moving.

If a foot is moved under the rear bumper again during the halted operation, the back door will perform the reverse operation.

#### ■ Luggage compartment light

- The luggage compartment light turns on when the back door is opened.
- When the power switch is turned to OFF, the light will go off automatically after 20 minutes.

#### Back door closer

In the event that the back door is left slightly open, the back door closer will automatically close it to the fully closed position.

Whatever the state of the power switch, the back door closer operates.

### ■ Power back door operating conditions

The power back door can automatically open and close under the following conditions:

- When the power back door system is enabled. (→P.115)
- When the back door is unlocked.

However, if the back door opener switch is pressed and held while carrying the electronic key on your person, the power back door will be operated even if the back door is locked. (→P.138)


- When the power switch is in ON, in addition to the above for the opening operations, the back door operates for any of the following conditions:
- Parking brake is engaged
- The brake pedal is depressed
- The shift lever is in P.

#### Operation of the power back door

- A buzzer sounds to indicate that the back door is opening/closing.
- When the power back door system is disabled, the power back door does not operate but it can be opened and closed by hand.
- When the power back door automatically opens, if an abnormality due to people or objects is detected, operation will stop.

#### ■ Jam protection function

Sensors are equipped on both sides of the power back door. If anything obstructs the power back door while it is closing, the back door will automatically operate in the opposite direction or stop.

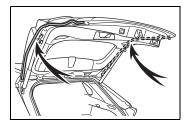

#### ■ Fall-down protection function

While the power back door is opening automatically, applying excessive force to it will stop the opening operation to prevent the power back door from suddenly shutting.

#### ■ Back door closing assist

If the back door is lowered manually when the back door is stopped at an open position, the back door will fully close automatically.

### ■ Back door reserve lock function (if equipped)

This function is a function which reserves locking of all doors, beforehand, when the power back door is open.

When the following procedure is performed, all the doors except the power back door are locked and then power back door will also be locked at the same time it is closed.

- Close all doors, except the back door.
- 2 During the power back door closing operation, lock the doors using the smart entry & start system from the front doors (→P.129) or the wireless remote control. (→P.129)

The emergency flashers flash to indicate that all the doors have been closed and locked.

- If the electronic key is placed inside the vehicle after starting a close operation via the door reserve lock function, the electronic key may become locked inside the vehicle.
- If the power back door does not fully close due to the operation of the jam protection function, etc., while the

back door is automatically closing after a door reserve lock operation is performed, the door reserve lock function is canceled and all the doors will unlock.

- Before leaving the vehicle, make sure that all the doors are closed and locked
- Hands Free Power Back Door operating conditions (vehicles with Hands Free Power Back Door)

The Hands Free Power Back Door will open/close automatically when the following conditions are met:

- The Hands Free Power Back Door operation is enabled (→P.115)
- The power switch is in OFF.
- The electronic key is within the operational range. (→P.147)
- A foot is put near the lower center part of the rear bumper and moved away from the rear bumper. The power back door may also be operated by putting a hand, an elbow, a knee, etc. near the lower center part of the rear bumper and moving it away from the rear bumper. Make sure to hold it close enough to the center part of the rear bumper.
- Situations in which the Hands Free Power Back Door may not operate properly (vehicles with Hands Free Power Back Door)

In the following situations, the Hands Free Power Back Door may not operate properly:

- When a foot remains under the rear bumper
- If the rear bumper is strongly hit with a foot or is touched for a while

If the rear bumper has been touched for a while, wait for a short time before attempting to operate the Hands Free Power Back Door again.

 When operated while a person is too close to the rear bumper

- When an external radio wave source interferes with the communication between the electronic key and the vehicle (→P.148)
- When the vehicle is parked near an electrical noise source which affects the sensitivity of the Hands Free Power Back Door, such as a pay parking spot, gas station, electrically heated road, or fluorescent light
- When the vehicle is near a TV tower, electric power plant, radio station, large display, airport or other facility that generates strong radio waves or electrical noise
- When a large amount of water is applied to the rear bumper, such as when the vehicle is being washed or in heavy rain
- When mud, snow, ice, etc. is attached to the rear bumper
- When the vehicle has been parked for a while near objects that may move and contact the rear bumper, such as plants
- When an accessory is installed to the rear bumper

If an accessory has been installed, turn the Hands Free Power Back Door operation setting off.

■ Preventing unintentional operation of the Hands Free Power Back Door (vehicles with Hands Free Power Back Door)

When an electronic key is in the operation range, the Hands Free Power Back Door may operate unintentionally, so be careful in the following situations.

- When a large amount of water is applied to the rear bumper, such as when the vehicle is being washed or in heavy rain
- When dirt is wiped off the rear bumper
- When a small animal or small object, such as a ball, moves under the rear bumper
- When an object is moved from under

the rear bumper

- If someone is swinging their legs while sitting on the rear bumper
- If the legs or another part of someone's body contacts the rear bumper while passing by the vehicle
- When the vehicle is parked near an electrical noise source which affects the sensitivity of the Hands Free Power Back Door, such as a pay parking spot, gas station, electrically heated road, or fluorescent light
- When the vehicle is near a TV tower, electric power plant, radio station, large display, airport or other facility that generates strong radio waves or electrical noise
- When the vehicle is parked in a place where objects such as plants are near the rear bumper
- If luggage, etc. is set near the rear bumper
- If accessories or a vehicle cover is installed/removed near the rear bumper
- When the vehicle is being towed To prevent unintentional operation, turn the Hands Free Power Back Door operation setting off. (→P.115)

### ■ When reconnecting the 12-volt batterv


To enable the power back door to operate properly, close the back door manually.

### ■ If the back door opener is inoperative


The back door can be unlocked from the inside.

1 Remove the cover.


To prevent damage, cover the tip of the screwdriver with a rag.

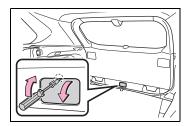


2 Loosen the screw.

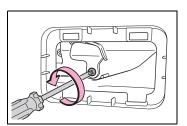

3 Turn the cover.

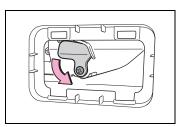

4 Move the lever.

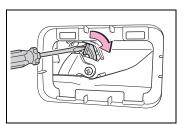


5 When installing, reverse the steps listed.

#### ■ Customization

Settings (e.g. power back door opening angle) can be changed. (Customizable features: →P.493)

#### Back door closer

In the event that the back door is left slightly open, the back door closer will automatically close it to the fully closed position. It takes several seconds before the back door closer begins to operate. Be careful not to catch fingers or anything else in the back door, as this may cause bone fractures or other serious injuries.

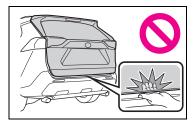

Use caution when using the back door closer as it still operates when the power back door system is canceled.

#### ■ Power back door

Observe the following precautions when operating the power back door. Failure to do so may cause death or serious injury.

- Check the safety of the surrounding area to make sure there are no obstacles or anything that could cause any of your belongings to get caught.
- If anyone is in the vicinity, make sure they are safe and let them know that the back door is about to open or close.
- If the power back door system is turned off while the back door is operating automatically, the automatic operation is stopped. The back door then has to be operated manually. Take extra care when on an incline, as the back door may open or close unexpectedly.

- If the operating conditions of the power back door are no longer met, a buzzer may sound and the back door may stop opening or closing. The back door then has to be operated manually. Take extra care when on an incline, as the back door may open or close abruptly.
- On an incline, the back door may suddenly shut after it opens. Make sure the back door is fully open and secure.
- In the following situations, the power back door may detect an abnormality and automatic operation may be stopped. In this case, the back door has to be operated manually. Take extra care when on an incline, as the back door may open or close abruptly.
- When the back door contacts an obstacle
- When the 12-volt battery voltage suddenly drops, such as when the power switch is turned to ON or the hybrid system is started during automatic operation
- If a bicycle carrier or similar heavy object is attached to the back door, it may suddenly shut again after being opened, causing someone's hands, head or neck to be caught and injured. When installing an accessory part to the back door, using a genuine Toyota part is recommended.

#### Jam protection function

Observe the following precautions. Failure to do so may cause death or serious injury.

Never use any part of your body to intentionally activate the jam protection function

- The jam protection function may not work if something gets caught just before the back door fully closes. Be careful not to catch fingers or anything else.
- The jam protection function may not work depending on the shape of the object that is caught. Be careful not to catch fingers or anything else.

#### ■ Hands Free Power Back Door (if equipped)

Observe the following precautions when operating the Hands Free Power Back Door.


Failure to do so may cause death or serious injury.

- Check the safety of the surrounding area to make sure there are no obstacles or anything that could cause any of your belongings to get caught.
- When putting your foot near the lower center part of the rear bumper and moving it from the rear bumper, be careful not to touch the exhaust pipes until they have cooled down sufficiently, as touching hot exhaust pipes can cause burns.
- Do not leave the electronic key within the effective range (detection area) of the luggage compartment.

#### **NOTICE**

#### ■ Back door spindles

The back door is equipped with spindles that hold the back door in place. Observe the following precautions. Failure to do so may cause damage to the back door spindle, resulting in malfunction.

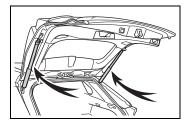

- Do not attach any foreign objects, such as stickers, plastic sheets, or adhesives to the spindle rod.
- Do not touch the spindle rod with gloves or other fabric items.
- Do not attach heavy accessories to the back door. When attaching, ask any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for details.
- Do not place your hand on the spindle or apply lateral forces to it.

#### To prevent back door closer malfunction

Do not apply excessive force to the back door while the back door closer is operating. Applying excessive force may cause the back door closer to malfunction.

#### ■To prevent damage to the power back door

Make sure that there is no ice between the back door and frame that would prevent movement of the back door. Operating the power back door when excessive load is present on the back door may cause a malfunction.

#### A

#### **NOTICE**

- Do not apply excessive force to the back door while the power back door is operating.
- Take care not to damage the sensors (installed on the right and left edges of the power back door) with a knife or other sharp object. If the sensor is disconnected, the power back door will not close automatically.
- Hands Free Power Back Door precautions (if equipped)

The kick sensor is located behind lower center part of the rear bumper. Observe the following to ensure that the Hands Free Power Back Door function operates properly:

- Keep the lower center part of the rear bumper clean at all times. If the lower center part of the rear bumper is dirty or covered with snow, the kick sensor may not operate. In this situation, clean off the dirt or snow, move the vehicle from the current position and then check if the kick sensor operates. If it does not operate, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Do not apply coatings that have a rain clearing (hydrophilic) effect, or other coatings, to the lower center part of the rear bumper.

- Do not park the vehicle near objects that may move and contact the lower center part of the rear bumper, such as grass or trees. If the vehicle has been parked for a while near objects that may move and contact the lower center part of the rear bumper, such as grass or trees, the kick sensor may not operate. In this situation, move the vehicle from the current position and then check if the kick sensor operates. If it does not operate, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Do not subject the kick sensor or its surrounding area to a strong impact. If the kick sensor or its surrounding area has been subjected to a strong impact, the kick sensor may not operate properly. If the kick sensor does not operate in the following situations, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- The kick sensor or its surrounding area has been subjected to a strong impact.
- The lower center part of the rear bumper is scratched or damaged.
- Do not disassemble the rear bumper.
- Do not attach stickers to the rear bumper.
- Do not paint the rear bumper.
- If a bicycle carrier or similar heavy object is attached to the power back door, disable the Hands Free Power Back Door. (→P.115)

# Changing settings of the power back door system (vehicles with power back door)

The settings of the power back door system can be changed by displaying the "Vehicle Settings" - "PBD" screen from the screen of the multi-information display. (→P.115)

The changed power back door settings are not reset by turning the power switch to OFF. In order to restore the original settings, they need to be

changed back on the screen of the multi-information display.

# Adjusting the open position of the back door (vehicles with power back door)


The open position of the power back door can be adjusted.

- 1 Stop the back door in the desirable position. (→P.137)
- 2 Press and hold the power back door switch on the back door for approximately 2 seconds.

When the settings are completed, the buzzer sounds 4 times.

When opening the back door the next time, the back door will stop at that


position.

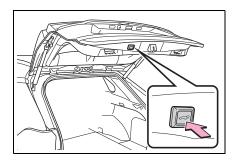

# ■ Canceling the adjusted open position of the back door

Press and hold the power back door switch on the back door for approximately 7 seconds.

After the buzzer sounds 4 times, it sounds twice more. When the power back door does the opening operation the next time, the door will open to the initial settings position.

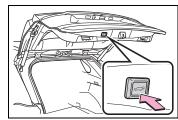

#### **■** Customization

The opening position can be set with the multi-information display.  $(\rightarrow P.115)$ 


Priority for the stop position is given to the last position set by either the power back door switch on the back door or multi-information display.

# Smart entry & start system

The following operations can be performed simply by carrying the electronic key on your person, for example in your pocket. The driver should always carry the electronic key.

- Locks and unlocks the side doors (vehicles with entry function) (→P.129)
- Locks and unlocks the back door (vehicles with entry function) (→P.135)
- Starts the hybrid system (→P.199)


#### ■ Antenna location

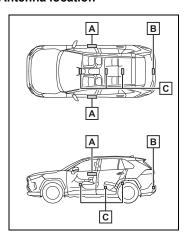

- Antennas outside the cabin (vehicles with entry function)
- Antenna outside the luggage compartment (vehicles with entry func-

tion)

- C Antennas inside the cabin
- Effective range (areas within which the electronic key is detected)

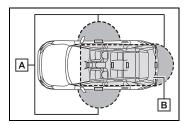

A When locking or unlocking the doors (vehicles with entry function)

The system can be operated when the electronic key is within about 0.7 m (2.3 ft.) of either of the outside front door handles and back door opener switch. (Only the doors detecting the key can be operated.)

B When starting the hybrid system or changing power switch modes

The system can be operated when the electronic key is inside the vehicle.

#### If an alarm sounds or a warning message is displayed

An alarm sounds and warning message displays shown on the multi-information display are used to protect against unexpected accidents or theft of the vehicle resulting from erroneous operation. When a warning message is displayed, take appropriate measures based on the displayed message.

When only an alarm sounds, circumstances and correction procedures are as follows.

 When an exterior alarm sounds once for 5 seconds (vehicles with entry function)

Situation	Correction proce- dure
An attempt was made to lock the vehicle while a door was open.	Close all of the doors and lock the doors again.

When an interior alarm pings continuously

•	
Situation	Correction proce- dure
The power switch	
was turned to ACC	
while the driver's	Turn the power
door was open (or	switch to OFF and
the driver's door	close the driver's
was opened while	door.
the power switch	
was in ACC).	

# ■ Battery-saving function (vehicles with entry function)

The battery-saving function will be activated in order to prevent the electronic key battery and the 12-volt battery from being discharged while the vehicle is not in operation for a long time.

- In the following situations, the smart entry & start system may take some time to unlock the doors.
- The electronic key has been left in an area of approximately 2 m (6 ft.) of the outside of the vehicle for 10 minutes or longer.
- The smart entry & start system has not been used for 5 days or longer.
- If the smart entry & start system has not been used for 14 days or longer, the doors cannot be unlocked at any doors except the driver's door. In this case, take hold of the driver's door handle, or use the wireless remote control or the mechanical key, to

unlock the doors.

# ■ Turning an electronic key to battery-saving mode

 When battery-saving mode is set, battery depletion is minimized by stopping the electronic key from receiving radio waves.

Press

3

twice while pressing and

holding

a

Confirm that the electronic key indicator flashes 4 times.

While the battery-saving mode is set, the smart entry & start system cannot be used. To cancel the function, press any of the electronic key buttons.



 Electronic keys that will not be used for long periods of time can be set to the battery-saving mode in advance.

#### ■ When electronic key function stops

If the position of the electronic key has not changed for a certain amount of time such as when the electronic key is left somewhere, the function of the electronic key stops to reduce depletion of the battery.

In this case, function can automatically be restored by moving the position of the key such as by lifting it up.

#### ■ Conditions affecting operation

The smart entry & start system uses weak radio waves. In the following situations, the communication between the electronic key and the vehicle may be affected, preventing the smart entry & start system, wireless remote control and immobilizer system from operating properly.

(Ways of coping: →P.462)

- When the electronic key battery is depleted
- Near a TV tower, electric power plant, gas station, radio station, large display, airport or other facility that generates strong radio waves or electrical noise
- When the electronic key is in contact with, or is covered by the following metallic objects
- Cards to which aluminum foil is attached
- Cigarette boxes that have aluminum foil inside
- · Metallic wallets or bags
- Coins
- · Hand warmers made of metal
- · Media such as CDs and DVDs
- When other wireless key (that emits radio waves) is being used nearby
- When carrying the electronic key together with the following devices that emit radio waves
- Portable radio, cellular phone, cordless phone or other wireless communication devices
- Another vehicle's electronic key or a wireless key that emits radio waves
- Personal computers or personal digital assistants (PDAs)
- Digital audio players
- Portable game systems
- If window tint with a metallic content or metallic objects are attached to the rear window
- When the electronic key is placed near a battery charger or electronic devices
- When parking in a coin-operated parking lot (Radio waves used to detect vehicles may affect the smart entry & start system.)

## ■ Note for the entry function (if equipped)

- Even when the electronic key is within the effective range (detection areas), the system may not operate properly in the following cases:
- · The electronic key is too close to the

- window or outside door handle, near the ground, or in a high place when the doors are locked or unlocked.
- The electronic key is on the instrument panel, luggage cover or floor, or in the door pockets or glove box when the hybrid system is started or power switch modes are changed.
- Do not leave the electronic key on top of the instrument panel or near the door pockets when exiting the vehicle. Depending on the radio wave reception conditions, it may be detected by the antenna outside the cabin and the door will become lockable from the outside, possibly trapping the electronic key inside the vehicle.
- As long as the electronic key is within the effective range, the doors may be locked or unlocked by anyone. However, only the doors detecting the electronic key can be used to unlock the vehicle.
- Even if the electronic key is not inside the vehicle, it may be possible to start the hybrid system if the electronic key is near the window.
- The doors may unlock if a large amount of water splashes on the door handle, such as in the rain or in a car wash when the electronic key is within the effective range. (The doors will automatically be locked after approximately 30 seconds if the doors are not opened and closed.)
- If the wireless remote control is used to lock the doors when the electronic key is near the vehicle, there is a possibility that the door may not be unlocked by the entry function. (Use the wireless remote control to unlock the doors.)
- Touching the door lock sensor while wearing gloves may delay or prevent lock operation. Remove the gloves and touch the lock sensor again.
- When the lock operation is performed using the lock sensor, recognition signals will be shown up to two consecutive times. After this, no recognition

signals will be given.

- If the door handle becomes wet while the electronic key is within the effective range, the door may lock and unlock repeatedly. In that case, follow the following correction procedures to wash the vehicle:
- Place the electronic key in a location 2 m (6 ft.) or more away from the vehicle. (Take care to ensure that the key is not stolen.)
- Set the electronic key to battery-saving mode to disable the smart entry & start system. (→P.148)
- If the electronic key is inside the vehicle and a door handle becomes wet during a car wash, a message may be shown on the multi-information display and a buzzer will sound outside the vehicle. To turn off the alarm, lock all the doors.
- The lock sensor may not work properly if it comes into contact with ice, snow, mud, etc. Clean the lock sensor and attempt to operate it again, or use the lock sensor on the lower part of the door handle.
- A sudden approach to the effective range or door handle may prevent the doors from being unlocked. In this case, return the door handle to the original position and check that the doors unlock before pulling the door handle again.
- If there is another electronic key in the detection area, it may take slightly longer to unlock the doors after the door handle is gripped.

## ■ When the vehicle is not driven for extended periods

- Vehicles with entry function: To prevent theft of the vehicle, do not leave the electronic key within 2 m (6 ft.) of the vehicle.
- The smart entry & start system can be deactivated in advance. (→P.492)
- Battery-saving mode can reduce the power consumption of electronic keys. (→P.148)

#### ■ To operate the system properly

Make sure to carry the electronic key when operating the system. For vehicles with entry function, do not get the electronic key too close to the vehicle when operating the system from the outside of the vehicle.

Depending on the position and holding condition of the electronic key, the key may not be detected correctly and the system may not operate properly. (The alarm may go off accidentally, or the door lock prevention may not operate.)

# ■ If the smart entry & start system does not operate properly

- Locking and unlocking the doors: Use the mechanical key. (→P.463)
- Starting the hybrid system: →P.199

#### ■ Customization

Settings (e.g. smart entry & start system) can be changed. (Customizable features: →P.491)

If the smart entry & start system has been deactivated in a customized setting, refer to the explanations for the following operations.

- Locking and unlocking the doors: Use the wireless remote control or mechanical key. (→P.129, 463)
- Starting the hybrid system and changing power switch modes: →P.463
- Stopping the hybrid system: →P.201

#### Caution regarding interference with electronic devices

- People with implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should maintain a reasonable distance between themselves and the smart entry & start system antennas. (→P.147) The radio waves may affect the operation of such devices. If necessary, the entry function can be disabled. Ask any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for details, such as the frequency of radio waves and timing of the emitted radio waves. Then, consult your doctor to see if you should disable the entry function.
- Users of any electrical medical device other than implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves. Radio waves could have unexpected effects on the operation of such medical devices.


Ask any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for details on disabling the entry function.

#### **Front seats**

The seats can be adjusted (longitudinally, vertically, etc.). Adjust the seat to ensure the correct driving posture.


#### Adjustment procedure

Manual seat

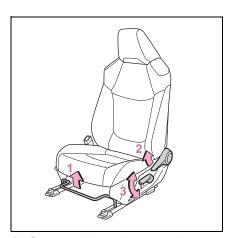

- Seat position adjustment lever
- Seatback angle adjustment lever
- 3 Vertical height adjustment lever (driver's side only)

Power seat

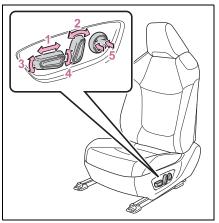

- Seat position adjustment switch
- Seatback angle adjustment switch
- 3 Seat cushion (front) angle adjustment switch
- 4 Vertical height adjustment switch
- 5 Lumbar support adjustment switch (driver's side only)

#### ■When adjusting the seat

Take care when adjusting the seat so that the head restraint does not touch the ceiling and sun visor.



#### **WARNING**

#### ■When adjusting the seat position

- Take care when adjusting the seat position to ensure that other passengers are not injured by the moving seat.
- Do not put your hands under the seat or near the moving parts to avoid injury.

Fingers or hands may become jammed in the seat mechanism.

- Make sure to leave enough space around the feet so they do not get stuck.
- Manual seat only: After adjusting the seat, make sure that the seat is locked in position.

#### ■Seat adjustment

To reduce the risk of sliding under the lap belt during a collision, do not recline the seat more than necessary. If the seat is too reclined, the lap belt may slide past the hips and apply restraint forces directly to the abdomen, or your neck may contact the shoulder belt, increasing the risk of death or serious injury in the event of an accident.


Adjustments should not be made while driving as the seat may unexpectedly move and cause the driver to lose control of the vehicle.

#### **Rear seats**

Reclining adjustments and folding the seatbacks can be done with lever operation.

#### Adjustment procedure

Pull the seatback angle adjustment lever A, and adjust the seatback angle.

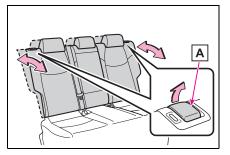

#### **WARNING**

#### ■When operating the seatback

Observe the following precautions. Failure to do so may cause death or serious injury.

- Keep other passengers from being hit with the seatback.
- Do not bring your hands close to the moving parts or between the seats, as well as do not let any part of your body get caught.

#### A

#### **WARNING**

After adjusting the seat, make sure that the seat is locked in position. If the seatback is not securely locked, the red marking will be visible. Make sure that the red marking is not visible.



#### Folding down the rear seatbacks

- Before folding down the seatbacks
- 1 Park the vehicle in a safe place.

Apply the parking brake ( $\rightarrow$ P.210) and shift the shift lever to P. ( $\rightarrow$ P.206)

Adjust the position of the front seat and the angle of the seatback. (→P.152)


Depending on the position of the front seat, if the seatback is folded backward, it may interfere with the operation of the rear seat.

- 3 Lower the head restraint of the rear seat. (→P.158)
- 4 Stow the armrest of the rear seat if it is pulled out. (→P.361)

This step is not necessary when operating the left side seat only.


■ Folding down the seatbacks

While pulling the seatback angle adjustment lever  $\boxed{\mathbf{A}}$ , fold the seatback down.

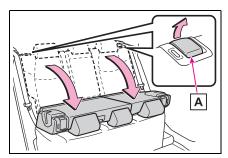

#### ■ Returning the rear seatbacks

To avoid trapping the seat belt between the seat and the inside of the vehicle, pass the seat belt outside the seat belt guide **A** and then return the seatback securely to the locked position.

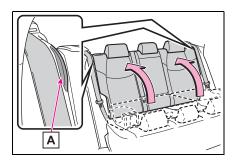



#### **WARNING**

Observe the following precautions. Failure to do so may result in death or serious injury.

- When folding the rear seatbacks down
- Do not fold the seatbacks down while driving.
- Stop the vehicle on level ground, set the parking brake and shift the shift lever to P.
- Do not allow anyone to sit on a folded seatback or in the luggage compartment while driving.

- Do not allow children to enter the luggage compartment.
- Do not operate the rear seat if it is occupied.
- Be careful not to get feet or hands caught in the moving parts or joints of the seats during operation.
- Do not allow children to operate the
- After returning the rear seatback to the upright position
- Make sure that the seatback is securely locked in position by lightly pushing it back and forth. If the seatback is not securely locked, the red marking will be visible. Make sure that the red marking is not visible.



Check that the seat belts are not twisted or caught in the seatback.

#### **Driving position mem**ory<sup>\*</sup>

#### \*: If equipped

This feature automatically adjusts the driver's seat to suit your preferences.

Your preferred driving position (the position of the driver's seat) can be recorded and recalled by pressing a button.


Two different driving positions can be recorded into memory.

Each electronic key can be registered to recall your preferred driving position.

#### Recording/recalling a driving position


- Recording procedure
- 1 Check that the shift lever is in P.
- 2 Turn the power switch to ON.
- 3 Adjust the driver's seat to the desired positions.
- 4 While pressing the "SET" button, or within 3 seconds after the "SET" button is pressed, press button "1" or "2" until the buzzer sounds.

If the selected button has already been preset, the previously recorded position will be overwritten.

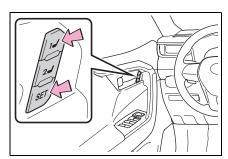

#### ■ Recall procedure

- 1 Check that the shift lever is in P.
- 2 Turn the power switch to ON.
- 3 Press one of the buttons for the driving position you want to recall until the buzzer sounds.

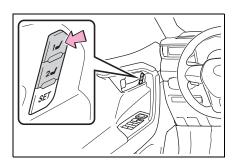

# ■ To stop the position recall operation part-way through

Perform any of the following:

- Press the "SET" button.
- Press button "1" or "2".
- Operate any of the seat adjustment switches.

# ■ Seat positions that can be memorized (→P.152)

The adjusted positions other than the position adjusted by lumbar support switch can be recorded.

#### Operating the driving position memory after turning the power switch to OFF

Recorded seat positions can be activated up to 180 seconds after the driver's door is opened and another 60 seconds after it is closed again.

# In order to correctly use the driving position memory function

If a seat position is already in the furthest possible position and the seat is operated in the same direction, the recorded position may be slightly different when it is recalled.

#### ■When recalling the driving position

Take care when recalling the driving position so that the head restraint does not touch the ceiling.

# ■ If the 12-volt battery is disconnected

The memorized positions are erased.

## ■ When the recorded seat position cannot be recalled

The seat position may not be recalled in some situations when the seat position is recorded in a certain range. For details, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.



#### **WARNING**

#### ■Seat adjustment caution

Take care during seat adjustment so that the seat does not strike the rear passenger or squeeze your body against the steering wheel.

#### Registering/recall/canceling an electronic key to driving position (memory recall function)

#### ■ Registering procedure

Record your driving position to but-


ton "1" or "2" before performing the following:

Carry only the key you want to register, and then close the driver's door.

If 2 or more keys are in the vehicle, the driving position cannot be recorded properly.

- 1 Check that the shift lever is in P.
- 2 Turn the power switch to ON.
- **3** Recall the driving position that you want to record.
- 4 While pressing the recalled button, press and hold the door lock switch (either lock or unlock) until the buzzer sounds.

If the button could not be registered, the buzzer sounds continuously for approximately 3 seconds.

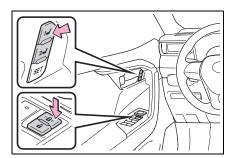

#### ■ Recall procedure

Make sure that the doors are locked before recalling the driving position. Carry the electronic key that has been registered to the driving position, and then unlock and open the driver's door using the smart entry & start system or wireless remote control.

The driving position will move to the

recorded position.

If the driving position is in a position that has already been recorded, the seat will not move.

#### Cancelation procedure

Carry only the key you want to cancel and then close the driver's door. If 2 or more keys are in the vehicle, the driving position cannot be canceled properly.

- 1 Check that the shift lever is in P.
- 2 Turn the power switch to ON.
- While pressing the "SET" button, press and hold the door lock switch (either lock or unlock) until the buzzer sounds twice.

If the button could not be canceled, the buzzer sounds continuously for approximately 3 seconds.

# Recalling the driving position using the memory recall function

- Different driving positions can be registered for each electronic key. Therefore, the driving position that is recalled may be different depending on the key being carried.
- If a door other than the driver's door is unlocked with the smart entry & start system, the driving position cannot be recalled. In this case, press the driving position button which has been set.

#### ■ Customization

Settings (e.g. the unlock door settings of the memory recall function) can be customized. (Customizable features: →P.494)

#### **Head restraints**

# Head restraints are provided for all seats.



#### **WARNING**


#### ■ Head restraint precautions

Observe the following precautions regarding the head restraints. Failure to do so may result in death or serious injury.

- Use the head restraints designed for each respective seat.
- Adjust the head restraints to the correct position at all times.
- After adjusting the head restraints, push down on them and make sure they are locked in position.
- Do not drive with the head restraints removed.

#### Vertical adjustment

#### ■ Front seats

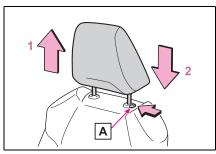


**1** Up

Pull the head restraints up.

#### 2 Down

Push the head restraint down while pressing the lock release button [A].

#### ■ Rear seats

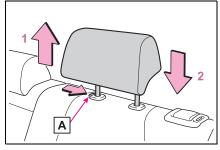

#### **1** Up


Pull the head restraints up.

#### 2 Down

Push the head restraint down while pressing the lock release button **A** .

# ■ Adjusting the height of the head restraints (front seats)

Make sure that the head restraints are adjusted so that the center of the head restraint is closest to the top of your ears

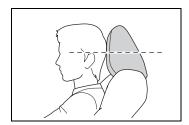

# ■ Adjusting the rear seat head restraint


Always raise the head restraint one level from the stowed position when using.

# Removing the head restraints

Pull the head restraint up while pressing the lock release button




If the head restraint touches the ceiling, making the removal difficult, change the seat height or angle. (→P.152)

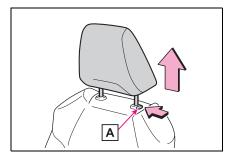

#### Installing the head restraints

Align the head restraint with the installation holes and push it down to the lock position.


Press and hold the lock release button A when lowering the head restraint.

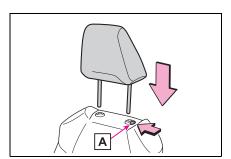

#### Steering wheel


#### Adjustment procedure

1 Hold the steering wheel and push the lever down.

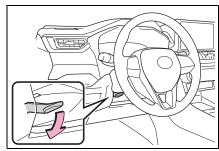

Adjust to the ideal position by moving the steering wheel horizontally and vertically.

After adjustment, pull the lever up to secure the steering wheel.

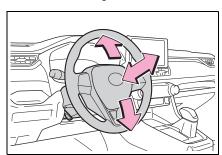

### A

#### **WARNING**

#### ■ Caution while driving

Do not adjust the steering wheel while driving.

Doing so may cause the driver to mishandle the vehicle and cause an accident, resulting in death or serious injury.


#### After adjusting the steering wheel

Make sure that the steering wheel is securely locked.

Otherwise, the steering wheel may move suddenly, possibly causing an accident, and resulting in death or serious injury. Also, the horn may not sound if the steering wheel is not securely locked.

#### Sounding the horn

To sound the horn, press on or close to the mark.

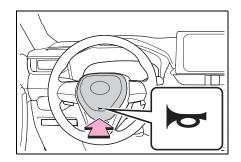

#### Inside rear view mirror


#### \*: If equipped

The rear view mirror's position can be adjusted to enable sufficient confirmation of the rear view.

#### Adjusting the height of rear view mirror

The height of the rear view mirror can be adjusted to suit your driving posture.

Adjust the height of the rear view mirror by moving it up and down.

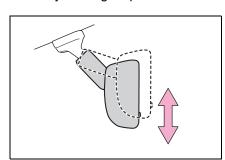

#### **WARNING**

#### ■ Caution while driving


Do not adjust the position of the mirror while driving.

Doing so may lead to mishandling of the vehicle and cause an accident, resulting in death or serious injury.

#### **Anti-glare function**

▶ Manual anti-glare inside rear view mirror

Reflected light from the headlights of vehicles behind can be reduced by operating the lever.

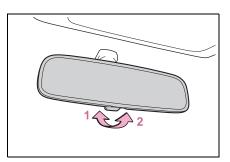

- Normal position
- Anti-glare position
- ▶ Auto anti-glare inside rear view mirror


Responding to the level of brightness of the headlights of vehicles behind, the reflected light is automatically reduced.

Changing automatic anti-glare function mode on/off

When the automatic anti-glare function is in ON mode, the indicator A illuminates.


The function will set to ON mode each time the power switch is turned to ON. Pressing the button turns the function to OFF mode. (The indicator A also

turns off.)

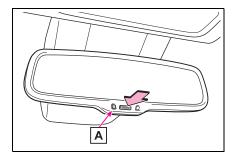

#### ■ To prevent sensor error (vehicles with auto anti-glare inside rear view mirror)

To ensure that the sensors operate properly, do not touch or cover them.

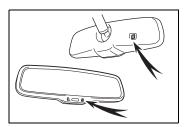

#### Digital Rear-view Mirror\*

#### \*: If equipped

The Digital Rear-view Mirror is a system that uses the camera on the rear of the vehicle and displays its image on the display of the Digital Rear-view Mirror.

The Digital Rear-view Mirror can be changed between optical mirror mode and digital mirror mode by operating the lever.

The Digital Rear-view Mirror allows the driver to see the rear view despite obstructions, such as the head restraints or luggage, ensuring rear visibility. Also, the rear seats are not displayed and privacy of the passengers is enhanced.




#### **WARNING**

Observe the following precautions. Failure to do so may result in death or serious injury.

- Before using the Digital Rearview Mirror
- Make sure to adjust the mirror before driving. ( $\rightarrow$ P.164)
- Change to optical mirror mode and adjust the position of the Digital Rear-view Mirror so that the area behind your vehicle can be viewed properly.
- Change to digital mirror mode and adjust the display settings.

As the range of the image displayed by the Digital Rear-view Mirror is different from that of the optical mirror, make sure to check this difference before driving.

#### System components

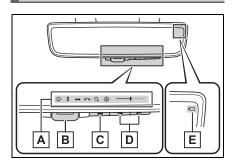

A Icon display area

Displays icons, adjusting gauge, etc. (→P.164)

**B** Lever

Operate to change between digital mirror mode and optical mirror mode.

C Menu button

Press to display the icon display area and select the item you want to adjust.

D Select/adjust button


Press to change the setting of the item you want to adjust.

E Camera indicator

Indicates that the camera is operating normally.

#### Changing modes

Operate the lever to change between digital mirror mode and optical mirror mode.

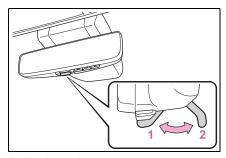

#### Digital mirror mode

Displays an image of the area behind the vehicle.

will illuminate in this mode.

#### 2 Optical mirror mode

Turns off the display of the Digital Rearview Mirror allows it to be used as an optical mirror.

#### ■ Digital mirror mode operating condition

The power switch is turned to ON.

When the power switch is changed from ON to OFF or ACC, the image will disappear after several seconds.

#### ■When using the Digital Rear-view Mirror in digital mirror mode

- If it is difficult to see the displayed image due to light reflected off the Digital Rear-view Mirror, the camera being dirty, or if lights of a vehicle behind your vehicle or the displayed image are bothering you, change to optical mirror mode.
- When the back door is open, the Digital Rear-view Mirror image may not display properly. Before driving, make sure the back door is closed.
- If the display is difficult to see due to reflected light, close the electronic sunshade for the panoramic moon roof (if equipped).
- Any of the following conditions may occur when driving in the dark, such as at night. None of them indicates

that a malfunction has occurred.

- Colors of objects in the displayed image may differ from their actual color.
- Depending on the height of the lights of the vehicle behind, the area around the vehicle may appear white and blurry.
- Automatic image adjustment for brighter surrounding image may cause flickering.

If it is difficult to see the displayed image or flickering bothers you, change to optical mirror mode.

 The Digital Rear-view Mirror may become hot while it is in digital mirror mode.

This is not a malfunction.

- Depending on your physical condition or age, it may take longer than usual to focus on the displayed image. In this case, change to optical mirror mode.
- Do not let passengers stare at the displayed image when the vehicle is being driven, as doing so may cause motion sickness.

#### ■ When the system malfunctions

If the symbol shown in the illustration is displayed when using the Digital Rearview Mirror in digital mirror mode, the system may be malfunctioning. The symbol will disappear in a few seconds. Operate the lever, change to optical mirror mode and have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.




#### Adjusting the mirror

#### ■ Adjusting the mirror height

The height of the rear view mirror can be adjusted to suit your driving posture.

Change to optical mirror mode, adjusting the height of the rear view mirror by moving it up and down.

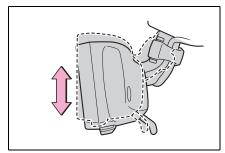


# ■ Display settings (digital mirror mode)

Settings of the display in the digital mirror mode, on/off operation of the automatic anti-glare function, etc. can be changed.

1 Press the menu button.

The icons will be displayed.

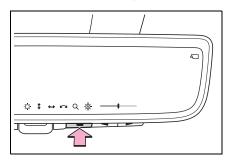

Press the menu button repeatedly and select the item you want to adjust. 3 Press or to change the setting.

The icons will disappear if a button is not operated for approximately 5 seconds or more.

Icons	Settings	
\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	Select to adjust the brightness of the display.  Select to adjust the area displayed up/down.	
<b>‡</b>		
<b>+</b>	Select to adjust the area displayed to the left/right.	
n	Select to adjust the angle of the displayed image.	
Q	Select to zoom in/out the displayed image.	
<b>₩</b>	Select to enable/disable the automatic anti-glare function.* Responding to the brightness of the headlights of vehicles behind, the reflected light is automatically adjusted. The automatic anti-glare function is enabled each time the power switch is changed to ON.	


\*: This is a function for the optical mirror mode, however, the setting can also be changed while using the digital mirror mode.

# ■ Enabling/disabling the automatic anti-glare function (optical mirror mode)

The automatic anti-glare function in the optical mirror mode can be enabled/disabled. The setting can be changed in both the digital mirror mode and the optical mirror mode.

- When using the digital mirror mode
- →P.164
- When using the optical mirror mode
- 1 Press the menu button.

The icons will be displayed.

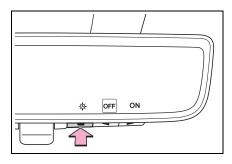

2 Press or to enable (ON)/disable (OFF) the automatic anti-glare function.


The icons will disappear if a button is not operated for approximately 5 seconds or more.

# Adjusting the display (digital mirror mode)

- If the displayed image is adjusted, it may appear distorted. This is not a malfunction.
- If the brightness of the Digital Rearview Mirror is set too high, it may cause eye strain. Adjust the Digital Rear-view Mirror to an appropriate brightness. If your eyes become tired, change to optical mirror mode.
- The brightness of the Digital Rearview Mirror will change automatically according to the brightness of the area in front of your vehicle.

# ■ To prevent the light sensors from malfunctioning

To prevent the light sensors from malfunctioning, do not touch or cover them.

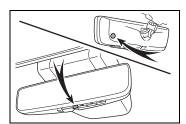

#### Λ

#### **WARNING**

Observe the following precautions. Failure to do so may result in death or serious injury.

#### ■ While driving

 Do not adjust the position of the Digital Rear-view Mirror or adjust the display settings while driving. Stop the vehicle and operate the Digital Rear-view Mirror control switches.

Failure to do so may cause a steering wheel operation error, resulting in an unexpected accident.

 Always pay attention to the vehicle's surroundings.

The size of the vehicles and other objects may look different when in digital mirror mode and optical mirror mode.

When backing up, make sure to directly check the safety of the area around your vehicle, especially behind the vehicle.

Additionally, if a vehicle approaches from the rear in the dark, such as at night, the surrounding area may appear dim.

#### ■To prevent causes of fire

If the driver continues using the Digital Rear-view Mirror while smoke or odor comes from the mirror, it may result in fire. Stop using the system immediately and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

# Cleaning the Digital Rearview Mirror

#### ■ Cleaning the mirror surface

If the mirror surface is dirty, the image on the display may be difficult to see.


Clean the mirror surface gently using a soft dry cloth.

#### ■ Cleaning the camera

If the camera lens is dirty, the displayed image may not be clear. In this case, clean it with a soft cloth dampened with water or a swab.

#### ■ The camera

The camera for the Digital Rear-view Mirror is located as shown.



#### ■ The cooling fan

There is a cooling fan in the Digital Rear-view Mirror. Cooling fan sounds may be heard when using the system.

#### $\Lambda$

#### **NOTICE**

#### ■ To prevent the Digital Rear-view Mirror from malfunctioning


- Do not use detergents, such as thinner, benzene, and alcohol to clean the mirror. They may discolor, deteriorate or damage the mirror surface.
- Do not smoke, use matches, use cigarette lighters or allow open flames near the mirror. It may damage the mirror or cause a fire.
- Do not remove, disassemble or modify the mirror.

#### ■ To prevent the camera from malfunctioning

- Observe the following precautions, otherwise the Digital Rear-view Mirror may not operate properly.
- Do not strike or hit the camera or subject it to a strong impact, as the camera installation position and angle may be changed.
- Do not remove, disassemble or modify the camera.
- Do not allow an organic solvent, car wax, window cleaner or glass coating to adhere to the camera. If this happens, wipe it off as soon as possible.

- When cleaning the camera lens, wipe the camera lens with a damp soft cloth.
  - Do not strongly rub the camera lens, as it may be scratched and will not be able to transmit a clear image.
- When applying colored film (including transparent film) to the rear window glass, do not apply it to the area in front of the camera.
   If film is applied to the area in front of the camera, the image from the camera may not display properly.
- Do not subject the camera to a strong impact as this could cause a malfunction.
   If this happens, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized
- Do not block the vent holes of the mirror. Otherwise, the mirror may be hot, leading to a malfunction or a

repairer, or any reliable repairer as

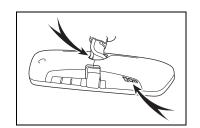

#### If you notice any symptoms

If you notice any of the following symptoms, refer to the following table for the likely cause and the solution.

If the symptom is not resolved by the solution, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Symptom	Likely cause	Solution
	The mirror surface is dirty.	Clean the mirror surface gently, using a soft dry cloth.
	Sunlight or headlights are shining directly into the Digital Rearview Mirror.	Change to optical mirror mode. (If the light is coming through the panoramic moon roof [if equipped], close the electronic sunshade.)
The image is difficult to see.	<ul> <li>The vehicle is in a dark area.</li> <li>The vehicle is near a TV tower, broadcasting station, electric power plant, or other location where strong radio waves or electrical noise may be present.</li> <li>The temperature around the camera is extremely high/low.</li> <li>The ambient temperature is extremely low.</li> <li>It is raining or humid.</li> <li>Sunlight or headlights are shining directly into the camera lens.</li> <li>The vehicle is under fluorescent lights, sodium lights, mercury lights, etc.</li> <li>Exhaust gas is obstructing the camera.</li> </ul>	Change to optical mirror mode. (Change back to digital mirror mode when the conditions have improved.)
	Foreign matters such as water droplets or dust is on the camera lens.	Wipe the camera lens with a damp soft cloth.

Symptom	Likely cause	Solution
	The luggage in the luggage compartment is reflected off the rear window glass and obstructing the camera.	<ul> <li>Change to optical mirror mode.</li> <li>Move the luggage to a position where it does not obstruct the camera or cover it with a black cloth to reduce the amount it is reflected off the rear window glass.</li> </ul>
The image is difficult to see.	The rear window glass is fogged up.	Change to optical mirror mode. After defogging the rear window using the rear window defogger (→P.334), use the digital mirror mode again.
	The outside of the rear window glass is dirty.	Use the rear window wiper to remove dirt.
	The inside of the rear window glass is dirty.	Wipe the inside of rear window glass with a damp soft cloth.
	The back door is not fully closed.	Fully close the back door.
The image is out of alignment.	The camera or its surrounding area has received a strong impact.	Change to optical mirror mode and have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
The display is dim and ♣्रो is displayed.	The system may be malfunctioning.	Change to optical mirror mode and have the vehicle inspected by any authorized Toyota retailer or Toyota authorized
d goes off.		repairer, or any reliable repairer.

#### 170 3-4. Adjusting the steering wheel and mirrors

Symptom	Likely cause	Solution
is displayed.	The Digital Rear-view Mirror is extremely hot. (The display will gradually become more dim. If the temperature continues to increase, the Digital Rear-view Mirror will turn off.)	Reducing the cabin temperature is recommended to reduce the temperature of the mirror.  ( will disappear when the mirror becomes cool.)  If does not disappear even though the mirror is cool, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
The lever cannot be operated properly.	The lever may be malfunction-ing.	Change to optical mirror mode and have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. (To change to optical mirror mode, press and hold the menu button for approximately 10 seconds.)

#### **Outside rear view mir**rors

The rear view mirror's position can be adjusted to enable sufficient confirmation of the rear view.

#### **■** Defogging the mirrors

The outside rear view mirrors can be cleared using the mirror defoggers. Turn on the rear window defogger to turn on the outside rear view mirror defoggers. (→P.334)



#### **WARNING**

#### Important points while driving

Observe the following precautions while driving.

Failing to do so may result in loss of control of the vehicle and cause an accident, resulting in death or serious


- Do not adjust the mirrors while driv-
- Do not drive with the mirrors folded.
- Both the driver and passenger side mirrors must be extended and properly adjusted before driving.

#### ■When the mirror defoggers are operating


Do not touch the rear view mirror surfaces, as they can become very hot and burn you.

#### Adjustment procedure

1 To select a mirror to adjust, press the switch.

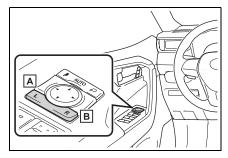

- A Left
- **B** Right
- 2 To adjust the mirror, press the switch.

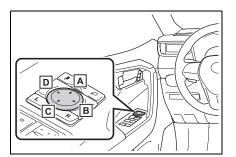


- A Up
- **B** Right
- C Down
- **D** Left

#### ■ Mirror angle can be adjusted when

The power switch is in ACC or ON.

#### Folding the mirrors

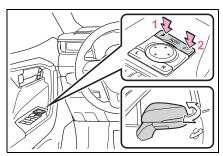

#### Folds the mirrors

#### Extends the mirrors

Vehicles with automatic mode: Putting the outside rear view mirror folding switch in the neutral position sets the mirrors to automatic mode. Automatic mode allows the folding or extending of the mirrors to be linked to locking/unlocking of the doors.

#### ■ Using automatic mode in cold weather (vehicles with automatic mode)

When automatic mode is used in cold weather, the door mirror could freeze up and automatic stowing and return may not be possible. In this event, remove any ice and snow from the door mirror, then either operate the mirror using manual mode or move the mirror by hand.

#### ■ Customization (vehicles with automatic mode)

The automatic mirror folding and extending operation can be changed. (Customizable features: →P.494)



#### **WARNING**

#### ■When a mirror is moving


To avoid personal injury and mirror malfunction, be careful not to get your hand caught by the moving mirror.

#### **Power windows**

# Opening and closing the power windows

The power windows can be opened and closed using the switches.

Operating the switch moves the side windows as follows:

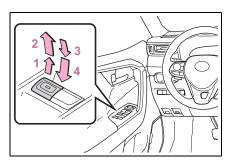

- 1 Closing
- 2 One-touch closing<sup>®</sup>
- 3 Opening
- 4 One-touch opening<sup>®</sup>
- \*: To stop the side window partway, operate the switch in the opposite direction.

# ■ The power windows can be operated when

The power switch is in ON.

# Operating the power windows after turning the hybrid system off

The power windows can be operated for approximately 45 seconds even after the power switch is turned to ACC or OFF. They cannot, however, be operated once either front door is opened.

#### ■ Jam protection function

If an object becomes jammed between the side window and the window frame while the side window is closing, side window movement is stopped and the side window is opened slightly.

#### ■ Catch protection function

If an object becomes caught between the door and side window while the side window is opening, side window movement is stopped.

# When the power window cannot be opened or closed

When the jam protection function or catch protection function operates unusually and the side window cannot be opened and closed, perform the following operations with the power window switch of that door.

- Stop the vehicle. With the power switch in ON, within 4 seconds of the jam protection function or catch protection function activating, continuously operate the power window switch in the one-touch closing direction or one-touch opening direction so that the side window can be opened and closed.
- If the side window cannot be opened and closed even when performing the above operations, perform the following procedure for function initialization.
- 1 Turn the power switch to ON.
- Pull and hold the power window switch in the one-touch closing direction and completely close the side window.
- 3 Release the power window switch for a moment, resume pulling the switch in the one-touch closing direction, and hold it there for approximately 6 seconds or more.
- 4 Press and hold the power window switch in the one-touch opening direction. After the side window is completely opened, continue holding the switch for an additional 1 second or more.
- 5 Release the power window switch for a moment, resume pushing the switch in the one-touch opening

- direction, and hold it there for approximately 4 seconds or more.
- 6 Pull and hold the power window switch in the one-touch closing direction again. After the side window is completely closed, continue holding the switch for a further 1 second or more.

If you release the switch while the side window is moving, start again from the beginning.

If the side window reverses and cannot be fully closed or opened, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

## Door lock linked power window operation

- The power windows can be opened and closed using the mechanical key.\* (→P.463)
- The power windows can be opened and closed using the wireless remote control.\* (→P.129)
- Vehicles with alarm: The alarm may be triggered if the alarm is set and the power window is closed using the door lock linked power window operation function. (→P.89)
- \*: These settings must be customized at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

### ■ Power window open reminder function

The buzzer sounds and a message is shown on the multi-information display when the power switch is turned to OFF and the driver's door is opened with the power windows open.

#### ■ Customization

Settings (e.g. linked door lock operation) can be changed. (Customizable features: →P.494)

#### $\Lambda$

#### **WARNING**

Observe the following precautions. Failing to do so may result in death or serious injury.

#### Closing the power windows

- The driver is responsible for all the power window operations, including the operation for the passengers. In order to prevent accidental operation, especially by a child, do not let a child operate the power windows. It is possible for children and other passengers to have body parts caught in the power window. Also, when riding with a child, it is recommended to use the window lock switch. (→P.175)
- Check to make sure that all passengers do not have any part of their body in a position where it could be caught when a power window is being operated.



• When using the wireless remote control or mechanical key and operating the power windows, operate the power window after checking to make sure that there is no possibility of any passenger having any of their body parts caught in the side window. Also, do not let a child operate the power window by the wireless remote control or mechanical key. It is possible for children and other passengers to get caught in the power window.

When exiting the vehicle, turn the power switch to OFF, carry the key and exit the vehicle along with the child. There may be accidental operation, due to mischief, etc., that may possibly lead to an accident.

#### Jam protection function

- Never use any part of your body to intentionally activate the jam protection function.
- The jam protection function may not work if something gets jammed just before the side window is fully closed. Be careful not to get any part of your body jammed in the side window.

#### ■ Catch protection function

- Never use any part of your body or clothing to intentionally activate the catch protection function.
- The catch protection function may not work if something gets caught just before the side window is fully opened. Be careful not to get any part of your body or clothing caught in the side window.


#### Preventing accidental operation (window lock switch)

This function can be used to prevent children from accidentally opening or closing a passenger window.

Press the switch.

The indicator A will come on and the passenger windows will be locked.

The passenger windows can still be opened and closed using the driver's switch even if the lock switch is on.

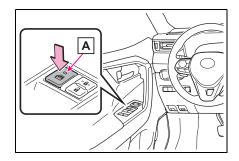

#### ■ The window lock switch can be operated when

The power switch is in ON.

■ When the 12-volt battery is disconnected

The window lock switch is disabled. If necessary, press the window lock switch after reconnecting the 12-volt battery.


#### Panoramic moon roof

\*: If equipped

Use the overhead switches to operate the panoramic moon roof and electronic sunshade.

# Operating the electronic sunshade and panoramic moon roof

Opening and closing the electronic sunshade

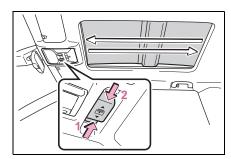

1 Opens the electronic sunshade

Slide and hold the switch backward. The electronic sunshade will fully open automatically.

2 Closes the electronic sunshade

Slide and hold the switch forward. The electronic sunshade will fully close automatically.

If the panoramic moon roof is not fully closed, it will close fully before the electronic sunshade closes.

\*: Quickly slide and release the switch in either direction to stop the electronic sunshade partway.

# ■ Tilting the panoramic moon roof up and down

Press the switch to tilt the panoramic moon roof up.\*

When the panoramic moon roof is tilted up, the electronic sunshade will open to the half-open position of the roof.

\*: Lightly press the switch again to stop the panoramic moon roof partway.

Press and hold the switch to tilt the panoramic moon roof down.

The panoramic moon roof can be tilted down only when it is in the tilt-up position.




#### Opening and closing the panoramic moon roof

Opens the panoramic moon roof\*

Slide and hold the switch backward. The panoramic moon roof and electronic sunshade will open automatically.


The panoramic moon roof can be opened from the tilt-up position.

\*: Quickly slide and release the switch in either direction to stop the panoramic moon roof partway.

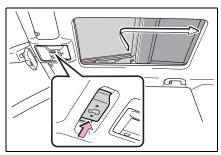

Closes the panoramic moon roof

Slide and hold the switch forward. The panoramic moon roof will fully close automatically.

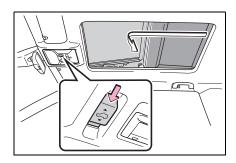

# ■ The panoramic moon roof can be operated when

The power switch is in ON.

#### Operating the panoramic moon roof after turning the hybrid system off

The panoramic moon roof and electronic sunshade can be operated for approximately 45 seconds after the power switch is turned to ACC or OFF. They cannot, however, be operated once either front door is opened.

#### ■ Jam protection function

If an object is detected between the pan-

oramic moon roof and the frame in the following situations, travel is stopped and the panoramic moon roof opens slightly.

- The panoramic moon roof is closing or tilting down.
- The electronic sunshade is closing.
- Closing both the panoramic moon roof and electronic sunshade

Slide the switch forward.

The electronic sunshade will close to the half-open position and pause. The panoramic moon roof will then fully close. Then the electronic sunshade will fully close

## Door lock linked panoramic moon roof operation

- The panoramic moon roof can be opened and closed using the mechanical key.\* (→P.463)
- The panoramic moon roof can be opened and closed using the wireless remote control.\* (→P.129)
- Vehicles with alarm: The alarm may be triggered if the alarm is set and the panoramic moon roof is closed using the door lock linked panoramic moon roof operation function. (→P.89)
- \*: These settings must be customized at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

#### When the panoramic moon roof or electronic sunshade does not close normally

Perform the following procedure:

- 1 Stop the vehicle.
- 2 Turn the power switch to ON.
- 3 Slide and hold the 🏚 switch or

switch forward. Continue sliding and holding the switch for approximately 10 seconds after the

panoramic moon roof or electronic sunshade closes and reopens. The panoramic moon roof and electronic sunshade will start to close.\*

- 4 Check that the panoramic moon roof and electronic sunshade are fully closed and release the switch.
- \*: If the switch is released at the incorrect time, the procedure will have to be performed again from the beginning.

If the panoramic moon roof or electronic sunshade does not fully close even after performing the above procedure correctly, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

## ■ Panoramic moon roof open reminder function

A buzzer sounds and a message is shown on the multi-information display when the power switch is turned to OFF and the driver's door is opened with the panoramic moon roof open.

#### ■ Customization

Settings (e.g. linked door lock operation) can be changed. (Customizable features: →P.494)




#### WARNING

Observe the following precautions. Failure to do so may result in death or serious injury.


### Opening and closing the electronic sunshade

 Check to make sure that all passengers do not have any part of their body in a position where it could be caught when the electronic sunshade is being operated.

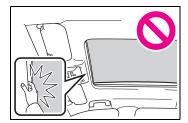

- Do not let a child operate the electronic sunshade. Closing the electronic sunshade on someone can cause death or serious injury.
- Opening the panoramic moon roof
- Do not allow any passengers to put their hands or head outside the vehicle while it is moving.
- Do not sit on top of the panoramic moon roof.
- Opening and closing the panoramic moon roof
- The driver is responsible for panoramic moon roof opening and closing operations.
  In order to prevent accidental operation, especially by a child, do not let a child operate the panoramic moon roof. It is possible for children and other passengers to have body parts caught in the panoramic moon roof.

Check to make sure that all passengers do not have any part of their body in a position where it could be caught when the panoramic moon roof is being operated.

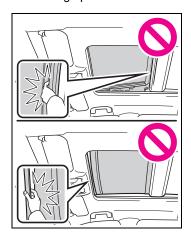

- When using the wireless remote control or mechanical key and operating the panoramic moon roof, operate the panoramic moon roof after checking to make sure that there is no possibility of any passenger having any of their body parts caught in the panoramic moon roof. Also, do not let a child operate panoramic moon roof by the wireless remote control or mechanical key. It is possible for children and other passengers to get caught in the panoramic moon
- When exiting the vehicle, turn the power switch to OFF, carry the key and exit the vehicle along with the child. There may be accidental operation, due to mischief, etc., that may possibly lead to an accident.

#### Jam protection function

Never use any part of your body to intentionally activate the jam protection function.

- The jam protection function may not work if something gets caught just before the panoramic moon roof or electronic sunshade is fully closed. Also, the jam protection function is not designed to operate while the switch is being pressed. Take care so that your fingers, etc. do not get
- To prevent burns or injuries

Do not touch the area between the underside of the panoramic moon roof and the electronic sunshade. Your hand may get caught and you could injure yourself. Also, if the vehicle is left in direct sunlight for a long time, the underside of the panoramic moon roof could become very hot and could cause burns.



#### NOTICE

#### ■To prevent damage to the panoramic moon roof

- Before opening the panoramic moon roof, make sure that there are no foreign objects, such as stones or ice, around the opening.
- Do not hit the surface or edge of the panoramic moon roof with hard objects.
- After the vehicle has been washed or rained on

Before opening the panoramic moon roof, wipe any water off the panoramic moon roof. Otherwise, water may enter the cabin when the panoramic moon roof is opened.

Driving the vehicle	4-1.	Before driving		Dynamic radar cruise control
Trailer towing (for Azerbaijan and Georgia)		Driving the vehicle182		with full-speed range256
Trailer towing (except for Azerbaijan and Georgia)		Cargo and luggage188		Cruise control268
Trailer towing (except for Azerbaijan and Georgia)		Trailer towing (for Azerbaijan		Speed limiter271
4-2. Driving procedures Power (ignition) switch		and Georgia)189		BSM (Blind Spot Monitor).273
Power (ignition) switch		<del>-</del> , ·		
EV drive mode	4-2.	Driving procedures		
Hybrid transmission		Power (ignition) switch199		
Turn signal lever		EV drive mode203		· · · · · · · · · · · · · · · · · · ·
Parking brake		Hybrid transmission205		• •
Parking brake		•		•
A-3. Operating the lights and wipers  Headlight switch		Parking brake210		,
4-3. Operating the lights and wipers Headlight switch		Brake Hold213		•
Headlight switch	4-3.			•
AHB (Automatic High Beam)				GPF (Gasoline Particulate Fil-
Fog light switch		-		ter) system314
Fog light switch		` ,		Driving assist systems315
Windshield wipers and washer 222 Rear window wiper and washer 225  4-4. Refueling Opening the fuel tank cap.227  4-5. Using the driving support systems Toyota Safety Sense229 PCS (Pre-Collision System)			4-6.	Driving tips
Rear window wiper and washer 225  4-4. Refueling Opening the fuel tank cap.227  4-5. Using the driving support systems Toyota Safety Sense229 PCS (Pre-Collision System)		• •		Hybrid Electric Vehicle driving
Rear window wiper and washer		•		tips322
4-4. Refueling Opening the fuel tank cap.227 4-5. Using the driving support systems Toyota Safety Sense229 PCS (Pre-Collision System)				Winter driving tips324
Opening the fuel tank cap.227  4-5. Using the driving support systems  Toyota Safety Sense229  PCS (Pre-Collision System)				Utility vehicle precautions .327
4-5. Using the driving support systems  Toyota Safety Sense229  PCS (Pre-Collision System)	4-4.	Refueling		
systems Toyota Safety Sense229 PCS (Pre-Collision System)		Opening the fuel tank cap.227		
PCS (Pre-Collision System)	4-5.			
		Toyota Safety Sense229		
234		,		
LTA (Lane Tracing Assist) 242				
RSA (Road Sign Assist)252				

#### **Driving the vehicle**

The following procedures should be observed to ensure safe driving:

#### **Driving procedure**

#### ■ Starting the hybrid system

→P.199

#### Driving

- With the brake pedal depressed, shift the shift lever to D. (→P.205)
- 2 Release the parking brake. (→P.210)

If the parking brake is in automatic mode, the parking brake is released automatically when shifting the shift lever to any position other than P.  $(\rightarrow P.211)$ 

3 Gradually release the brake pedal and gently depress the accelerator pedal to accelerate the vehicle.

#### ■ Stopping

- With the shift lever in D, depress the brake pedal.
- 2 If necessary, set the parking brake. (→P.210)

If the vehicle is to be stopped for an extended period of time, shift the shift lever to P. (→P.205)

#### ■ Parking the vehicle

1 With the shift lever in D, depress the brake pedal.

- 2 Set the parking brake (→P.210), and shift the shift lever to P. (→P.205)
- **3** Turn the power switch to OFF to stop the hybrid system.
- 4 Lock the door, making sure that you have the key on your person.

If parking on a hill, block the wheels as needed.

#### ■ Starting off on a steep uphill

- With the brake pedal depressed, shift the shift lever to D. (→P.205)
- Pull the parking brake switch to set the parking brake manually. (→P.210)
- 3 Release the brake pedal and gently depress the accelerator pedal to accelerate the vehicle.

Parking brake automatic release function ( $\rightarrow$ P.211)

#### ■When starting off on a uphill

The hill-start assist control will activate.  $(\rightarrow P.316)$ 

#### ■ For fuel-efficient driving

Keep in mind that Hybrid Electric Vehicles are similar to conventional vehicles, and it is necessary to refrain from activities such as sudden acceleration.  $(\rightarrow P.322)$ 

#### ■ Driving in the rain

- Drive carefully when it is raining, because visibility will be reduced, the windows may become fogged-up, and the road could be slippery.
- Drive carefully when it starts to rain, as the road surface could be especially slippery.

### ■ECO Accelerator Guidance (→P.111)

It is easier to drive in an Eco-friendly manner by driving while referring to the ECO Accelerator Guidance display. Also, by using the ECO Accelerator Guidance it is easier to increase the "Eco Score" evaluation.

- When starting off: While staying within the ECO Accelerator Guidance range, gradually depress the accelerator pedal and accelerate to the desired speed. If excessive acceleration is avoided, the "Start" score will increase.
- When driving: After accelerating to the desired speed, release the accelerator pedal and drive at a stable speed within the ECO Accelerator Guidance range. By keeping the vehicle within the ECO Accelerator Guidance range, the "Cruise" score will increase.
- When stopping: When stopping the vehicle, early releasing the accelerator pedal will cause the "Stop" score to increase.

### Restraining the hybrid system output (Brake Override System)

- When the accelerator and brake pedals are depressed at the same time, the hybrid system output may be restrained.
- A warning message is displayed on the multi-information display while the system is operating.

#### ■ Breaking in your new Toyota

To extend the life of the vehicle, observing the following precautions is recommended:

- For the first 300 km (200 miles): Avoid sudden stops.
- For the first 800 km (500 miles):

Do not tow a trailer.

- For the first 1000 km (600 miles):
- Do not drive at extremely high speeds.
- · Avoid sudden acceleration.
- Do not drive continuously in low gears.
- Do not drive at a constant speed for extended periods.

### Operating your vehicle in a foreign country

Comply with the relevant vehicle registration laws and confirm the availability of the correct fuel. ( $\rightarrow$ P.479)

#### **WARNING**

Observe the following precautions. Failure to do so may result in death or serious injury.

#### ■When starting the vehicle

Always keep your foot on the brake pedal while stopped with the "READY" indicator is illuminated. This prevents the vehicle from creeping.

#### When driving the vehicle

- Do not drive if you are unfamiliar with the location of the brake and accelerator pedals to avoid depressing the wrong pedal.
- Accidentally depressing the accelerator pedal instead of the brake pedal will result in sudden acceleration that may lead to an accident.
- When backing up, you may twist your body around, leading to a difficulty in operating the pedals. Make sure to operate the pedals properly.
- Make sure to keep a correct driving posture even when moving the vehicle only slightly. This allows you to depress the brake and accelerator pedals properly.
- Depress the brake pedal using your right foot. Depressing the brake pedal using your left foot may delay response in an emergency, resulting in an accident.

4

- The driver should pay extra attention to pedestrians when the vehicle is powered only by the electric motor (traction motor). As there is no engine noise, the pedestrians may misjudge the vehicle's movement. Even though the vehicle is equipped with the Acoustic Vehicle Alerting System, drive with care as pedestrians in the vicinity may still not notice the vehicle if the surrounding area is noisy.
- Do not drive the vehicle over or stop the vehicle near flammable materials such as leaves, paper or rags.
  - The exhaust system and exhaust gases can be extremely hot. These hot parts may cause a fire if there is any flammable material nearby.
- During normal driving, do not turn off the hybrid system. Turning the hybrid system off while driving will not cause loss of steering or braking control, however, power assist to the steering will be lost. This will make it more difficult to steer smoothly, so you should pull over and stop the vehicle as soon as it is safe to do so. In the event of an emergency, such as if it becomes impossible to stop the vehicle in the normal way: →P.418
- Use engine braking (downshift) to maintain a safe speed when driving down a steep hill. Using the brakes continuously may cause the brakes to overheat and lose effectiveness. (→P.205)
- Do not adjust the position of the steering wheel, the seat, or the inside or outside rear view mirrors while driving. Doing so may result in a loss of vehicle control.

Always check that all passengers' arms, head or other parts of their body are not outside the vehicle.

#### When driving on slippery road surfaces

- Sudden braking, acceleration and steering may cause tire slippage and reduce your ability to control the vehicle.
- Sudden acceleration, engine braking due to shifting, or changes in engine speed could cause the vehicle to skid.
- After driving through a puddle, lightly depress the brake pedal to make sure that the brakes are functioning properly. Wet brake pads may prevent the brakes from functioning properly. If the brakes on only one side are wet and not functioning properly, steering control may be affected.

#### When shifting the shift lever

- Do not let the vehicle roll backward while a forward driving position is selected, or roll forward while the shift lever is in R. Doing so may result in an accident or damage to the vehicle.
- Do not shift the shift lever to P while the vehicle is moving. Doing so can damage the transmission and may result in a loss of vehicle control.
- Do not shift the shift lever to R while the vehicle is moving forward. Doing so can damage the transmission and may result in a loss of vehicle control.
- Do not shift the shift lever to a driving position while the vehicle is moving backward. Doing so can damage the transmission and may result in a loss of vehicle control.

- Moving the shift lever to N while the vehicle is moving will disengage the hybrid system. Engine braking is not available with the hybrid system disengaged.
- Be careful not to shift the shift lever with the accelerator pedal depressed. Shifting the shift lever to a gear other than P or N may lead to unexpected rapid acceleration of the vehicle that may cause an accident and result in death or serious injury. Doing so can damage the transmission and may result in a loss of vehicle control.
- If you hear a squealing or scraping noise (brake pad wear indicators)

Have the brake pads checked and replaced by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.

Rotor damage may result if the pads are not replaced when needed. It is dangerous to drive the vehicle when the wear limits of the brake pads and/or those of the brake discs are exceeded.

#### ■When the vehicle is stopped

- Do not depress the accelerator pedal unnecessarily.
   If the vehicle is in any gear other than P or N, the vehicle may accelerate suddenly and unexpectedly, causing an accident.
- In order to prevent accidents due to the vehicle rolling away, always keep depressing the brake pedal while stopped with the "READY" indicator is illuminated, and apply the parking brake as necessary.

- If the vehicle is stopped on an incline, in order to prevent accidents caused by the vehicle rolling forward or backward, always depress the brake pedal and securely apply the parking brake as needed.
- Avoid revving or racing the engine. Running the engine at high speed while the vehicle is stopped may cause the exhaust system to overheat, which could result in a fire if combustible material is nearby.

#### When the vehicle is parked

- Do not leave glasses, cigarette lighters, spray cans, or soft drink cans in the vehicle when it is in the sun.
   Doing so may result in the follow-
  - Doing so may result in the following:
- Gas may leak from a cigarette lighter or spray can, and may lead to a fire.
- The temperature inside the vehicle may cause the plastic lenses and plastic material of glasses to deform or crack.
- Soft drink cans may fracture, causing the contents to spray over the interior of the vehicle, and may also cause a short circuit in the vehicle's electrical components.
- Do not leave cigarette lighters in the vehicle. If a cigarette lighter is in a place such as the glove box or on the floor, it may be lit accidentally when luggage is loaded or the seat is adjusted, causing a fire.
- Do not attach adhesive discs to the windshield or windows. Do not place containers such as air fresheners on the instrument panel or dashboard. Adhesive discs or containers may act as lenses, causing a fire in the vehicle.

- Do not leave a door or window open if the curved glass is coated with a metallized film such as a silver-colored one. Reflected sunlight may cause the glass to act as a lens, causing a fire.
- Always apply the parking brake, shift the shift lever to P, stop the hybrid system and lock the vehicle. Do not leave the vehicle unattended while the "READY" indicator is illuminated. If the vehicle is parked with the shift
  - lever in P but the parking brake is not set, the vehicle may start to move, possibly leading to an accident.
- Do not touch the exhaust pipes while the "READY" indicator is illuminated or immediately after turning the hybrid system off. Doing so may cause burns.

#### When taking a nap in the vehicle

Always turn the hybrid system off. Otherwise, if you accidentally move the shift lever or depress the accelerator pedal, this could cause an accident or fire due to hybrid system overheating. Additionally, if the vehicle is parked in a poorly ventilated area, exhaust gases may collect and enter the vehicle, leading to death or a serious health hazard.

#### When braking

When the brakes are wet, drive more cautiously. Braking distance increases when the brakes are wet, and this may cause one side of the vehicle to brake differently than the other side. Also, the parking brake may not securely hold the vehicle.

- If the electronically controlled brake system does not operate, do not follow other vehicles closely and avoid hills or sharp turns that require braking.
  - In this case, braking is still possible, but the brake pedal should be depressed more firmly than usual. Also, the braking distance will increase. Have your brakes fixed immediately.
- The brake system consists of 2 or more individual hydraulic systems; if one of the systems fails, the other will still operate. In this case, the brake pedal should be depressed more firmly than usual and the braking distance will increase. Have your brakes fixed immediately.

#### If the vehicle becomes stuck (AWD models)

Do not spin the wheels excessively when any of the tires is up in the air, or the vehicle is stuck in sand, mud, etc. This may damage the driveline components or propel the vehicle forward or backward, causing an accident.



#### **NOTICE**

#### When driving the vehicle

- Do not depress the accelerator and brake pedals at the same time during driving, as this may restrain the hybrid system output.
- Do not use the accelerator pedal or depress the accelerator and brake pedals at the same time to hold the vehicle on a hill.

#### Avoiding damage to vehicle parts

Do not turn the steering wheel fully in either direction and hold it there for an extended period of time. Doing so may damage the power steering motor.

#### $\wedge$

#### **NOTICE**

 When driving over bumps in the road, drive as slowly as possible to avoid damaging the wheels, underside of the vehicle, etc.

#### If you get a flat tire while driving

A flat or damaged tire may cause the following situations.

- It may be difficult to control your vehicle.
- The vehicle will make abnormal sounds or vibrations.
- The vehicle will lean abnormally. Hold the steering wheel firmly and gradually depress the brake pedal to slow down the vehicle.

Information on what to do in case of a flat tire (→P.440, 451)

### When encountering flooded roads

Do not drive on a road that has flooded after heavy rain, etc. Doing so may cause the following serious damage to the vehicle:

- Engine stalling
- Short in electrical components
- Engine damage caused by water immersion

In the event that you drive on a flooded road and the vehicle is flooded, be sure to have any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer check the following:

- Brake function
- Changes in quantity and quality of oil and fluid used for the engine, hybrid transaxle (front and rear [AWD models]), etc.
- Lubricant condition for the bearings and suspension joints (where possible), and the function of all joints, bearings, etc.

#### When parking the vehicle

Always set the parking brake, and shift the shift lever to P. Failure to do so may cause the vehicle to move or the vehicle may accelerate suddenly if the accelerator pedal is accidentally depressed.

# Sudden start restraint control (Drive-Start Control [DSC])

When the following unusual operation is performed with the accelerator pedal depressed, the hybrid system output may be restrained.

- When the shift lever is shifted to R\*.
- When the shift lever is shifted from P or R to forward drive shift position such as D\*.

When the system operates, a message appears on the multi-information display. Read the message and follow the instruction.

\*: Depending on the situation, the shift position may not be changed.

#### ■ Drive-Start Control (DSC)

• When the TRC is turned off (→P.317), sudden start restraint control also does not operate. If your vehicle have trouble escaping from the mud or fresh snow due to sudden start restraint control operation, deactivate TRC(→P.317) so that the vehicle may become able to escape from the mud or fresh snow.

Also, sudden start restraint control will not operate in the following conditions:

When Trail Mode is turned on

#### Cargo and luggage

Take notice of the following information about storage precautions, cargo capacity and load.

#### **WARNING**

#### ■Things that must not be carried in the luggage compartment

The following things may cause a fire if loaded in the luggage compartment:

- Receptacles containing gasoline
- Aerosol cans

#### Storage precautions

Observe the following precautions. Failure to do so may prevent the pedals from being depressed properly, may block the driver's vision, or may result in items hitting the driver or passengers, possibly causing an accident.

- Stow cargo and luggage in the luggage compartment whenever possible.
- Do not stack anything in the luggage compartment higher than the seatbacks.
- When you fold down the rear seats, long items should not be placed directly behind the front seats.
- Never allow anyone to ride in the luggage compartment. It is not designed for passengers. They should ride in their seats with their seat belts properly fastened. Otherwise, they are much more likely to suffer death or serious bodily injury, in the event of sudden braking, sudden swerving or an accident.

- Do not place cargo or luggage in or on the following locations.
- At the feet of the driver
- · On the front passenger or rear seats (when stacking items)
- On the luggage cover (if equipped)
- On the instrument panel
- · On the dashboard
- Secure all items in the occupant compartment.

#### Load and distribution

- Do not overload your vehicle.
- Do not apply loads unevenly.

Improper loading may cause deterioration of steering or braking control which may cause death or serious iniurv.

#### ■When loading cargo on the roof luggage carrier (if equipped)

Observe the following precautions:

- Place the cargo so that its weight is distributed evenly between the front and rear axles.
- If loading long or wide cargo, never exceed the vehicle overall length or width.  $(\rightarrow P.476)$
- Before driving, make sure the cargo is securely fastened on the roof luggage carrier.
- Loading cargo on the roof luggage carrier will make the center of gravity of the vehicle higher. Avoid high speeds, sudden starts, sharp turns, sudden braking or abrupt maneuvers, otherwise it may result in loss of control or vehicle rollover due to failure to operate this vehicle correctly and result in death or serious injury.
- If driving for a long distance, on rough roads, or at high speeds, stop the vehicle now and then during the trip to make sure the cargo remains in its place.



Do not exceed 80 kg (176.4 lb.) cargo weight on the roof luggage carrier.



#### NOTICE

■When loading cargo on the roof luggage carrier (if equipped)

Be careful not to scratch the surface of the panoramic moon roof (if equipped).

#### Trailer towing (for Azerbaijan and Georgia)

Toyota does not recommend towing a trailer with your vehicle. Toyota also does not recommend the installation of a tow hitch or the use of a tow hitch carrier for a wheelchair, scooter, bicycle, etc. Your vehicle is not designed for trailer towing or for the use of tow hitch mounted carriers.



#### Trailer towing (except for Azerbaijan and Georgia)

Your vehicle is designed primarily as a passenger carrying vehicle. Towing a trailer will have an adverse effect on handling, performance, braking, durability, and fuel consumption. Your safety and satisfaction depend on the proper use of correct equipment and cautious driving habits. For your safety and the safety of others, do not overload the vehicle or trailer.

To tow a trailer safely, use extreme care and drive the vehicle in accordance with the trailer's characteristics and operating conditions.

Toyota warranties do not apply to damage or malfunction caused by towing a trailer for commercial purposes.

Ask your local authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for further details before towing, as there are additional legal requirements in some countries.

#### ■ Tire information

Increase the tire inflation pressure to 20.0 kPa (0.2 kgf/cm<sup>2</sup> or bar, 3 psi) greater than the recommended value

- when towing.  $(\rightarrow P.484)$
- Increase the air pressure of the trailer tires in accordance with the total trailer weight and according to the values recommended by the manufacturer of your trailer.

#### ■ Safety checks before towing

- Check that the maximum load limit for the towing hitch/bracket and hitch ball is not exceeded. Bear in mind that the coupling weight of the trailer will add to the load exerted on the vehicle. Also make sure that the total load exerted on the vehicle is within the range of the weight limits. ( $\rightarrow$ P.191)
- Ensure that the trailer load is secure.
- Supplementary outside rear view mirrors should be added to the vehicle if the traffic behind cannot be clearly seen with standard mirrors. Adjust the extending arms of these mirrors on both sides of the vehicle so that they always provide maximum visibility of the road behind.



#### **WARNING**

Follow all the instructions described in this section.

Failure to do so could cause an accident resulting in death or serious injury.

#### ■Trailer towing precautions

When towing, make sure that none of the weight limits are exceeded. (→P.191)

#### ■ To avoid accident or injury

- Vehicles with compact spare tire: Do not tow a trailer when the compact spare tire is installed on your vehicle.
- Vehicles with emergency tire puncture repair kit: Do not tow a trailer when the tire installed is repaired with the emer-

gency tire puncture repair kit.

 Do not use dynamic radar cruise control with full-speed range (if equipped) or cruise control (if equipped) when trailer towing.

#### ■Vehicle speed in towing

Observe the legal maximum speeds for trailer towing.

### Before descending hills or long declines

Reduce speed and downshift. However, never downshift suddenly while descending steep or long downhill grades.

#### Operation of the brake pedal

Do not hold the brake pedal depressed often or for long periods of time.

Doing so may result in the brake overheating or reduce braking effects.

#### Weight limits

Check the allowable towing capacity, GVM (Gross Vehicle Mass), MPAC (Maximum Permissible Axle Capacity), and permissible drawbar load before towing. (→P.476)

#### Towing hitch/bracket

Toyota recommends the use of the Toyota hitch/bracket for your vehicle. Other products of a suitable nature and comparable quality may also be used.

For vehicles where the towing device blocks any of the lights or license plate, the following shall be observed:

Do not use towing devices that

cannot be easily removed or repositioned.

 Towing devices must be removed or repositioned when not in use.

#### Connecting trailer lights

Please consult any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer when installing trailer lights, as incorrect installation may cause damage to the vehicle's lights. Please take care to comply with your state's laws when installing trailer lights.




#### NOTICE

### Do not directly splice trailer lights

Directly splicing trailer lights may damage your vehicle's electrical system and cause a malfunction.

## Important points regarding trailer loads

■ Total trailer weight and permissible drawbar load

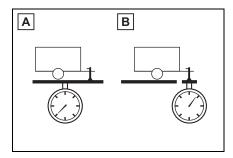

A Total trailer weight

4


Weight of the trailer itself plus the trailer load should be within the maximum towing capacity. Exceeding this weight is dangerous. (→P.476)

When towing a trailer, use a friction coupler or friction stabilizer (sway control device).

B Permissible drawbar load

Allocate the trailer load so that the drawbar load is greater than 25 kg (55.1 lb.) or 4% of the towing capacity. Do not let the drawbar load exceed the indicated weight.  $(\rightarrow P.476)$ 

## Information tag (manufacturer's label)

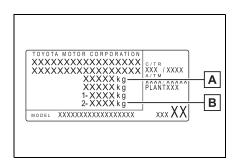

#### A Gross vehicle mass

The combined weight of the driver, passengers, luggage, towing hitch, total curb mass and drawbar load should not exceed the gross vehicle mass by more than 100 kg (220.5 lb.). Exceeding this weight is dangerous.

B Maximum permissible rear axle capacity

The weight borne by the rear axle should not exceed the maximum permissible rear axle capacity by 15% or more. Exceeding this weight is dangerous.

The values for towing capacity were derived from testing conducted at sea

level. Take note that hybrid system output and towing capacity will be reduced at high altitudes.




#### **WARNING**

When the gross vehicle mass or maximum permissible axle capacity is exceeded

Failing to observe this precaution may lead to an accident causing death or serious injury.

- Add an additional 20.0 kPa (0.2 kgf/cm<sup>2</sup> or bar, 3 psi) to the recommended tire inflation pressure value. (→P.484)
- Do not exceed the established speed limit for towing a trailer in built-up areas or 100 km/h (62 mph), whichever is lower.

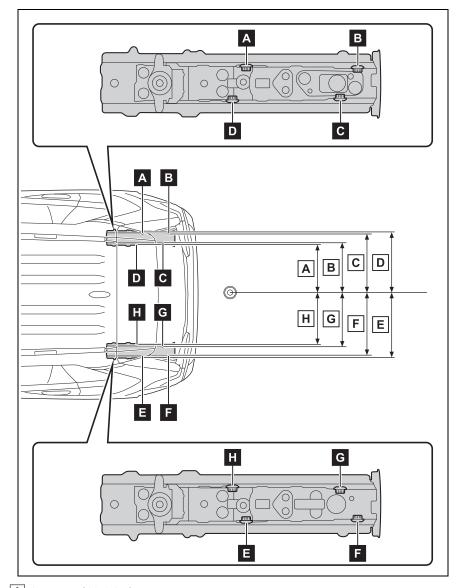

- **A** 457 mm (18.0 in.)
- **B** 461 mm (18.1 in.)
- C 536 mm (21.1 in.)

4

### **194** 4-1. Before driving

- **D** 538 mm (21.2 in.)
- **E** 538 mm (21.2 in.)
- **F** 536 mm (21.1 in.)
- **G** 461 mm (18.1 in.)
- H 457 mm (18.0 in.)

- **A** 3 mm (0.12 in.)
- **B** 14 mm (0.6 in.)
- C 30 mm (1.2 in.)

4

- **D** 36 mm (1.4 in.)
- **E** 394 mm (15.5 in.)
- F 332 mm (13.1 in.)
- **G** 370 mm (14.6 in.)
- H 570 mm (22.4 in.)
- I 601 mm (23.7 in.)
- J 1074 mm (42.3 in.)



#### NOTICE

### ■When the rear bumper strengthening material is aluminum

Ensure the steel bracket part does not come directly in contact with that area.

When steel and aluminum come into contact, there is a reaction similar to corrosion, which will weaken the section concerned and may result in damage. Apply a rust inhibitor to parts that will come in contact when attaching a steel bracket.

#### Guidance

Your vehicle will handle differently when towing a trailer. In order to avoid accident, death or serious injury, keep the following in mind when towing:

## ■ Checking connections between trailer and lights

Stop the vehicle and check the operation of the connection between the trailer and lights after driving for a brief period as well as before starting off.

#### Practicing driving with a coupled trailer

- Get the feel for turning, stopping and reversing with the trailer coupled by practicing in an area with no or light traffic.
- When reversing with a coupled trailer, hold the section of the steering wheel nearest to you and rotate clockwise to turn the trailer left or counterclockwise to turn it right. Always rotate a little at a time to prevent steering error. Have someone guide you when reversing to lessen the risk of an accident.

## ■ Increasing vehicle-to-vehicle distance

At a speed of 10 km/h (6 mph), the distance to the vehicle running ahead of you should be equivalent to or greater than the combined length of your vehicle and trailer. Avoid sudden braking that may cause skidding. Otherwise, the vehicle may spin out of control. This is especially true when driving on wet or slippery road surfaces.

Executing sharp turns when towing may result in the trailer colliding with your vehicle. Decelerate well in advance when approaching turns and take them slowly and carefully to avoid sudden braking.

## Important points regarding turning

The wheels of the trailer will travel closer to the inside of the curve than the wheels of the vehicle. To make allowance for this, take the turns wider than you would normally do.

## ■ Important points regarding stability

Vehicle movement resulting from uneven road surfaces and strong crosswinds will affect handling. The vehicle may also be rocked by passing buses or large trucks. Frequently check behind when moving alongside such vehicles. As soon as such vehicle movement occurs, immediately start to decelerate smoothly by slowly applying the brakes. Always steer the vehicle straight ahead while braking.

#### ■ Passing other vehicles

Consider the total combined length of your vehicle and trailer and ensure that the vehicle-to-vehicle distance is sufficient before executing lane changes.

#### **■** Transmission information

To maintain engine braking efficiency, when using engine braking, do not use the transmission in D.  $(\rightarrow P.205)$ 

#### ■ If the hybrid system overheats

Towing a loaded trailer up a long, steep incline in temperatures exceeding  $30^{\circ}\text{C}$  ( $85^{\circ}\text{F}$ ) may result in the hybrid system overheating. If the engine coolant temperature gauge indicates that the hybrid system is overheating, turn the air conditioning off immediately, leave the road and stop the vehicle in a safe place. ( $\rightarrow$ P.469)

#### ■ When parking the vehicle

Always place wheel chocks under the wheels of both the vehicle and trailer. Firmly set the parking brake and shift the shift lever to P.

#### ■ Break-in schedule

Toyota recommends that vehicles fitted with new power train components should not be used for towing trailers for the first 800 km (500 miles).

#### ■ Maintenance

- Maintenance must be performed more frequently when using the vehicle for towing due to the greater weight burden placed on the vehicle compared to normal driving.
- Retighten all bolts securing the hitching ball and bracket after towing for approximately 1000 km (600 miles).

#### ■ If trailer sway occurs

One or more factors (crosswinds, passing vehicles, rough roads, etc.) can adversely affect handling of your vehicle and trailer, causing instability.

4

#### 198 4-1. Before driving

- If trailer swaying occurs:
- Firmly grip the steering wheel. Steer straight ahead.
   Do not try to control trailer swaying by turning the steering wheel.
- Begin releasing the accelerator pedal immediately but very gradually to reduce speed.
   Do not increase speed. Do not apply vehicle brakes.

If you make no extreme correction with the steering or brakes, your vehicle and trailer should stabilize (if enabled, Trailer Sway Control can also help to stabilize the vehicle and trailer.).

- After the trailer swaying has stopped:
- Stop in a safe place. Get all occupants out of the vehicle.
- Check the tires of the vehicle and the trailer.
- Check the load in the trailer.
   Make sure the load has not shifted.
   Make sure the tongue weight is appropriate, if possible.
- Check the load in the vehicle.

  Make sure the vehicle is not overloaded after occupants get in.

If you cannot find any problems, the speed at which trailer swaying occurred is beyond the limit of your particular vehicle-trailer combination. Drive at a lower speed to prevent instability. Remember that swaying of the towing vehicle-trailer increases as speed increases.

#### **Power (ignition) switch**

Performing the following operations when carrying the electronic key on your person starts the hybrid system or changes power switch modes.

#### Starting the hybrid system

Pull the parking brake switch to check that the parking brake is set. (→P.210)

The parking brake indicator will come on

- 2 Check that the shift lever is set in P.
- 3 Firmly depress the brake pedal.


and a message will be displayed on the multi-information display. If it is not displayed, the hybrid system cannot be started.

**4** Press the power switch shortly and firmly.

When operating the power switch, one short, firm press is enough. It is not necessary to press and hold the switch. If the "READY" indicator turns on, the hybrid system will operate normally. Continue depressing the brake pedal until the "READY" indicator is illuminated.

The hybrid system can be started from

any power switch mode.

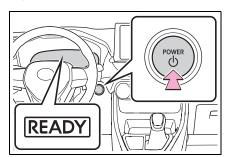

5 Check that the "READY" indicator is illuminated.

The vehicle will not move when the "READY" indicator is off.

#### ■ If the hybrid system does not start

- The immobilizer system may not have been deactivated. (→P.87) Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- If a message related to start-up is shown on the multi-information display, read the message and follow the instructions.
- If the door is unlocked with the mechanical key, the hybrid system cannot be started using the smart entry & start system. Refer to P.463 to start the hybrid system. However, if the electronic key is carried inside the vehicle and the doors are locked (→P.132), the hybrid system can be started

## When the ambient temperature is low, such as during winter driving conditions

- When starting the hybrid system, the flashing time of the "READY" indicator may be long. Leave the vehicle as it is until the "READY" indicator is steady on, as steady means the vehicle is able to move.
- When the hybrid battery (traction battery) is extremely cold (below approximately -30°C [-22°F]) under the

influence of the outside temperature, it may not be possible to start the hybrid system. In this case, try to start the hybrid system again after the temperature of the hybrid battery increases due to the outside temperature increase etc.

#### Sounds and vibrations specific to a Hybrid Electric Vehicle

→P 81

#### ■ If the 12-volt battery is discharged

The hybrid system cannot be started using the smart entry & start system. Refer to P.464 to restart the hybrid system.

#### ■ Electronic key battery depletion

→P.126

#### ■ Conditions affecting operation


→P.148

#### ■ Note for the entry function

→P.149

#### ■ Steering lock function

- After turning the power switch to OFF and opening and closing the doors, the steering wheel will be locked due to the steering lock function. Operating the power switch again automatically cancels the steering lock.
- When the steering lock cannot be released, "Push Power Switch while Turning Steering Wheel in Either Direction" will be displayed on the multi-information display. Check that the shift lever is set in P. Press the power switch shortly and firmly while turning the steering wheel left and right.

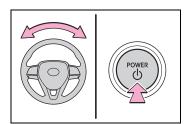

To prevent the steering lock motor

from overheating, the motor may be suspended if the hybrid system is turned on and off repeatedly in a short period of time. In this case, refrain from operating the power switch. After about 10 seconds, the steering lock motor will resume functioning.

#### If there is a malfunction in the smart entry & start system

If "Smart Entry & Start System Malfunction" is displayed on the multi-information display, the system may be malfunctioning. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

### ■If the "READY" indicator does not come on

In the event that the "READY" indicator does not come on even after performing the proper procedures for starting the vehicle, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

#### ■ If the hybrid system is malfunctioning

→P.86

#### **■** Electronic key battery

→P.403

#### ■ Operation of the power switch

- If the switch is not pressed shortly and firmly, the power switch mode may not change or the hybrid system may not start.
- If attempting to restart the hybrid system immediately after turning the power switch to OFF, the hybrid system may not start in some cases. After turning the power switch to OFF, please wait a few seconds before restarting the hybrid system.

#### ■ Customization

If the smart entry & start system has been deactivated in a customized setting, refer to P.463.

#### ■When starting the hybrid system

Always start the hybrid system while sitting in the driver's seat. Do not depress the accelerator pedal while starting the hybrid system under any circumstances.

Doing so may cause an accident resulting in death or serious injury.

#### Caution while driving

If hybrid system failure occurs while the vehicle is moving, do not lock or open the doors until the vehicle reaches a safe and complete stop. Activation of the steering lock in this circumstance may lead to an accident, resulting in death or serious injury.



#### **NOTICE**

#### When starting the hybrid system

If the hybrid system becomes difficult to start, have your vehicle checked by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

#### Symptoms indicating a malfunction with the power switch

If the power switch seems to be operating somewhat differently than usual, such as the switch sticking slightly, there may be a malfunction. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

#### Stopping the hybrid system

- 1 Stop the vehicle completely.
- 2 If the parking brake is in manual mode, set the parking brake. (→P.210)

Check the parking brake indicator is illuminated.

- 3 Shift the shift lever to P.
- 4 Press the power switch shortly and firmly.

The hybrid system will stop, and the meter display will be extinguished.

Release the brake pedal and check that "ACCESSORY" or "IGNITION ON" is not shown on the multi-information display.

#### **WARNING**


#### Stopping the hybrid system in an emergency

- If you want to stop the hybrid system in an emergency while driving the vehicle, press and hold the power switch for more than 2 seconds, or press it briefly 3 times or more in succession. (→P.418) However, do not touch the power switch while driving except in an emergency. Turning the hybrid system off while driving will not cause loss of steering or braking control, however, power assist to the steering will be lost. This will make it more difficult to steer smoothly, so you should pull over and stop the vehicle as soon as it is safe to do SO.
- If the power switch is operated while the vehicle is running, a warning message will be shown on the multi-information display and a buzzer sounds.
- When restarting the hybrid system after an emergency shutdown, shift the shift lever to N and press the power switch shortly and firmly.

#### Changing power switch modes

Modes can be changed by pressing the power switch with the brake

pedal released. (The mode changes each time the switch is pressed.)

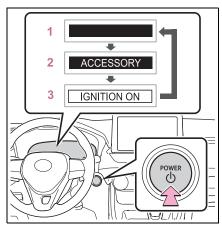

#### **1** OFF

The emergency flashers can be used.

#### 2 ACC

Some electrical components such as the audio system can be used. "ACCESSORY" will be displayed on the multi-information display.

#### 3 ON

All electrical components can be used. "IGNITION ON" will be displayed on the multi-information display.

\*: If the shift lever is in a position other than P when turning off the hybrid system, the power switch will be turned to ACC, not to OFF.

#### ■ Auto power off function

If the vehicle is left in ACC for more than 20 minutes or ON (the hybrid system is not operating) for more than an hour with the shift lever in P, the power switch will automatically turn to OFF. However, this function cannot entirely prevent the 12-volt battery discharge. Do not leave the vehicle with the power switch in ACC

or ON for long periods of time when the hybrid system is not operating.



#### NOTICE

### ■To prevent 12-volt battery discharge

- Do not leave the power switch in ACC or ON for long periods of time without the hybrid system on.
- If "ACCESSORY" or "IGNITION ON" is displayed on the multi-information display, the power switch is not in OFF. Exit the vehicle after turning the power switch to OFF.

# When stopping the hybrid system with the shift lever in a position other than P

If the hybrid system is stopped with the shift lever in a position other than P, the power switch will not be turned to OFF but instead be turned to ACC. Perform the following procedure to turn the switch to OFF:

- 1 Check that the parking brake is set.
- 2 Shift the shift lever to P.
- 3 Check that "ACCESSORY" is displayed on the multi-information display and press the power switch shortly and firmly.
- 4 Check that "ACCESSORY" or "IGNITION ON" on the multiinformation display is off.

#### **NOTICE**

#### ■ To prevent 12-volt battery discharge

Do not stop the hybrid system when the shift lever is in a position other than P. If the hybrid system is stopped in another shift lever position, the power switch will not be turned to OFF but instead be turned to ACC. If the vehicle is left in ACC, 12-volt battery discharge may occur.

#### **EV** drive mode

In EV drive mode, electric power is supplied by the hybrid battery (traction battery), and only the electric motor (traction motor) is used to drive the vehicle.

This mode allows you to drive in residential areas early in the morning and late at night, or in indoor parking lots etc. without concern for noises and gas emissions.


When the Acoustic Vehicle Alerting System is active, the vehicle may produce sound.

#### Operating instructions


Turns EV drive mode on/off

When EV drive mode is turned on, the EV drive mode indicator will come on. Pressing the switch when in EV drive mode will return the vehicle to normal driving (using the gasoline engine and electric motor [traction motor]).

#### ▶ 2WD models

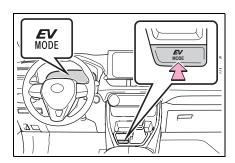

#### AWD models

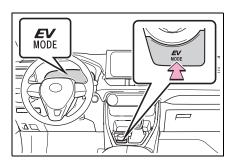

### ■ Situations in which EV drive mode cannot be turned on

It may not be possible to turn EV drive mode on in the following situations. If it cannot be turned on, a buzzer will sound and a message will be shown on the multi-information display.

- The temperature of the hybrid system is high.
  - The vehicle has been left in the sun, driven on a hill, driven at high speeds, etc.
- The temperature of the hybrid system is low.
  - The vehicle has been left in temperatures lower than about 0°C (32°F) for a long period of time etc.
- The gasoline engine is warming up.
- The hybrid battery (traction battery) is low.

The remaining battery level indicated in the Energy monitor display is low.  $(\rightarrow P.119)$ 

- Vehicle speed is high.
- The accelerator pedal is depressed firmly or the vehicle is on a hill etc.
- The windshield defogger is in use.

Use the EV drive mode when it becomes available.

### Switching to EV drive mode when the gasoline engine is cold

If the hybrid system is started while the gasoline engine is cold, the gasoline engine will start automatically after a

short period of time in order to warm up. In this case, you will become unable to switch to EV drive mode. After the hybrid system has started and the "READY" indicator has illuminated, press the EV drive mode switch before the gasoline engine starts to switch to EV drive mode.

### ■ Automatic cancelation of EV drive

When driving in EV drive mode, the gasoline engine may automatically restart in the following situations. When EV drive mode is canceled, a buzzer will sound, the EV drive mode indicator will flash and go off and a message will be shown on the multi-information display.

- The hybrid battery (traction battery) becomes low.
  - The remaining battery level indicated in the Energy monitor display is low. (→P.119)
- Vehicle speed is high.
- The accelerator pedal is depressed firmly or the vehicle is on a hill etc.

Drive the vehicle for a while before attempting to turn on the EV drive mode again.

### ■ Possible driving distance when driving in EV drive mode

EV drive mode's possible driving distance ranges from a few hundred meters to approximately 1 km (0.6 mile). However, depending on vehicle conditions, there are situations when EV drive mode cannot be used.

(The distance that is possible depends on the hybrid battery [traction battery] level and driving conditions.)

#### ■ Fuel economy

The hybrid system is designed to achieve the best possible fuel economy during normal driving (using the gasoline engine and electric motor [traction motor]). Driving in EV drive mode more than necessary may lower fuel economy.

#### Caution while driving

When driving in EV drive mode, pay special attention to the area around the vehicle. Because there is no engine noise, pedestrians, people riding bicycles or other people and vehicles in the area may not be aware of the vehicle starting off or approaching them, so take extra care while driving.

#### **Hybrid transmission**

Select the shift position depending on your purpose and situation.

#### Shift position purpose and **functions**

Shift position	Objective or function	
Р	Parking the vehicle/start- ing the hybrid system	
R	Reversing	
N	Neutral	
D	Normal driving*1, 2	
S	S mode driving <sup>*3</sup>	

- \*1: To improve fuel efficiency and reduce noise, shift the shift lever to D for normal driving.
- \*2: Vehicles with paddle shift switches only: Selecting shift ranges in the D position allows suitable use of engine braking. (→P.207)
- \*3: By selecting shift ranges using S mode, you can control accelerating force and engine braking force.

#### ■When driving with dynamic radar cruise control with full-speed range or cruise control activated (if equipped)

Even when performing the following actions with the intent of enabling engine braking, engine braking will not activate because dynamic radar cruise control with full-speed range, or cruise control will not be canceled.

While driving in D or S mode, down-

shifting to 5 or 4. (→P.207, 208)

- When switching the driving mode to sport mode while driving in D position. (→P.311)
- Restraining sudden start (Drive-Start Control)

→P.187

#### A

#### **WARNING**

### ■ When driving on slippery road surfaces

Be careful of downshifting and sudden acceleration, as this could result in the vehicle skidding to the side or spinning.




#### **NOTICE**

### ■ Hybrid battery (traction battery) charge

If the shift lever is in N, the hybrid battery (traction battery) will not be charging, even when the engine is running. Therefore, if the vehicle is left with the shift lever in N for a long period of time, the hybrid battery (traction battery) will discharge, and this may result in the vehicle not being able to start.

#### Shifting the shift lever

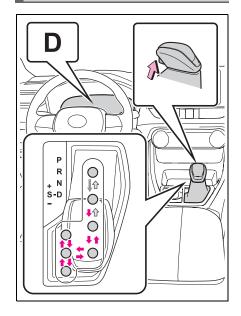



While the power switch is

in ON and the brake pedal depressed\*, shift the shift lever while pushing the shift release button on the shift knob.



Shift the shift lever while

pushing the shift release button on the shift knob.



Shift the shift lever nor-

#### mally.

When shifting the shift lever between P and D, make sure that the vehicle is completely stopped and the brake pedal is depressed.

\*: For the vehicle to be able to be

#### ■ Shift lock system

The shift lock system is a system to prevent accidental operation of the shift lever in starting.

The shift lever can be shifted from P only when the power switch is in ON, the brake pedal is depressed and the shift release button is pushed.

### ■ If the shift lever cannot be shifted from P


First, check whether the brake pedal is being depressed.

If the shift lever cannot be shifted even though the brake pedal is depressed and the shift release button is pushed, there may be a problem with the shift lock system. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

The following steps may be used as an emergency measure to ensure that the shift lever can be shifted.


Releasing the shift lock:

- Pull the parking brake switch to check that the parking brake is set. (→P.210)
- 2 Turn the power switch to OFF.
- 3 Depress the brake pedal.
- 4 Pry the cover up with a flathead screwdriver or equivalent tool. To prevent damage to the cover, cover the tip of the screwdriver with a rag.

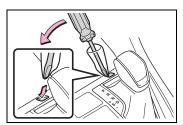

5 Press and hold the shift lock override button and then push the button on the shift knob.

The shift lever can be shifted while both buttons are pressed.

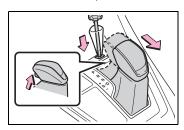

#### A

#### **WARNING**

### ■ To prevent an accident when releasing the shift lock

Before pressing the shift lock override button, make sure to set the parking brake and depress the brake pedal.

If the accelerator pedal is accidentally depressed instead of the brake pedal when the shift lock override button is pressed and the shift lever is shifted out of P, the vehicle may suddenly start, possibly leading to an accident resulting in death or serious injury.

#### Selecting the driving mode


→P.311

# Selecting shift ranges in the D position (vehicles with paddle shift switches)

To drive using temporary shift range selection, operate the "-" paddle shift switch. The shift range can then be selected by operating the "-" and "+" paddle shift switches. Changing the shift range allows restriction of the highest gear, preventing upshifting and

4

enabling the level of engine braking force to be selected.

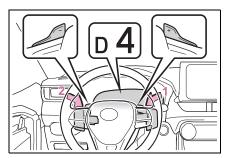

#### 1 Upshifting

#### 2 Downshifting

The selected shift range, from D1 to D6, will be displayed on the multi-information display.

#### ■ Shift ranges and their functions

- You can choose from 6 levels of accelerating force and engine braking force.
- A lower shift range will provide greater accelerating force and engine braking force than a higher shift range, and the engine revolutions will also increase.

### ■ Downshifting restriction warning buzzer

To help ensure safety and driving performance, downshifting operation may sometimes be restricted. In some circumstances, downshifting may not be possible even when the paddle shift switch is operated. (A buzzer will sound twice.)

#### Automatic deactivation of shift range selection in the D position


Shift range selection in the D position will be deactivated in the following situations:

- When the vehicle comes to a stop
- If the accelerator pedal is depressed for more than a certain period of time

- When the shift lever is shifted to a position other than D
- When the "+" paddle shift switch is held down for a period of time

## Changing shift ranges in S mode

When the shift lever is in the S position, the shift lever or paddle shift switches (if equipped) can be operated as follows:

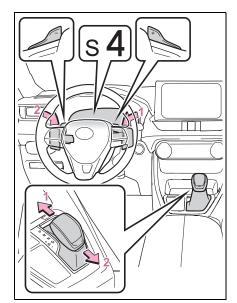

#### 1 Upshifting

#### 2 Downshifting

The selected shift range, from S1 to S6, will be displayed on the multi-information display.

The initial shift range in S mode is set automatically to S3, S4 or S5 according to vehicle speed.

#### ■S mode

You can choose from 6 levels of

- A lower shift range will provide greater accelerating force and engine braking force than a higher shift range, and the engine revolutions will also increase.
- To prevent the engine from over-revving, upshifting may automatically occur when the shift range is 4 or lower.
- When the shift range is 4 or lower, holding the shift lever toward "+" sets the shift range to 6.

#### Downshifting restriction warning buzzer


To help ensure safety and driving performance, downshifting operation may sometimes be restricted. In some circumstances, downshifting may not be possible even when the shift lever or paddle shift switches (if equipped) is operated. (A buzzer will sound twice.)

#### ■ If the "S" indicator does not come on or the "D" indicator is displayed even after shifting the shift lever to

This may indicate a malfunction in the transmission system. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately. (In this situation, the transmission will operate in the same manner as when the shift lever is in D.)

#### **Turn signal lever**

#### Operating instructions

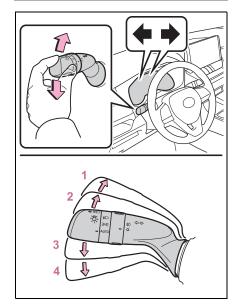

- Right turn
- 2 Lane change to the right (move the lever partway and release it)

The right hand signals will flash 3 times.

3 Lane change to the left (move the lever partway and release it)

The left hand signals will flash 3 times.

4 Left turn

#### ■Turn signals can be operated when

The power switch is in ON.

### ■ If the indicator flashes faster than usual

Check that a light bulb in the front or rear turn signal lights has not burned out

4

■ If the turn signals stop flashing before a lane change has been performed

Operate the lever again.

■ To discontinue flashing of the turn signals during a lane change

Operate the lever in the opposite direction.

#### **Parking brake**


The parking brake can be set or released automatically or manually. In automatic mode, the parking brake can be set or released automatically according to shift lever operation.

Also, even in automatic mode, the parking brake can be set or released manually.

#### Operating instructions

#### ■ Using the manual mode

The parking brake can be set and released manually.

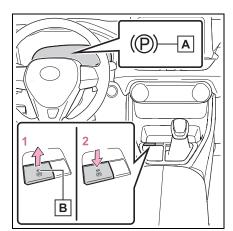

- A Parking brake indicator light
- B Parking brake switch indicator
- 1 Pull the switch to set the parking brake.

The parking brake indicator light and parking brake switch indicator will turn on.

Pull and hold the parking brake switch if

an emergency occurs and it is necessary to operate the parking brake while driving.


- Push the switch to release the parking brake.
- Operate the parking brake switch while depressing the brake pedal.
- Parking brake automatic release function (→P.211)

Make sure that the parking brake indicator light and parking brake switch indicator turn off.

If the parking brake indicator light and parking brake switch indicator flash, operate the switch again.  $(\rightarrow P.433)$ 

## ■ Turning the automatic mode on

While the vehicle is stopped, pull and hold the parking brake switch until a buzzer sounds and a message is shown on the multi-information display.

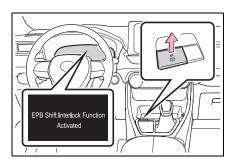

When the automatic mode is turned on, the parking brake operates as follows.

 When the shift lever is shifted from P, the parking brake will be released, and the parking brake indicator light and parking brake switch indicator will turn off.

 When the shift lever is shifted to P, the parking brake will be set, and the parking brake indicator light and parking brake switch indicator will turn on.

Operate the shift lever with the vehicle stopped and the brake pedal depressed.

## ■ Turning the automatic mode off

While the vehicle is stopped and depressing the brake pedal, press and hold the parking brake switch until a buzzer sounds and a message is shown on the multi-information display.



#### ■ Parking brake operation

- When the power switch is not in ON, the parking brake cannot be released using the parking brake switch.
- When the power switch is not in ON, automatic mode (automatic brake setting and releasing) is not available.

### ■ Parking brake automatic release function

The parking brake will be released automatically when the accelerator pedal is slowly depressed under the following conditions:

The driver's door is closed

- The driver is wearing the seat belt
- The shift lever is in a forward or reverse position.
- The malfunction indicator lamp or brake system warning light is not illuminated

If the automatic release function does not operate, release the parking brake manually.

### ■ Parking brake automatic lock function

The parking brake will be set automatically under the following conditions:

- The brake pedal is not depressed
- The driver's door is open
- The driver's seat belt is not fastened
- The shift lever is in a position other than P or N
- The malfunction indicator lamp and brake system warning light are not illuminated

#### ■ If "Parking Brake Temporarily Unavailable" is displayed on the multi-information display

If the parking brake is operated repeatedly over a short period of time, the system may restrict operation to prevent overheating. If this happens, refrain from operating the parking brake. Normal operation will return after about 1 minute.

#### If "Parking Brake Unavailable" is displayed on the multi-information display

Operate the parking brake switch. If the message does not disappear after operating the switch several times, the system may be malfunctioning. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

#### ■ Parking brake operation sound

When the parking brake operates, a motor sound (whirring sound) may be heard. This does not indicate a malfunction.

#### ■ Parking brake indicator light

- Depending on the power switch position/mode, the parking brake indicator light will turn on and stay on as described below:
  - ON: Comes on until the parking brake is released.
  - Not in ON: Stays on for approximately 15 seconds.
- When the power switch is turned off with the parking brake set, the parking brake indicator light will stay on for about 15 seconds. This does not indicate a malfunction.

### ■ When the parking brake switch malfunctions

Automatic mode (automatic brake setting and releasing) will be turned on automatically.

#### ■ Parking the vehicle

→P.182

### ■ Parking brake engaged warning buzzer

A buzzer will sound if the vehicle is driven with the parking brake engaged. "Parking Brake ON" is displayed on the multi-information display (with the vehicle reaching a speed of 5 km/h [3 mph]).

### ■ If the brake system warning light comes on

→P.427

#### **■** Usage in winter time

→P.325

### A

#### **WARNING**

#### When parking the vehicle

Do not leave a child in the vehicle alone. The parking brake may be released unintentionally by a child and there is the danger of the vehicle moving that may lead to an accident resulting in death or serious injury.

#### Parking brake switch

Do not set any objects near the parking brake switch. Objects may interfere with the switch and may lead the parking brake to unexpectedly operate.

### Parking brake automatic lock function

Never use the automatic parking brake engagement function in place of normal parking brake operation. This function is designed to reduce the risk of a collision due to the driver forgetting to engage the parking brake. Over-reliance on this function to park the vehicle safely may lead to an accident resulting in death or serious injury.



#### NOTICE

#### When parking the vehicle

Before you leave the vehicle, shift the shift lever to P, set the parking brake and make sure that the vehicle does not move.

#### ■When the system malfunctions

Stop the vehicle in a safe place and check the warning messages.

### ■ When the parking brake cannot be released due to a malfunction

Driving the vehicle with the parking brake set will lead to brake components overheating, which may affect braking performance and increase brake wear. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately if this occurs.


#### **Brake Hold**

The brake hold system keeps the brake applied when the shift lever is in D, S or N with the system on and the brake pedal has been depressed to stop the vehicle. The system releases the brake when the accelerator pedal is depressed with the shift lever in D or S to allow smooth start off.

#### Enabling the system

Turn the brake hold system on
The brake hold standby indicator
(green) A comes on. While the system is holding the brake, the brake hold

operated indicator (yellow) **B** comes on.

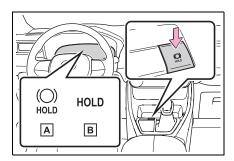

### ■ Brake hold system operating conditions

The brake hold system cannot be turned on in the following conditions:

- The driver's door is not closed.
- The driver is not wearing the seat belt.
- The parking brake is engaged.

If any of the conditions above are detected when the brake hold system is

4

enabled, the system will turn off and the brake hold standby indicator light will go off. In addition, if any of the conditions are detected while the system is holding the brake, a warning buzzer will sound and a message will be shown on the multi-information display. The parking brake will then be set automatically.

#### ■ Brake hold function

- If the brake pedal is left released for a period of about 3 minutes after the system has started holding the brake, the parking brake will be set automatically. In this case, a warning buzzer sounds and a message is shown on the multi-information display.
- To turn the system off while the system is holding the brake, firmly depress the brake pedal and press the button again.
- The brake hold function may not hold the vehicle when the vehicle is on a steep incline. In this situation, it may be necessary for the driver to apply the brakes. A warning buzzer will sound and the multi-information display will inform the driver of this situation. If a warning message is shown on the multi-information display, read the message and follow the instructions.

## ■When the parking brake is set automatically while the system is holding the brakes

Perform any of the following operations to release the parking brake.

- Depress the accelerator pedal. (The parking brake will not be released automatically if the seat belt is not fastened.)
- Operate the parking brake switch with the brake pedal depressed.

Make sure that the parking brake indicator light goes off.  $(\rightarrow P.210)$ 

# When an inspection at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer is necessary

When the brake hold standby indicator (green) does not illuminate even when the brake hold switch is pressed with the brake hold system operating conditions met, the system may be malfunctioning. Have the vehicle inspected at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

■ If "Brake Hold Malfunction Press Brake to Deactivate Visit Your Dealer" or "Brake Hold Malfunction Visit Your Dealer" is displayed on the multi-information display

The system may be malfunctioning. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

#### ■ Warning messages and buzzers

Warning messages and buzzers are used to indicate a system malfunction or to inform the driver of the need for caution. If a warning message is shown on the multi-information display, read the message and follow the instructions.

### If the brake hold operated indicator flashes

→P.433



#### WARNING

### ■ When the vehicle is on a steep incline

Take care when using the brake hold system on a steep incline, exercise caution. The brake hold function may not hold brakes in such situations.

Also, the system may not activate depending on the angle of the slope.

### WARNING

#### ■When stopped on a slippery road

The system cannot stop the vehicle when the gripping ability of the tires has been exceeded. Do not use the system when stopped on a slippery road.



#### NOTICE

#### ■When parking the vehicle


The brake hold system is not designed for use when parking the vehicle for a long period of time. Turning the power switch off while the system is holding the brake may release the brake, which would cause the vehicle to move. When operating the power switch, depress the brake pedal, shift the shift lever to P and set the parking brake.

#### **Headlight switch**

The headlights can be operated manually or automatically.

#### Turning on the headlights

Operating the -\hat{\tilde{\ti

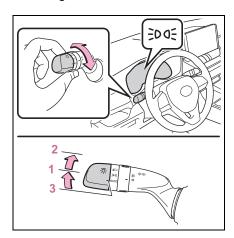

- 1 ⊋o∈ The front position, tail, license plate and instrument panel lights turn on.
- The headlights and all lights listed above turn on.
- 3 AUTO The headlights, daytime running lights (→P.216) and all the lights listed above turn on and off automatically.

#### ■ AUTO mode can be used when

The power switch is in ON.

#### ■ Daytime running light system


To make your vehicle more visible to other drivers during daytime driving, the

daytime running lights turn on automatically whenever the hybrid system is started and the parking brake is released with the headlight switch in the

AUTO position. (Illuminate brighter than the front position lights.) Daytime running lights are not designed for use at night.

#### ■ Headlight control sensor

The sensor may not function properly if an object is placed on the sensor, or anything that blocks the sensor is affixed to the windshield. Doing so interferes with the sensor detecting the level of ambient light and may cause the automatic headlight system to malfunction.

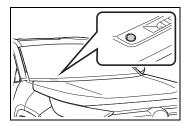

#### ■Automatic light off system

#### ▶ Type A

The lights turn off after the power switch is turned to ACC or OFF and the driver's door is opened.

To turn the lights on again, turn the power switch to ON, or turn the light

switch to AUTO position once and then

back to ୬୦€ or **E**O position.

- ► Type B
- When the light switch is in ₹ or position: The headlights and front fog lights turn off after the power switch is turned to ACC or OFF.
- When the light switch is in AUTO position: The headlights and all lights turn off after the power switch is turned to ACC or OFF.

To turn the lights on again, turn the

#### **■** Light reminder buzzer

A buzzer sounds when the power switch is turned to OFF and the driver's door is opened while the lights are turned on.

### Automatic headlight leveling system

The level of the headlights is automatically adjusted according to the number of passengers and the loading condition of the vehicle to ensure that the headlights do not interfere with other road

#### ■12-volt Battery-saving function

#### ▶ Type A

In order to prevent the 12-volt battery of the vehicle from discharging, if the headlights and/or tail lights are on when the power switch is turned to OFF, the 12-volt battery saving function will operate and automatically turn off all the lights after approximately 20 minutes.

When any of the following are performed, the 12-volt battery-saving function is canceled once and then reactivated. All the lights will turn off automatically 20 minutes after the 12-volt battery-saving function has been reactivated:

- When the headlight switch is operated
- When a door is opened or closed

#### ▶ Type B

In order to prevent the 12-volt battery of the vehicle from discharging, if the light

When any of the following are performed, the 12-volt battery-saving function is canceled once and then reactivated. All the lights will turn off automatically 20 minutes after the 12-volt battery-saving function has been reactivated:

- When the headlight switch is operated
- When a door is opened or closed

#### ■If "Headlight System Malfunction Visit Your Dealer" is displayed on the multi-information display

The system may be malfunctioning. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

#### ■ Customization

Settings (e.g. light sensor sensitivity) can be changed. (Customizable features: →P.495)


### <u>^</u>

#### NOTICE

#### ■ To prevent 12-volt battery discharge

Do not leave the lights on longer than necessary when the hybrid system is not running.

# Turning on the high beam headlights

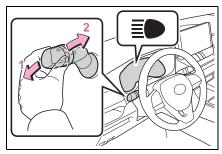

1 With the headlights on, push the lever away from you to turn on

4

the high beams.

Pull the lever toward you to the center position to turn the high beams off.

Pull the lever toward you and release it to flash the high beams once.


You can flash the high beams with the headlights on or off.

## Extended Headlight Lighting system

This system allows the headlights to be turned on for 30 seconds when the power switch is turned to OFF.

Pull the lever toward you and release it with the light switch is in AUTO after turning the power switch to OFF.

Pull the lever toward you and release it again to turn off the lights.

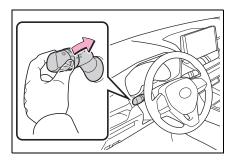

# AHB (Automatic High Beam)\*

#### \*: If equipped

The Automatic High Beam uses an in-vehicle front camera to assess the brightness of streetlights, the lights of vehicles ahead etc., and automatically turns the high beams on or off as necessary.

#### A

#### **WARNING**

## Limitations of the Automatic High Beam


Do not overly rely on the Automatic High Beam. Always drive safely, taking care to observe your surroundings and turning the high beam on or off manually if necessary.

To prevent incorrect operation of the Automatic High Beam system


Do not overload the vehicle.

# Activating the Automatic High Beam system

1 Press the Automatic High Beam switch.

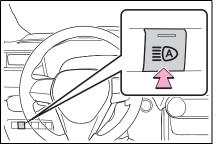

2 Turn the headlight switch to the AUTO or **■** position.

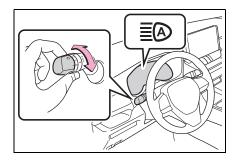

#### ■ High beams automatic turning on or off conditions

- When all of the following conditions are fulfilled, the high beams will be automatically turned on (after approximately 1 second):
- Vehicle speed is above approximately 30 km/h (19 mph) or more.
- · The area ahead of the vehicle is dark.
- There are no vehicles ahead with headlights or tail lights turned on.
- There are few streetlights on the road ahead.
- If any of the following conditions are fulfilled, the high beams will be automatically turned off:
- Vehicle speed drops below approximately 25 km/h (16 mph).
- The area ahead of the vehicle is not dark.
- Vehicles ahead have headlights or tail lights turned on.
- There are many streetlights on the road ahead.

#### ■ Front camera detection information

- The high beams may not be automatically turned off in the following situations:
- When oncoming vehicles suddenly appear from a curve
- When the vehicle is cut in front of by another vehicle
- When vehicles ahead are hidden from sight due to repeated curves, road dividers or roadside trees
- · When vehicles ahead appear from the

faraway lane on a wide road

- · When vehicles ahead have no lights
- The high beams may be turned off if a vehicle ahead that is using fog lights without using the headlights is detected.
- House lights, street lights, traffic signals, and illuminated billboards or signs may cause the high beams to switch to the low beams, or the low beams to remain on.
- The following factors may affect the amount of time taken to turn the high beams on or off:
- The brightness of headlights, fog lights, and tail lights of vehicles ahead
- The movement and direction of vehicles ahead
- When a vehicle ahead only has operational lights on one side
- When a vehicle ahead is a twowheeled vehicle
- The condition of the road (gradient, curve, condition of the road surface etc.)
- The number of passengers and amount of luggage
- The high beams may be turned on or off when the driver does not expect it.
- Bicycles or similar objects may not be detected.
- In the situations shown below, the system may not be able to accurately detect surrounding brightness levels. This may cause the low beams to remain on or the high beams to cause problems for pedestrians, vehicles ahead or other parties. In these cases, manually switch between the high and low beams.
- In bad weather (rain, snow, fog, sandstorms, etc.)
- The windshield is obscured by fog, mist, ice, dirt, etc.
- The windshield is cracked or damaged
- · The front camera is deformed or dirty
- When the temperature of the front camera is extremely high
- · Surrounding brightness levels are

4

equal to those of headlights, tail lights or fog lights

- When headlights or tail lights of vehicles ahead are turned off, dirty, changing color, or not aimed properly
- When the vehicle is hit by water, snow, dust, etc. from a preceding vehicle
- When driving through an area of intermittently changing brightness and darkness
- When frequently and repeatedly driving ascending/descending roads, or roads with rough, bumpy or uneven surfaces (such as stone-paved roads, gravel roads, etc.)
- When frequently and repeatedly taking curves or driving on a winding road
- There is a highly reflective object ahead of the vehicle, such as a sign or mirror
- The back of a vehicle ahead is highly reflective, such as a container on a truck
- The vehicle's headlights are damaged or dirty, or are not aimed properly
- The vehicle is listing or titling due to a flat tire, a trailer being towed, etc.
- The high beams and low beams are repeatedly being switched between in an abnormal manner
- The driver believes that the high beams may be causing problems or distress to other drivers or pedestrians nearby
- The vehicle is used in a territory in which vehicles travel on the opposite side of the road of the country for which the vehicle is approved, for example using a vehicle designed for right-hand traffic in a left-hand traffic territory, or vice versa
- When going through the Straits of Dover

#### ■ If "Headlight System Malfunction Visit Your Dealer" is displayed on the multi-information display

The system may be malfunctioning. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable

repairer.


# Turning the high beams on/off manually

#### ■ Switching to the high beams

Push the lever away from you.

The Automatic High Beam indicator will turn off and the headlight high beam indicator will turn on.

Pull the lever to its original position to activate the Automatic High Beam system again.

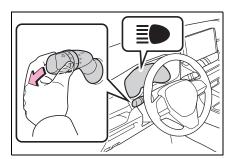


#### ■ Switching to the low beams

Press the Automatic High Beam switch.

The Automatic High Beam indicator will turn off.


Press the switch to activate the Automatic High Beam system again.

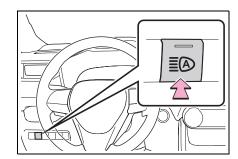

Pull the lever toward you and then return it to its original position.

The high beams are on while the lever is pulled toward you, however, after the lever is returned to its original position, the low beams remain on for a certain amount of time.

Afterwards, the Automatic High Beam will be activated again.

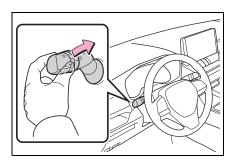

## ■ Temporarily switching to the low beams


It is recommended to switch to the low beams when the high beams may cause problems or distress to other drivers or pedestrians nearby.

#### Fog light switch

The fog lights offer improved visibility in difficult driving conditions, such as in rain and fog.

#### Operating procedure

▶ Rear fog light switch

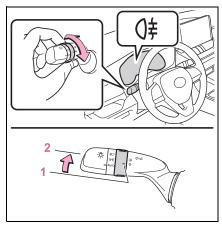

- 1 O Turns the rear fog light off
- 2 ()‡ Turns the rear fog light on


Releasing the switch ring returns it to

0

Operating the switch ring again turns the rear fog light off.

4

▶ Front and rear fog light switch

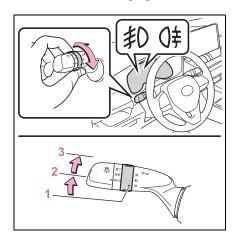

- 1 O Turns the front and rear fog lights off
- 2 非 Turns the front fog lights on
- 3 ()‡ Turns both front and rear fog lights on

Releasing the switch ring returns it to ‡() .

Operating the switch ring again turns only the rear fog light off.

#### ■ Fog lights can be used when

- ▶ Vehicles with rear fog light switch The headlights are turned on.
- ▶ Vehicles with front and rear fog light switch

Front fog lights: The headlights or the front position lights are turned on.

Rear fog light: The front fog lights are turned on.

## Windshield wipers and washer

Operating the lever can switch between automatic operation and manual operation, or can use the washer.



#### NOTICE


#### ■When the windshield is dry

Do not use the wipers, as they may damage the windshield.


#### Operating the wiper lever

Operating the  $\bigcirc$  lever operates the wipers or washer as follows:


▶ Intermittent windshield wipers

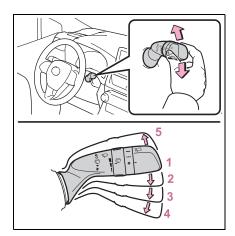

- 1 0 Off
- 2 \overline{\pi} Intermittent operation
- 3 Low speed operation
- 4 ▼ High speed operation
- 5 △ Temporary operation

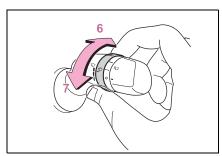


- 6 Increases the intermittent windshield wiper frequency
- 7 Decreases the intermittent windshield wiper frequency

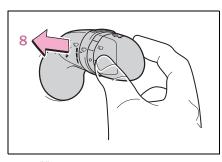

Pulling the lever operates the wipers and washer.

The wipers will automatically operate a couple of times after the washer squirts. Vehicles with headlight cleaners: When the power switch is in ON and the headlights are on, if the lever is pulled, the headlight cleaners will operate once. After this, the headlight cleaners will operate every 5th time the lever is pulled.


▶ Rain-sensing windshield wipers

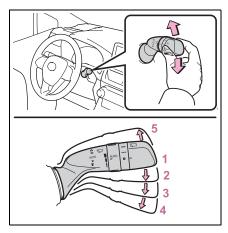

- 1 0 Off
- 2 AUTO Rain-sensing operation
- 3 ▼ Low speed operation
- 4 ▼ High speed operation
- **5** △ Temporary operation

When "AUTO" is selected, the wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed.


The sensor sensitivity can be adjusted when "AUTO" is selected.

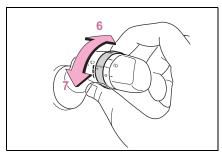

6 Increases the sensitivity

4

#### 7 Decreases the sensitivity

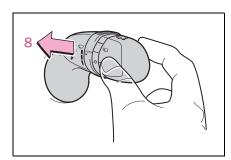

Pulling the lever operates the wipers and washer.

The wipers will automatically operate a couple of times after the washer squirts. Vehicles with headlight cleaners: When the power switch is in ON and the headlights are on, if the lever is pulled, the headlight cleaners will operate once. After this, the headlight cleaners will operate every 5th time the lever is pulled.

## ■ The windshield wipers and washer can be operated when

The power switch is in ON.

## ■ Effects of vehicle speed on wiper operation

► Vehicles with intermittent windshield wipers

With low speed windshield wiper operation selected, wiper operation will be switched from low speed to intermittent wiper operation when the vehicle is stationary. (However, when the wiper intervals are adjusted to highest level, the mode will not switch.)


Vehicles with rain-sensing windshield wipers

With low speed windshield wiper operation selected, wiper operation will be

switched from low speed to intermittent wiper operation when the vehicle is stationary. (However, when the sensor sensitivity is adjusted to the highest level, the mode will not switch.)

## ■ Raindrop sensor (vehicles with rain-sensing windshield wipers)

The raindrop sensor judges the amount of raindrops.\*

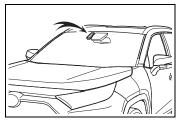

- If the wiper switch is turned to the "AUTO" position while the power switch is in ON, the wipers will operate once to show that "AUTO" mode is activated.
- If the wiper sensitivity is adjusted to higher, the wiper may operate once to indicate the change of sensitivity.
- If the temperature of the raindrop sensor is 85°C (185°F) or higher, or -15°C (5°F) or lower, the automatic operation may not occur. In this case, operate the wipers in any mode other than "AUTO".
- \*: It may be located on the opposite side depending on the target region.

#### ■ If no windshield washer fluid sprays

Check that the washer nozzles are not blocked if there is washer fluid in the windshield washer fluid reservoir.

## ■ Washer nozzle heaters (if equipped)

The washer nozzle heaters operate to prevent frozen nozzle when the outside temperature is 5°C (41°F) or less and the power switch is in ON.

### **WARNING**

#### Caution regarding the use of windshield wipers in "AUTO" mode (vehicles with rain-sensing windshield wipers)

The windshield wipers may operate unexpectedly if the sensor is touched or the windshield is subject to vibration in "AUTO" mode. Take care that your fingers or anything else does not become caught in the windshield wip-

#### Caution regarding the use of washer fluid

When it is cold, do not use the washer fluid until the windshield becomes warm. The fluid may freeze on the windshield and cause low visibility. This may lead to an accident, resulting in death or serious injury.

#### ■ When the washer nozzle heaters are operating (if equipped)

Do not touch the area around the washer nozzle, as they can become very hot and burn you.



#### **NOTICE**

## ■When the washer fluid tank is

Do not operate the switch continually as the washer fluid pump may over-

#### When a nozzle becomes blocked

In this case, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. Do not try to clear it with a pin or other object. The nozzle will be damaged.

#### ■To prevent 12-volt battery discharge

Do not leave the wipers on longer than necessary when the hybrid system is off.

#### Rear window wiper and washer

The rear window wiper and washer can be used by operating the lever.


#### **NOTICE**

#### ■When the rear window is dry


Do not use the wiper, as it may damage the rear window.

#### Operating the wiper lever

Operating the witch operates the rear wiper as follows:

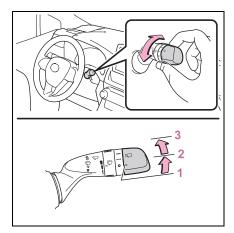

- O Off
- --- Intermittent operation
- Normal operation

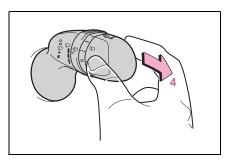

## Washer/wiper dual operation

Pushing the lever operates the wiper and washer.

The wiper will automatically operate a couple of times after the washer squirts.

## ■ The rear window wiper and washer can be operated when

The power switch is in ON.

#### ■ If no washer fluid sprays

Check that the washer nozzle is not blocked if there is washer fluid in the washer fluid reservoir.

#### Back door opening linked rear window wiper stop function

When the rear window wiper is operating, if the back door is opened while the vehicle is stopped, operation of the rear window wiper will be stopped to prevent anyone near the vehicle from being sprayed by water from the wiper. When the back door is closed, wiper operation will resume.\*

\*: The setting must be customized at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

### Reverse-linked rear window wiper function

When the shift lever is shifted to R when the front wipers are operating, the rear window wiper will operate once.

#### Customization

Setting of the reverse-linked function can be changed.

(Customizable features: →P.495)



#### **NOTICE**

## When the washer fluid tank is empty

Do not operate the switch continually as the washer fluid pump may overheat

#### When a nozzle becomes blocked

In this case, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. Do not try to clear it with a pin or other object. The nozzle will be damaged.

### ■ To prevent 12-volt battery discharge

Do not leave the wiper on longer than necessary when the hybrid system is off

## Opening the fuel tank cap

Perform the following steps to open the fuel tank cap:

#### Before refueling the vehicle

- Close all the doors and windows, and turn the power switch to OFF.
- Confirm the type of fuel.

#### ■ Fuel types

→P.486

## ■ Fuel tank opening for unleaded gasoline

To help prevent incorrect fueling, your vehicle has a fuel tank opening that only accommodates the special nozzle on unleaded fuel pumps.

#### A

#### **WARNING**

#### ■When refueling the vehicle

Observe the following precautions while refueling the vehicle. Failure to do so may result in death or serious injury.

After exiting the vehicle and before opening the fuel door, touch an unpainted metal surface to discharge any static electricity. It is important to discharge static electricity before refueling because sparks resulting from static electricity can cause fuel vapors to ignite while refueling.  Always hold the grips on the fuel tank cap and turn it slowly to remove it.

A whooshing sound may be heard when the fuel tank cap is loosened. Wait until the sound cannot be heard before fully removing the cap. In hot weather, pressurized fuel may spray out of the filler neck and cause injury.

- Do not allow anyone that has not discharged static electricity from their body to come close to an open fuel tank.
- Do not inhale vaporized fuel.
   Fuel contains substances that are harmful if inhaled.
- Do not smoke while refueling the vehicle.
   Doing so may cause the fuel to ignite and cause a fire.
- Do not return to the vehicle or touch any person or object that is statically charged. This may cause static electricity to build up, resulting in a possible ignition hazard.

#### ■When refueling

Observe the following precautions to prevent fuel overflowing from the fuel tank:

- Securely insert the fuel nozzle into the fuel filler neck.
- Stop filling the tank after the fuel nozzle automatically clicks off.
- Do not top off the fuel tank.




#### **NOTICE**

#### Refueling


Do not spill fuel during refueling. Doing so may damage the vehicle, such as causing the emission control system to operate abnormally or damaging fuel system components or the vehicle's painted surface.

#### Opening the fuel tank cap

1 Press the opener to open the fuel filler door.

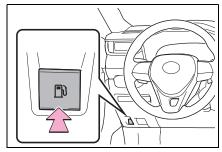

2 Turn the fuel tank cap slowly to open it and put it into the holder on the fuel filler door.

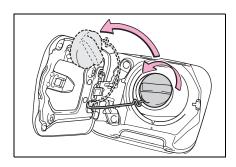


■ If the fuel filler door cannot be opened

→P.462

#### Closing the fuel tank cap

After refueling, turn the fuel tank cap until you hear a click. Once the cap is released, it will turn slightly in the opposite direction.

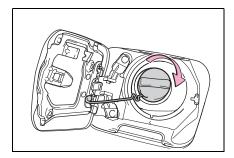

#### **WARNING**

#### ■When replacing the fuel tank cap

Do not use anything but a genuine Toyota fuel tank cap designed for your vehicle. Doing so may cause a fire or other incident which may result in death or serious injury.

#### \*: If equipped

The Toyota Safety Sense consists of the following drive assist systems and contributes to a safe and comfortable driving experience:

#### Driving assist system

- PCS (Pre-Collision System)
- →P.234
- LTA (Lane Tracing Assist)
- →P.242
- AHB (Automatic High Beam)
- →P.218
- RSA (Road Sign Assist) (if equipped)
- →P.252
- Dynamic radar cruise control with full-speed range
- →P.256


#### **WARNING**

#### ■ Toyota Safety Sense

The Toyota Safety Sense is designed to operate under the assumption that the driver will drive safely, and is designed to help reduce the impact to the occupants and the vehicle in the case of a collision or assist the driver in normal driving conditions. As there is a limit to the degree of recognition accuracy and control performance that this system can provide, do not overly rely on this system. The driver is always responsible for paying attention to the vehicle's surroundings and driving safely.

#### Sensors

Two types of sensors, located behind the front grille and windshield, detect information necessary to operate the drive assist systems.

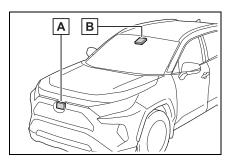

- A Radar sensor
- **B** Front camera


#### A

#### **WARNING**

### ■ To avoid malfunction of the radar sensor

Observe the following precautions. Otherwise, the radar sensor may not operate properly, possibly leading to an accident resulting in death or serious injury.

 Keep the radar sensor and the radar sensor cover clean at all times.

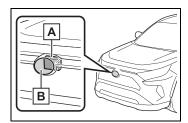

- A Radar sensor
- B Radar sensor cover

If the front of the radar sensor or the front or back of the radar sensor cover is dirty or covered with water droplets, snow, etc., clean it.

Clean the radar sensor and radar sensor cover with a soft cloth to avoid damaging them.

- Do not attach accessories, stickers (including transparent stickers) or other items to the radar sensor, radar sensor cover or surrounding area.
- Do not subject the radar sensor or its surrounding area to a strong impact

If the radar sensor, front grille, or front bumper has been subjected to a strong impact, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

- Do not disassemble the radar sensor.
- Do not modify or paint the radar sensor or radar sensor cover.
- In the following cases, the radar sensor must be recalibrated. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for details.
- When the radar sensor or front grille are removed and installed, or replaced
- · When the front bumper is replaced


## ■ To avoid malfunction of the front camera

Observe the following precautions. Otherwise, the front camera may not operate properly, possibly leading to an accident resulting in death or serious injury.

- Keep the windshield clean at all times.
- If the windshield is dirty or covered with an oily film, water droplets, snow, etc., clean the windshield.
- If a glass coating agent is applied to the windshield, it will still be necessary to use the windshield wipers to remove water droplets, etc. from the area of the windshield in front of the front camera.
- If the inner side of the windshield where the front camera is installed is dirty, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

### **WARNING**

Do not attach objects, such as stickers, transparent stickers, etc., to the outer side of the windshield in front of the front camera (shaded area in the illustration).

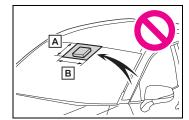

- A From the top of the windshield to approximately 1 cm (0.4 in.) below the bottom of the front camera
- B Approximately 20 cm (7.9 in.) (Approximately 10 cm [4.0 in.] to the right and left from the center of the front camera)
- If the part of the windshield in front of the front camera is fogged up or covered with condensation or ice, use the windshield defogger to remove the fog, condensation or ice. (→P.333)
- If water droplets cannot be properly removed from the area of the windshield in front of the front camera by the windshield wipers, replace the wiper insert or wiper blade.
- Do not attach window tint to the windshield.
- Replace the windshield if it is damaged or cracked. After replacing the windshield, the front camera must be recalibrated. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for details.

- Do not allow liquids to contact the front camera.
- Do not allow bright lights to shine into the front camera.
- Do not dirty or damage the front camera.

When cleaning the inside of the windshield, do not allow glass cleaner to contact the lens of the front camera. Also, do not touch the

If the lens is dirty or damaged, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

- Do not subject the front camera to a strong impact.
- Do not change the installation position or direction of the front camera or remove it.
- Do not disassemble the front cam-
- Do not modify any components of the vehicle around the front camera (inside rear view mirror, etc.) or ceil-
- Do not attach any accessories to the hood, front grille or front bumper that may obstruct the front camera. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for details.
- If a surfboard or other long object is to be mounted on the roof, make sure that it will not obstruct the front camera.
- Do not modify the headlights or other lights.

#### ■ If a warning message is displayed on the multi-information display

A system may be temporarily unavailable or there may be a malfunction in the system.

• In the following situations, perform the actions specified in the table. When the normal operating conditions are detected, the message will disappear and the system will become operational.

If the message does not disappear, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

Situation	Actions
When the area around a camera is covered with dirt, moisture (fogged up, covered with condensation, ice, etc.), or other foreign matter	Using the wiper and A/C function, remove the dirt and other attached matter. (→P.333)
	If the front camera is hot, such as after the vehicle had been parked in the sun, use the air conditioning system to decrease the temperature around the front camera.  If a sunshade was used when the vehicle
When the temperature around the front camera is outside of the operational range, such as when the vehicle is in the sun or in an extremely cold environment	was parked, depending on its type, the sunlight reflected from the surface of the sunshade may cause the temperature of the front camera to become excessively high.
	If the front camera is cold, such after the vehicle is parked in an extremely cold environment, use the air conditioning system to increase the temperature around the front camera.
The area in front of the front camera is obstructed, such as when the hood is open or a sticker is attached to the part of the windshield in front of the front camera.	Close the hood, remove the sticker, etc. to clear the obstruction.
When "Pre-Collision System Unavail- able" is displayed	Check whether there is attached materials on the radar sensor and radar sensor cover, and if there is, remove it.

<sup>•</sup> In the following situations, if the situation has changed (or the vehicle has been driven for some time) and the normal operating conditions are detected, the message will disappear and the system will become operational.

If the message does not disappear, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

- When the temperature around the radar sensor is outside of the operational range, such as when the vehicle is in the sun or in an extremely cold environment
- When the front camera cannot detect objects in front of the vehicle, such as when driving in the dark, snow, or fog, or when bright lights are shining into the front camera
- Depending on the conditions in the vicinity of the vehicle, the radar may judge the surrounding environment can not be properly recognized. In that case, "Pre-Collision System Unavailable" is displayed.

4

#### PCS (Pre-Collision System)

#### \*: If equipped

The pre-collision system uses a radar sensor and front camera to detect objects ( $\rightarrow$ P.234) in front of the vehicle. When the system determines that the possibility of a frontal collision with an object is high, a warning operates to urge the driver to take evasive action and the potential brake pressure is increased to help the driver avoid the collision. If the system determines that the possibility of a frontal collision with an object is extremely high, the brakes are automatically applied to help avoid the collision or help reduce the impact of the collision.

The pre-collision system can be disabled/enabled and the warning timing can be changed. (→P.236)

#### Detectable objects

The system can detect the following:


Regions	Detectable objects	Countries/areas
А	<ul><li> Vehicles</li><li> Bicyclists</li><li> Pedestrians</li></ul>	Iceland, Ireland, Albania, Andorra, United Kingdom, Italy, Ukraine, Estonia, Austria, Netherlands, Cyprus, Greece, Croatia, Gibraltar, Switzerland, Sweden, Spain, Slovakia, Slovenia, Czech Republic, Denmark, Germany, Norway, Hungary, Finland, France, Bulgaria, Belgium, Bosnia and Herzegovina, Poland, Portugal, Macedonia, Malta, Monaco, Serbia, Montenegro, Latvia, Lithuania, Romania, Luxembourg, Faroe Islands, Israel, Turkey, Canary Islands
В	Vehicles	Azerbaijan, Georgia

The countries and areas for each region listed in the table are current as of December 2021. However, depending on when the vehicle was sold, the countries and areas of each region may be different. Contact your Toyota dealer for details.

#### System functions

#### ■ Pre-collision warning

When the system determines that the possibility of a frontal collision is high, a buzzer will sound and a warning message will be displayed on the multi-information display to urge the driver to take evasive action.

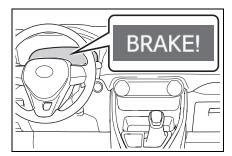

#### ■ Pre-collision brake assist

When the system determines that the possibility of a frontal collision is high, the system applies greater braking force in relation to how strongly the brake pedal is depressed.

#### ■ Pre-collision braking

If the system determines that the possibility of a frontal collision is extremely high, the brakes are automatically applied to help avoid the collision or reduce the impact of the collision.

#### **MARNING**

#### Limitations of the pre-collision system

- The driver is solely responsible for safe driving. Always drive safely, taking care to observe your surroundings.
  - Do not use the pre-collision system instead of normal braking operations under any circumstances. This system will not prevent collisions or lessen collision damage or injury in every situation. Do not overly rely on this system. Failure to do so may lead to an accident, resulting in death or serious injury.
- Although this system is designed to help avoid a collision or help reduce the impact of the collision, its effectiveness may change according to various conditions, therefore the system may not always be able to achieve the same level of performance.

Read the following conditions carefully. Do not overly rely on this system and always drive carefully.

- Conditions under which the system may operate even if there is no possibility of a collision: →P.239
- Conditions under which the system may not operate properly: →P.240
- Do not attempt to test the operation of the pre-collision system yourself. Depending on the objects used for testing (dummies, cardboard objects imitating detectable objects, etc.), the system may not operate properly, possibly leading to an accident.

#### Pre-collision braking

 When the pre-collision braking function is operating, a large amount of braking force will be applied.

### **WARNING**

- If the vehicle is stopped by the operation of the pre-collision braking function, the pre-collision braking function operation will be canceled after approximately 2 seconds. Depress the brake pedal as necessary.
- The pre-collision braking function may not operate if certain operations are performed by the driver. If the accelerator pedal is being depressed strongly or the steering wheel is being turned, the system may determine that the driver is taking evasive action and possibly prevent the pre-collision braking function from operating.
- In some situations, while the precollision braking function is operating, operation of the function may be canceled if the accelerator pedal is depressed strongly or the steering wheel is turned and the system determines that the driver is taking evasive action.
- If the brake pedal is being depressed, the system may determine that the driver is taking evasive action and possibly delay the operation timing of the pre-collision braking function.
- When to disable the pre-collision system

In the following situations, disable the system, as it may not operate properly, possibly leading to an accident resulting in death or serious injury:

- When the vehicle is being towed
- When your vehicle is towing another vehicle
- When transporting the vehicle via truck, boat, train or similar means of transportation


- When the vehicle is raised on a lift. with the hybrid system on and the tires are allowed to rotate freely
- When inspecting the vehicle using a drum tester such as a chassis dynamometer or speedometer tester, or when using an on vehicle wheel balancer
- When a strong impact is applied to the front bumper or front grille, due to an accident or other reasons
- If the vehicle cannot be driven in a stable manner, such as when the vehicle has been in an accident or is malfunctioning
- When the vehicle is driven in a sporty manner or off-road
- When the tires are not properly inflated
- When the tires are very worn
- When tires of a size other than specified are installed
- When tire chains are installed
- When a compact spare tire or an emergency tire puncture repair kit is
- If equipment (snow plow, etc.) that may obstruct the radar sensor or front camera is temporarily installed to the vehicle

### Changing settings of the pre-collision system

■ Enabling/disabling the pre-collision system

The pre-collision system can be enabled/disabled on the screen (→P.115) of the multi-information display.


If the system is disabled, the PCS warning light will turn on and a message will be displayed on the multi-information display.

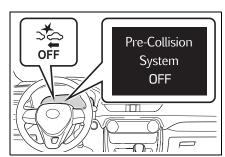

## Changing the pre-collision warning timing

The pre-collision warning timing can be changed on the ♣ screen (→P.115) of the multi-information display.

The warning timing setting is retained when the power switch is turned to OFF. However, if the pre-collision system is disabled and re-enabled, the operation timing will return to the default setting (middle).

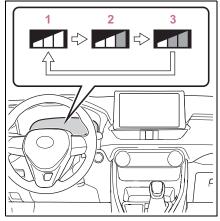

- 1 Early
- 2 Middle

This is the default setting.

3 Late

#### ■ Operational conditions for each pre-collision function

The pre-collision system is enabled and the system determines that the possibility of a frontal collision with a detected object is high.

The system may not operate in the following situations:

- If a 12-volt battery terminal has been disconnected and reconnected and then the vehicle has not been driven for a certain amount of time
- · If the shift lever is in R
- When the VSC OFF indicator is illuminated (only the pre-collision warning function will be operational)

The operation speeds and operation cancellation for each function is listed below.

4

#### Pre-collision warning

Detectable objects	Vehicle speed	Relative speed between your vehicle and object
Vehicles	Approx. 10 to 180 km/h (7 to 110 mph)	Approx. 10 to 180 km/h (7 to 110 mph)
Bicyclists and pedestrians*	Approx. 10 to 80 km/h (7 to 50 mph)	Approx. 10 to 80 km/h (7 to 50 mph)

#### Pre-collision brake assist

Detectable objects	Vehicle speed	Relative speed between your vehicle and object
Vehicles	Approx. 30 to 180 km/h (20 to 110 mph)	Approx. 30 to 180 km/h (20 to 110 mph)
Bicyclists and pedestrians*	Approx. 30 to 80 km/h (20 to 50 mph)	Approx. 30 to 80 km/h (20 to 50 mph)

#### Pre-collision braking

Detectable objects	Vehicle speed	Relative speed between your vehicle and object
Vehicles	Approx. 10 to 180 km/h (7 to 110 mph)	Approx. 10 to 180 km/h (7 to 110 mph)
Bicyclists and pedestrians*	Approx. 10 to 80 km/h (7 to 50 mph)	Approx. 10 to 80 km/h (7 to 50 mph)

<sup>\*:</sup> Applicable to vehicles designed for regions that detection of pedestrians and/or bicyclists is possible (→P.234)


If either of the following occur while the pre-collision braking function is operating, it will be canceled:


- The accelerator pedal is depressed strongly.
- The steering wheel is turned sharply or abruptly.

#### ■ Object detection function


The system detects objects based on their size, profile, motion, etc. However, an object may not be detected depending on the surrounding brightness and the motion, posture, and angle of the detected object, preventing the system from operating properly. (→P.240) The illustration shows an image of detectable objects.

#### ▶ Region A

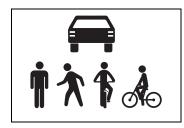


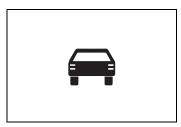


- Conditions under which the system may operate even if there is no possibility of a collision
- In some situations such as the following, the system may determine that there is a possibility of a frontal collision and operate.
- When passing a detectable object, etc.
- When changing lanes while overtaking a detectable object, etc.
- When approaching a detectable object in an adjacent lane or on the roadside, such as when changing the course of travel or driving on a winding road

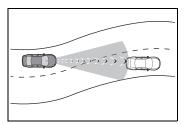


- When rapidly closing on a detectable object, etc.
- When approaching objects on the roadside, such as detectable objects, guardrails, utility poles, trees, or walls
- When there is a detectable object or other object by the roadside at the entrance of a curve

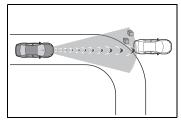

- When there are patterns or paint in front of your vehicle that may be mistaken for a detectable object
- When the front of your vehicle is hit by water, snow, dust, etc.
- When overtaking a detectable object that is changing lanes or making a right/left turn

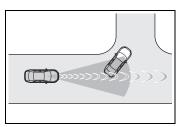


 When passing a detectable object in an oncoming lane that is stopped to make a right/left turn

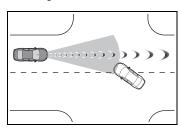


- When a detectable object approaches very close and then stops before entering the path of your vehicle
- If the front of your vehicle is raised or lowered, such as when on an uneven or undulating road surface
- When driving on a road surrounded by a structure, such as in a tunnel or on an iron bridge
- When there is a metal object (manhole cover, steel plate, etc.), steps, or a protrusion in front of your vehicle
- · When passing under an object (road

4

sign, billboard, etc.)

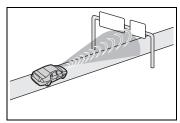

- When approaching an electric toll gate barrier, parking area barrier, or other barrier that opens and closes
- · When using an automatic car wash
- When driving through or under objects that may contact your vehicle, such as thick grass, tree branches, or a banner

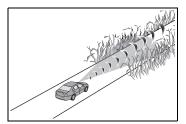


- When driving through steam or smoke
- When driving near an object that reflects radio waves, such as a large truck or guardrail
- When driving near a TV tower, broadcasting station, electric power plant radar equipped vehicles, etc., or other location where strong radio waves or electrical noise may be present
- When there are many things which can reflect the radio waves of the radar in the vicinity (tunnels, truss bridges, gravel roads, snow covered road that have tracks, etc.)

## ■ Situations in which the system may not operate properly


- In some situations such as the following, an object may not be detected by the radar sensor and front camera, preventing the system from operating properly:
- When a detectable object is approaching your vehicle

- When your vehicle or a detectable object is wobbling
- If a detectable object makes an abrupt maneuver (such as sudden swerving, acceleration or deceleration)
- When your vehicle approaches a detectable object rapidly
- When a detectable object is not directly in front of your vehicle

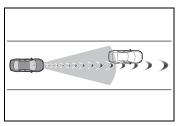


- When a detectable object is near a wall, fence, guardrail, manhole cover, vehicle, steel plate on the road, etc.
- When a detectable object is under a structure
- When part of a detectable object is hidden by an object, such as large baggage, an umbrella, or guardrail
- When there are many things which can reflect the radio waves of the radar in the vicinity (tunnels, truss bridges, gravel roads, snow covered road that have tracks, etc.)
- When there is an effect on the radio waves to the radar that is installed on another vehicle
- When multiple detectable objects are close together
- If the sun or other light is shining directly on a detectable object
- When a detectable object is a shade of white and looks extremely bright
- When a detectable object appears to be nearly the same color or brightness as its surroundings
- If a detectable object cuts or suddenly emerges in front of your vehicle
- When the front of your vehicle is hit by water, snow, dust, etc.
- When a very bright light ahead, such as the sun or the headlights of oncoming traffic, shines directly into the front camera
- · When approaching the side or front of

- If a vehicle ahead is a bicycle<sup>\*1</sup> or motorcycle
- If a vehicle ahead is narrow, such as a personal mobility vehicle
- If a preceding vehicle has a small rear end, such as an unloaded truck
- If a preceding vehicle has a low rear end, such as a low bed trailer

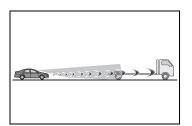


• If a vehicle ahead has extremely high ground clearance

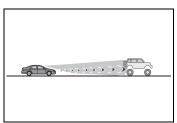

- If a vehicle ahead is carrying a load which protrudes past its rear bumper
- If a vehicle ahead is irregularly shaped, such as a tractor or side car
- If a vehicle ahead is a child sized bicycle, a bicycle that is carrying a large load, a bicycle ridden by more than one person, or a uniquely shaped bicycle (bicycle with a child seat, tandem bicycle, etc.)\*2
- If a pedestrian/or the riding height of a bicyclist ahead is shorter than approximately 1 m (3.2 ft.) or taller than approximately 2 m (6.5 ft.)\*2
- If a pedestrian/bicyclist is wearing oversized clothing (a rain coat, long skirt, etc.), making their silhouette obscure\*2
- If a pedestrian is bending forward or squatting or bicyclist is bending forward\*2

- If a pedestrian/bicyclist is moving fast\*2
- If a pedestrian is pushing a stroller, wheelchair, bicycle or other vehicle\*2
- When driving in inclement weather such as heavy rain, fog, snow or a sandstorm
- · When driving through steam or smoke
- When the surrounding area is dim, such as at dawn or dusk, or while at night or in a tunnel, making a detectable object appear to be nearly the same color as its surroundings
- When driving in a place where the surrounding brightness changes suddenly, such as at the entrance or exit of a tunnel
- After the hybrid system has started the vehicle has not been driven for a certain amount of time
- While making a left/right turn and for a few seconds after making a left/right turn
- While driving on a curve and for a few seconds after driving on a curve
- If your vehicle is skidding
- If the front of the vehicle is raised or lowered

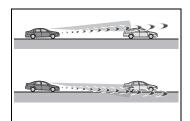

- · If the wheels are misaligned
- If a wiper blade is blocking the front camera
- The vehicle is being driven at extremely high speeds
- When driving on a hill
- If the radar sensor or front camera is misaligned
- In some situations such as the following, sufficient braking force may not be obtained, preventing the system from performing properly:
- If the braking functions cannot operate to their full extent, such as when the

4

brake parts are extremely cold, extremely hot, or wet

- If the vehicle is not properly maintained (brakes or tires are excessively worn, improper tire inflation pressure, etc.)
- When the vehicle is being driven on a gravel road or other slippery surface
- When the road surface has deep wheel tracks
- · When driving on a hill road
- When driving on a road that has inclines to the left or right
- \*1: Applicable to vehicles designed for countries/areas that detection of bicyclists is not possible (→P.234)
- \*2: Applicable to vehicles designed for countries/areas that detection of pedestrians and/or bicyclists is possible (→P.234)

#### ■ If VSC is disabled

- If VSC is disabled (→P.317), the precollision brake assist and pre-collision braking functions are also disabled.
- The PCS warning light will turn on and "VSC Turned Off Pre-Collision Brake System Unavailable" will be displayed on the multi-information display.


# LTA (Lane Tracing Assist)\*

\*: If equipped

While driving on a road with clear white (yellow) lane lines, the LTA system warns the driver if the vehicle may deviate from the current lane or course\*, and also can slightly operate the steering wheel to help avoid deviation from the lane or course\*. Also, while the dynamic radar cruise control with full-speed range is operating, this system will operate the steering wheel to maintain the vehicle's lane position.

The LTA system recognizes white (yellow) lane lines or a course\* using the front camera. Additionally, it detects preceding vehicles using the front camera and radar.

\*: Boundary between asphalt and the side of the road, such as grass, soil, or a curb

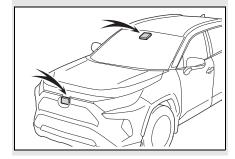

### **WARNING**

#### ■Before using LTA system

- Do not rely solely upon the LTA system. The LTA system does not automatically drive the vehicle or reduce the amount of attention that must be paid to the area in front of the vehicle. The driver must always assume full responsibility for driving safely by paying careful attention to the surrounding conditions and operating the steering wheel to correct the path of the vehicle. Also, the driver must take adequate breaks when fatigued, such as from driving for a long period of time.
- Failure to perform appropriate driving operations and pay careful attention may lead to an accident, resulting in death or serious injury.
- When not using the LTA system, use the LTA switch to turn the system off.

#### Situations unsuitable for LTA system

In the following situations, use the LTA switch to turn the system off. Failure to do so may lead to an accident, resulting in death or serious injury.

- Vehicle is driven on a road surface which is slippery due to rainy weather, fallen snow, freezing, etc.
- Vehicle is driven on a snow-covered road.
- White (yellow) lines are difficult to see due to rain, snow, fog, dust, etc.
- Vehicle is driven in a temporary lane or restricted lane due to construction work.
- Vehicle is driven in a construction zone.


- A spare tire, tire chains, etc. are equipped.
- When the tires have been excessively worn, or when the tire inflation pressure is low.
- When your vehicle is towing a trailer or during emergency towing
- \*: Vehicles that can tow a trailer. (→P.190)
- Preventing LTA system malfunctions and operations performed by mistake
- Do not modify the headlights or place stickers, etc. on the surface of the lights.
- Do not modify the suspension etc. If the suspension etc. needs to be replaced, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Do not install or place anything on the hood or grille. Also, do not install a grille guard (bull bars, kangaroo bar, etc.).
- If your windshield needs repairs, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

## Conditions in which functions may not operate properly

In the following situations, the functions may not operate properly and the vehicle may depart from its lane. Drive safely by always paying careful attention to your surroundings and operate the steering wheel to correct the path of the vehicle without relying solely on the functions.


### **WARNING**

When the follow-up cruising display is displayed (→P.248) and the preceding vehicle changes lanes. (Your vehicle may follow the preceding vehicle and also change lanes.)

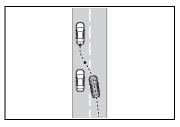


- When the follow-up cruising display is displayed (→P.248) and the preceding vehicle is swaying. (Your vehicle may sway accordingly and depart from the lane.)
- When the follow-up cruising display is displayed (→P.248) and the preceding vehicle departs from its lane. (Your vehicle may follow the preceding vehicle and depart from the lane.)
- When the follow-up cruising display is displayed (→P.248) and the preceding vehicle is being driven extremely close to the left/right lane line. (Your vehicle may follow the preceding vehicle and depart from the lane.)
- Vehicle is being driven around a sharp curve.


Objects or patterns that could be mistaken for white (yellow) lines are present on the side of the road (guardrails, reflective poles, etc.).

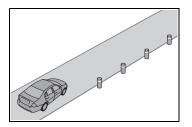

Vehicle is driven where the road diverges, merges, etc.

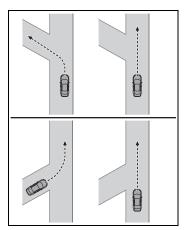

Repair marks of asphalt, white (yellow) lines, etc. are present due to road repair.

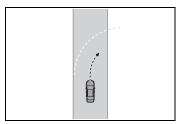

There are shadows on the road that run parallel with, or cover, the white (yellow) lines.

road seams).

tions during driving (poor roads or

The distance to the preceding vehi-

- When driving in a tunnel or at night with the headlights off or when a headlight is dim due to its lens being dirty or it being misaligned.
- The vehicle is struck by a crosswind.
- The vehicle is affected by wind from a vehicle driven in a nearby lane.
- The vehicle has just changed lanes or crossed an intersection.
- Tires which differ by structure, manufacturer, brand or tread pattern are
- When tires of a size other than specified are installed.
- Snow tires, etc. are equipped.
- The vehicle is being driven at extremely high speeds.

### **Functions included in LTA** system

#### ■ Lane departure alert function

When the system determines that the vehicle might depart from its lane or course, a warning is displayed on the multi-information display, and a warning buzzer will sound to alert the driver.

When the warning buzzer sounds, check the area around your vehicle and


### **WARNING**

- The vehicle is driven in an area without white (yellow) lines, such as in front of a tollgate or checkpoint, or at an intersection, etc.
- The white (yellow) lines are cracked, "Raised pavement marker" or stones are present.
- The white (yellow) lines cannot be seen or are difficult to see due to sand, etc.
- The vehicle is driven on a road surface that is wet due to rain, puddles, etc.
- The traffic lines are yellow (which may be more difficult to recognize than lines that are white).
- The white (yellow) lines cross over a curb, etc.
- The vehicle is driven on a bright surface, such as concrete.
- If the edge of the road is not clear or straight.
- The vehicle is driven on a surface that is bright due to reflected light,
- The vehicle is driven in an area where the brightness changes suddenly, such as at the entrances and exits of tunnels, etc.
- Light from the headlights of an oncoming vehicle, the sun, etc. enters the camera.
- The vehicle is driven on a slope.
- The vehicle is driven on a road which tilts left or right, or a winding road.
- The vehicle is driven on an unpaved or rough road.
- The traffic lane is excessively narrow or wide.

carefully operate the steering wheel to move the vehicle back to the center of the lane.

Vehicles with BSM: When the system determines that the vehicle might depart from its lane and that the possibility of a collision with an overtaking vehicle in the adjacent lane is high, the lane departure alert will operate even if the turn signals are operating.

\*: Boundary between asphalt and the side of the road, such as grass, soil, or a curb

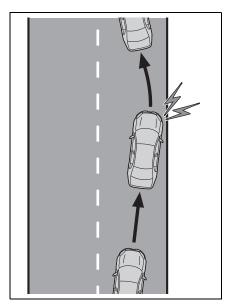

#### ■ Steering assist function


When the system determines that the vehicle might depart from its lane or course\*, the system provides assistance as necessary by operating the steering wheel in small amounts for a short period of time to keep the vehicle in its lane.

If the system detects that the steering wheel has not been operated for a fixed

amount of time or the steering wheel is not being firmly gripped, a warning is displayed on the multi-information display and the function is temporarily canceled.


Vehicles with BSM: When the system determines that the vehicle might depart from its lane and that the possibility of a collision with an overtaking vehicle in the adjacent lane is high, the steering assist function will operate even if the turn signals are operating.

\*: Boundary between asphalt and the side of the road, such as grass, soil, or a curb

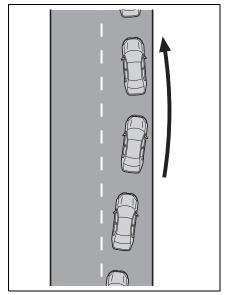

#### ■ Vehicle sway warning function

When the vehicle is swaying within a lane, the warning buzzer will sound and a message will be displayed on the multi-information display to alert the driver.

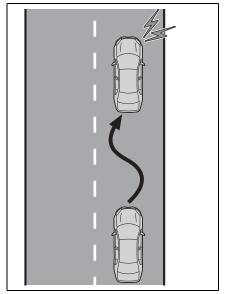

#### ■ Lane centering function


This function is linked with dynamic radar cruise control with full-speed range and provides the required assistance by operating the steering wheel to keep the vehicle in its current lane.

When dynamic radar cruise control with full-speed range is not operating, the lane centering function does not operate.

In situations where the white (yellow) lane lines are difficult to see or are not visible, such as when in a traffic jam, this function will operate to help follow a preceding vehicle by monitoring the position of the preceding vehicle.

If the system detects that the steering wheel has not been operated for a fixed amount of time or the steering wheel is not being firmly gripped, a warning is displayed on the multi-information display and the function is temporarily

canceled.

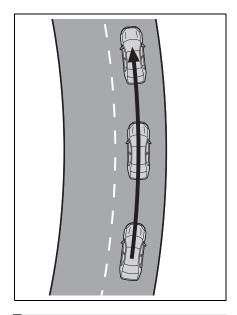

#### Turning LTA system on


Press the LTA switch to turn the LTA system on.

The LTA indicator illuminates and a message is displayed on the multi-information display.


Press the LTA switch again to turn the LTA system off.

When the LTA system is turned on or off, operation of the LTA system continues in the same condition the next time the hybrid system is started.

4

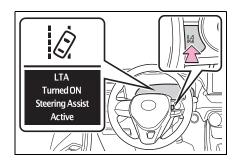

### Indications on multi-information display

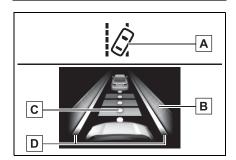

#### A LTA indicator

The illumination condition of the indicator informs the driver of the system operation status.

Illuminated in white: LTA system is operating.

Illuminated in green: Steering wheel assistance of the steering assist function or lane centering function is operating.

Flashing in orange: Lane departure alert function is operating.

## B Operation display of steering wheel operation support

Displayed when the multi-information display is switched to the driving support system information display.

Indicates that steering wheel assistance of the steering assist function or

lane centering function is operating. Both outer sides of the lane are displayed: Indicates that steering wheel assist of the lane centering function is operating.

One outer side of the lane is displayed: Indicates that steering wheel assist of the steering assist function is operating. Both outer sides of the lane are flashing: Alerts the driver that their input is necessary to stay in the center of the lane (lane centering function).

#### C Follow-up cruising display

Displayed when the multi-information display is switched to the driving support system information display.

Indicates that steering assist of the lane centering function is operating by monitoring the position of a preceding vehicle.

When the follow-up cruising display is displayed, if the preceding vehicle moves, your vehicle may move in the same way. Always pay careful attention to your surroundings and operate the steering wheel as necessary to correct the path of the vehicle and ensure safety.

## **D** Lane departure alert function display

Displayed when the multi-information display is switched to the driving support system information display.



Indicates that the system is recognizing white (yellow) lines or a course\*. When the vehicle departs from its lane, the white line displayed on the side the vehicle departs from flashes orange.

▶ Inside of displayed lines is black



Indicates that the system is not able to recognize white (yellow) lines or a course\* or is temporarily canceled.

\*: Boundary between asphalt and the side of the road, such as grass, soil, or a curb

## ■ Operation conditions of each function

- Lane departure alert function This function operates when all of the following conditions are met.
- · LTA is turned on.
- Vehicle speed is approximately 50 km/h (32 mph) or more.\*1
- System recognizes white (yellow) lane

lines or a course<sup>\*2</sup>. (When a white [yellow] line or course<sup>\*2</sup> is recognized on only one side, the system will operate only for the recognized side.)

- Width of traffic lane is approximately 3 m (9.8 ft.) or more.
- Turn signal lever is not operated. (Vehicles with BSM: Except when another vehicle is in the lane on the side where the turn signal was operated)
- Vehicle is not being driven around a sharp curve.
- No system malfunctions are detected. (→P.251)
- \*1: The function operates even if the vehicle speed is less than approximately 50 km/h (32 mph) when the lane centering function is operating.
- \*2: Boundary between asphalt and the side of the road, such as grass, soil, or a curb
- Steering assist function

This function operates when all of the following conditions are met in addition to the operation conditions for the lane departure alert function.

- Setting for "Steering Assist" in the screen of the multi-information display is set to "ON". (→P.115)
- Vehicle is not accelerated or decelerated by a fixed amount or more.
- Steering wheel is not operated with a steering force level suitable for changing lanes.
- ABS, VSC, TRC and PCS are not operating.
- TRC or VSC is not turned off.
- Hands off steering wheel warning is not displayed. (→P.250)
- Vehicle sway warning function This function operates when all of the following conditions are met.

 Setting for "Sway Warning" in the screen of the multi-information display is set to "ON". (→P.109) 4

- Vehicle speed is approximately 50 km/h (32 mph) or more.
- Width of traffic lane is approximately 3 m (9.8 ft.) or more.
- No system malfunctions are detected. (→P.251)
- Lane centering function

This function operates when all of the following conditions are met.

- · LTA is turned on.
- Setting for "Steering Assist" and "Lane Center" in the screen of the multiinformation display is set to "ON". (→P.109)
- This function recognizes white (yellow) lane lines or the position of a preceding vehicle (except when the preceding vehicle is small, such as a motorcycle).
- The dynamic radar cruise control with full-speed range is operating in vehicle-to-vehicle distance control mode.
- Width of traffic lane is approximately 3 to 4 m (10 to 13 ft.).
- Turn signal lever is not operated.
- Vehicle is not being driven around a sharp curve.
- No system malfunctions are detected. (→P.251)
- Vehicle does not accelerate or decelerate by a fixed amount or more.
- Steering wheel is not operated with a steering force level suitable for changing lanes.
- ABS, VSC, TRC and PCS are not operating.
- · TRC or VSC is not turned off.
- Hands off steering wheel warning is not displayed. (→P.250)
- The vehicle is being driven in the center of a lane.
- Steering assist function is not operating

#### ■ Temporary cancelation of functions

• When operation conditions are no longer met, a function may be temporarily canceled. However, when the operation conditions are met again, operation of the function is automatically restored. (→P.249)

• If the operation conditions (→P.249) are no longer met while the lane centering function is operating, the buzzer may sound to indicate that the function has been temporarily canceled.

#### Steering assist function/lane centering function

- Depending on the vehicle speed, lane departure situation, road conditions, etc., the driver may not feel the function is operating or the function may not operate at all.
- The steering control of the function is overridden by the driver's steering wheel operation.
- Do not attempt to test the operation of the steering assist function.

#### ■ Lane departure alert function

- The warning buzzer may be difficult to hear due to external noise, audio playback, etc.
- If the edge of the course\* is not clear or straight, the lane departure alert function may not operate.
- Vehicles with BSM: It may not be possible for the system to determine if there is a danger of a collision with a vehicle in an adjacent lane.
- Do not attempt to test the operation of the lane departure alert function.
- Boundary between asphalt and the side of the road, such as grass, soil, or a curb

#### ■ Hands off steering wheel warning

In the following situations, a warning message urging the driver to hold the steering wheel and the symbol shown in the illustration are displayed on the multi-information display to warn the driver. The warning stops when the system determines that the driver holds the steering wheel. Always keep your hands on the steering wheel when using this system, regardless of warnings.

 When the system determines that the driver is driving without holding the steering wheel while the system is operating

If the driver continues to keep their hands off of the steering wheel, the buzzer sounds, the driver is warned and the function is temporarily canceled. This warning also operates in the same way when the driver continuously operates the steering wheel only a small amount.

When the system determines that the vehicle may deviate from the lane while driving around a curve while the lane centering function is operating.

Depending on the vehicle condition and road conditions, the warning may not operate. Also, if the system determines that the vehicle is driving around a curve, warnings will occur earlier than during straight-lane driving.

When the system determines that the driver is driving without holding the steering wheel while the steering wheel assist of the steering assist function is operating.

If the driver continues to keep their hands off of the steering wheel and the steering wheel assist is operating, the buzzer sounds and the driver is warned. Each time the buzzer sounds, the continuing time of the buzzer becomes longer.

#### ■ Vehicle sway warning function

When the system determines that the vehicle is swaying while the vehicle sway warning function is operating, a

buzzer sounds and a warning message urging the driver to rest and the symbol shown in the illustration are simultaneously displayed on the multi-information display.



Depending on the vehicle and road conditions, the warning may not operate.

#### **■** Warning message

If the following warning message is displayed on the multi-information display and the LTA indicator illuminates in orange, follow the appropriate trouble-shooting procedure. Also, if a different warning message is displayed, follow the instructions displayed on the screen.

"LTA Malfunction Visit Your Dealer" The system may not be operating properly. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

#### "LTA Unavailable"

The system is temporarily canceled due to a malfunction in a sensor other than the front camera. Turn the LTA system off, wait for a little while, and then turn the LTA system back on.

"LTA Unavailable at Current Speed" The function cannot be used as the vehicle speed exceeds the LTA operation range. Drive slower.

#### ■ Customization


Function settings can be changed.  $(\rightarrow P.115)$ 

4

# RSA (Road Sign Assist)

#### \*: If equipped

The RSA system recognizes specific road signs using the front camera and/or navigation system (when speed limit information is available) to provide information to the driver via the display.

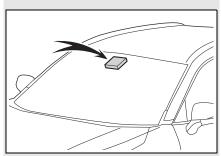

If the system judges that the vehicle is being driven over the speed limit, performing prohibited actions, etc. according to the recognized road signs, it notifies the driver through a visual notification and notification buzzer.

# A

#### **WARNING**


#### ■Before using the RSA

Do not rely solely upon the RSA system. RSA is a system which supports the driver by providing information, but it is not a replacement for a driver's own vision and awareness. Drive safely by always paying careful attention to the traffic rules.

# Indication on the multi-information display

When the front camera recognizes a sign and/or information of a sign is available from the navigation system, the sign will be displayed on the multi-information display.

 When the driving support system information display is selected, a maximum of 3 signs can be displayed. (→P.109)

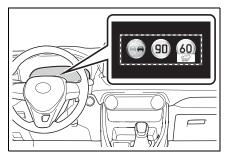

- When a tab other than the driving support system information display is selected, the following types of road signs will be displayed. (→P.109)
- · Speed limit begins/ends sign
- Speed limit related information sign (Motorway, Expressway, Urban area, Residential area)
- End of prohibition sign
- No-entry sign\* (when notification is necessary)
- Speed limit with supplemental sign (Ramp way only)
- \*: For vehicles with navigation system

If signs other than speed limit signs are recognized, they will be displayed in an overlapping stack under the current speed limit sign.

# Supported types of road signs

The following types of road signs, including electronic signs and blinking signs, are displayed.

A non-official (not meeting the Vienna Convention) or a recently introduced traffic sign may not be displayed.

Speed limit road signs<sup>\*</sup>



Speed limit begins/Maximum speed zone begins



Speed limit ends/Maximum speed zone ends

\*: No speed limit information "——" is displayed when neither speed limit road sign nor speed limit related information is available.

Speed limit related information\*1,
 2



Motorway entrance



Motorway exit



Expressway entrance



Expressway exit



Urban area beginning



Urban area ending



Urban area beginning



Urban area ending



Residential area beginning



Residential area ending

\*2: No speed limit information "---" is



<sup>\*1:</sup> Displayed when a sign is recognized but speed limit information for the road is not available from the navigation system

displayed when neither speed limit road sign nor speed limit related information is available.

No-overtaking road signs



No overtaking begins



No overtaking ends

Other road signs



No-entry\*



End of prohibition



Stop

\*: For vehicles with navigation system

Speed limit with supplemental mark\*1




Wet



Rain



Ice





Exit ramp on right\*3



Exit ramp on left\*3



Time

- \*1: Displayed simultaneously with speed limit
- \*2: Contents not recognized.
- \*3: Displayed when system detects driving on ramp way.

# **Notification function**

In the following situations, the RSA system will notify the driver.

- When the vehicle speed exceeds the speed notification threshold of the speed limit sign displayed, the sign display will be emphasized and a buzzer will sound.
- When the RSA system recognizes a no-entry sign and detects that the vehicle has entered a no-entry area based on the map information of the navigation system, the no-entry sign flashes and a buzzer will sound. (For vehicles with navigation system)
- If it is detected that your vehicle is overtaking when a no overtaking sign is displayed on the multiinformation display, the displayed sign will flash and a buzzer will sound.

Depending on the situation, traffic environment (traffic direction, speed unit) may be detected incorrectly and a notification function may not operate properly. →P.115

#### Automatic turn-off of RSA sign display

One or more signs automatically turn off in the following situations.

- No sign has been recognized for a certain distance.
- The road changes due to a left or right turn, etc.

# ■ Conditions in which the function may not operate or detect correctly

In the following situations, RSA does not operate normally and may not recognize signs, display the incorrect sign, etc. However, this does not indicate a malfunction.

- The front camera is misaligned due to a strong impact being applied to the sensor, etc.
- Dirt, snow, stickers, etc. are on the windshield near the front camera.
- In inclement weather such as heavy rain, fog, snow or sand storms
- Light from an oncoming vehicle, the sun, etc. enters the front camera.
- The sign is dirty, faded, tilted or bent.
- The contrast of electronic sign is low.
- All or part of the sign is hidden by the leaves of a tree, a pole, etc.
- The sign is only visible to the front camera for a short amount of time.
- The driving scene (turning, lane change, etc.) is judged incorrectly.
- If a sign not appropriate for the currently traveled lane, but the sign exists directly after a freeway branches, or in an adjacent lane just before merging.
- Stickers are attached to the rear of the preceding vehicle.
- A sign resembling a system compatible sign is recognized.
- Side road speed signs may be detected and displayed (if positioned

in sight of the front camera) while the vehicle is traveling on the main road.

- Roundabout exit road speed signs may be detected and displayed (if positioned in sight of the front camera) while traveling on a roundabout.
- The front of the vehicle is raised or lowered due to the carried load.
- The surrounding brightness is not sufficient or changes suddenly.
- When a sign intended for trucks, etc. is recognized.
- The vehicle is driven in a country with a different direction of traffic.
- The navigation system map data is outdated
- The navigation system is not operating.
- The speed information displayed on the meter and on the navigation system may be different due to the navigation system using map data.

## ■Speed limit sign display

If the power switch was last turned off while a speed limit sign was displayed on the multi-information display, the same sign displays again when the power switch is turned to ON.

# ■ If "RSA Malfunction Visit Your Dealer" is shown

The system may be malfunctioning. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

#### Customization

Some functions can be customized.  $(\rightarrow P.115)$ 

4

# Dynamic radar cruise control with full-speed range \*

## \*: If equipped


In vehicle-to-vehicle distance control mode, the vehicle automatically accelerates, decelerates and stops to match the speed changes of the preceding vehicle even if the accelerator pedal is not depressed. In constant speed control mode, the vehicle runs at a fixed speed.

Use the dynamic radar cruise control with full-speed range on freeways and highways.

- Vehicle-to-vehicle distance control mode (→P.259)
- Constant speed control mode (→P.263)

#### System Components


## ■ Meter display

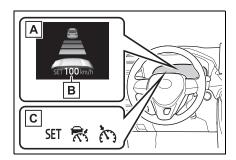

- A Multi-information display
- **B** Set speed

## **C** Indicators

## ■ Operation switches

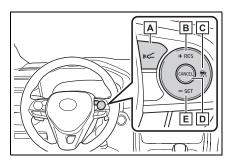

- A Vehicle-to-vehicle distance switch
- B "+RES" switch
- C Cruise control main switch
- D Cancel switch
- E "-SET" switch



## **WARNING**

- Before using dynamic radar cruise control with full-speed range
- Driving safely is the sole responsibility of the driver. Do not rely solely on the system, and drive safely by always paying careful attention to your surroundings.
- The dynamic radar cruise control with full-speed range provides driving assistance to reduce the driver's burden. However, there are limitations to the assistance provided.

Read the following conditions carefully. Do not overly rely on this system and always drive carefully.

 When the sensor may not be correctly detecting the vehicle ahead:→P.266

# WARNING

- Conditions under which the vehicleto-vehicle distance control mode may not function correctly:→P.267
- Set the speed appropriately depending on the speed limit, traffic flow, road conditions, weather conditions, etc. The driver is responsible for checking the set speed.
- Even when the system is functioning normally, the condition of the preceding vehicle as detected by the system may differ from the condition observed by the driver. Therefore, the driver must always remain alert, assess the danger of each situation and drive safely. Relying solely on this system or assuming the system ensures safety while driving can lead to an accident, resulting in death or serious injury.
- Switch the dynamic radar cruise control with full-speed range setting to off, using the cruise control main switch when not in use.

#### ■ Cautions regarding the driving assist systems

Observe the following precautions, as there are limitations to the assistance provided by the system. Failure to do so may cause an accident resulting in death or serious injury.

Assisting the driver to measure following distance

The dynamic radar cruise control with full-speed range is only intended to help the driver in determining the following distance between the driver's own vehicle and a designated vehicle traveling ahead. It is not a mechanism that allows careless or inattentive driving, and it is not a system that can assist the driver in low-visibility condi-

It is still necessary for driver to pay close attention to the vehicle's surroundinas.

Assisting the driver to judge proper following distance

The dynamic radar cruise control with full-speed range determines whether the following distance between the driver's own vehicle and a designated vehicle traveling ahead is within a set range. It is not capable of making any other type of judgement. Therefore, it is absolutely necessary for the driver to remain vigilant and to determine whether or not there is a possibility of danger in any given situation.

# **WARNING**

Assisting the driver to operate the vehicle

The dynamic radar cruise control with full-speed range does not include functions which will prevent or avoid collisions with vehicles ahead of your vehicle. Therefore, if there is ever any possibility of danger, the driver must take immediate and direct control of the vehicle and act appropriately in order to ensure the safety of all involved.

■ Situations unsuitable for dynamic radar cruise control with full-speed range

Do not use dynamic radar cruise control with full-speed range in any of the following situations. Doing so may result in inappropriate speed control and could cause an accident resulting in death or serious injury.

- Roads where there are pedestrians, cyclists, etc.
- In heavy traffic
- On roads with sharp bends
- On winding roads
- On slippery roads, such as those covered with rain, ice or snow
- On steep downhills, or where there are sudden changes between sharp up and down gradients

Vehicle speed may exceed the set speed when driving down a steep hill.


- At entrances to freeways and highways
- When weather conditions are bad enough that they may prevent the sensors from detecting correctly (fog, snow, sandstorm, heavy rain, etc.)

- When there is rain, snow, etc. on the front surface of the radar or front camera
- In traffic conditions that require frequent repeated acceleration and deceleration
- When your vehicle is towing a trailer\* or during emergency towing
- \*: Vehicles that can tow a trailer. (→P.190)
- When an approach warning buzzer is heard often

# Driving in vehicle-to-vehicle distance control mode

This mode employs a radar to detect the presence of vehicles up to approximately 100 m (328 ft.) ahead, determines the current vehicle-to-vehicle following distance, and operates to maintain a suitable following distance from the vehicle ahead. The desired vehicle-to-vehicle distance can also be set by operating the vehicle-to-vehicle distance switch.

When driving on downhill slopes, the vehicle-to-vehicle distance may become shorter.

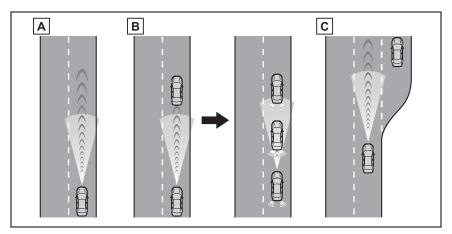

A Example of constant speed cruising When there are no vehicles ahead

The vehicle travels at the speed set by the driver.

B Example of deceleration cruising and follow-up cruising
When a preceding vehicle driving slower than the set speed appears

When a vehicle is detected running ahead of you, the system automatically decelerates your vehicle. When a greater reduction in vehicle speed is necessary, the system applies the brakes (the stop lights will come on at this time). The system will respond to changes in the speed of the vehicle ahead in order to maintain the vehicle-to-vehicle distance set by the driver. Approach warning warns you when the system cannot decelerate sufficiently to prevent your vehicle from closing in on the vehicle ahead.

When the vehicle ahead of you stops, your vehicle will also stop (vehicle is stopped by system control). After the vehicle ahead starts off, pressing the "+RES" switch or depressing the accelerator pedal (start-off operation) will resume follow-up cruising. If the start-off operation is not performed, system control continues to keep your vehicle stopped.

4

When the turn signal lever is operated and your vehicle moves to an overtaking lane while driving at 80 km/h (50 mph) or more, the vehicle will accelerate to help to overtake a passing vehicle.

The system's identification of what is an overtaking lane may be determined solely based on the location of the steering wheel in the vehicle (left side driver position versus right side driver position.) If the vehicle is driven to a region where the overtaking lane is on a different side from where the vehicle is normally driven, the vehicle may accelerate when the turn signal lever is operated in the opposite direction to the overtaking lane (e.g., if the driver normally operates the vehicle in a region where the overtaking lane is to the right but then drives to a region where the overtaking lane is to the left, the vehicle may accelerate when the right turn signal is activated).

© Example of acceleration

When there are no longer any preceding vehicles driving slower than the

The system accelerates until the set speed is reached. The system then returns to constant speed cruising.

# Setting the vehicle speed (vehicle-to-vehicle distance control mode)


set speed

 Press the cruise control main switch to activate the cruise control.

Dynamic radar cruise control indicator will come on and a message will be displayed on the multi-information display. Press the switch again to deactivate the cruise control.

If the cruise control main switch is pressed and held for 1.5 seconds or more, the system turns on in constant


speed control mode. (→P.263)

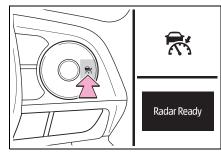

2 Accelerate or decelerate, with accelerator pedal operation, to the desired vehicle speed (at or above approximately 30 km/h [20 mph]) and press the "-SET" switch to set the speed.


Cruise control "SET" indicator will come on.

The vehicle speed at the moment the switch is released becomes the set

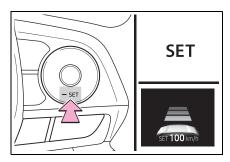

# Adjusting the set speed

To change the set speed, press the "+RES" or "-SET" switch until the desired set speed is displayed.

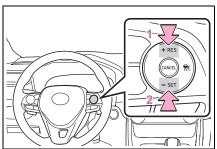

- Increases the speed (Except when the vehicle has been stopped by system control in vehicle-to-vehicle distance control mode)
- 2 Decreases the speed

Fine adjustment: Press the switch. Large adjustment: Press and hold the switch to change the speed, and release when the desired speed is reached.

In the vehicle-to-vehicle distance control mode, the set speed will be increased or decreased as follows:

## ▶ For Europe

Fine adjustment: By 5 km/h (3.1 mph)<sup>\*1</sup> or 5 mph (8 km/h)<sup>\*2</sup> each time the switch is pressed

Large adjustment: Increases or decreases in 5 km/h (3.1 mph)<sup>\*1</sup> or 5 mph (8 km/h)<sup>\*2</sup> increments for as long as the switch is held

# ▶ Except for Europe

Fine adjustment: By 1 km/h  $(0.6 \text{ mph})^{*1}$  or 1 mph  $(1.6 \text{ km/h})^{*2}$  each time the switch is pressed

Large adjustment: Increases or decreases in 5 km/h (3.1 mph)<sup>\*1</sup> or 5 mph (8 km/h)<sup>\*2</sup> increments for as long as the switch is held

In the constant speed control mode (→P.263), the set speed will be increased or decreased as follows:

Fine adjustment: By 1 km/h (0.6 mph)<sup>\*1</sup> or 1 mph (1.6 km/h)<sup>\*2</sup> each time the switch is pressed


Large adjustment: The speed will continue to change while the switch is held.

- \*1: When the set speed is shown in "km/h"
- \*2: When the set speed is shown in "MPH"

# Changing the vehicle-tovehicle distance (vehicle-tovehicle distance control mode)

Pressing the switch changes the vehicle-to-vehicle distance as follows:

4

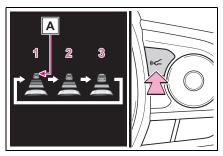

- 1 Long
- 2 Medium
- 3 Short

If a vehicle is running ahead of you, the preceding vehicle mark  $\boxed{\mathbf{A}}$  will also be displayed.

# Vehicle-to-vehicle distance settings (vehicle-to-vehicle distance control mode)

Select a distance from the table below. Note that the distances shown correspond to a vehicle speed of 80 km/h (50 mph). Vehicle-to-vehicle distance increases/decreases in accordance with vehicle speed. When the vehicle is stopped by system control, the vehicle stops at a certain vehicle-to-vehicle distance depending on the situation.


Distance options	Vehicle-to-vehicle distance
Long	Approximately 50 m (160 ft.)


Distance options	Vehicle-to-vehicle distance
Medium	Approximately 40 m (130 ft.)
Short	Approximately 30 m (100 ft.)

Resuming follow-up cruising when the vehicle has been stopped by system control (vehicle-to-vehicle distance control mode)

After the vehicle ahead of you starts off, press the "+RES" switch.

Your vehicle will also resume follow-up cruising if the accelerator pedal is depressed after the vehicle ahead of you starts off.

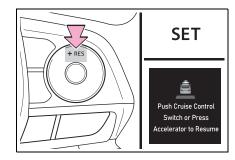

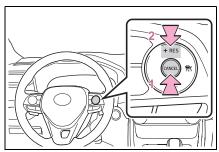


1 Pressing the cancel switch cancels the speed control.

The speed control is also canceled when the brake pedal is depressed. (When the vehicle has been stopped by system control, depressing the brake pedal does not cancel the setting.)

Pressing the "+RES" switch resumes the cruise control and returns vehicle speed to the set speed.

# Approach warning (vehicleto-vehicle distance control mode)

When your vehicle is too close to a vehicle ahead, and sufficient automatic deceleration via the cruise control is not possible, the display will flash and the buzzer will sound to alert the driver. An example of this would be if another driver cuts in front of you while you are following a vehicle. Depress the brake pedal to ensure an appropriate vehicle-to-vehicle distance.

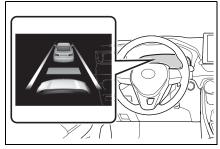

# ■ Warnings may not occur when

In the following instances, warnings may not occur even when the vehicle-to-vehicle distance is small.

- When the speed of the preceding vehicle matches or exceeds your vehicle speed
- When the preceding vehicle is traveling at an extremely slow speed
- Immediately after the cruise control speed was set
- When depressing the accelerator pedal


# Selecting constant speed control mode

When constant speed control mode is selected, your vehicle will maintain a set speed without controlling the vehicle-to-vehicle distance. Select this mode only when vehicle-to-vehicle distance control mode does not function correctly due to a dirty radar, etc.

With the cruise control off, press and hold the cruise control main switch for 1.5 seconds or more. 4

Immediately after the switch is pressed, the dynamic radar cruise control indicator will come on. Afterwards, it switches to the cruise control indicator.

Switching to constant speed control mode is only possible when operating the switch with the cruise control off.

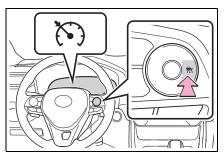


2 Accelerate or decelerate, with accelerator pedal operation, to the desired vehicle speed (at or above approximately 30 km/h [20 mph]) and press the "-SET" switch to set the speed.

Cruise control "SET" indicator will come on.

The vehicle speed at the moment the switch is released becomes the set speed.

Adjusting the speed setting:  $\rightarrow$ P.261 Canceling and resuming the speed setting:  $\rightarrow$ P.263

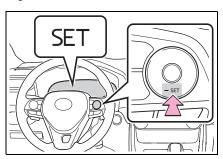


# Dynamic Radar Cruise Control with Road Sign Assist (vehicles with RSA)

When this function is enabled and the system is operating in vehicle-to-vehicle distance control mode (→P.259), when a speed limit sign is detected, the recognized speed limit will be displayed with an up/down arrow. The set speed can be increased/reduced to the recognized speed limit by pressing and holding the "+RES"/"-SET" switch.

 When the current set speed is lower than the recognized speed limit

Press and hold the "+RES" switch.

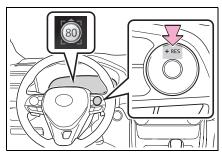

 When the current set speed is higher than the recognized speed limit

Press and hold the "-SET" switch.

# Enabling/Disabling the Dynamic Radar Cruise Control with Road Sign Assist (vehicles with RSA)

Dynamic Radar Cruise Control with Road Sign Assist can be

enabled/disabled in the  $\bigcirc$  screen on the multi-information display. ( $\rightarrow$ P.115)

When the Dynamic Radar Cruise Control with Road Sign Assist is operating, while driving down a hill, the vehicle speed may exceed the set speed.

In this case, the displayed set vehicle speed will be highlighted and a buzzer will sound to alert the driver.

# Dynamic radar cruise control with full-speed range can be set when

- The shift lever is in D.
- The desired set speed can be set when the vehicle speed is approximately 30 km/h (20 mph) or more. (However, when the vehicle speed is set while driving at below approximately 30 km/h [20 mph], the set speed will be set to approximately 30 km/h [20 mph].)

#### ■ Accelerating after setting the vehicle speed

The vehicle can accelerate by operating the accelerator pedal. After accelerating, the set speed resumes. However, during vehicle-to-vehicle distance control mode, the vehicle speed may decrease below the set speed in order to maintain the distance to the preceding vehicle.

# ■ When the vehicle stops while follow-up cruising

- Pressing the "+RES" switch while the vehicle ahead stops will resume follow-up cruising if the vehicle ahead starts off within approximately 3 seconds after the switch is pressed.
- If the vehicle ahead starts off within 3 seconds after your vehicle stops, follow-up cruising will be resumed.

#### Automatic cancelation of vehicleto-vehicle distance control mode

Vehicle-to-vehicle distance control mode is automatically canceled in the following situations.

- VSC is activated.
- TRC is activated for a period of time.
- When the VSC or TRC system is turned off.
- The sensor cannot detect correctly because it is covered in some way.
- When the brake control or output restriction control of a driving support system operates.
   (For example: Pre-Collision System, Drive-Start Control)
- The parking brake is operated.
- The vehicle is stopped by system control on a steep incline.
- The following are detected when the vehicle has been stopped by system control:
- The driver is not wearing a seat belt.
- · The driver's door is opened.
- The vehicle has been stopped for about 3 minutes

If vehicle-to-vehicle distance control

4

mode is automatically canceled for any reasons other than the above, there may be a malfunction in the system. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

# ■ Automatic cancelation of constant speed control mode

Constant speed control mode is automatically canceled in the following situations:

- Actual vehicle speed is more than approximately 16 km/h (10 mph) below the set vehicle speed.
- Actual vehicle speed falls below approximately 30 km/h (20 mph).
- VSC is activated.
- TRC is activated for a period of time.
- When the VSC or TRC system is turned off.
- When the brake control or output restriction control of a driving support system operates.
   (For example: Pre-Collision System, Drive-Start Control)

If constant speed control mode is automatically canceled for any reasons other than the above, there may be a malfunction in the system. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

# ■The Dynamic Radar Cruise Control with Road Sign Assist may not operate properly when (vehicles with RSA)

As the Dynamic Radar Cruise Control with Road Sign Assist may not operate properly in conditions in which RSA may not operate or detect correctly ( $\rightarrow$ P.255), when using this function, make sure to check the speed limit sign displayed.

In the following situations, the set speed may not be changed to the recognized

speed limit by pressing and holding the "+RES"/"-SET" switch.

- If speed limit information is not available
- When the recognized speed limit is the same as the set speed
- When the recognized speed limit is outside of the speed range that the dynamic radar cruise control system can operate

#### ■ Brake operation

A brake operation sound may be heard and the brake pedal response may change, but these are not malfunctions.

#### Warning messages and buzzers for dynamic radar cruise control with full-speed range


Warning messages and buzzers are used to indicate a system malfunction or to inform the driver of the need for caution while driving. If a warning message is shown on the multi-information display, read the message and follow the instructions. ( $\rightarrow$ P.232, 436)

#### ■ When the sensor may not be correctly detecting the vehicle ahead


In the case of the following and depending on the conditions, operate the brake pedal when deceleration of the system is insufficient or operate the accelerator pedal when acceleration is required.

As the sensor may not be able to correctly detect these types of vehicles, the approach warning ( $\rightarrow$ P.263) may not be activated.


- Vehicles that cut in suddenly
- Vehicles traveling at low speeds
- Vehicles that are not moving in the same lane
- Vehicles with small rear ends (trailers with no load on board, etc.)

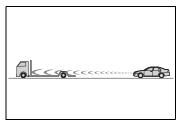

- Motorcycles traveling in the same lane
- When water or snow thrown up by the surrounding vehicles hinders the detecting of the sensor
- When your vehicle is pointing upwards (caused by a heavy load in the luggage compartment, etc.)

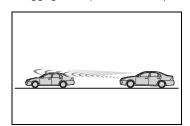

 Preceding vehicle has an extremely high ground clearance

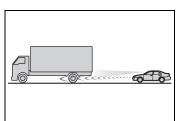


■ Conditions under which the vehicle-to-vehicle distance control mode may not function correctly


In the case of the following conditions, operate the brake pedal (or accelerator pedal, depending on the situation) as necessary.

As the sensor may not be able to correctly detect vehicles ahead, the system may not operate properly.

When the road curves or when the lanes are narrow

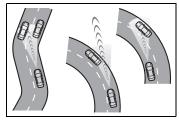

 When steering wheel operation or your position in the lane is unstable



- When the vehicle ahead of you decelerates suddenly
- When driving on a road surrounded by a structure, such as in a tunnel or on a bridge
- While the vehicle speed is decreasing to the set speed after the vehicle accelerates by depressing the accelerator pedal

4


# Cruise control

#### \*: If equipped

Use the cruise control to maintain a set speed without depressing the accelerator pedal.


# **System Components**

## ■ Meter display

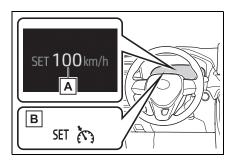

- A Set speed
- **B** Indicators

# ■ Operation switches

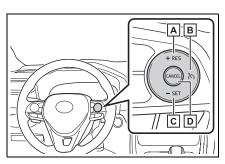

- A "+RES" switch
- B Cruise control main switch
- C "-SET" switch
- D Cancel switch

# A

#### **WARNING**

# ■ To avoid operating the cruise control by mistake

Switch the cruise control off using the cruise control main switch when not in use

# ■ Situations unsuitable for cruise control

Do not use cruise control in any of the following situations.

Doing so may result in loss of control and could cause an accident resulting in death or serious injury.


- In heavy traffic
- On roads with sharp bends
- On winding roads
- On slippery roads, such as those covered with rain, ice or snow
- On steep hills
   Vehicle speed may exceed the set speed when driving down a steep hill.
- When your vehicle is towing a trailer or during emergency towing
   Yehicles that can tow a trailer.
   (→P.190)

# Setting the vehicle speed

 Press the cruise control main switch to activate the cruise control.

Cruise control indicator will be displayed.


Press the switch again to deactivate the

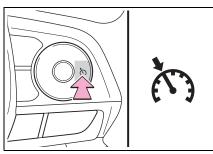

2 Accelerate or decelerate, with accelerator pedal operation, to the desired speed (at or above approximately 30 km/h [20 mph]) and press the "-SET" switch to set the speed.


Cruise control "SET" indicator will be displayed.

The vehicle speed at the moment the switch is released becomes the set speed.

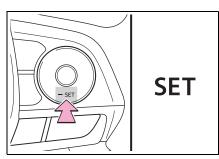

# Adjusting the set speed

To change the set speed, operate the "+RES" or "-SET" switch until the desired set speed is obtained.

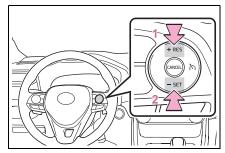

- 1 Increases the speed
- 2 Decreases the speed

Fine adjustment: Press the switch. Large adjustment: Press and hold the switch to change the speed, and release when the desired speed is reached.

The set speed will be increased or decreased as follows:


Fine adjustment: By 1 km/h (0.6 mph)<sup>\*1</sup> or 1 mph (1.6 km/h)<sup>\*2</sup> each time the switch is operated.

Large adjustment: The set speed can be increased or decreased continually until the switch is released.

- \*1: When the set speed is shown in "km/h"
- \*2: When the set speed is shown in "MPH"

4

# Canceling and resuming the constant speed control

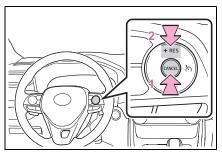

 Pressing the cancel switch cancels the constant speed control.

The speed setting is also canceled when the brakes are applied.

2 Pressing the "+RES" switch resumes the constant speed control.

Resuming is available when the vehicle speed is more than approximately 30 km/h (20 mph).

#### ■ Cruise control can be set when

- The shift lever is in D.
- Vehicle speed is above approximately 30 km/h (20 mph).

#### Accelerating after setting the vehicle speed

- The vehicle can be accelerated normally. After acceleration, the set speed resumes.
- Even without canceling the cruise control, the set speed can be increased by first accelerating the vehicle to the desired speed and then pushing the "-SET" switch to set the new speed.

# Automatic cancelation of cruise control

Cruise control will stop maintaining the vehicle speed in any of the following sit-

uations.

- Actual vehicle speed falls more than approximately 16 km/h (10 mph) below the preset vehicle speed.
- Actual vehicle speed is below approximately 30 km/h (20 mph).
- VSC is activated.
- TRC is activated for a period of time.
- When the VSC or TRC system is turned off.

#### If the warning message for the cruise control is shown on the multi-information display

Press the cruise control main switch once to deactivate the system, and then press the switch again to reactivate the system.

If the cruise control speed cannot be set or if the cruise control cancels immediately after being activated, there may be a malfunction in the cruise control system. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

# \*: If equipped

A desired maximum speed can be set using the cruise control switch. (→P.268)

The speed limiter prevents vehicle speed from exceeding the set speed.



#### **WARNING**

■ To avoid operating the speed limiter by mistake

Keep the speed limiter switch off when not in use.

■ Situations unsuitable for speed limiter

Do not use the speed limiter in either of the following situations. Doing so may result in control of the vehicle being lost and could cause a serious or fatal accident.


- On slippery roads, such as those covered with rain, ice or snow
- On steep hills
- When your vehicle is towing a trailer\* or during emergency towing
   \*: Vehicles that can tow a trailer.
   (→P.190)

# Setting the vehicle speed


1 Press the switch to activate the speed limiter.

Press the switch once more to deacti-


vate the speed limiter.

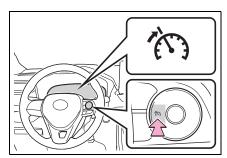

2 Accelerate or decelerate, with accelerator pedal operation, to the desired maximum speed and press the "-SET" switch to set the speed.

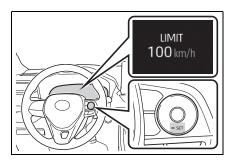

# Adjusting the set speed

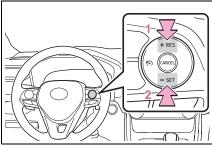

- 1 Increases the speed
- 2 Decreases the speed


Fine adjustment: Press the switch.

Large adjustment: Press and hold the switch to change the speed, and

4

release when the desired speed is reached.

# Canceling and resuming the speed limiter

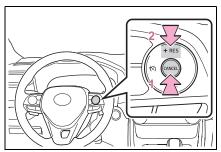

- Pressing the cancel switch cancels the speed limiter.
- 2 Pressing the "+RES" switch resumes the speed limiter.


## ■ Setting the vehicle speed

If the "-SET" switch is pressed while the vehicle is stopped or being driven at 30 km/h (20 mph) or less, the set speed will be 30 km/h (20 mph)

## **■** Exceeding the set speed

In the following situations, the vehicle speed exceeds the set speed, and multi-information display will be highlighted:

- When fully depressing the accelerator pedal
- When driving down a hill (a buzzer also sounds)

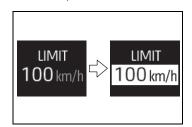

#### Automatic speed limiter cancellation

The set speed is automatically canceled when the cruise control is activated.

#### If the speed limiter indicator turns off and "Speed Limiter Malfunction Visit Your Dealer" is displayed

Stop the hybrid system and then restart the hybrid system. After restarting the hybrid system, set the speed limiter. If the speed limiter cannot be set, there may be a malfunction in the speed limiter system. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

## \*: If equipped

# The Blind Spot Monitor is a system that has 2 functions:

• The BSM (Blind Spot Monitor) function

Assists the driver in making a decision when changing lanes

• The RCTA (Rear Crossing Traffic Alert) function (if equipped)

Assists the driver when backing

These functions use the same sensors.

# **WARNING**

## ■Cautions regarding the use of the BSM function

The driver is solely responsible for safe driving. Always drive safely, taking care to observe your surround-


The BSM function is a supplementary function which alerts the driver that a vehicle is in a blind spot of the outside rear view mirrors or is approaching rapidly from behind into a blind spot. Do not overly rely on the BSM function. As the function cannot judge if it is safe to change lanes, over reliance could lead to an accident resulting in death or serious injury.

As the system may not function correctly under certain conditions, the driver's own visual confirmation of safety is necessary.

#### ■Cautions regarding the use of the RCTA function

There is a limit to the degree of recognition accuracy and control performance that this system can provide, do not overly rely on this system. The driver is always responsible for paying attention to the vehicle's surroundings and driving safely.

## System components

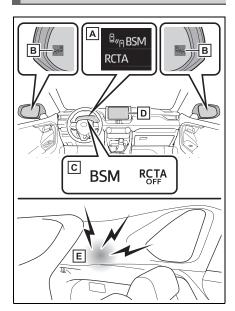

A Multi-information display

Turning the BSM function/RCTA function on/off.

B Outside rear view mirror indicators

#### BSM function:

When a vehicle is detected in a blind spot of the outside rear view mirrors or approaching rapidly from behind into a blind spot, the outside rear view mirror indicator on the detected side will illuminate. If the turn signal lever is operated

toward the detected side, the outside rear view mirror indicator will flash.

#### RCTA function:

When a vehicle approaching from the right or left at the rear of the vehicle is detected, both outside rear view mirror indicators will flash.

© BSM indicator/RCTA OFF indicator

When the Blind Spot Monitor is enabled, the BSM indicator illuminates. When the RCTA function is disabled, the RCTA OFF indicator illuminates.

Monitor screen display (RCTA function only)

If a vehicle approaching from the right or left at the rear of the vehicle is detected, the RCTA icon (→P.287) for the detected side will be displayed.

E RCTA buzzer (RCTA function only)

If a vehicle approaching from the right or left at the rear of the vehicle is detected, a buzzer will sound from behind the rear seat.

# Turning the BSM function/RCTA function on/off

The BSM function and the RCTA function can be enabled/disabled on the screen of the multi-infor-

mation display. (→P.115)

# Outside rear view mirror indicators visibility

In strong sunlight, the outside rear view mirror indicator may be difficult to see.

#### ■ Hearing the RCTA buzzer

The RCTA buzzer may be difficult to hear over loud noises such as high audio volume.

■When "Blind Spot Monitor Unavailable" or "RCTA Unavailable" is shown on the multi-information display

The sensor voltage has become abnormal, or water, snow, mud, etc., may be built up in the vicinity of the sensor area of the rear bumper. (→P.284)
Removing the water, snow, mud, etc., from the vicinity of the sensor area should return it to normal.
Also, the sensor may not function normally when used in extremely hot or cold weather.

■ When "Blind Spot Monitor Malfunction Visit Your Dealer" or "RCTA Malfunction Visit Your Dealer" is shown on the multi-information display

There may be a sensor malfunction or misaligned. Have the vehicle inspected at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

#### ■ Customization

Some functions can be customized.  $(\rightarrow P.115)$ 

Transmitter: Model: DNSRR004

Operation frequency: 24.15 GHz

Maximum output power: 20 mW or less

Manufacturer: DENSO CORPORATION

Address: 1-1, Showa-cho, Kariya-shi, Aichi-ken, 448-8661

Japan

D04 EU en 01

Hereby, DENSO CORPORATION declares that the radio equipment type is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

https://www.denso.com/global/en/contact-us/doc/

01

DENSO CORPORATION vakuuttaa, että radiolaitetyyppi on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: https://www.denso.com/global/en/contact-us/doc/

0:

Hierbij verklaar ik, DENSO CORPORATION, dat het type radioapparatuur conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: https://www.denso.com/global/en/contact-us/doc/

03

Le soussigné, DENSO CORPORATION, déclare que l'équipement radioélectrique du type est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:

https://www.denso.com/global/en/contact-us/doc/

04

4

Härmed försäkrar DENSO CORPORATION att denna typ av radioutrustning överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:

https://www.denso.com/global/en/contact-us/doc/

05

Hermed erklærer DENSO CORPORATION, at radioudstyrstypen er i overensstemmelse med direktiv 2014/53/EU.

EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:

https://www.denso.com/global/en/contact-us/doc/

06

Hiermit erklärt DENSO CORPORATION, dass der Funkanlagentyp der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

https://www.denso.com/global/en/contact-us/doc/

0

Με την παρούσα ο/η DENSO CORPORATION, δηλώνει ότι ο ραδιοεξοπλισμός πληροί την οδηγία 2014/53/ΕΕ.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:

https://www.denso.com/global/en/contact-us/doc/

30

Il fabbricante, DENSO CORPORATION, dichiara che il tipo di apparecchiatura radio è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:

https://www.denso.com/global/en/contact-us/doc/

09

https://www.denso.com/global/en/contact-us/doc/

O(a) abaixo assinado(a) DENSO CORPORATION declara que o presente tipo de equipamento de rádio está em conformidade com a Diretiva 2014/53/UE.

O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:

https://www.denso.com/global/en/contact-us/doc/

B'dan, DENSO CORPORATION, niddikjara li dan it-tip ta' tagħmir tar-radju huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: https://www.denso.com/global/en/contact-us/doc/

s.//www.denso.com/global/en/contact-us/doc/

Käesolevaga deklareerib DENSO CORPORATION, et käesolev raadioseadme tüüp vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:

https://www.denso.com/global/en/contact-us/doc/

DENSO CORPORATION igazolja, hogy a típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:

https://www.denso.com/global/en/contact-us/doc/

4

DENSO CORPORATION týmto vyhlasuje, že rádiové zariadenie typu je v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:

https://www.denso.com/global/en/contact-us/doc/

15

Tímto DENSO CORPORATION prohlašuje, že typ rádiového zařízení je v souladu se směrnicí 2014/53/EU.

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:

https://www.denso.com/global/en/contact-us/doc/

16

DENSO CORPORATION potrjuje, da je tip radijske opreme skladen z Direktivo 2014/53/EU.

Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:

https://www.denso.com/global/en/contact-us/doc/

17

Aš, DENSO CORPORATION, patvirtinu, kad radijo įrenginių tipas atitinka Direktyvą 2014/53/ES.

Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:

https://www.denso.com/global/en/contact-us/doc/

1

Ar šo DENSO CORPORATION deklarē, ka radioiekārta atbilst Direktīvai 2014/53/ES.

Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:

https://www.denso.com/global/en/contact-us/doc/

19

Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:

https://www.denso.com/global/en/contact-us/doc/

0

Hér með lýsir DENSO CORPORATION yfir því að er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU. Samræmisyfirlýsing er einnig aðgengileg á eftirfarandi vefslóð: https://www.denso.com/global/en/contact-us/doc/

DENSO CORPORATION erklærer at er i overensstemmelse med direktiv 2014/53/EU.

Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse:

https://www.denso.com/global/en/contact-us/doc/

22

С настоящото DENSO CORPORATION декларира, че този тип радиосъоръжение е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: https://www.denso.com/global/en/contact-us/doc/

22

Prin prezenta, DENSO CORPORATION declară că tipul de echipamente radio este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:

https://www.denso.com/global/en/contact-us/doc/

24

DENSO CORPORATION ovime izjavljuje da je radijska oprema tipa u skladu s Direktivom 2014/53/EU.

Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:

https://www.denso.com/global/en/contact-us/doc/

25

Овиме, DENSO CORPORATION изјављује да је радио опрема тип усаглашена са Директивом 2014/53/EU.

Цео текст ЕУ декларације о усаглашености доступам је на следећој интернет адреси:

https://www.denso.com/global/en/contact-us/doc/

26

Amb aquest document, DENSO CORPORATION declara que el tipus d'equipament radioelèctric es conforme a la Directiva 2014/53/UE. El text complet de la declaració UE de conformitat està disponible en la següent adreça d'Internet:

https://www.denso.com/global/en/contact-us/doc/

27

İşbu belge; DENSO CORPORATION telsiz ekipmanı tipinin 2014/53/AB sayılı Direktif'e uygun olduğunu beyan eder. AB uygunluk beyanının tam metni aşağıdaki internet adresinde mevcuttur:

https://www.denso.com/global/en/contact-us/doc/

00

## ▶ For vehicles sold in Albania

Me anë të kësaj deklaratë, subjekti DENSO CORPORATION deklaron se pajisjet radio është në përputhje me këtë rregull teknik për pajisjet radio dhe fundore të komunikimeve elektronike. Teksti i plotë i Deklaratës së Konformitetit është i disponueshëm në adresën e mëposhtme të internetit:

https://www.denso.com/global/en/contact-us/doc/

D04 AL sq 01

Transmitter: Model: DNSRR004

Operation frequency: 24.15 GHz

Maximum output power: 20 mW or less

Manufacturer: DENSO CORPORATION

Address: 1-1, Showa-cho, Kariya-shi, Aichi-ken, 448-8661

Japan

D04 EU en 01



Hereby, DENSO CORPORATION declares that the radio equipment type is in compliance with the relevant statutory requirements.

The full text of the UK declaration of conformity is available at the following internet address:

https://www.denso.com/global/en/contact-us/doc/

D04 GB en 01

Hereby, DENSO CORPORATION declares that the radio equipment type is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

https://www.denso.com/global/en/contact-us/doc/

▶ For vehicles sold in Ukraine



UA RF: 3DENSR004

модель: DNSRR004

смуга радіочастот: 24.05-24.25 ГГц

максимальна вихідна потужність: 20 мВт або менше

виробник: DENSO CORPORATION

адреса: 1-1, Showa-cho, Kariya-shi, Aichi-ken, 448-8661 Japan

справжнім DENSO CORPORATION заявляє, що тип радіообладнання відповідає Технічному регламенту

радіообладнання;

повний текст декларації про відповідність доступний на веб-сайті

за такою адресою:

https://www.denso.com/global/en/contact-us/doc/

D04 UA uk 01

#### ▶ For vehicles sold in Israel

IL: 55-08081

חל איסור לבצע פעולות במכשיר שיש בהן כדי לשנות את תכונותיו האלחוטיות של המכשיר, ובכלל זה שינויי תוכנה, החלפת אנטנה מקורית או הוספת אפשרות לחיבור לאנטנה חיצונית, בלא קבלת אישור משרד התקשורת, בשל החשש להפרעות אלחוטיות.

טויוטה מוטור אירופה נו\סא, שדרות דו בורגט 60-1140 בריסל,

www.toyota-europe.com בלגיה

מוצר: חיישן נסתר
סימן רשום: DENSO
ארץ ייצור: ראה מוצר
DNSRR004
שנת ייצור: ראה מוצר

D04 IL 03

# ► For vehicles sold in Moldova

Transmitter: Model: DNSRR004

Operation frequency: 24.15 GHz

Maximum output power: 20 mW or less

Manufacturer: DENSO CORPORATION

Address: 1-1, Showa-cho, Kariya-shi, Aichi-ken, 448-8661

Japan

D04 EU en 01

Prin prezenta, DENSO CORPORATION declară că tipul de echipamente radio este în conformitate cu Reglementarea tehnică "Punerea la dispoziție pe piață a echipamentelor radio".

Textul integral al declarației de conformitate este disponibil la următoarea adresă de Internet:

https://www.denso.com/global/en/contact-us/doc/

D04 MD ro 01


4

ď

# **WARNING**

#### To ensure the system can operate properly

Blind Spot Monitor sensors are installed inside the left and right sides of the rear bumper respectively. Observe the following to ensure the Blind Spot Monitor can function correctly.

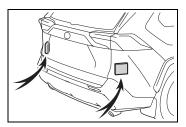

Keep the sensors and the surrounding areas on the rear bumper clean at all times.


If a sensor or its surrounding area on the rear bumper is dirty or covered with snow, the Blind Spot Monitor may not operate and a warning message (→P.274) will be displayed. In this situation, clear off the dirt or snow and drive the vehicle with the operation conditions of the BSM function (→P.286) satisfied for approximately 10 minutes. If the warning message does not disappear, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

- Do not subject a sensor or its surrounding area on the rear bumper to a strong impact.
  - If a sensor is moved even slightly off position, the system may malfunction and vehicles may not be detected correctly.
  - In the following situations, have your vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- A sensor or its surrounding area is subject to a strong impact.
- · If the surrounding area of a sensor is scratched or dented, or part of them has become disconnected.
- Do not disassemble the sensor.
- Do not attach accessories, stickers (including transparent stickers), aluminum tape, etc. to a sensor or its surrounding area on the rear bumper.
- Do not modify the sensor or surrounding area on the rear bumper.
- If a sensor or the rear bumper needs to be removed/installed or replaced, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Do not paint the rear bumper any color other than an official Toyota color.

# The Blind Spot Monitor function

# Vehicles that can be detected by the Blind Spot Monitor


The BSM function uses radar sensors to detect the following vehicles traveling in adjacent lanes and advises the driver of the presence of such vehicles via the indicators

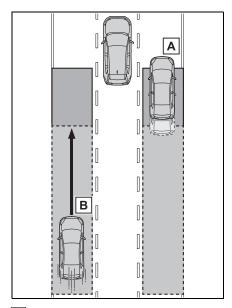

- A Vehicles that are traveling in areas that are not visible using the outside rear view mirrors (the blind spots)
- B Vehicles that are approaching rapidly from behind in areas that are not visible using the outside rear view mirrors (the blind spots)

# ■ The BSM function detection areas

The areas that vehicles can be detected in are outlined below.

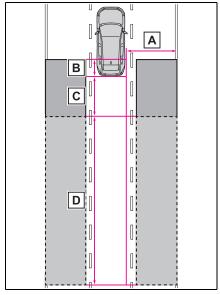

The range of each detection area is:

Approximately 0.5 m (1.6 ft.) to 3.5 m (11.5 ft.) from either side of the vehicle

The area between the side of the vehicle and 0.5 m (1.6 ft.) from the side of the vehicle cannot be detected.

- B Approximately 1 m (3.3 ft.) forward of the rear bumper
- C Approximately 3 m (9.8 ft.) from the rear bumper
- D Approximately 3 m (9.8 ft.) to 60 m (197 ft.) from the rear bumper

The greater the difference in speed between your vehicle and the detected vehicle is, the farther away the vehicle will be detected, causing the outside rear view mirror indicator to illuminate or flash. 4

# ■ The BSM function is operational when

The BSM function is operational when all of the following conditions are met:

- The BSM function is on.
- The shift lever is in a position other than R.
- The vehicle speed is greater than approximately 16 km/h (10 mph).

# ■ The BSM function will detect a vehicle when

The BSM function will detect a vehicle present in the detection area in the following situations:

- A vehicle in an adjacent lane overtakes your vehicle.
- You overtake a vehicle in an adjacent lane slowly.
- Another vehicle enters the detection area when it changes lanes.

# ■ Conditions under which the system will not detect a vehicle

The BSM function is not designed to detect the following types of vehicles and/or objects:

- Small motorcycles, bicycles, pedestrians, etc.\*
- Vehicles traveling in the opposite direction
- Guardrails, walls, signs, parked vehicles and similar stationary objects\*
- Following vehicles that are in the same lane\*
- Vehicles traveling 2 lanes away from your vehicle\*
- Vehicles which are being overtaken rapidly by your vehicle
- Depending on the conditions, detection of a vehicle and/or object may occur.

# Conditions under which the system may not function correctly


- The BSM function may not detect vehicles correctly in the following situations:
- When the sensor is misaligned due to a strong impact to the sensor or its surrounding area
- When mud, snow, ice, a sticker, etc., is covering the sensor or surrounding area on the rear bumper
- When driving on a road surface that is wet with standing water during bad weather, such as heavy rain, snow, or fog
- When multiple vehicles are approaching with only a small gap between each vehicle
- When the distance between your vehicle and a following vehicle is short
- When there is a significant difference in speed between your vehicle and the vehicle that enters the detection area
- When the difference in speed between your vehicle and another vehicle is changing
- When a vehicle enters a detection area traveling at about the same speed as your vehicle
- As your vehicle starts from a stop, a vehicle remains in the detection area
- When driving up and down consecutive steep inclines, such as hills, dips in the road, etc.
- When driving on roads with sharp bends, consecutive curves, or uneven surfaces
- When vehicle lanes are wide, or when driving on the edge of a lane, and the vehicle in an adjacent lane is far away from your vehicle
- When an accessory (such as a bicycle carrier) is installed to the rear of the vehicle
- When there is a significant difference in height between your vehicle and the vehicle that enters the detection area
- Immediately after the BSM function/RCTA function are turned on
- When towing a trailer

- When the sensor is misaligned due to a strong impact to the sensor or its surrounding area
- When the distance between your vehicle and a guardrail, wall, etc. that enters the detection area is short
- When driving up and down consecutive steep inclines, such as hills, dips in the road, etc.
- When vehicle lanes are narrow, or when driving on the edge of a lane, and a vehicle traveling in a lane other than the adjacent lanes enters the detection area
- When driving on roads with sharp bends, consecutive curves, or uneven surfaces
- · When the tires are slipping or spinning
- When the distance between your vehicle and a following vehicle is short
- When an accessory (such as a bicycle carrier) is installed to the rear of the vehicle
- When the vehicle throws up water or snow behind.

## The Rear Crossing Traffic Alert function (if equipped)

## Operation of the RCTA function

The RCTA function uses radar sensors to detect vehicles approaching from the right or left at the rear of the vehicle and alerts the driver of the presence of such vehicles by flashing the outside rear view mirror indicators and sounding a buzzer.

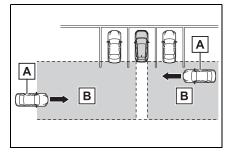


- A Approaching vehicles
- **B** Detection areas

## ■ RCTA icon display (if equipped)


When a vehicle approaching from the right or left at the rear of the vehicle is detected, the following will be displayed on the navigation system (if equipped) or multimedia system (if equipped) screen.

 When the Toyota parking assist monitor (if equipped) is displayed

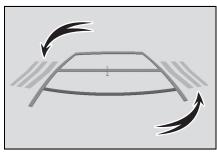

When the panoramic view monitor (if equipped) is displayed


4

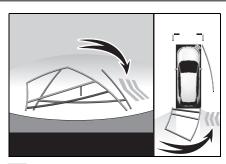

: The RCTA function is malfunctioning (→P.274)

## ■ The RCTA function detection areas

The areas that vehicles can be detected in are outlined below.

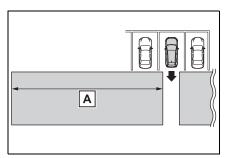

The buzzer can alert the driver of faster vehicles approaching from farther away.

## Example:

Approach- ing vehicle	Speed	A Approximate alert distance
Fast	56 km/h (34 mph)	40 m (131 ft.)
Slow	8 km/h (5 mph)	5.5 m (18 ft.)

## ■ The RCTA function is operational when

The RCTA function operates when all of the following conditions are met:

- The RCTA function is on.
- The shift lever is in R.
- The vehicle speed is less than approximately 15 km/h (9 mph).
- The approaching vehicle speed is between approximately 8 km/h (5 mph) and 56 km/h (34 mph).


## ■ Setting the buzzer volume

The buzzer volume can be adjusted on the multi-information display.  $(\rightarrow P.115)$ 

## ■ Conditions under which the system will not detect a vehicle

The RCTA function is not designed to detect the following types of vehicles and/or objects.

- Vehicles approaching from directly behind
- Vehicles backing up in a parking space next to your vehicle
- Vehicles that the sensors cannot detect due to obstructions




- Guardrails, walls, signs, parked vehicles and similar stationary objects
- Small motorcycles, bicycles, pedestrians, etc.\*
- Vehicles moving away from your vehicle
- Vehicles approaching from the parking spaces next to your vehicle\*
- The distance between the sensor and approaching vehicle gets too close


## Situations in which the system may not operate properly

The RCTA function may not detect vehicles correctly in the following situations:


- When the sensor is misaligned due to a strong impact to the sensor or its surrounding area.
- When mud, snow, ice, a sticker, etc., is covering the sensor or surrounding area on the rear bumper.
- When driving on a road surface that is wet with standing water during bad weather, such as heavy rain, snow, or fog.
- When multiple vehicles are approaching with only a small gap between each vehicle.
- When a vehicle is approaching at high speed.
- When equipment that may obstruct a sensor is installed, such as a towing eyelet, bumper protector (an additional trim strip, etc.), bicycle carrier, or snow plow.
- When backing up on a slope with a sharp change in grade.

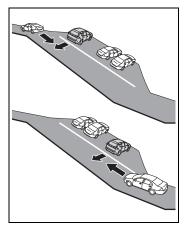


When backing out of a sharp angle parking spot.

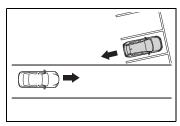

- When towing a trailer.
- When there is a significant difference in height between your vehicle and the vehicle that enters the detection area.
- When a sensor or the area around a sensor is extremely hot or cold.
- If the suspension has been modified or tires of a size other than specified are installed.
- If the front of the vehicle is raised or lowered due to the carried load.
- When turning while backing up.

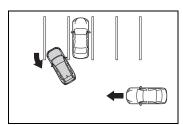

When a vehicle turns into the detection area.




Situations in which the system may operate even if there is no possibility of a collision


Instances of the RCTA function unnecessarily detecting a vehicle and/or object may increase in the following situations:

4


 When the parking space faces a street and vehicles are being driven on the street.

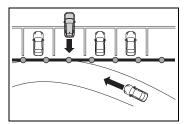


When the distance between your vehicle and metal objects, such as a guardrail, wall, sign, or parked vehicle, which may reflect electrical waves toward the rear of the vehicle, is short.

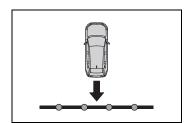

- When equipment that may obstruct a sensor is installed, such as a towing eyelet, bumper protector (an additional trim strip, etc.), bicycle carrier, or snow plow.
- When a vehicle passes by the side of your vehicle.

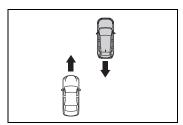

When a detected vehicle turns while approaching the vehicle.

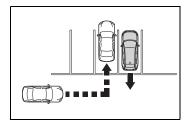

- When there are spinning objects near your vehicle such as the fan of an air conditioning unit.
- When water is splashed or sprayed toward the rear bumper, such as from a sprinkler.
- Moving objects (flags, exhaust fumes, large rain droplets or snowflakes, rain water on the road surface, etc.).
- When the distance between your vehicle and a guardrail, wall, etc., that enters the detection area is short.
- Gratings and gutters.
- When a sensor or the area around a sensor is extremely hot or cold.
- If the suspension has been modified or tires of a size other than specified are installed.
- If the front of the vehicle is raised or lowered due to the carried load.

on the multi-information display

## Toyota parking assistsensor\*


## \*: If equipped

The distance from your vehicle to objects, such as a wall, when parallel parking or maneuvering into a garage is measured by the sensors and communicated via the navigation system or multimedia system screen and a buzzer.

Always check the surrounding area when using this system.


## System components

■ Location and types of sensors

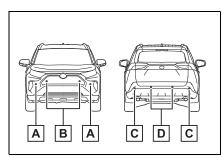

- A Front corner sensors (if equipped)
- B Front center sensors (if equipped)
- C Rear corner sensors
- D Rear center sensors
- Display (Multi-information display)

When the sensors detect an object, such as a wall, a graphic is shown

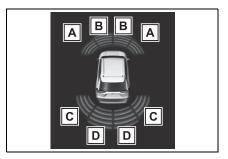


- A Front corner sensor detection (if equipped)
- B Front center sensor detection (if equipped)\*1
- C Rear corner sensor detection\*2
- D Rear center sensor detection\*2
- \*1: Displayed when the shift lever is in a driving position
- \*2: Displayed when the shift lever is in R

## ■ Display (Audio system screen)


When the sensors detect an object, such as a wall, a graphic is shown on the navigation system (if equipped) or multimedia system (if equipped) screen depending on the position and distance to the object.

 When the Toyota parking assist monitor (if equipped) is displayed 4

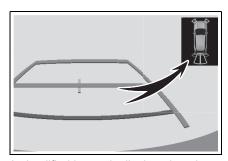


A simplified image is displayed on the upper corner of the screen when an obstacle is detected.

- When the panoramic view monitor (if equipped) is displayed
- Panoramic view

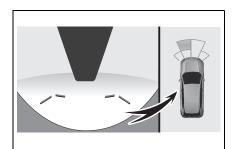

A graphic is shown when the panoramic view monitor is displayed.

Except panoramic view

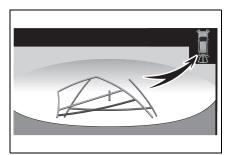

A simplified image is displayed on the upper corner of the screen when an obstacle is detected.

## **Turning Toyota parking** assist-sensor on/off

The Toyota parking assist-sensor function can be enabled/disabled

on the screen of the multi-information display. (→P.115)

When the Toyota parking assist-sensor function is disabled, the Toyota parking assist-sensor OFF indicator (→P.97) illuminates on the multi-information dis-

To re-enable the system, select on the multi-information display, select

If the system is disabled, it will remain off even if the power switch is turned to ON after the power switch has been turned off.



## **WARNING**

## ■Cautions regarding the use of the system

There is a limit to the degree of recognition accuracy and control performance that this system can provide, do not overly rely on this system. The driver is always responsible for paying attention to the vehicle's surroundings and driving safely.

### ■To ensure the system can operate properly

Observe the following precautions. Failing to do so may result in the vehicle being unable to be driven safely and possibly cause an accident.

Do not damage the sensors, and always keep them clean.

## **WARNING**

- Do not attach a sticker or install an electronic component, such as a backlit license plate (especially fluorescent type), fog lights, fender pole or wireless antenna near a radar sensor.
- Do not subject the surrounding area of the sensor to a strong impact. If subjected to an impact, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. If the front or rear bumper needs to be removed/installed or replaced, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Do not modify, disassemble or paint the sensors.
- Do not attach a license plate cover.
- Keep your tires properly inflated.

## ■When to disable the function

In the following situations, disable the function as it may operate even though there is no possibility of a collision.

- Failing to observe the warnings above.
- A non-genuine Toyota suspension (lowered suspension, etc.) is installed.

## ■ Notes when washing the vehicle

Do not apply intensive bursts of water or steam to the sensor area.

Doing so may result in the sensor malfunctioning.

 When using a high pressure washer to wash the vehicle, do not spray the sensors directly, as doing so may cause a sensor to malfunction.  When using steam to clean the vehicle, do not direct steam too close to the sensors as doing so may cause a sensor to malfunction.

## ■ The system can be operated when

- The power switch is in ON.
- Toyota parking assist-sensor function is on.
- The vehicle speed is less than about 10 km/h (6 mph).
- The shift lever is in other than P.
- ■If "Parking Assist Unavailable Please Clean Parking Assist Sensor" is displayed on the multi-information display

A sensor may be covered with ice, snow, dirt, etc. Remove the ice, snow, dirt, etc., from the sensor to return the system to normal.

Also, due to ice forming on a sensor at low temperatures, a warning message may be displayed or the sensor may not be able to detect an object. Once the ice melts, the system will return to normal.

If a warning message is displayed even if the sensor is clean, there may be a sensor malfunction. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

### ■If "Parking Assist Unavailable" is displayed on the multi-information display (vehicles with PKSB)

- Water may be continuously flowing over the sensor surface, such as in a heavy rain. When the system determines that it is normal, the system will return to normal.
- Initialization may not have been performed after a 12-volt battery terminal was disconnected and reconnected. Initialize the system. (→P.294) If this message continues to be displayed even after initialization, have the vehicle inspected by any authorized Toyota retailer or Toyota author

4

rized repairer, or any reliable repairer.

### If a 12-volt battery terminal has been disconnected and reconnected (vehicles with PKSB)

The system needs to be initialized. To initialize the system, drive the vehicle straight ahead for 5 seconds or more at a speed of approximately 35 km/h (22 mph) or more.

#### ■ Sensor detection information

- The sensor's detection areas are limited to the areas around the vehicle's front and rear bumpers.
- The following situations may occur during use.
- Depending on the shape of the object and other factors, the detection distance may shorten, or detection may be impossible.
- Detection may be impossible if static objects draw too close to the sensor.
- There will be a short delay between static object detection and display (warning buzzer sounds). Even at low speeds, there is a possibility that the object will come within 30 cm (11.9 in.) before the display is shown and the warning buzzer sounds.
- It might be difficult to hear the buzzer due to the volume of the audio system or air flow noise of the air conditioning system.
- It may be difficult to hear the sound of this system due to the buzzers of other systems.

## ■ Objects which the system may not properly detect

The shape of the object may prevent the sensor from detecting it. Pay particular attention to the following objects:


- Wires, fences, ropes, etc.
- Cotton, snow and other materials that absorb sound waves
- Sharply-angled objects
- Low objects
- Tall objects with upper sections projecting outwards in the direction of your vehicle

People may not be detected if they are wearing certain types of clothing.

### Situations in which the system may not operate properly

Certain vehicle conditions and the surrounding environment may affect the ability of a sensor to correctly detect objects. Particular instances where this may occur are listed below.

- There is dirt, snow or ice on a sensor. (Cleaning the sensors will resolve this problem.)
- A sensor is frozen. (Thawing the area will resolve this problem.) In especially cold weather, if a sensor is frozen the sensor display may be displayed abnormally, or objects, such as a wall, may not be detected.
- When a sensor or the area around a sensor is extremely hot or cold.

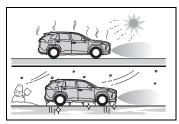


- On an extremely bumpy road, on an incline, on gravel, or on grass.
- When vehicle horns, vehicle detectors, motorcycle engines, air brakes of large vehicles, the clearance sonar of other vehicles or other devices which produce ultrasonic waves are near the vehicle.
- A sensor is coated with a sheet of spray or heavy rain.
- If objects draw too close to the sensor.
- When a pedestrian is wearing clothing that does not reflect ultrasonic waves (ex. skirts with gathers or frills).
- When objects that are not perpendicular to the ground, not perpendicular to the vehicle traveling direction, uneven, or waving are in the detection range.

- When driving in inclement weather such as fog, snow or a sandstorm.
- When an object that cannot be detected is between the vehicle and a detected object.
- If an object such as a vehicle, motorcycle, bicycle or pedestrian cuts in front of the vehicle or runs out from the side of the vehicle.
- If the orientation of a sensor has been changed due to a collision or other impact.
- When equipment that may obstruct a sensor is installed, such as a towing eyelet, bumper protector (an additional trim strip, etc.), bicycle carrier, or snow plow.
- If the front of the vehicle is raised or lowered due to the carried load.
- If the vehicle cannot be driven in a stable manner, such as when the vehicle has been in an accident or is malfunctioning.
- When tire chains, a compact spare tire or an emergency tire puncture repair kit are used.
- Situations in which the system may operate even if there is no possibility of a collision


In some situations, such as the following, the system may operate even though there is no possibility of a collision

When driving on a narrow road.



When driving toward a banner, flag, low-hanging branch or boom barrier (such as those used at railroad crossings, toll gates and parking lots).


- When there is a rut or hole in the surface of the road.
- When driving on a metal cover (grating), such as those used for drainage ditches.
- When driving up or down a steep slope.
- If a sensor is hit by a large amount of water, such as when driving on a flooded road.
- There is dirt, snow, water drops or ice on a sensor. (Cleaning the sensors will resolve this problem.)
- A sensor is coated with a sheet of spray or heavy rain.
- When driving in inclement weather such as fog, snow or a sandstorm.
- When strong winds are blowing.

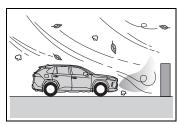

- When vehicle horns, vehicle detectors, motorcycle engines, air brakes of large vehicles, the clearance sonar of other vehicles or other devices which produce ultrasonic waves are near the vehicle.
- If the front of the vehicle is raised or lowered due to the carried load.
- If the orientation of a sensor has been changed due to a collision or other impact.
- The vehicle is approaching a tall or curved curb.
- Driving close to columns (H-shaped steel beams, etc.) in multi-story parking garages, construction sites, etc.
- If the vehicle cannot be driven in a stable manner, such as when the vehicle has been in an accident or is malfunctioning.

4


 On an extremely bumpy road, on an incline, on gravel, or on grass.

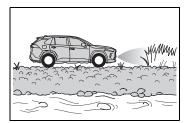

When tire chains, a compact spare tire or an emergency tire puncture repair kit are used.

## Sensor detection display, object distance

■ Detection range of the sensors

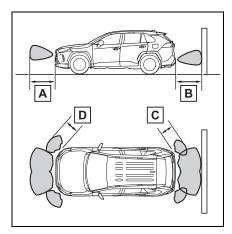

- ▶ Vehicles without PKSB
- Approximately 100 cm (3.3 ft.)\*
- **B** Approximately 150 cm (4.9 ft.)\*
- C Approximately 65 cm (2.12 ft.)
- D Approximately 60 cm (1.96 ft.)
- ▶ Vehicles with PKSB
- A Approximately 100 cm (3.3 ft.)
- B Approximately 150 cm (4.9 ft.)
- C Approximately 63 cm (2.06 ft.)
- D Approximately 63 cm (2.06 ft.)

The diagram shows the detection range of the sensors. Note that the sensors cannot detect objects that are extremely close to the vehicle.

The range of the sensors may change depending on the shape of the object, etc.

\*: If equipped

## ■ Distance display

When an object is detected by a sensor, the approximate distance to the object will be displayed on the multi-information display, navigation system (if equipped) or multimedia system (if equipped) screen. (As the distance to the object becomes short, the distance segments may blink.)

The images may differ from that shown in the illustrations.

- ▶ Vehicles without PKSB
- Approximate distance to object
- Front center sensor: 100 cm (3.3 ft.) to 60 cm (1.96 ft.)

Multi-information dis- play	Navigation or multin	nedia system screen

- Approximate distance to object
- Front sensor: 60 cm (1.96 ft.) to 47.5 cm (1.56 ft.)
- Rear sensor: 65 cm (2.12 ft.) to 50 cm (1.63 ft.)

Multi-information dis- play	Navigation or multin	nedia system screen

- Approximate distance to object
- Front sensor: 47.5 cm (1.56 ft.) to 35 cm (1.14 ft.)
- Rear sensor: 50 cm (1.63 ft.) to 35 cm (1.14 ft.)

Multi-information dis- play	Navigation or multin	nedia system screen

• Approximate distance to object: 35 cm (1.14 ft.) to 28 cm (0.9 ft.)

Multi-information dis- play*	Navigation or multin	nedia system screen

<sup>\*:</sup> The distance segments will blink slowly.

4

## 298 4-5. Using the driving support systems

• Approximate distance to object: Less than 28 cm (0.9 ft.)

Multi-information dis- play*	Navigation or multin	nedia system screen

- $\overset{*}{:}$  The distance segments will blink rapidly.
- ▶ Vehicles with PKSB
- Approximate distance to object
- Front center sensor: 100 cm (3.3 ft.) to 63 cm (2.06 ft.)
  Rear center sensor: 150 cm (4.9 ft.) to 63 cm (2.06 ft.)

Multi-information dis- play	Navigation or multin	nedia system screen

• Approximate distance to object: 63 cm (2.06 ft.) to 48 cm (1.57 ft.)

Multi-information dis- play	Navigation or multin	nedia system screen

• Approximate distance to object: 48 cm (1.57 ft.) to 34 cm (1.11 ft.)

Multi-information dis- play	Navigation or multin	nedia system screen

Multi-information dis- play*	Navigation or multin	nedia system screen

\*: The distance segments will blink slowly.

• Approximate distance to object: Less than 15 cm (0.5 ft.)

Multi-information dis- play*	Navigation or multin	nedia system screen

\*: The distance segments will blink rapidly.

## Buzzer operation and distance to an object

A buzzer sounds when the sensors are operating.

- The buzzer beeps faster as the vehicle approaches an object.
   When the vehicle comes within the following distance of the object, the buzzer sounds continuously.
- Vehicles without PKSB: Approximately 35 cm (1.14 ft.)
- Vehicles with PKSB: Approximately 34 cm (1.11 ft.)
- When 2 or more sensors simultaneously detect a static object, the buzzer sounds for the nearest object.
- Vehicles with PKSB: Even when the sensors are operating, the

buzzer will be muted in some situations. (automatic buzzer mute function)

## ■ Muting the buzzer sound (vehicles with PKSB)

• Automatic buzzer mute function Even when the sensors are operating, the buzzer will be muted in the following situations:

- The distance between the vehicle and the detected object does not become shorter (except when the distance between the vehicle and object is 34 cm [1.11 ft.] or less).
- Your vehicle is moving away from the object.
- There are no detectable objects entering the path of your vehicle.

However, if another object is detected or the situation changes while the buzzer is muted, the buzzer begins sounding again.

To mute the buzzer sound

4

The buzzer can be temporarily muted by pressing of the meter control switches while a suggestion that says mute is available is shown on the multi-information display.

- When the mute is canceled Mute will be automatically canceled in the following situations.
- When the shift position is changed
- When the vehicle speed has reached or exceeded a certain speed
- When the Toyota parking assist is turned off once and turned on again
- When the power switch is turned off once and turned to ON again

### **■** Customization

The buzzer volume can be adjusted on the multi-information display. (→P.115)

## PKSB (Parking Support Brake)\*

\*: If equipped

The Parking Support Brake system consists of the following functions that operate when driving at a low speed or backing up, such as when parking. When the system determines that the possibility of a collision with a detected object is high, a warning operates to urge the driver to take evasive action. If the system determines that the possibility of a collision with a detected object is extremely high, the brakes are automatically applied to help avoid the collision or help reduce the impact of the collision.

## PKSB (Parking Support Brake) system

- Parking Support Brake function (static objects)
- →P.306
- Parking Support Brake function (rear-crossing vehicles) (if equipped)
- →P.309

## **WARNING**

## Cautions regarding the use of the system

Do not overly rely on the system, as doing so may lead to an accident.

Always drive while checking the safety of the surroundings of the vehicle.

Depending on the vehicle and road conditions, weather, etc., the system may not operate.

The detection capabilities of sensors and radars are limited. Always drive while checking the safety of the surroundings of the vehicle.

- The driver is solely responsible for safe driving. Always drive carefully, taking care to observe your surroundings. The Parking Support Brake system is designed to provide support to lessen the severity of collisions. However, it may not operate in some situations.
- The Parking Support Brake system is not designed to stop the vehicle completely. Additionally, even if the system has stopped the vehicle, it is necessary to depress the brake pedal immediately as brake control will be canceled after approximately 2 seconds.
- It is extremely dangerous to check the system operations by intentionally driving the vehicle into the direction of a wall, etc. Never attempt such actions.

### When to disable the Parking Support Brake

In the following situations, disable the Parking Support Brake as the system may operate even though there is no possibility of a collision.

When inspecting the vehicle using a chassis roller, chassis dynamo or free roller.

- When loading the vehicle onto a boat, truck or other transport vessel.
- If the suspension has been modified or tires of a size other than specified are installed.
- If the front of the vehicle is raised or lowered due to the carried load.
- When equipment that may obstruct a sensor is installed, such as a towing eyelet, bumper protector (an additional trim strip, etc.), bicycle carrier, or snow plow.
- When using automatic car washing devices.
- If the vehicle cannot be driven in a stable manner, such as when the vehicle has been in an accident or is malfunctioning.
- When the vehicle is driven in a sporty manner or off-road.
- When the tires are not properly inflated.
- When the tires are very worn.
- When tire chains, a compact spare tire or an emergency tire puncture repair kit are used.

## <u>^</u>

### **NOTICE**

If "PKSB Unavailable" is displayed on the multi-information display and the PKSB OFF indicator is flashing


If this message is displayed immediately after the power switch is changed to ON, operate the vehicle carefully, paying attention to your surroundings. It may be necessary to drive the vehicle for a certain amount of time before the system returns to normal. (If the system does not return to normal after driving for a while, clean the sensors and their surrounding area on the bumpers.)

## Enabling/Disabling the Parking Support Brake

The Parking Support Brake can be enabled/disabled on the screen of the multi-information display. All of the Parking Support Brake functions (static objects and rear-crossing vehicles) are enabled/disabled simultaneously. (→P.115)

When the Parking Support Brake is disabled, the PKSB OFF indicator (→P.97) illuminates on the multi-information display.

To re-enable the system, select on the multi-information display, select



If the system is disabled, it will remain off even if the power switch is turned to ON after the power switch has been turned off.

# Display and buzzer for hybrid system output restriction control and brake control

If the hybrid system output restriction control or brake control operates, a buzzer will sound and a message will be displayed on the multi-information display, navigation system (if equipped) or multimedia system screen, to alert the driver.

Depending on the situation, hybrid system output restriction control will operate to either limit acceleration or restrict output as much as possible.

 Hybrid system output restriction control is operating (acceleration restriction)

Acceleration greater than a certain amount is restricted by the system.

Navigation system (if equipped) or multimedia system (if equipped) screen: No warning displayed

Multi-information display: "Object Detected Ahead Speed Reduced"

PKSB OFF indicator: Not illuminated

Buzzer: Does not sound

 Hybrid system output restriction control is operating (output restricted as much as possible)

The system has determined that stronger-than-normal brake operation is necessary.

Navigation system (if equipped) or multimedia system (if equipped) screen: "BRAKE!"

Multi-information display: "BRAKE!"

Buzzer: Short beep

Brake control is operating

The system determined that emergency braking is necessary.

Navigation system (if equipped) or multimedia system (if equipped) screen: "BRAKE!"

Multi-information display: "BRAKE!" PKSB OFF indicator: Not illuminated Buzzer: Short beep

Vehicle stopped by system operation

The vehicle has been stopped by brake control operation.

Navigation system (if equipped) or multimedia system (if equipped) screen: "Press Brake Pedal"

Multi-information display: "Switch to Brake" (If the accelerator pedal is not depressed, "Press Brake Pedal" will be displayed.)

PKSB OFF indicator: Illuminated

Buzzer: Short beep


## System overview

If the Parking Support Brake determines that a collision with a detected object is possible, the hybrid system output will be restricted to restrain any increase in the vehicle speed. (Hybrid system output restriction control: See figure 2.)


Additionally, if the accelerator pedal continues to be depressed, the brakes will be applied automatically to reduce the vehicle speed. (Brake

control: See figure 3.)

 Figure 1: When the PKSB (Parking Support Brake) is not operating

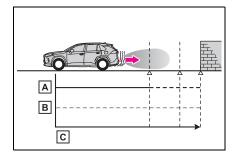


- A Hybrid system output
- **B** Braking force
- C Time
- Figure 2: When hybrid system output restriction control operates

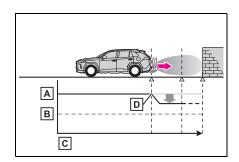

- A Hybrid system output
- **B** Braking force
- C Time
- D Hybrid system output restriction control begins operating (System determines that possibility of collision with detected object is high)

4

 Figure 3: When hybrid system output restriction control and brake control operates

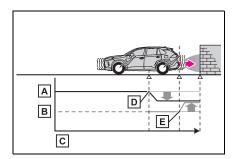

- A Hybrid system output
- **B** Braking force
- C Time
- D Hybrid system output restriction control begins operating (System determines that possibility of collision with detected object is high)
- E Brake control begins operating (System determines that possibility of collision with detected object is extremely high)

## ■If the Parking Support Brake has operated

If the vehicle is stopped due to operation of the Parking Support Brake, the Parking Support Brake will be disabled and the PKSB OFF indicator will illuminate. If the Parking Support Brake operates unnecessarily, brake control can be canceled by depressing the brake pedal or waiting for approximately 2 seconds for it to automatically be canceled. Then, the vehicle can be operated by depressing the accelerator pedal.

## Re-enabling the Parking Support Brake

To re-enable the Parking Support Brake when it is disabled due to operation of the Parking Support Brake, either enable the system again (→P.302), or turn the power switch to OFF and then back to ON. Additionally, if the object becomes no longer in the traveling direction of the vehicle or if the traveling direction of the vehicle changes (such as changing from moving forward to backing up, or from backing up to moving forward), the system will be reenabled automatically.

### If "PKSB Unavailable" is displayed on the multi-information display and the PKSB OFF indicator is flashing

If this message is displayed, a sensor on the front or rear bumper may be dirty. Clean the sensors and their surrounding area on the bumpers.

- ■If "PKSB Unavailable" and "Parking Assist Unavailable Please Clean Parking Assist Sensor" are displayed on the multi-information display and the PKSB OFF indicator is flashing
- A sensor may be covered with ice, snow, dirt, etc. In this case, remove the ice, snow, dirt, etc., from the sensor to return the system to normal. If this message is shown even after removing dirt from the sensor, or shown when the sensor was not dirty to begin with, have the vehicle inspected at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- A sensor may be frozen. Once the ice melts, the system will return to normal
- Water may be continuously flowing over the sensor surface, such as in a heavy rain. When the system determines that it is normal, the system will return to normal.

## ■ If a 12-volt battery terminal has been disconnected and reconnected

The system needs to be initialized. To initialize the system, drive the vehicle straight ahead for 5 seconds or more at a speed of approximately 35 km/h (22 mph) or more.

## Parking Support Brake function (static objects)\*


## \*: If equipped


If the sensors detect a static object, such as a wall, in the traveling direction of the vehicle and the system determines that a collision may occur due to the vehicle suddenly moving forward due to an accidental accelerator pedal operation, the vehicle moving the unintended direction due to the wrong shift position being selected, or while parking or traveling at low speeds, the system will operate to lessen the impact with the detected static object and reduce the resulting damage.

## **Examples of function operation**


This function will operate in situations such as the following if an object is detected in the traveling direction of the vehicle.

■ When traveling at a low speed and the brake pedal is not depressed, or is depressed late

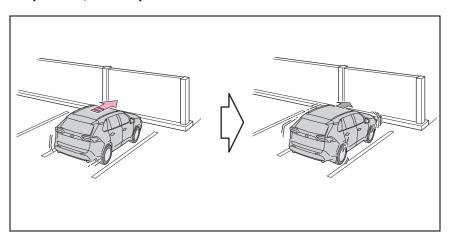

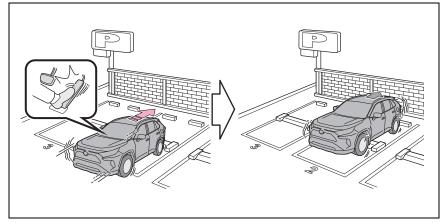

■ When the vehicle moves in the unintended direction due to the wrong shift position being selected

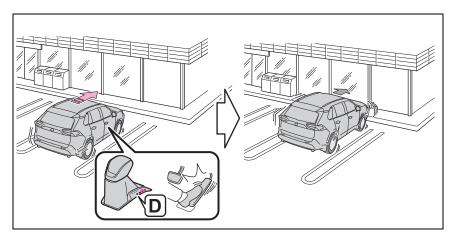

## Types of sensors

→P.291

## **WARNING**

■To ensure the system can operate properly

→P.292

- ■If the Parking Support Brake function (static objects) operates unnecessarily, such as at a railroad crossing
- Notes when washing the vehicle →P.293

#### ■The Parking Support Brake function (static object) will operate when

The function will operate when the PKSB OFF indicator is not illuminated or flashing (→P.96, 97) and all of the following conditions are met:

- Hybrid system output restriction control
- The Parking Support Brake is enabled.
- The vehicle speed is approximately 15 km/h (9 mph) or less.
- There is a static object in the traveling direction of the vehicle and approximately 2 to 4 m (6 to 13 ft.) away.
- The Parking Support Brake determines that a stronger-than-normal brake operation is necessary to avoid a collision.
- Brake control
- Hybrid system output restriction control is operating
- The Parking Support Brake determines that an immediate brake operation is necessary to avoid a collision.

### ■The Parking Support Brake function (static objects) will stop operating when

The function will stop operating if any of the following conditions are met:

- Hybrid system output restriction control
- The Parking Support Brake is disabled.
- The system determines that the collision has become avoidable with normal brake operation.
- The static object is no longer approximately 2 to 4 m (6 to 13 ft.) away from the vehicle or in the traveling direction of the vehicle.
- Brake control
- The Parking Support Brake is disabled.
- Approximately 2 seconds have elapsed since the vehicle was stopped by brake control.
- · The brake pedal is depressed after

the vehicle is stopped by brake control.

The static object is no longer approximately 2 to 4 m (6 to 13 ft.) away from the vehicle or in the traveling direction of the vehicle.

## ■ Detection range of the Parking Support Brake function (static objects)

The detection range of the Parking Support Brake function (static objects) differs from the detection range of the Toyota parking assist-sensor. (→P.296) Therefore, even if the Toyota parking assist-sensor detects an object and provides a warning, the Parking Support Brake function (static objects) may not start operating.

## Situations in which the Parking Support Brake function (static objects) may not operate

When the shift lever is in N

- Situations in which the system may not operate properly
- →P.294
- Situations in which the system may operate even if there is no possibility of a collision

→P.295

## Parking Support Brake function (rear-crossing vehicles)\*


## \*: If equipped

If a rear radar sensor detects a vehicle approaching from the right or left at the rear of the vehicle and the system determines that the possibility of a collision is high, this function will perform brake control to reduce the likelihood of an impact with the approaching vehicle.

## **Examples of function operation**

This function will operate in situations such as the following if a vehicle is detected in the traveling direction of the vehicle.

■ When reversing, a vehicle is approaching and the brake pedal is not depressed, or is depressed late

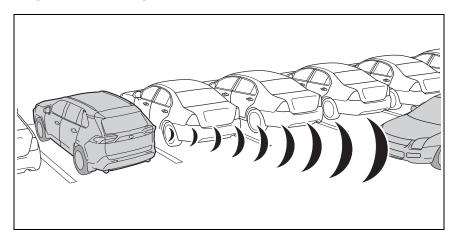

## Types of sensors

→P.284



## WARNING

To ensure the system can operate properly

→P.284

## ■The Parking Support Brake function (rear-crossing vehicles) will operate when

The function will operate when the PKSB OFF indicator is not illuminated or flashing (→P.96, 97) and all of the following conditions are met:

- Hybrid system output restriction control
- The Parking Support Brake is enabled.
- The vehicle speed is approximately 15

km/h (9 mph) or less.

- Vehicles are approaching from the right or left at the rear of the vehicle at a traveling speed of approximately 8 km/h (5 mph) or more.
- · The shift lever is in R.
- The Parking Support Brake determines that a stronger than normal brake operation is necessary to avoid a collision with an approaching vehicle.
- Brake control
- Hybrid system output restriction control is operating
- The Parking Support Brake determines that an emergency brake operation is necessary to avoid a collision with an approaching vehicle.

## ■ The Parking Support Brake function (rear-crossing vehicles) will stop operating when

The function will stop operating if any of the following conditions are met:

- Hybrid system output restriction control
- The Parking Support Brake is disabled.
- The collision becomes avoidable with normal brake operation.
- A vehicle is no longer approaching from the right or left at the rear of the vehicle.
- Brake control
- The Parking Support Brake is disabled
- Approximately 2 seconds have elapsed since the vehicle was stopped by brake control.
- The brake pedal is depressed after the vehicle is stopped by brake control
- A vehicle is no longer approaching from the right or left at the rear of the vehicle.

### Detection area of the Parking Support Brake function (rear-crossing vehicles)


The detection area of the Parking Support Brake function (rear-crossing vehicles) differs from the detection area of the RCTA function (→P.288). Therefore, even if the RCTA function detects a vehicle and provides an alert, the Parking Support Brake function (rear-crossing vehicles) may not start operating.

- Situations in which the system may not operate properly
- →P.289
- Situations in which the system may operate even if there is no possibility of a collision
- →P.289

The driving modes can be selected to suit the driving and usage conditions.

## Selecting a driving mode

## ■ FF vehicles

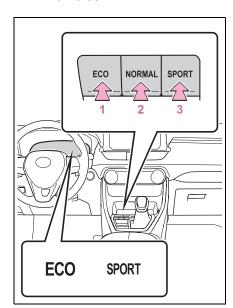

### 1 Eco drive mode

Suitable for driving to improve fuel economy by more smoothly generating torque in response to accelerator pedal operations compared to normal mode and restraining air conditioning system operations (heating/cooling).

When the switch is pressed while not in Eco drive mode, the system switches to Eco drive mode and the Eco drive mode indicator illuminates on the multi-information display.

### 2 Normal mode

Suitable for normal driving.


The driving mode returns to normal mode if the switch is pressed while in Eco drive mode or sport mode.

### 3 Sport mode

Controls the steering feeling and hybrid system to create an acceleration response that is suitable for sporty driving. Suitable for when crisp handling is desired, such as when driving on mountainous roads.

When the switch is pressed while not in sport mode, the system switches to sport mode and the sport mode indicator illuminates on the multi-information display.

## ■ AWD vehicles

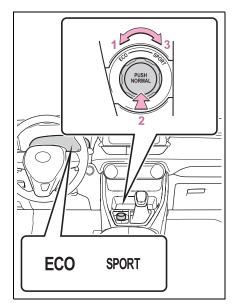

#### 1 Eco drive mode

Suitable for driving to improve fuel economy by more smoothly generating torque in response to accelerator pedal operations compared to normal mode and restraining air conditioning system operations (heating/cooling).

4

When the switch is turned to the left while not in Eco drive mode, the system switches to Eco drive mode and the Eco drive mode indicator illuminates on the multi-information display.

### 2 Normal mode

Suitable for normal driving.

The driving mode returns to normal mode if the switch is pressed while in Eco drive mode or sport mode.

### 3 Sport mode

Controls the steering feeling and hybrid system to create an acceleration response that is suitable for sporty driving. Suitable for when crisp handling is desired, such as when driving on mountainous roads.

When the switch is turned to the right while not in sport mode, the system switches to sport mode and the sport mode indicator illuminates on the multi-information display.

## ■ When changing to a driving mode other than normal mode

- The background color of the multiinformation display changes according to the selected driving mode.
- When the speedometer is set to analog display, the speedometer display color also changes. (For vehicles with 7-inch multi-information display only)
- The color of the switch changes according to the selected driving mode. (AWD models with 7-inch multiinformation display)

## ■ Air conditioning system operation in Eco drive mode

In Eco drive mode, heating/cooling operations and the fan speed is controlled to improve fuel efficiency. Perform the following procedures to increase the air conditioning performance.

■ Adjust the fan speed (→P.333)

Cancel Eco drive mode

### ■ Canceling a driving mode

- Sport mode is automatically canceled and the driving mode returns to normal mode when the power switch is turned off.
- Normal mode and Eco drive mode are not canceled until another driving mode is selected. (Even if the power switch is turned off, normal mode and Eco drive mode will not be automatically canceled.)

## Trail Mode (AWD vehicles)

Trail Mode is designed to control the spinning of the drive wheels by integratedly controlling AWD, brake and drive force control systems. Use the Trail Mode when driving bumpy roads, etc.



## **WARNING**

## ■ Before using Trail Mode

Make sure to observe the following precautions. Failure to observe these precautions may result in an unexpected accident.


- Trail mode is intended for use when driving on rough roads.
- Check that the Trail Mode indicator is illuminated before driving.
- Trail Mode is not intended to expand the limits of the vehicle. Thoroughly check the road conditions and drive with caution.

## **Enabling the system**

Press the Trail Mode switch.


Press the Trail Mode switch, to turn the Trail Mode on. The Trail Mode indicator light will come on the multi-information display.

To turn the system off, press the Trail Mode switch again.

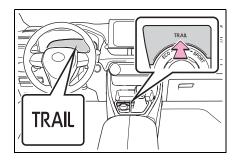

## When the Trail Mode is operating

If the tires are spinning, the slip indicator flashes to indicate that the Trail Mode is controlling the spinning of the tires.

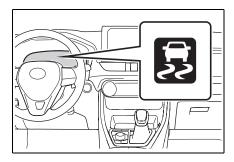

#### ■ Trail Mode

Trail Mode controls the vehicle so that it can use the maximum amount of drive force when driving on rough roads.

As a result, fuel efficiency may diminish when compared to driving with Trail Mode off.

If Trail Mode is continuously used for a long period of time, depending on the driving conditions, the load on related parts increases and the system may not function correctly. In this case, "Traction Control Turned OFF" will be shown on the multi-information display but the vehicle can be driven normally. The "Traction Control Turned OFF" on the multi-information

display will turn off after a short while and the system will operate properly.

#### ■ When Trail Mode is canceled

In the following situations, Trail Mode is automatically canceled even if it is selected:

- When the driving mode is changed. (→P.311)
- When the hybrid system is restarted.

## Sounds and vibrations when driving in Trail Mode

Any of the following conditions may occur when Trail Mode is operating. None of these indicates that a malfunction has occurred:

- Vibrations may be felt throughout the vehicle or steering wheel
- Sounds may be heard from the engine compartment

### ■ When the Trail Mode indicator does not illuminate

When the Trail Mode indicator does not illuminate even though the Trail Mode switch is pressed, the system may be malfunctioning. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.



## NOTICE

## In order to ensure that Trail Mode operates properly

Do not continuously use the Trail Mode for a long period of time. Depending on the driving conditions, the load on related parts increases and the system may not operate properly.

## GPF (Gasoline Particulate Filter) system\*

## \*: If equipped

The GPF system collects particulate matter in the exhaust gas by using an exhaust gas filter. The system will operate to regenerate the filter automatically, depending on the vehicle conditions.

- If "Exhaust Filter Full See Owner's Manual" is shown on the multiinformation display
- The message may be displayed while high load driving with particulate matter accumulating.
- Hybrid system output (engine speed) is restricted when a certain amount of particulate matter accumulates, however, it is possible to drive the vehicle unless the malfunction indicator lamp comes on.
- Particulate matter can accumulate more quickly if the vehicle is frequently driven short trips or at low speeds, or if the hybrid system is regularly started in an extremely cold environment. Excessive accumulation of particulate matter can be prevented by periodically driving long distances continuously with intermittent releasing of the accelerator pedal, such as when driving on highways and freeways.
- ■If the malfunction indicator lamp comes on or "Hybrid System Malfunction Output Power Reduced Visit Your Dealer" is shown on the multi-information display

The amount of accumulated particulate matter has exceeded a certain level. Have the vehicle inspected by any authorized Toyota retailer or Toyota

## $\triangle$

### **NOTICE**

- To prevent the GPF system from not operating properly
- Do not use fuel other than the specified type
- Do not modify the exhaust pipes

## **Driving assist systems**

To keep driving safety and performance, the following systems operate automatically in response to various driving situations. Be aware, however, that these systems are supplementary and should not be relied upon too heavily when operating the vehicle.

## Summary of the driving assist systems

## ■ ECB (Electronically Controlled Brake System)

The electronically controlled system generates braking force corresponding to the brake operation

## ■ ABS (Anti-lock Brake System)

Helps to prevent wheel lock when the brakes are applied suddenly, or if the brakes are applied while driving on a slippery road surface

### ■ Brake assist

Generates an increased level of braking force after the brake pedal is depressed when the system detects a panic stop situation

## ■ VSC (Vehicle Stability Control)

Helps the driver to control skidding when swerving suddenly or turning on slippery road surfaces. 4

## ■ VSC+ (Vehicle Stability Control+)

Provides cooperative control of the ABS, TRC, VSC and EPS.

Helps to maintain directional stability when swerving on slippery road surfaces by controlling steering performance.

## ■ Trailer Sway Control

Helps the driver to control trailer sway by selectively applying brake pressure for individual wheels and reducing driving torque when trailer sway is detected.

## **■ TRC (Traction Control)**

Helps to maintain drive power and prevent the drive wheels from spinning when starting the vehicle or accelerating on slippery roads

## ■ Active Cornering Assist (ACA)

Helps to prevent the vehicle from drifting to the outer side by performing inner wheel brake control when attempting to accelerate while turning

## ■ Hill-start assist control

Helps to reduce the backward movement of the vehicle when starting on an uphill

## **■ EPS (Electric Power Steering)**

Employs an electric motor to reduce the amount of effort needed to turn the steering wheel.

## ■ E-Four (Electronic On-Demand AWD system) (AWD models)

Automatically controls the drive system such as to front-wheel drive or AWD (all wheel drive) according to various running conditions including normal driving, during cornering, on a uphill, when starting off, during acceleration, on a slippery roads due to snow or rain, thus contributing to stable operability and driving stability.

## **■** Emergency brake signal


When the brakes are applied suddenly, the emergency flashers automatically flash to alert the vehicle behind.

## ■ The Secondary Collision Brake (if equipped)

When the SRS airbag sensor detects a collision and the system operates, the brakes and brake lights are automatically controlled to reduce the vehicle speed and help reduce the possibility of further damage due to a secondary collision.

## ■ When the TRC/VSC/ABS/Trail Mode/Trailer Sway Control systems are operating

The slip indicator light will flash while the TRC/VSC/ABS/Trail Mode/Trailer Sway Control systems are operating.

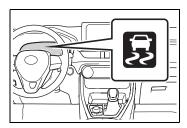


## ■ Disabling the TRC system

If the vehicle gets stuck in mud, dirt or snow, the TRC system may reduce power from the hybrid system to the wheels.

Pressing of to turn the system off may make it easier for you to rock the vehicle in order to free it.

To turn the TRC system off, quickly press and release  $\frac{1}{OFF}$ .

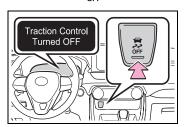

The "Traction Control Turned OFF" will be shown on the multi-information display.

Press or, again to turn the system back on.

### ■ Turning off the TRC/VSC/Trailer Sway Control systems

To turn the TRC/VSC/Trailer Sway Control systems off, press and hold off for more than 3 seconds while the vehicle is stopped.

The VSC OFF indicator light will come on and the "Traction Control Turned OFF" will be shown on the multi-information display.\*

Press of again to turn the systems back on.

- \*: On vehicles with PCS (Pre-Collision System), PCS will also be disabled (only pre-collision warning is available). The PCS warning light will come on and a message will be displayed on the multi-information display. (→P.242)
- When the message is displayed on the multi-information display showing that TRC has been disabled even if OFF has not been pressed

TRC is temporary deactivated. If the information continues to show, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

## Operating conditions of hill-start assist control

When all of the following conditions are met, the hill-start assist control will operate:

- The shift lever is in a position other than P or N (when starting off forward/backward on an upward incline)
- The vehicle is stopped
- The accelerator pedal is not depressed
- The parking brake is not engaged
- The power switch is in ON

## ■ Automatic system cancelation of hill-start assist control

The hill-start assist control will turn off in any of the following situations:

- The shift lever is shifted to P or N
- The accelerator pedal is depressed
- The brake pedal is depressed and the parking brake is engaged
- A maximum of 2 seconds have elapsed after the brake pedal is released
- The power switch is turned to OFF

### Sounds and vibrations caused by the ABS, brake assist, VSC, Trailer Sway Control, TRC and hill-start assist control systems

- A sound may be heard from the engine compartment when the brake pedal is depressed repeatedly, when the hybrid system is started or just after the vehicle begins to move. This sound does not indicate that a malfunction has occurred in any of these systems.
- Any of the following conditions may occur when the above systems are operating. None of these indicates that a malfunction has occurred.
- Vibrations may be felt through the vehicle body and steering.
- A motor sound may be heard also after the vehicle comes to a stop.

### **■**ECB operating sound

ECB operating sound may be heard in the following cases, but it does not indicate that a malfunction has occurred.

- Operating sound heard from the engine compartment when the brake pedal is operated.
- Motor sound of the brake system heard from the front part of the vehicle when the driver's door is opened.
- Operating sound heard from the engine compartment when one or two minutes passed after the stop of the hybrid system.

## ■ Active Cornering Assist operation sounds and vibrations

When the Active Cornering Assist is operated, operation sounds and vibrations may be generated from the brake system, but this is not a malfunction.

## **■EPS** operation sound

When the steering wheel is operated, a motor sound (whirring sound) may be heard. This does not indicate a malfunction.

#### Automatic reactivation of TRC, Trailer Sway Control and VSC systems

After turning the TRC, Trailer Sway Control and VSC systems off, the systems will be automatically re-enabled in the following situations:

- When the power switch is turned off
- If only the TRC system is turned off, the TRC will turn on when vehicle speed increases If both the TRC and VSC systems are turned off, automatic re-enabling will not occur when vehicle speed increases

### Operating conditions of Active Cornering Assist

The system operates when the following occurs.

- TRC/VSC can operate
- The driver is attempting to accelerate while turning
- The system detects that the vehicle is drifting to the outer side
- The brake pedal is released

## ■ Reduced effectiveness of the EPS system

The effectiveness of the EPS system is reduced to prevent the system from overheating when there is frequent steering input over an extended period of time. The steering wheel may feel heavy as a result. Should this occur, refrain from excessive steering input or stop the vehicle and turn the hybrid system off. The EPS system should return to normal within 10 minutes.

## Operating conditions of emergency brake signal

When the following conditions are met, the emergency brake signal will operate:

- The emergency flashers are off.
- Actual vehicle speed is over 55 km/h (35 mph).
- The system judges from the vehicle deceleration that it is a sudden brak-

## Automatic system cancelation of emergency brake signal

The emergency brake signal will be canceled in any of the following situations:

- The emergency flashers are turned on
- The system judges from the vehicle deceleration that is not a sudden braking operation.

## ■ Secondary Collision Brake operating conditions (if equipped)

The system operates when the SRS airbag sensor detects a collision while the vehicle is in motion. However, the system does not operate when the components are damaged.

## Secondary Collision Brake automatic cancellation (if equipped)

The system is automatically canceled in any of the following situations.

- The vehicle speed is below 10 km/h (6 mph)
- A certain amount of time elapses during operation
- The accelerator pedal is depressed a large amount

## ■ If a message about AWD is shown on the multi-information display (AWD models)

Perform the following actions.

"AWD System Overheated Switching to 2WD Mode"

AWD system is overheated. Stop the vehicle in a safe place with the hybrid system operating.\*

If the message disappears after a while, there is no problem. If the message remains, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

"AWD System Overheated 2WD Mode Engaged" AWD system has been temporarily released and switched to front-wheel drive due to overheating. Stop the vehicle in a safe place with the hybrid system operating.\*

If the message disappears after a while, AWD system will automatically recover. If the message remains, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

"AWD System Malfunction 2WD Mode Engaged Visit Your Dealer"

A malfunction occurs in the AWD system. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

\*: When stopping the vehicle, do not stop the hybrid system until the display message has turned off.

## Λ

## **WARNING**

## The ABS does not operate effectively when

- The limits of tire gripping performance have been exceeded (such as excessively worn tires on a snow covered road).
- The vehicle hydroplanes while driving at high speed on wet or slick roads.
- Stopping distance when the ABS is operating may exceed that of normal conditions

The ABS is not designed to shorten the vehicle's stopping distance. Always maintain a safe distance from the vehicle in front of you, especially in the following situations:

- When driving on dirt, gravel or snow-covered roads
- When driving with tire chains

4

## **WARNING**

- When driving over bumps in the road
- When driving over roads with potholes or uneven surfaces

## ■ TRC/VSC may not operate effectively when

Directional control and power may not be achievable while driving on slippery road surfaces, even if the TRC/VSC system is operating. Drive the vehicle carefully in conditions where stability and power may be lost.

### Active Cornering Assist does not operate effectively when

- Do not overly rely on Active Cornering Assist. Active Cornering Assist may not operate effectively when accelerating down slopes or driving on slippery road surfaces.
- When Active Cornering Assist frequently operates, Active Cornering Assist may temporarily stop operating to ensure proper operation of the brakes, TRC and VSC.

### ■ Hill-start assist control does not operate effectively when

- Do not overly rely on hill-start assist control. Hill-start assist control may not operate effectively on steep inclines and roads covered with ice.
- Unlike the parking brake, hill-start assist control is not intended to hold the vehicle stationary for an extended period of time. Do not attempt to use hill-start assist control to hold the vehicle on an incline, as doing so may lead to an accident.

## ■When the TRC/ABS/VSC/Trailer Sway Control is activated

The slip indicator light flashes. Always drive carefully. Reckless driving may cause an accident. Exercise particular care when the indicator light flashes.

## ■ When the TRC/VSC/Trailer Sway Control systems are turned off

Be especially careful and drive at a speed appropriate to the road conditions. As these are the systems to help ensure vehicle stability and driving force, do not turn the TRC/VSC/Trailer Sway Control systems off unless necessary.

Trailer Sway Control is part of the VSC system and will not operate if VSC is turned off or experiences a malfunction.

#### Replacing tires

Make sure that all tires are of the specified size, brand, tread pattern and total load capacity. In addition, make sure that the tires are inflated to the recommended tire inflation pressure level.

The ABS, TRC, VSC and Trailer Sway Control systems will not function correctly if different tires are installed on the vehicle.

Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for further information when replacing tires or wheels.

#### Handling of tires and the suspension

Using tires with any kind of problem or modifying the suspension will affect the driving assist systems, and may cause a system to malfunction.

## **WARNING**

### ■ Trailer Sway Control precaution

The Trailer Sway Control system is not able to reduce trailer sway in all situations. Depending on many factors such as the conditions of the vehicle, trailer, road surface and driving environment, the Trailer Sway Control system may not be effective. Refer to your trailer owner's manual for information on how to tow your trailer properly.

### If trailer sway occurs

Observe the following precautions. Failing to do so may cause death or serious injury.

- Firmly grip the steering wheel. Steer straight ahead. Do not try to control trailer swaying by turning the steering wheel.
- Begin releasing the accelerator pedal immediately but very gradually to reduce speed. Do not increase speed. Do not apply vehicle brakes.

If you make no extreme correction with the steering or brakes, your vehicle and trailer should stabilize. (→P.190)

## Secondary Collision Brake (if equipped)

Do not rely solely upon the Secondary Collision Brake. This system is designed to help reduce the possibility of further damage due to a secondary collision, however, that effect changes according to various conditions. Overly relying on the system may result in death or serious injury.

## Hybrid Electric Vehicle driving tips

For economical and ecological driving, pay attention to the following points:

## Using Eco drive mode

When using Eco drive mode, the torque corresponding to the accelerator pedal depression amount can be generated more smoothly than it is in normal conditions. In addition, the operation of the air conditioning system (heating/cooling) will be minimized, improving the fuel economy. ( $\rightarrow$ P.311)

## Use of Hybrid System Indicator

The Eco-friendly driving is possible by keeping the indicator of Hybrid System Indicator within Eco area. (→P.100, 106)

## Shift lever operation

Shift the shift lever to D when stopped at a traffic light, or driving in heavy traffic etc. Shift the shift lever to P when parking. When using the N position, there is no positive effect on fuel consumption. In the N position, the gasoline engine operates but electricity cannot be generated. Also, when using the air conditioning system, etc.,

the hybrid battery (traction battery) power is consumed.

## Accelerator pedal/brake pedal operation

- Drive your vehicle smoothly. Avoid abrupt acceleration and deceleration. Gradual acceleration and deceleration will make more effective use of the electric motor (traction motor) without having to use gasoline engine power.
- Avoid repeated acceleration.
   Repeated acceleration consumes hybrid battery (traction battery) power, resulting in poor fuel consumption. Battery power can be restored by driving with the accelerator pedal slightly released.

## When braking

Make sure to operate the brakes gently and in a timely manner. A greater amount of electrical energy can be regenerated when slowing down.

## Delays

Repeated acceleration and deceleration, as well as long waits at traffic lights, will lead to bad fuel economy. Check traffic reports before leaving and avoid delays as much as possible. When driving in

#### Highway driving

Control and maintain the vehicle at a constant speed. Before stopping at a toll booth or similar, allow plenty of time to release the accelerator and gently apply the brakes. A greater amount of electrical energy can be regenerated when slowing down.

#### Air conditioning

Use the air conditioning only when necessary. Doing so can help reduce excessive gasoline consumption.

In summer: When the ambient temperature is high, use the recirculated air mode. Doing so will help to reduce the burden on the air conditioning system and reduce fuel consumption as well.

In winter: Because the gasoline engine will not automatically cut out until it and the interior of the vehicle are warm, it will consume fuel. Also, fuel consumption can be improved by avoiding overuse of the heater.

## Checking tire inflation pressure

Make sure to check the tire inflation pressure frequently. Improper tire inflation pressure can cause poor fuel economy.

Also, as snow tires can cause large amounts of friction, their use on dry roads can lead to poor fuel economy. Use tires that are appropriate for the season.

#### Luggage

Carrying heavy luggage will lead to poor fuel economy. Avoid carrying unnecessary luggage. Installing a large roof rack will also cause poor fuel economy.

#### Warming up before driving

Since the gasoline engine starts up and cuts out automatically when cold, warming up the engine is unnecessary. Moreover, frequently driving short distances will cause the engine to repeatedly warm up, which can lead to excess fuel consumption.

4

Driving

#### Winter driving tips

Carry out the necessary preparations and inspections before driving the vehicle in winter. Always drive the vehicle in a manner appropriate to the prevailing weather conditions.

#### Pre-winter preparations

- Use fluids that are appropriate to the prevailing outside temperatures.
- · Engine oil
- · Engine coolant
- · Power control unit coolant
- · Washer fluid
- Have a service technician inspect the condition of the 12volt battery.
- Have the vehicle fitted with four snow tires or purchase a set of tire chains for the front tires.\*

Ensure that all tires are the same size and brand, and that chains match the size of the tires.

\*: Tire chains cannot be mounted on vehicles with 235/55R19 tires.

#### $\Lambda$

#### **WARNING**

#### Driving with snow tires

Observe the following precautions to reduce the risk of accidents. Failure to do so may result in a loss of vehicle control and cause death or serious injury.

Use tires of the specified size.

- Maintain the recommended level of air pressure.
- Do not drive at speeds in excess of the speed limit or the speed limit specified for the snow tires being
- Use snow tires on all, not just some wheels.

## ■ Driving with tire chains (except 235/55R19 tires)

Observe the following precautions to reduce the risk of accidents. Failure to do so may result in the vehicle being unable to be driven safely, and may cause death or serious injury.

- Do not drive in excess of the speed limit specified for the tire chains being used, or 50 km/h (30 mph), whichever is lower.
- Avoid driving on bumpy road surfaces or over potholes.
- Avoid sudden acceleration, abrupt steering, sudden braking and shifting operations that cause sudden engine braking.
- Slow down sufficiently before entering a curve to ensure that vehicle control is maintained.
- Do not use LTA (Lane Tracing Assist) system (if equipped).



#### **NOTICE**

#### ■Repairing or replacing snow tires

Request repairs or replacement of snow tires from any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer or legitimate tire retailers.

This is because the removal and attachment of snow tires affects the operation of the tire pressure warning valves and transmitters.

ous because it may cause the vehicle to move unexpectedly, possibly leading to an accident.

parked without setting the park-

ing brake, make sure to block the

wheels.

When the parking brake is in automatic mode, release the parking brake after shifting the shift lever to P.  $(\rightarrow P.210)$ 

- the brakes damp in cold temperatures, there is a possibility of the brakes freezing.
- setting the parking brake, conmoved out of P\*.
- \*: The shift lever will be locked if it is attempted to be shifted from P to any other position without depressing the brake pedal. If the shift lever can be shifted from P, there may be a problem with the shift lock system. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

#### Before driving the vehicle

Perform the following according to the driving conditions:

- Do not try to forcibly open a window or move a wiper that is frozen. Pour warm water over the frozen area to melt the ice. Wipe away the water immediately to prevent it from freezing.
- To ensure proper operation of the climate control system fan, remove any snow that has accumulated on the air inlet vents in front of the windshield.
- Check for and remove any excess ice or snow that may have accumulated on the exterior lights, vehicle's roof, chassis, around the tires or on the brakes.
- Remove any snow or mud from the bottom of your shoes before getting in the vehicle.

#### When driving the vehicle

Accelerate the vehicle slowly, keep a safe distance between you and the vehicle ahead, and drive at a reduced speed suitable to road conditions.

#### When parking the vehicle

 Park the vehicle and move the shift lever to P without setting the parking brake. The parking brake may freeze up, preventing it from being released. If the vehicle is

If the vehicle is left parked with

• If the vehicle is parked without firm that the shift lever cannot be



#### **WARNING**


#### When parking the vehicle

When parking the vehicle without applying the parking brake, make sure to chock the wheels. If you do not chock the wheels, the vehicle may move unexpectedly, possibly resulting in an accident.

#### Selecting tire chains

▶ Vehicles without 235/55R19 tires

Use the correct tire chain size when mounting the tire chains. Chain size is regulated for each tire size.

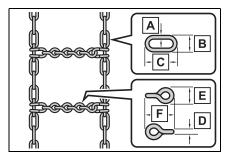

Side chain:

- A 3 mm (0.12 in.) in diameter
- **B** 10 mm (0.39 in.) in width
- © 30 mm (1.18 in.) in length Cross chain:
- D 4 mm (0.16 in.) in diameter
- **E** 14 mm (0.55 in.) in width
- F 25 mm (0.98 in.) in length
- ▶ Vehicles with 235/55R19 tires

Tire chains cannot be mounted. Snow tires should be used instead.

# Regulations on the use of tire chains (except 235/55R19 tires)

Regulations regarding the use of tire chains vary depending on location and type of road. Always check local regulations before installing chains.

#### ■ Tire chain installation

Observe the following precautions when installing and removing chains:

- Install and remove tire chains in a safe location.
- Install tire chains on the front tires only. Do not install tire chains on the rear tires.
- Install tire chains on front tires as tightly as possible. Retighten chains after driving 0.5 - 1.0 km (1/4 - 1/2 mile).
- Install tire chains following the instructions provided with the tire chains.



#### NOTICE

#### Fitting tire chains

The tire pressure warning valves and transmitters may not function correctly when tire chains are fitted.

## Utility vehicle precautions

This vehicle belongs to the utility vehicle class, which has higher ground clearance and narrower tread in relation to the height of its center of gravity to make it capable of performing in a wide variety of offroad applications.

#### Utility vehicle feature

- Specific design characteristics give it a higher center of gravity than ordinary passenger cars.
   This vehicle design feature causes this type of vehicle to be more likely to rollover. And, utility vehicles have a significantly higher rollover rate than other types of vehicles.
- An advantage of the higher ground clearance is a better view of the road allowing you to anticipate problems.
- It is not designed for cornering at the same speeds as ordinary passenger cars any more than low-slung sports cars are designed to perform satisfactorily under off-road conditions. Therefore, sharp turns at excessive speeds may cause the vehicle to rollover.

#### **WARNING**

#### Utility vehicle precautions

Always observe the following precautions to minimize the risk of death, serious injury or damage to your vehicle:

- In a rollover crash, an unbelted person is significantly more likely to die than a person wearing a seat belt. Therefore, the driver and all passengers should always fasten their seat belts.
- Avoid sharp turns or abrupt maneuvers, if at all possible.
   Failure to operate this vehicle correctly may result in loss of control or vehicle rollover causing death or serious injury.
- Loading cargo on the roof luggage carrier (if equipped) will make the center of the vehicle gravity higher. Avoid high speeds, sudden starts, sharp turns, sudden braking or abrupt maneuvers, otherwise it may result in loss of control or vehicle rollover due to failure to operate this vehicle correctly.
- Always slow down in gusty crosswinds. Because of its profile and higher center of gravity, your vehicle is more sensitive to side winds than an ordinary passenger car. Slowing down will allow you to have better control.
- Do not drive horizontally across steep slopes. Driving straight up or straight down is preferred. Your vehicle (or any similar off-road vehicle) can tip over sideways much more easily than forward or backward.

#### Off-road driving

When driving your vehicle off-road, please observe the following pre-

cautions to ensure your driving enjoyment and to help prevent the closure of areas to off-road vehicles:

- Drive your vehicle only in areas where off-road vehicles are permitted to travel.
- Respect private property. Get owner's permission before entering private property.
- Do not enter areas that are closed. Honor gates, barriers and signs that restrict travel.
- Stay on established roads. When conditions are wet, driving techniques should be changed or travel delayed to prevent damage to roads.

#### A

#### WARNING

#### Off-road driving precautions

Always observe the following precautions to minimize the risk of death, serious injury or damage to your vehicle:

- Drive carefully when off the road.
   Do not take unnecessary risks by driving in dangerous places.
- Do not grip the steering wheel spokes when driving off-road. A bad bump could jerk the wheel and injure your hands. Keep both hands and especially your thumbs on the outside of the rim.
- Always check your brakes for effectiveness immediately after driving in sand, mud, water or snow.

- After driving through tall grass, mud, rock, sand, rivers, etc., check that there is no grass, bush, paper, rags, stone, sand, etc. adhering or trapped on the underbody. Clear off any such matter from the underbody. If the vehicle is used with these materials trapped or adhering to the underbody, a breakdown or fire could occur.
- When driving off-road or in rugged terrain, do not drive at excessive speeds, jump, make sharp turns, strike objects, etc. This may cause loss of control or vehicle rollover causing death or serious injury. You are also risking expensive damage to your vehicle's suspension and chassis.



#### **NOTICE**

#### ■To prevent the water damage

Take all necessary safety measures to ensure that water damage to the hybrid battery (traction battery), hybrid system or other components does not occur.

- Water entering the engine compartment may cause severe damage to the hybrid system. Water entering the interior may cause the hybrid battery (traction battery) stowed under the rear seats to short circuit.
- Water entering the hybrid transmission will cause deterioration in transmission quality. The malfunction indicator may come on, and the vehicle may not be drivable.
- Water can wash the grease from wheel bearings, causing rusting and premature failure, and may also enter the hybrid transaxle case, reducing the gear oil's lubricating qualities.

#### NOTICE

#### ■When you drive through water

If driving through water, such as when crossing shallow streams, first check the depth of the water and the bottom of the riverbed for firmness. Drive slowly and avoid deep water.

#### ■Inspection after off-road driving

- Sand and mud that has accumulated around brake discs may affect braking efficiency and may damage brake system components.
- Always perform a maintenance inspection after each day of offroad driving that has taken you through rough terrain, sand, mud, or water.

4


### **Interior features**

5-1.	Using the air conditioning system and defogger
	Automatic air conditioning system332
	Heated steering wheel/seat heaters/seat ventilators339
5-2.	Using the interior lights
	Interior lights list341
5-3.	Using the storage features
	List of storage features344
	Luggage compartment features
5-4.	Using the other interior features
	Other interior features353

#### **Automatic air conditioning system**

Air outlets and fan speed are automatically adjusted according to the temperature setting.

#### Air conditioning controls

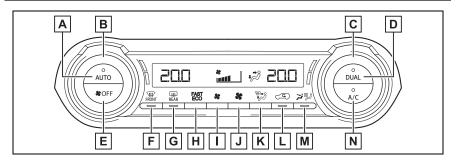

- A Automatic mode switch
- B Left-hand side temperature control switch
- C Right-hand side temperature control switch
- D "DUAL" switch
- E "OFF" switch
- F Windshield defogger switch
- G Rear window defogger and outside rear view mirror defoggers switch
- **H** Blower customization switch
- I Fan speed decrease switch
- J Fan speed increase switch
- K Airflow mode control switch
- L Outside/recirculated air mode switch
- M S-FLOW mode switch
- N "A/C" switch

The illustration is for left-hand drive vehicles. The button positions are reversed for right-hand drive vehicles.

#### Adjusting the temperature setting

Turn driver's side temperature control dial clockwise to increases the temperature and turn the dial counterclockwise to decreases the temperature.

The air conditioning system switches between individual and simultaneous modes each time the "DUAL" switch is pressed.

Simultaneous mode (the indicator on the "DUAL" switch is off):

The driver's side temperature control dial can be used to adjust the temperature for the driver's and passenger's side. At this time, operate the passenger's side temperature control dial to enter individual mode.

Individual mode (the indicator on the "DUAL" switch is on):

The temperature for the driver's and passenger's side can be adjusted separately.

#### ■ Setting the fan speed


Press the fan speed increase switch to increase the fan speed and the fan speed decrease switch to decrease the fan speed.

Pressing the "OFF" switch to turns off the fan.

#### ■ Change the airflow mode

Press the airflow mode control switch.

The airflow mode changes as follows each time the switch is pressed.

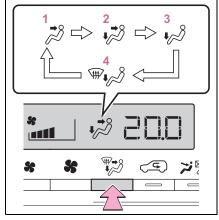

- 1 Upper body
- 2 Upper body and feet
- 3 Feet
- 4 Feet and the windshield defogger operates

#### Switching between outside air and recirculated air modes

Press the outside/recirculated air mode switch.

The mode switches between outside air mode (the indicator is off) and recirculated air mode (the indicator is on) each time the button is pressed.

#### Set cooling and dehumidification function

Press the "A/C" switch.

When the function is on, the indicator illuminates on the "A/C" switch.

#### ■ Defogging the windshield

Defoggers are used to defog the windshield and front side windows.

Press the windshield defogger switch.

Set the outside/recirculated air mode

switch to outside air mode if the recirculated air mode is used. (It may switch automatically.)

To defog the windshield and the side windows quickly, turn the air flow and temperature up.

To return to the previous mode, press the windshield defogger switch again when the windshield is defogged.

When the windshield defogger switch is on, the indicator illuminates on the windshield defogger switch.

#### Defogging the rear window and outside rear view mirrors

Defoggers are used to defog the rear window, and to remove raindrops, dew and frost from the outside rear view mirrors.

Press the rear window defogger and outside rear view mirror defoggers switch.

The defoggers will automatically turn off after 15 minutes.

When the rear window defogger and outside rear view mirror defoggers switch is on, the indicator illuminates on the rear window defogger and outside rear view mirror defoggers switch.

#### **■** Blower customization

If automatic mode is selected, only the fan speed can be adjusted according to your preference.

- Press the automatic mode switch.
- 2 Press the blower customization switch.

**3** Each time the blower customization switch is pressed, the fan speed changes as follows.

"MEDIUM" → "SOFT" → "FAST"

#### **■** Fogging up of the windows

- The windows will easily fog up when the humidity in the vehicle is high. Turning "A/C" switch on will dehumidify the air from the outlets and defog the windshield effectively.
- If you turn "A/C" switch off, the windows may fog up more easily.
- The windows may fog up if the recirculated air mode is used.

#### ■When driving on dusty roads

Close all windows. If dust thrown up by the vehicle is still drawn into the vehicle after closing the windows, it is recommended that the air intake mode be set to outside air mode and the fan speed to any setting except off.

#### ■ Outside/recirculated air mode

- Setting to the recirculated air mode temporarily is recommended in preventing dirty air from entering the vehicle interior and helping to cool the vehicle when the outside air temperature is high.
- Outside/recirculated air mode may automatically switch depending on the temperature setting or the inside temperature.

### ■ Operation of the air conditioning system in Eco drive mode

- In Eco drive mode, the air conditioning system is controlled as follows to prioritize fuel efficiency:
- Engine speed and compressor operation controlled to restrict heating/cooling capacity
- Fan speed restricted when automatic mode is selected
- To improve air conditioning performance, perform the following operations:

- · Adjust the fan speed
- Turn off Eco drive mode (→P.311)

## ■ When the outside temperature falls to nearly 0°C (32°F)

The dehumidification function may not operate even when "A/C" switch is pressed.

### ■ Ventilation and air conditioning odors

- To let fresh air in, set the air conditioning system to the outside air mode.
- During use, various odors from inside and outside the vehicle may enter into and accumulate in the air conditioning system. This may then cause odor to be emitted from the vents.
- To reduce potential odors from occurring:
- It is recommended that the air conditioning system be set to outside air mode prior to turning the vehicle off.
- The start timing of the blower may be delayed for a short period of time immediately after the air conditioning system is started in automatic mode.
- When parking, the system automatically switches to outside air mode to encourage better air circulation throughout the vehicle, helping to reduce odors that occur when starting the vehicle.

#### ■ Air conditioning filter

→P.393

#### **■** Customization

Settings (e.g. A/C Auto switch operation) can be changed. (Customizable features: →P.498)

#### lack

#### **WARNING**

## ■ To prevent the windshield from fogging up

Do not use the windshield defogger switch during cool air operation in extremely humid weather.
The difference between the temperature of the outside air and that of the windshield can cause the outer surface of the windshield to fog up, blocking your vision.

#### When the outside rear view mirror defoggers are operating

Do not touch the rear view mirror surfaces when the outside rear view mirror defoggers are on.



#### NOTICE

### ■ To prevent 12-volt battery discharge

Do not leave the air conditioning system on longer than necessary when the hybrid system is off.

#### Using automatic mode

1 Press the "AUTO" switch.

The dehumidification function begins to operate. Air outlets and fan speed are automatically adjusted according to the temperature setting and humidity.

- 2 Adjust the temperature setting.
- **3** To stop the operation, press the "OFF" switch.

If the fan speed setting or air flow modes are operated, the automatic mode indicator goes off. However, automatic mode for functions other than that operated is maintained.

#### **■** Using automatic mode

Fan speed is adjusted automatically

according to the temperature setting and the ambient conditions.

Therefore, the fan may stop for a while until warm or cool air is ready to flow immediately after the "AUTO" switch is

#### Windshield wiper de-icer (if equipped)/Heated Windshield Defroster (if equipped)

This feature is used to prevent ice from building up on the windshield and wiper blades.


Press the switch to turn the system on/off.

The indicator comes on when the system is on.

Vehicles with windshield wiper de-icer: The windshield wiper de-icer will automatically turn off after a period of time.

Vehicles with Heated Windshield Defroster:

- The Heated Windshield Defroster will automatically turn off in 4 minutes.
- The Heated Windshield Defroster will not operate if the outside temperature is 5°C (41°F) or higher.

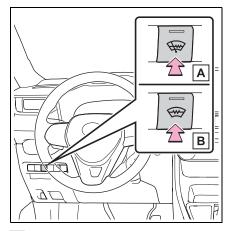

- A Windshield wiper de-icer switch
- B Heated Windshield Defroster switch



#### **WARNING**

#### ■To prevent burns

- Vehicles with windshield wiper deicer: Do not touch the glass at lower part of the windshield or to the side of the front pillars when the windshield wiper de-icer is on.
- Vehicles with Heated Windshield Defroster: Do not touch the windshield (especially the lower part) as the surfaces can become very hot when the Heated Windshield Defroster is on.

#### Front seat concentrated airflow mode (S-FLOW)

This function automatically controls the air conditioning airflow so that priority is given to the front seats. When the front passenger seat is not occupied, airflow may switch to only the driver's seat. Unnecessary air conditioning is suppressed, con-

Interior features

tributing to increased fuel efficiency.

Front seat concentrated airflow mode operates in the following situations.

- No passengers are detected in the rear seats
- The windshield defogger is not operating

While operating, 📜 illuminates.

#### ■ Manually turning front seat concentrated airflow mode on/off

In front seat concentrated airflow mode, directing airflow to the front seats only and to all seats can be switched via switch operation.

When the mode has been switched manually, automatic airflow control stops operating.

Press on the air conditioning operation panel and switch the air-

- Indicator illuminated: Airflow to the front seats only
- Indicator off: Airflow to all the seats

#### ■ Operation of automatic airflow control

- In order to maintain a comfortable interior, airflow may be directed to seats without passengers immediately after the hybrid system is started and at other times depending on the outside temperature.
- After the hybrid system is started, if

passengers move around inside or

enter/exit the vehicle, the system can-

Even if the function is manually switched to directing airflow to only the front seats, when a rear seat is occupied, it may automatically direct airflow to all seats.


#### ■ To return to automatic airflow control

- With the indicator off, turn the power switch to OFF.
- After 60 minutes or more elapse, turn the power switch to ON.


#### Air outlet layout and operations

#### Location of air outlets


The air outlets and air volume change according to the selected air flow mode.

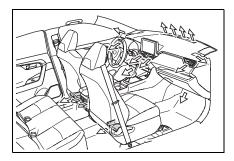

- Adjusting the air flow direction and opening/closing the air outlets
- ▶ Front

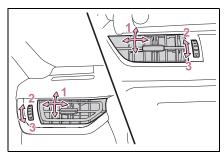

- Direct air flow to the left or right, up or down
- 2 Open the vent
- 3 Close the vent
- ▶ Rear

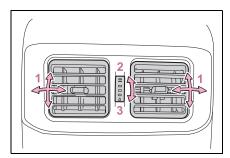


- Direct air flow to the left or right, up or down
- 2 Open the vent
- 3 Close the vent



#### WARNING

## ■To not interrupt the windshield defogger from operating

Do not place anything on the instrument panel which may cover the air outlets. Otherwise, air flow may be obstructed, preventing the windshield defoggers from defogging.

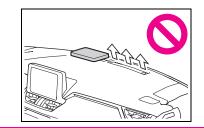

## Heated steering wheel\*/seat heaters\*/seat ventilators\*

\*: If equipped

wheel

- Heated steering wheel
   Warm up the grip of the steering
- Seat heaters

Warm up the seat upholstery

Seat ventilators

Maintain good ventilation by pulling air through the seat upholstery

#### $\Lambda$

#### **WARNING**

#### ■To prevent minor burn injuries

Care should be taken if anyone in the following categories comes in contact with the steering wheel or seats when the heater is on:

- Babies, small children, the elderly, the sick and the physically challenged
- Persons with sensitive skin
- Persons who are fatigued
- Persons who have taken alcohol or drugs that induce sleep (sleeping drugs, cold remedies, etc.)



#### NOTICE

## ■ To prevent damage to the seat heaters and seat ventilators

Do not put heavy objects that have an uneven surface on the seat and do not stick sharp objects (needles, nails, etc.) into the seat.


## ■To prevent 12-volt battery discharge

Do not use the functions when the hybrid system is off.

#### Heated steering wheel

Turns the heated steering wheel on/off

The indicator light comes on when the heated steering wheel is operating.

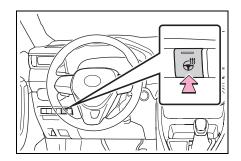


#### ■ Operation condition

The power switch is in ON.

#### Operating the seat heaters

▶ Front

Turns the seat heaters on/off

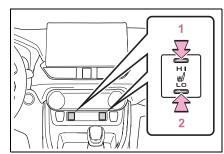

- 1 High temperature
- 2 Low temperature


When the seat heater is on, the

indicator illuminates on the seat heater switch.

When not in use, put the switch in the neutral position. The indicator will turn off.

#### ▶ Rear

Turns the seat heaters on/off
The indicator light comes on when
the seat heater is operating.

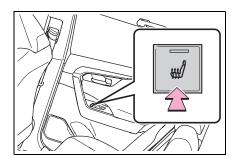

#### ■ Operation condition

The power switch is in ON.



#### **WARNING**

## ■ To prevent causes of overheating and minor burn injuries

Observe the following precautions when using a seat heater:


- Do not cover the seat with a blanket or cushion when using the seat heater.
- Do not use seat heater more than necessary.

# Operating the seat heaters and ventilators

Turns the seat heaters and ventilators on/off

Each time the switch is pressed, the operation condition changes as follows.

Hi (3 segments lit)  $\rightarrow$  Mid (2 segments lit)  $\rightarrow$  Lo (1 segment lit)  $\rightarrow$  Off

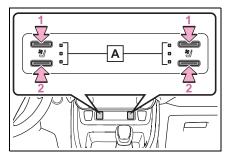

1 Turns the seat heater on

The level indicators (yellow) **A** light up during operation.

2 Turns the seat ventilator on

The level indicators (green) A light up during operation.

#### **■** Operation condition

The power switch is in ON.

### ■ Air conditioning system-linked control mode

When a seat ventilator is set to Hi, the fan speed of the seat ventilator may increase according to the fan speed of the air conditioning system.



#### **WARNING**


## ■ To prevent causes of overheating and minor burn injuries

Observe the following precautions when using a seat heater:

- Do not cover the seat with a blanket or cushion when using the seat heater.
- Do not use seat heater more than necessary.

### Interior lights list

#### Location of the interior lights

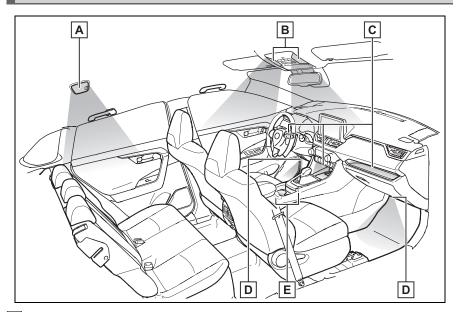


- A Rear interior light (→P.342)
- **B** Front interior lights/personal lights (→P.341, 342)
- C Open tray lights (if equipped)\*
- **D** Footwell lights (if equipped)\*
- **E** Front cup holder lights (if equipped)\*
- \*: These lights turn on when a door is unlocked.

  When the shift lever is in a position other than P, the brightness of these lights will reduce intensity.

### Operating the interior lights


#### ■ Front interior lights

Turns the lights on/off

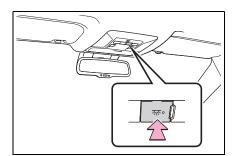


Turns the switch to the door position (door linked)

When a door is opened while the door position is on, the lights turn on.

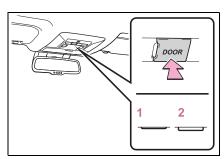

- 1 Turns the door position on
- 2 Turns the lights off
- Rear interior light

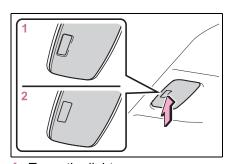


- 1 Turns the light on
- 2 Turns the door-linked function on (door position)

The light turns on/off according to the opening/closing of the doors.

# Operating the personal lights

Turns the lights on/off

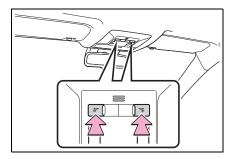

#### ■Illuminated entry system

The lights automatically turn on/off according to the power switch mode, the presence of the electronic key, whether the doors are locked/unlocked, and whether the doors are opened/closed.

## ■ To prevent the 12-volt battery from being discharged

If the interior lights remain on when the power switch is turned to OFF, the lights will go off automatically after 20 minutes.

## ■The interior lights may turn on automatically when

If any of the SRS airbags deploy (inflate) or in the event of a strong rear impact, the interior lights will turn on automatically

The interior lights will turn off automatically after approximately 20 minutes. The interior lights can be turned off manually. However, in order to help prevent further collisions, it is recommended that they be left on until safety can be ensured.

(The interior lights may not turn on automatically depending on the force of the impact and conditions of the collision.)

#### ■ Customization

Setting (e.g. the time elapsed before the lights turn off) can be changed. (Customizable features:→P.498)


### NOTICE

## ■To prevent 12-volt battery discharge

Do not leave the lights on longer than necessary when the hybrid system is off.

### List of storage features

### Location of the storage features

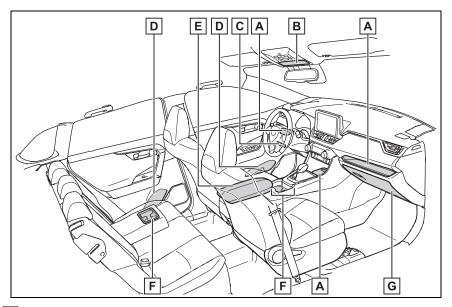

- A Open tray (→P.347)
- **B** Auxiliary box (if equipped) (→P.347)
- C Card holder (if equipped) (→P.347)
- **D** Bottle holders (→P.346)
- E Console box ( $\rightarrow$ P.345)
- F Cup holders (→P.346)
- Glove box ( $\rightarrow$ P.345)


#### **WARNING**

#### Items that should not be left in the vehicle

Do not leave glasses, lighters or spray cans in the storage spaces, as this may cause the following when cabin temperature becomes high:

- Glasses may be deformed by heat or cracked if they come into contact with other stored items.
- Lighters or spray cans may explode. If they come into contact with other stored items, the lighter may catch fire or the spray can may release gas, causing a fire hazard.

#### Glove box

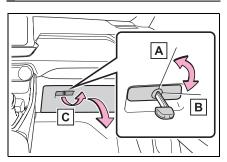

- A Unlock with the mechanical key
- B Lock with the mechanical key
- C Open (pull up the lever)




### **WARNING**

#### Caution while driving

Keep the glove box closed. In the event of sudden braking or sudden swerving, an accident may occur due to an occupant being struck by the open glove box or the items stored inside.


#### Console box

Lift the lid while pushing the button to release the lock.

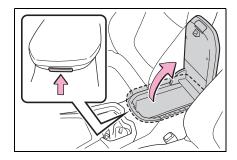

#### ■ Console box tray (if equipped)

The tray can be removed and stored in the bottom of the console box.

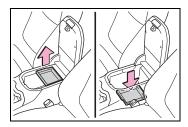

#### **WARNING**

#### Caution while driving


Keep the console box closed.

Injuries may result in the event of an accident or sudden braking.

Interior features


#### Cup holders

#### ▶ Front

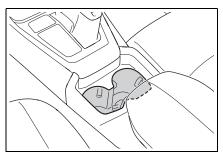

▶ Rear

#### Pull the armrest down

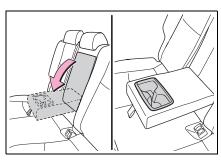

### A

#### **WARNING**


#### Items unsuitable for the cup holders

Do not place anything other than cups or beverage cans in the cup holders. Inappropriate items must not be stored in the cup holders even if the lid is closed.


Other items may be thrown out of the holders in the event of an accident or sudden braking and cause injury. If possible, cover hot drinks to prevent burns.

#### **Bottle holders**

#### ▶ Front

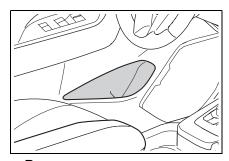

Rear

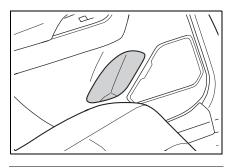

#### ■ Bottle holders

- When storing a bottle, close the cap.
- The bottle may not be stored depending on its size or shape.



#### WARNING

#### Items unsuitable for the bottle holders

Do not place anything other than a bottle in the bottle holders.
Other items may be thrown out of the holders in the event of an accident or sudden braking and cause injury.




#### **NOTICE**

#### ■ Items that should be not stowed in the bottle holders

Do not place open bottles or glass and paper cups containing liquid in the bottle holders. The contents may spill and glasses may break.

#### Auxiliary box (if equipped)

Push the lid.

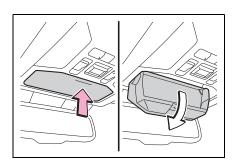

### **WARNING**

#### Caution while driving

Do not leave the auxiliary box open while driving.


Injuries may result in the event of an accident or sudden braking.

#### Items unsuitable for storing

Do not store items heavier than 200 g (0.44 lb.).


Doing so may cause the auxiliary box to open and the items inside may fall out, resulting in an accident.

#### Card holder (right-hand drive vehicles)

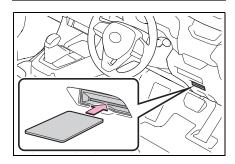


#### Open tray

▶ Driver's side

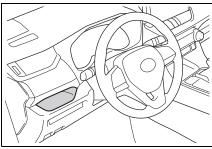


▶ Front passenger's side

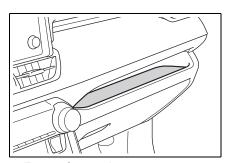

▶ Front of console

Vehicles with wireless charger:

→P.356

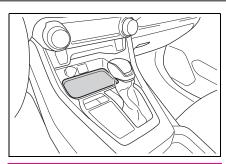

#### $\Lambda$

#### **WARNING**

#### Items unsuitable for the open tray

Observe the following precautions when putting items in the open tray. Failure to do so may cause items to be thrown out of the tray in the event of sudden braking or steering. In these cases, the items may interfere with pedal operation or cause driver distraction, resulting in an accident.


- Do not store items in the tray that can easily shift or roll out.
- Do not stack items in the tray higher than the tray's edge.
- Do not put items in the tray that may protrude over the tray's edge.

## Luggage compartment features

#### Cargo hooks

Raise the hook to use.

The cargo hooks are provided for securing loose items.

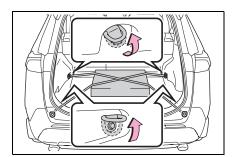



#### **WARNING**

#### ■When cargo hooks are not in use

To avoid injury, always return the hooks to their stowed positions when not in use.


#### Deck board

■ Flipping the deck board upside down (except for vehicles with full-size spare tire)

The deck board can be flipped upside down (resin side up) depending on the situation.


- A Original position
- **B** Underside (resin side)
- Changing the deck board positions (except for vehicles with full-size spare tire)

Height of the deck board can be changed by setting the deck board under the floor.

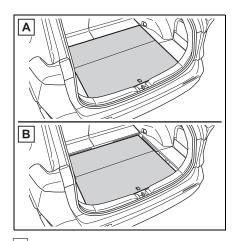


- A Upper
- **B** Lower

1 Pull up the tab to raise the deck board and move it toward you to remove.

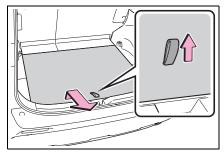

Place the deck board through the groove and move forward.

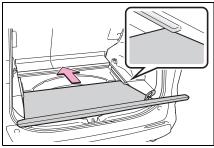


 Setting the deck board upright (except for vehicles with fullsize spare tire)


When taking out the tools or things in the deck under tray (if equipped), the deck board can be set upright.

When the back surface (resin surface) of the deck board is facing up, flip it back to the original position.

1 Pull up the tab to raise the deck board and fold it forward.

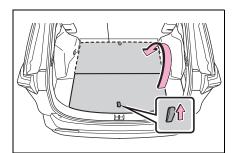

Place the edge into the groove (A), and with the deck board in a standing state, put the edge into the holes (B).

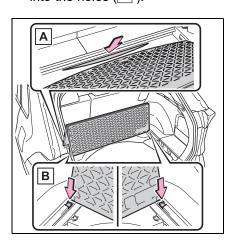

#### A

#### WARNING

#### ■When operating the deck board

Do not place anything on the deck board when operating the board. Otherwise, your fingers may be caught or an accident may result causing injuries.

#### ■ Caution while driving


Keep the deck board closed.

In the event of sudden braking, an accident may occur due to an occupant being struck by the deck board or the items stored under the deck board.

# Deck under tray (if equipped)

Pull up the tab to raise the deck board and fold it forward.

When using the back surface of the deck board (resin surface), remove the deck board.

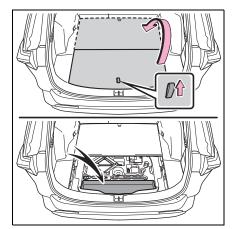

### A

#### **WARNING**

#### Caution while driving


Keep the deck board closed.

In the event of sudden braking, an accident may occur due to an occupant being struck by the deck board or the items stored in the deck under tray.


Interior features

### Side auxiliary box


#### ▶ Type A

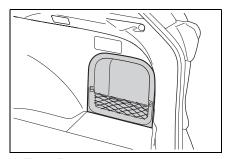

▶ Type B

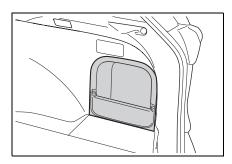

#### ■ Removing the partition plate

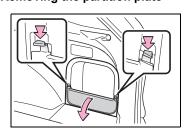


Disengage the claws


### Luggage cover (if equipped)

#### ■ Installing the luggage cover

1 Compress the both ends of the luggage cover and insert into the recess to install.

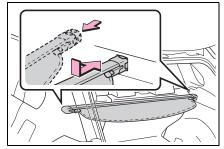


2 Pull out the luggage cover and hook it onto the anchors.

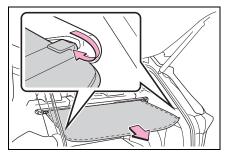


#### Removing the luggage cover

Release the cover from the left and right anchors and allow it to retract.

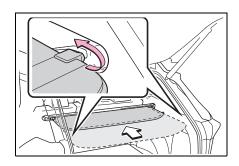


2 Compress the end of the luggage cover and lift the luggage cover up.

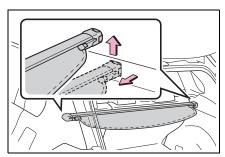


- Stowing the luggage cover (except for vehicles with fullsize spare tire)
- 1 Open the rear deck board and remove the side deck covers.

When the back surface (resin surface) of the deck board is facing up, remove the deck board.

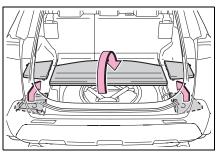

2 Place the both ends of the luggage cover into the holder.

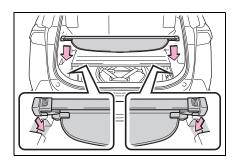

#### **WARNING**

- Luggage cover
- When installing/stowing the luggage cover, make sure that the luggage cover is securely installed/stowed. Failure to do so may result in serious injury in the event of sudden braking or a colli-
- Do not place anything on the luggage cover. In the event of sudden braking or turning, the item may go flying and strike an occupant. This could lead to an unexpected accident, resulting in death or serious injury.
- Do not allow children to climb on the luggage cover. Climbing on the luggage cover could result in damage to the luggage cover, possibly causing death or serious injury to the child.




#### **NOTICE**

#### ■To prevent damage to the luggage cover

Do not place anything on top of the luggage cover. When rolling up the luggage cover, objects may be caught in the cover, damaging the cover and generating noise.

#### Other interior features

#### Sun visors

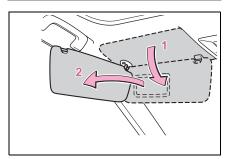


- 1 To set the visor in the forward position, flip it down.
- 2 To set the visor in the side position, flip down, unhook, and swing it to the side.

#### Vanity mirrors

Slide the cover to open.

The light turns on when the cover is opened.

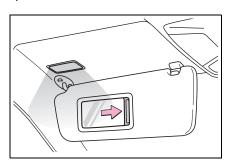

#### Automatic light off to prevent 12volt battery discharge

If the vanity lights remain on when the power switch is turned to OFF, the lights will go off automatically after 20 minutes.

#### $\triangle$


#### **NOTICE**

## ■ To prevent 12-volt battery discharge

Do not leave the vanity lights on for extended periods while the hybrid system is off.

## Portable ashtray (if equipped)

The ashtray can be installed in the cup holder.

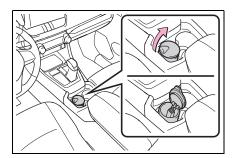

#### **▲** WARNING

#### ■When not in use

Keep the ashtray closed. In the event of sudden braking, an accident may occur due to an occupant being struck by the open ashtray or ash flying out.

#### ■To prevent fire

- Fully extinguish matches and cigarettes before putting them in the ashtray, then make sure the ashtray is fully closed.
- Do not place paper or any other type of flammable object in the ashtray.

#### Power outlet


Please use a power supply for electronic goods that use less than 12 VDC/10 A (power consumption of

120 W).

When using electronic goods, make sure that the power consumption of all the connected power outlets is less than 120 W.


#### ■ Front

Open the lid.

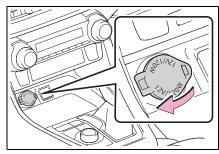


#### **■** Console box (if equipped)

Open the console box and open the lid.

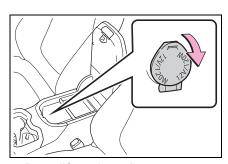


#### ■ Rear (if equipped)

Open the lid.

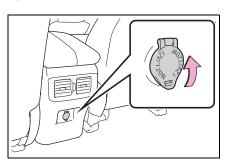

## Luggage compartment (if equipped)

Open the lid.

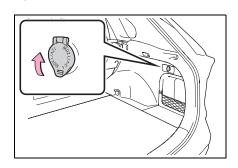

#### ■ The power outlet can be used when

The power switch is in ACC or ON.

#### ■When stopping the hybrid system

Disconnect electrical devices with charging functions, such as mobile battery packs.

If such devices are left connected, the hybrid system may not stop normally.

### <u>^</u>

#### NOTICE

#### ■When power outlet is not in use

To avoid damaging the power outlet, close the power outlet lid when the power outlet is not in use.

Foreign objects or liquids that enter the power outlet may cause a short circuit.

#### ■To prevent blown fuse

Do not use an accessory that uses more than 12 V 10 A.

## ■ To prevent 12-volt battery discharge

Do not use the power outlet longer than necessary when the hybrid system is off.

Interior features

# USB Type-C charging ports (if equipped)


The USB Type-C charging ports are used to supply 3 A of electricity at 5 V to external devices.

The USB Type-C charging ports are for charging only. They are not designed for data transfer or other purposes.

Depending on the external device, it may not charge properly. Refer to the manual included with the device before using a USB charging port.


## Using the USB Type-C charging ports

▶ Console box

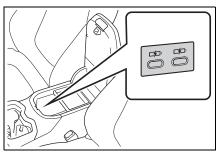

▶ Rear

Open the lid.

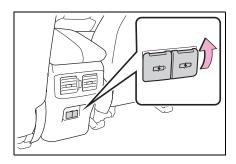

## ■ The USB Type-C charging ports can be used when

The power switch is in ACC or ON.

- Situations in which the USB Type-C charging ports may not operate correctly
- If a device which consumes more than 3 A at 5 V is connected
- If a device designed to communicate with a personal computer, such as a USB memory device, is connected
- If the connected external device is turned off (depending on device)
- If the temperature inside the vehicle is high, such as after the vehicle has been parked in the sun

#### ■ About connected external devices

Depending on the connected external device, charging may occasionally be suspended and then start again. This is not a malfunction.

#### ∧ NOTICE

#### ■ To prevent damage to the USB Type-C charging ports

- Do not insert foreign objects into the ports.
- Do not spill water or other liquids into the ports.
- When the USB Type-C charging ports are not in use, close the lids. If a foreign object or liquid enters a port may cause a short circuit.
- Do not apply excessive force to or impact the USB Type-C charging ports.
- Do not disassemble or modify the USB Type-C charging ports.

#### $\wedge$

#### **NOTICE**

### ■ To prevent damage to external devices

- Do not leave external devices in the vehicle. The temperature inside the vehicle may become high, resulting in damage to an external device.
- Do not push down on or apply unnecessary force to an external device or the cable of an external device while it is connected.
- To prevent 12-volt battery discharge

Do not use the USB Type-C charging ports for a long period of time when the hybrid system is off.

## Wireless charger (if equipped)

A portable device can be charged by just placing Qi standard wireless charge compatible portable devices according to the Wireless Power Consortium, such as smartphones and mobile batteries, etc., on the charge area.


This function cannot be used with portable devices that are larger than the charging tray. Also, depending on the portable device, it may not operate as normal. Please read the operation manual for portable devices to be used.

#### ■ The "Qi" logo

The "Qi" logo is a trademark of the Wireless Power Consortium.



#### ■ Name for all parts

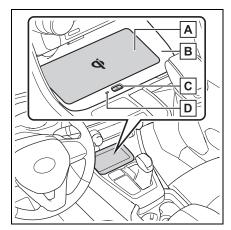

- A Charge area\*
- **B** Charging tray
- C Power supply switch
- D Operation indicator light
- \*: Portable devices and wireless chargers contain charging coils. The charging coil in the wireless charger can be moved within the charge area near the center of the charging tray. If the charging coil inside a portable device is detected in the charge area, the charging coil inside the wireless charger will move toward it and start charging. If the charging coil inside a portable device moves outside of the charge area, charging will automatically stop.

If 2 or more portable devices are placed on the charging tray, their charging coils may not be properly detected and they may not be charged.

Interior features


#### ■ Using the wireless charger

1 Press the power supply switch of the wireless charger.

Switches on and off with each press of the power supply switch.

When turned on, the operation indicator light (green) comes on.

Even with the hybrid system off, the on/off state of the power supply switch is memorized.

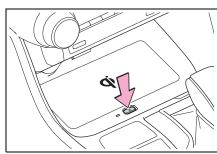


Place the portable device on the charging tray

Place the charging side of the portable device down with the center of the device in the center of the charge area. When charging, the operation indicator

light (orange) comes on.

If charging is not occurring, try placing the portable device as close to the center of the charging area as possible.

When charging is complete, the operation indicator light (green) comes on.

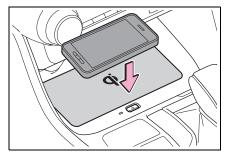

#### ■ Recharging function

When charging is complete and

- after a fixed time in the charge suspension state, charging restarts.
- When the portable device is moved, charging is stopped for a moment and then it restarts.

#### ■ Rapid charging function

- The following portable devices support rapid charging.
- Portable devices compliant with WPC Ver1.2.4 and compatible with rapid charging
- iPhone's with an iOS version that supports 7.5 W charging (iPhone 8 and later models)
- To switch to the rapid charging function, press the power supply switch 3 times while charging.
   When rapid charging is possible, the operation indicator light will switch from orange to flashing between green and orange.
- When charging is complete, the rapid charging function will stop.
   Switch again to the rapid charging function to use rapid charging again.

## ■ Lighting conditions of operation indicator light

Operation indicator light	Conditions
Turning off	When the Wireless charger power supply is off

Operation indicator light	Conditions
Green (comes on)	On Standby (charging possible state)*1
(comes on)	When charging is complete*2
Orange (comes on)	When placing the portable device on the charging area (detecting the portable device)
	Charging
Flashing between green and orange	When any of the following portable devices is using rapid charging • Portable devices compliant with WPC Ver1.2.4 and compatible with rapid charging • iPhone's with an iOS version that supports 7.5 W charging (iPhone 8 and later models)

- \*1: Charging power will not be output during standby. A metallic object will not be heated, if it is placed on the charging tray in this state.
- \*2: Depending on the portable device, there are cases where the operation indicator light will continue being lit up orange even after the charging is complete.

## ■ When the operation indicator light flashes

When an error occurs, the operation indicator light flashes an orange color.

Handle the error based on the following tables.

 Flashing repeatedly once every second (Orange)

Suspected causes	Handling method
Vehicle to charger communication failure.	If the hybrid system is running, stop and then restart the hybrid system. If the power switch is in ACC, start the hybrid system. (→P.199)

Repeatedly flashes 3 times continuously (Orange)

Suspected causes	Handling method
Foreign substance detection: A metallic foreign substance is in the charge area, and so the abnormal heating prevention function of the charging coil oper-	Remove the foreign substance from the charge area.
Portable device misaligned:	Remove the porta- ble device from the charging tray, check that the
The charging coil in the portable device moved out- side of the charge area, and so the abnormal heating prevention function of the charging coil operated	operation indicator light switches back to green, and then once again place the device near the center of the charging tray. If there is a case or cover attached to the portable device, remove it.

Repeatedly flashes 4 times continuously (Orange)

Suspected causes	Handling method
temperature within the wireless char-	Stop charging, remove the portable device from the charging tray, wait for the temperature to drop, and then start charging again.

#### ■ The wireless charger can be operated when

The power switch is in ACC or ON.

#### ■ Usable portable devices

- Qi standard wireless charge standard can be used on compatible devices.
   However, not all Qi standard devices and compatibility are guaranteed.
- Starting with mobile phones and smartphones, it is aimed for low power electrically supplied portable devices of no more than 5W.
- However, charging exceeding 5 W is supported by the following portable devices.
- Charging at 7.5 W or less is supported by iPhone's that support 7.5 W charging.
- Charging at 10 W or less is supported by portable devices compliant with WPC standard Ver1.2.4.

## ■ Using the smart entry & start system

If the smart entry & start system detects the key while a device is being charged, charging will be temporarily stopped.

## ■ When covers and accessories are attached to portable devices

Do not charge in situations where cover and accessories not able to handle Qi are attached to the portable device. Depending on the type of cover and accessory, it may not be possible to charge. When charging is not performed even with the portable device placed on the charge area, remove the cover and accessories.

## ■ While charging, noise enters the AM radio

- Turn off the wireless charger and confirm that the noise has decreased. If the noise decreases, continuously pushing the power supply switch of the wireless charger for 2 seconds, the frequency of the charger can be changed and the noise can be reduced. Also, on that occasion, the operation indicator light will flash orange 2 times.
- iPhone's use a particular frequency for rapid charging. Depending on the iOS version, rapid charging may not be performed while switching frequencies.

#### ■ Important points of the wireless charger

- If the electronic key cannot be detected within the vehicle interior, charging cannot be done. When the door is opened and closed, charging may be temporarily suspended.
- When charging, the wireless charging device and portable device will get warmer, however this is not a malfunction.

When a portable device gets warm while charging, charging may stop due to the protection function on the portable device side. In this case, when the temperature of the portable device drops significantly, charge again.

The fan may start operating to lower the temperature inside the wireless charger, however this is not a malfunction.

#### ■ Operation sounds

A buzzing noise may be heard when pressing the power supply switch to turn the power supply on, when turning the power switch to ACC or ON while the wireless charger power supply is on, or when detecting a portable device. How-

ever, this is not a malfunction.



#### **WARNING**

#### ■ Caution while driving

When charging a portable device, for safety reasons, the driver should not operate the main part of the portable device while driving.

#### ■ Caution while in motion

Do not charge lightweight devices such as wireless headphones while in motion. These devices are very light and may be ejected from the charging tray, which may lead to unforeseen accidents.

#### Caution regarding interference with electronic devices

People with implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverters, as well as any other electrical medical device, should consult their physician about the usage of the wireless charger.

## ■ To prevent malfunctions or burns

Observe the following precautions. Failure to do so may result in a equipment failure and damage, catch fire, burns due to overheat or electric shock.

- Do not insert any metallic objects between the charge area and the portable device while charging
- Do not attach an aluminum sticker or other metallic object to the charge area
- Do not attach an aluminum sticker or other metallic object to the side of the portable device (or to its case or cover) that touches the charge area
- Do not use the charging tray as a small storage space

- Do not subject to a strong force or impact
- Do not disassemble, modify or remove
- Do not charge devices other than specified portable devices
- Keep away from magnetic items
- Do not charge devices if the charge area is covered in dust
- Do not cover with a cloth or similar material



#### NOTICE

## Situations in which the function may not operate normally

Devices may not be charged normally in the following situations.

- The portable device is fully charged
- The portable device is being charged with a cable connected
- There is foreign matter between the charge area and portable device
- Charging has caused the portable device to heat up
- The temperature around the charging tray is 35°C (95°F) or higher, such as in extreme heat
- The portable device is placed with its charging side facing up
- The portable device is placed in an area misaligned from the charge
- The portable device is larger than the charging tray
- A foldable and portable device is placed outside the charge area

### $\triangle$

#### **NOTICE**

- The vehicle is in an area where strong electrical waves or noise are emitted, such as near a television tower, power plant, gasoline station, broadcasting station, large display, airport, etc.
- Any of the following objects that is 2mm (0.08 in) or thicker is between the charging side of the portable device and the charge area
- A card that has metal on it, such as aluminum foil, etc.
- A pack of cigarettes that includes aluminum foil
- A wallet or bag that is made of metal
- Coins
- A heating pad
- · CDs, DVDs or other media
- · A metal accessory
- · A case or cover made of metal
- Electric wave type wireless remote controls are being used nearby
- 2 or more portable devices are placed on the charging tray at the same time

If charging is abnormal or the operation indicator light continues to flash for any other reason, the wireless charger may be malfunctioning. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.

## ■ To prevent malfunctions and data corruptions

- When charging, bringing a credit, or other magnetic card, or magnetic storage media close to the charge area may clear any stored data due to magnetic influence. Also, do not bring a wristwatch or other precision instrument close to the charge area since doing so may cause it to malfunction.
- Do not charge with a non-contact IC card such as a transportation system IC card inserted between the charging side of a portable device and the charge area. The IC chip may become extremely hot and damage the portable device or IC card. Be especially careful not to charge a portable device inside a case or cover with a non-contact IC card attached.
- Do not leave portable devices inside the vehicle. The inside of the vehicle can become hot in extreme heat, which could cause a malfunction.

#### If the smartphone OS has been updated

If the smartphone OS has been updated to a newer version, its charging specifications may have changed significantly. For details, check the information on the manufacturer's website.

#### ■ To prevent 12-volt battery discharge

Do not use the wireless charger for a long period of time when the hybrid system is stopped.

#### Armrest

Fold down the armrest for use.




### **NOTICE**

#### ■To prevent damage to the armrest

Do not apply too much load on the armrest.

### Assist grips

An assist grip installed on the ceiling can be used to support your body while sitting on the seat.

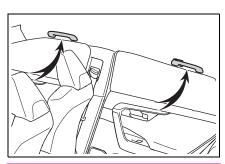

## **WARNING**

#### ■ Assist grips

Do not use the assist grip when getting in or out of the vehicle or rising from your seat.




#### NOTICE

#### ■To prevent damage to the assist grip

Do not hang any heavy object or put a heavy load on the assist grip.

### Coat hooks

The coat hooks are provided with the rear assist grips.

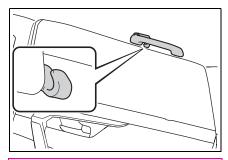

### **WARNING**

#### ■Items that must not be hanged on the hook

Do not hang coat hangers or other hard or sharp objects on the hook. If the SRS curtain shield airbags deploy, these items may become projectiles, causing death or serious injury.

## **Maintenance and care**

6-1.	Maintenance and care	
	Cleaning and protecting the vehicle exterior364	
	Cleaning and protecting the vehicle interior367	
6-2.	Maintenance	
	Maintenance requirements 370	
6-3.	Do-it-yourself maintenance	
	Do-it-yourself service precautions372	
	Hood374	
	Positioning a floor jack375	
	Engine compartment377	
	12-volt battery382	
	Tires385	
	Tire inflation pressure390	
	Wheels391	
	Air conditioning filter393	
	Cleaning the hybrid battery (traction battery) air intake vent and filter396	
	Wiper insert replacement400	
	Electronic key battery403	
	Checking and replacing fuses405	
	Light bulbs408	

## Cleaning and protecting the vehicle exterior

Perform the following to protect the vehicle and maintain it in prime condition:

#### Cleaning instructions

- Working from top to bottom, liberally apply water to the vehicle body, wheel wells and underside of the vehicle to remove any dirt and dust.
- Wash the vehicle body using a sponge or soft cloth, such as a chamois.
- For hard-to-remove marks, use car wash soap and rinse thoroughly with water.
- Wipe away any water.
- Wax the vehicle when the waterproof coating deteriorates.

If water does not bead on a clean surface, apply wax when the vehicle body is cool.

#### ■ Automatic car washes

- Before washing the vehicle:
- Fold the mirrors
- Turn off the power back door (if equipped)

Start washing from the front of the vehicle. Make sure to extend the mirrors before driving.

 Brushes used in automatic car washes may scratch the vehicle surface, parts (wheel, etc.) and harm your vehicle's paint.  Rear spoiler may not be washable in some automatic car washes. There may also be an increased risk of damage to vehicle.

#### ■ High pressure car washes

As water may enter the cabin, do not bring the nozzle tip near the gaps around the doors or perimeter of the windows, or spray these areas continuously.

## ■ Note for a smart entry & start system (vehicles with entry function)

If the door handle becomes wet while the electronic key is within the effective range, the door may lock and unlock repeatedly. In that case, follow the following correction procedures to wash the vehicle:

- Place the key in a position 2 m (6 ft.) or more separate from the vehicle while the vehicle is being washed. (Take care to ensure that the key is not stolen.)
- Set the electronic key to battery-saving mode to disable the smart entry & start system. (→P.148)

#### ■Wheels and wheel ornaments

- Remove any dirt immediately by using a neutral detergent.
- Wash detergent off with water immediately after use.
- To protect the paint from damage, make sure to observe the following precautions.
- Do not use acidic, alkaline or abrasive detergent.
- · Do not use hard brushes.
- Do not use detergent on the wheels when they are hot, such as after driving or parking in hot weather.
- For vehicles with matte painted wheels: The wheels are not maintained in the same way as normal aluminum wheels. For details, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- · When washing the vehicle, use water

If the vehicle is particularly dirty, use a diluted neutral detergent and a sponge or a soft cloth and wash off the dirt by hand.

to wash off dirt.

Wash detergent off with water immediately after use.

After using detergent, wash the detergent off with water and wipe the vehicle dry with a soft cloth.

- For vehicles with matte painted wheels: Make sure to observe the following precautions to prevent damage to the matte paint.
- Do not polish or scrub with dry cloths, brushes, etc.
- Do not use detergents containing coatings or abrasives.
- If using an automatic car wash, make sure it does not include dedicated wheel brushes.
- Do not use high-pressure spray guns or steam cleaners.
- Do not use detergent on the wheels when they are hot, such as after driving or parking in hot weather.

#### ■ Brake pads and calipers

Rust may form if the vehicle is parked with wet brake pads or disc rotors, causing them to stick. Before parking the vehicle after it is washed, drive slowly and apply the brakes several times to dry the parts.

#### Bumpers

Do not scrub with abrasive cleaners.

#### ■ Plated portions

If dirt cannot be removed, clean the parts as follows:

- Use a soft cloth dampened with an approximately 5% solution of neutral detergent and water to clean the dirt
- Wipe the surface with a dry, soft cloth to remove any remaining moisture.
- To remove oily deposits, use alcohol wet wipes or a similar product.


#### **WARNING**

#### When washing the vehicle

Do not apply water to the inside of the engine compartment. Doing so may cause the electrical components, etc. to catch fire.

#### ■When cleaning the windshield (vehicles with rain-sensing windshield wipers)

Set the wiper switch to off. If the wiper switch is in "AUTO", the wipers may operate unexpectedly in the following situations, and may result in hands being caught or other serious injuries and cause damage to the wiper blades.

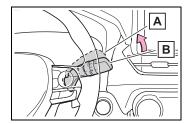

### A Off

### B "AUTO"

- When the upper part of the windshield where the raindrop sensor is located is touched by hand
- When a wet rag or similar is held close to the raindrop sensor
- If something bumps against the windshield
- If you directly touch the raindrop sensor body or if something bumps into the raindrop sensor

### A

#### **WARNING**

## ■ Precautions regarding the exhaust pipes

Exhaust gasses cause the exhaust pipes to become quite hot.

When washing the vehicle, be careful not to touch the pipes until they have cooled sufficiently, as touching hot exhaust pipes can cause burns.

Precaution regarding the rear bumper with Blind Spot Monitor (if equipped)

If the paint of the rear bumper is chipped or scratched, the system may malfunction. If this occurs, consult any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.



#### NOTICE

- To prevent paint deterioration and corrosion on the body and components (aluminum wheels, etc.)
- Wash the vehicle immediately in the following cases:
- · After driving near the sea coast
- · After driving on salted roads
- If coal tar or tree sap is present on the paint surface
- If dead insects, insect droppings or bird droppings are present on the paint surface
- After driving in an area contaminated with soot, oily smoke, mine dust, iron powder or chemical substances
- If the vehicle becomes heavily soiled with dust or mud
- If liquids such as benzene and gasoline are spilled on the paint surface
- If the paint is chipped or scratched, have it repaired immediately.

- To prevent the wheels from corroding, remove any dirt and store in a place with low humidity when storing the wheels.
- Cleaning the exterior lights
- Wash carefully. Do not use organic substances or scrub with a hard brush.

This may damage the surfaces of the lights.

 Do not apply wax to the surfaces of the lights.

Wax may cause damage to the lenses.

When using an automatic car wash (vehicles with rain-sensing windshield wipers)

Set the wiper switch to off position. If the wiper switch is in "AUTO", the wipers may operate and the wiper blades may be damaged.

- When using a high pressure car wash
- When washing the vehicle, do not let water from the high-pressure washer directly hit the camera (if equipped) or the area around the camera. Due to the shock from the high pressure water, it is possible that the device may not operate normally.
- Do not spray water directly on the radar which is equipped behind the emblem. Otherwise it may cause the device to be damaged.
- Do not bring the nozzle tip close to boots (rubber or resin manufactured cover), or connectors or the following parts.

The parts may be damaged if they come into contact with high-pressure water.

- · Traction related parts
- · Steering parts
- · Suspension parts
- Brake parts

### 1

#### **NOTICE**

- Keep the cleaning nozzle at least 30 cm (11.9 in.) away from the vehicle body. Otherwise resin section, such as moldings and bumpers, may be deformed and damaged. Also, do not continuously hold the nozzle in the same place.
- Do not spray the lower part of the windshield continuously. If water enters the air conditioning system intake located near the lower part of the windshield, the air conditioning system may not operate correctly.
- Do not wash the underside of the vehicle using a high pressure car washer.

## Cleaning and protecting the vehicle interior

Perform cleaning in a manner appropriate to each component and its material.

## Protecting the vehicle interior

- Remove dirt and dust using a vacuum cleaner. Wipe dirty surfaces with a cloth dampened with lukewarm water.
- If dirt cannot be removed, wipe it off with a soft cloth dampened with neutral detergent diluted to approximately 1%.

Wring out any excess water from the cloth and thoroughly wipe off remaining traces of detergent and water.

#### **■** Shampooing the carpets

There are several commercial foamingtype cleaners available. Use a sponge or brush to apply the foam. Rub in overlapping circles. Do not use water. Wipe dirty surfaces and let them dry. Excellent results are obtained by keeping the carpet as dry as possible.

#### ■ Handling the seat belts

Clean with mild soap and lukewarm water using a cloth or sponge. Also check the belts periodically for excessive wear, fraying or cuts.

### A

#### **WARNING**

#### ■ Water in the vehicle

- Do not splash or spill liquid in the vehicle, such as on the floor, on the rear seats, in the hybrid battery (traction battery) air intake vent or in the luggage compartment. (→P.85)
  - Doing so may cause the hybrid battery, electrical components, etc. to malfunction or catch fire.
- Do not get any of the SRS components or wiring in the vehicle interior wet. (→P.40) An electrical malfunction may cause the airbags to deploy or not function properly, resulting in death or serious injury.
- Vehicles with wireless charger: Do not let the wireless charger (→P.356) get wet. Failure to do so may cause the charger to become hot and cause burns or could cause electric shock resulting in death or serious injury.

## Cleaning the interior (especially instrument panel)

Do not use a polish wax or polish cleaner. The instrument panel may reflect off the windshield, obstructing the driver's view and leading to an accident, resulting in death or serious injury.

#### $\Lambda$

#### **NOTICE**

#### Cleaning detergents

- Do not use the following types of detergent, as they may discolor the vehicle interior or cause streaks or damage to painted surfaces:
- Non-seat portions: Organic substances such as benzene or gasoline, alkaline or acidic solutions, dye, and bleach
- Seats: Alkaline or acidic solutions, such as thinner, benzene, and alcohol
- Do not use a polish wax or polish cleaner. The instrument panel's or other interior part's painted surface may be damaged.

## ■ Preventing damage to leather surfaces

Observe the following precautions to avoid damage to and deterioration of leather surfaces:

- Remove any dust or dirt from leather surfaces immediately.
- Do not expose the vehicle to direct sunlight for extended periods of time. Park the vehicle in the shade, especially during summer.
- Do not place items made of vinyl, plastic, or containing wax on the upholstery, as they may stick to the leather surface if the vehicle interior heats up significantly.

#### ■ Water on the floor

Do not wash the vehicle floor with water.

Vehicle systems such as the audio system may be damaged if water comes into contact with electrical components such as the audio system above or under the floor of the vehicle. Water may also cause the body to rust.

#### **NOTICE**

#### When cleaning the inside of the windshield (vehicles with Toyota Safety Sense)

Do not allow glass cleaner to contact the lens. Also, do not touch the lens.  $(\rightarrow P.229)$ 

## ■ Cleaning the inside of the rear window

- Do not use a glass cleaner to clean the rear window, as this may cause damage to the rear window defogger heater wires. Use a cloth dampened with lukewarm water to gently wipe the window clean. Wipe the window in strokes running parallel to the heater wires.
- Be careful not to scratch or damage the heater wires.

### Cleaning the leather areas

- Remove dirt and dust using a vacuum cleaner.
- Wipe off any excess dirt and dust with a soft cloth dampened with diluted detergent.

Use a diluted water solution of approximately 5% neutral wool detergent.

- Wring out any excess water from the cloth and thoroughly wipe off all remaining traces of detergent.
- Wipe the surface with a dry, soft cloth to remove any remaining moisture. Allow the leather to dry in a shaded and ventilated area.

#### ■ Caring for leather areas

Toyota recommends cleaning the interior of the vehicle at least twice a year to maintain the quality of the vehicle's interior.

# Cleaning the synthetic leather areas

- Remove dirt and dust using a vacuum cleaner.
- Wipe it off with a soft cloth dampened with neutral detergent diluted to approximately 1%.
- Wring out any excess water from the cloth and thoroughly wipe off remaining traces of detergent and water.

2

### Maintenance requirements

To ensure safe and economical driving, day-to-day care and regular maintenance are essential. Toyota recommends the maintenance below.

## ■ Where to go for maintenance service?

In order to maintain your vehicle in the best possible condition, Toyota recommends that maintenance service operations as well as other inspections and repairs be carried out by authorized Toyota retailers or Toyota authorized repairers, or any reliable repairers. For repairs and services covered by your warranty, please visit an authorized Toyota retailer or repairer, who will use genuine Toyota parts in repairing any difficulties you may encounter. There can also be advantages in utilizing authorized Toyota retailers or repairers for non-warranty repairs and services, as members of the Toyota network will be able to expertly assist you with any difficulties you may encounter.

Your Toyota retailer or Toyota authorized repairer, or any reliable repairer will perform all of the scheduled maintenance on your vehicle reliably and economically due to their experience with Toyota vehicles.

### A

### WARNING

## If your vehicle is not properly maintained

Improper maintenance could result in serious damage to the vehicle and possible death or serious injury.

#### Handling of the 12-volt battery

12-volt battery posts, terminals and related accessories contain lead and lead compounds which are known to cause brain damage. Wash your hands after handling. (→P.382)

#### Scheduled maintenance

Scheduled maintenance should be performed at specified intervals according to the maintenance schedule.

For full details of your maintenance schedule, refer to the "Toyota Service Booklet" or "Toyota Warranty Booklet".

### Do-it-yourself maintenance

What about do-it-yourself maintenance?

Many maintenance items are easy to do yourself if you have a little mechanical ability and a few basic automotive tools

Note, however, that some maintenance tasks require special tools and skills. These are best performed by qualified technicians. Even if you're an experienced do-it-yourself mechanic, we recommend that repairs and maintenance be conducted by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. Any authorized Toyota retailer or repairer will keep a record of maintenance, which could be useful should you ever require Warranty Service. Should you choose to select a qualified and equipped professional other than an authorized Toyota repairer to service or maintain your vehicle, we recommend that you

#### ■ Does your vehicle need repairs?

Be on the alert for changes in performance and sounds, and visual tip-offs that indicate service is needed. Some important clues are:

- Engine missing, stumbling or pinging
- Appreciable loss of power
- Strange engine noises
- A fluid leak under the vehicle (However, water dripping from the air conditioning system after use is normal.)
- Change in exhaust sound (This may indicate a dangerous carbon monoxide leak. Drive with the windows open and have the exhaust system checked immediately.)
- Flat-looking tires, excessive tire squeal when cornering, uneven tire wear
- Vehicle pulls to one side when driven straight on a level road
- Strange noises related to suspension movement
- Loss of brake effectiveness, spongy feeling brake pedal, pedal almost touches the floor, vehicle pulls to one side when braking
- Engine coolant temperature continually higher than normal (→P.99, 103)

If you notice any of these clues, take your vehicle to any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.

Your vehicle may need adjustment or repair.

6

### Do-it-yourself service precautions

If you perform maintenance by yourself, be sure to follow the correct procedure as given in these sections.

#### Maintenance

Items	Parts and tools	
12-volt battery condition (→P.382)	<ul> <li>Grease</li> <li>Conventional wrench (for terminal clamp bolts)</li> </ul>	
Engine/power control unit coolant level (→P.379)	"Toyota Super Long Life Coolant" or a similar high quality ethylene glycolbased non-silicate, non-amine, non-nitrite and non-borate coolant with long-life hybrid organic acid technology "Toyota Super Long Life Coolant" is premixed with 50% coolant and 50% deionized water.  Funnel (used only for adding coolant)	
Engine oil level (→P.377)	<ul> <li>"Toyota Genuine Motor Oil" or equivalent</li> <li>Rag or paper towel</li> <li>Funnel (used only for adding engine oil)</li> </ul>	

Items	Parts and tools
Fuses (→P.405)	Fuse with same amperage rating as original
Hybrid battery (traction bat- tery) air intake vent (→P.396)	Vacuum cleaner, etc,     Phillips screwdriver
Light bulbs (→P.408)	<ul> <li>Bulb with same number and wattage rating as original</li> <li>Phillips-head screwdriver</li> <li>Flathead screwdriver</li> <li>Wrench</li> </ul>
Radiator and condenser (→P.380)	_
Tire inflation pressure (→P.390)	Tire pressure gauge     Compressed air     source
Washer fluid (→P.381)	<ul> <li>Water or washer fluid containing anti- freeze (for winter use)</li> <li>Funnel (used only for adding water or washer fluid)</li> </ul>



## WARNING

The engine compartment contains many mechanisms and fluids that may move suddenly, become hot, or become electrically energized. To avoid death or serious injury, observe the following precautions.

### **WARNING**

#### When working on the engine compartment

- Make sure that "IGNITION ON" on the multi-information display and the "READY" indicator are both off.
- Keep hands, clothing and tools away from the moving fan.
- Be careful not to touch the engine, power control unit, radiator, exhaust manifold, etc. right after driving as they may be hot. Oil and other fluids may also be hot.
- Do not leave anything that may burn easily, such as paper and rags, in the engine compartment.
- Do not smoke, cause sparks or expose an open flame to fuel. Fuel fumes are flammable.
- Take care because brake fluid can harm your hands or eyes and damage painted surfaces. If fluid gets on your hands or in your eyes, flush the affected area with clean water immediately. If you still experience discomfort, consult a doctor.

#### When working near the electric cooling fan or radiator grille

Be sure the power switch is off. With the power switch in ON, the electric cooling fan may automatically start to run if the air conditioning is on and/or the coolant temperature is high. (→P.380)

#### Safety glasses

Wear safety glasses to prevent flying or falling material, fluid spray, etc., from getting in your eyes.

#### **NOTICE**

## If you remove the air cleaner fil-

Driving with the air cleaner filter removed may cause excessive engine wear due to dirt in the air.

#### If the fluid level is low or high

It is normal for the brake fluid level to go down slightly as the brake pads wear or when the fluid level in the accumulator is high.


If the reservoir needs frequent refilling, it may indicate a serious problem.

#### Hood


Release the lock from the inside of the vehicle to open the hood.

### Opening the hood


**1** Pull the hood lock release lever. The hood will pop up slightly.

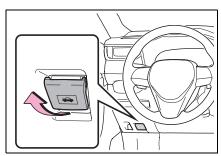

2 Push the auxiliary catch lever to the left and lift the hood.

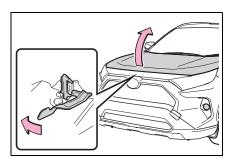

**3** Hold the hood open by inserting the supporting rod into the slot.

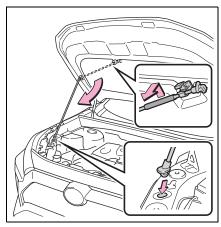

## **⚠** WARNING

#### ■ Pre-driving check

Check that the hood is fully closed and locked.


If the hood is not locked properly, it may open while the vehicle is in motion and cause an accident, which may result in death or serious injury.

## ■ After installing the support rod into the slot

Make sure the rod supports the hood securely from falling down on to your head or body.

#### ■When closing the hood

When closing the hood, take extra care to prevent your fingers etc. from being caught.

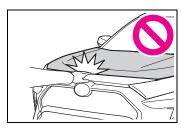

#### NOTICE

#### ■When closing the hood

Be sure to return the support rod to its clip before closing the hood. Closing the hood without returning the support rod properly could cause the hood to bend.


### Positioning a floor jack

When using a floor jack, follow the instructions in the manual provided with the jack and perform the operation safely. When raising your vehicle with a floor jack, position the jack correctly.

Improper placement may damage your vehicle or cause injury.


### Location of the jack point

#### ■ Front

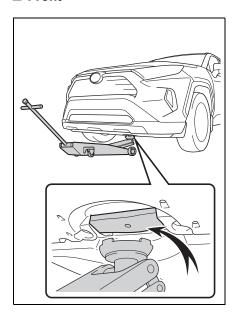


6

### ■ Rear

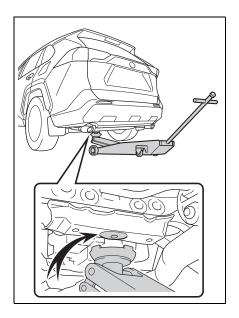

### **Engine compartment**

### Components

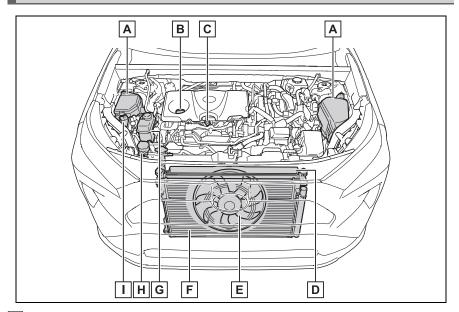

- A Fuse boxes (→P.405)
- **B** Engine oil filler cap (→P.378)
- **C** Engine oil level dipstick (→P.377)
- D Radiator (→P.380)
- E Electric cooling fan
- F Condenser (→P.380)
- **G** Power control unit coolant reservoir (→P.380)
- H Washer fluid tank (→P.381)
- I Engine coolant reservoir (→P.379)

### ■12-volt battery

→P.382


# Checking and adding the engine oil

With the engine at operating temperature and turned off, check the


oil level on the dipstick.

### ■ Checking the engine oil

- 1 Park the vehicle on level ground. After warming up the engine and turning off the hybrid system, wait more than 5 minutes for the oil to drain back into the bottom of the engine.
- 2 Holding a rag under the end, pull the dipstick out.

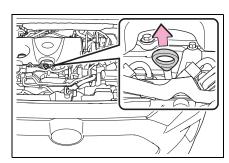

- 3 Wipe the dipstick clean.
- 4 Reinsert the dipstick fully.
- 5 Holding a rag under the end, pull the dipstick out and check the oil level.

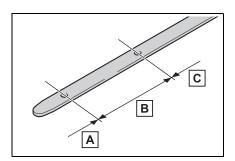

- A Low
- **B** Normal
- **C** Excessive

The shape of the dipstick may differ

depending on the type of vehicle or engine.

- **6** Wipe the dipstick and reinsert it fully.
- Checking the oil type and preparing the items needed

Make sure to check the oil type and prepare the items needed before adding oil.

- Engine oil selection
- →P.480
- Oil quantity (Low → Full)


1.5 L (1.6 qt., 1.3 lmp. qt.)

• Item

Clean funnel

### ■ Adding engine oil

If the oil level is below or near the low level mark, add engine oil of the same type as that already in the engine.

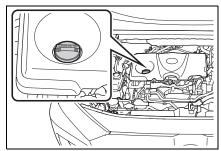

- Remove the oil filler cap by turning it counterclockwise.
- 2 Add engine oil slowly, checking the dipstick.
- 3 Install the oil filler cap by turning it clockwise.

#### **■** Engine oil consumption

A certain amount of engine oil will be consumed while driving. In the following situations, oil consumption may increase, and engine oil may need to be refilled in between oil maintenance intervals.

- When the engine is new, for example directly after purchasing the vehicle or after replacing the engine
- If low quality oil or oil of an inappropriate viscosity is used
- When driving at high engine speeds or with a heavy load, when towing, or when driving while accelerating or decelerating frequently
- When leaving the engine idling for a long time, or when driving frequently through heavy traffic



#### WARNING

#### Used engine oil

- Used engine oil contains potentially harmful contaminants which may cause skin disorders such as inflammation and skin cancer, so care should be taken to avoid prolonged and repeated contact. To remove used engine oil from your skin, wash thoroughly with soap and water.
- Dispose of used oil and filters only in a safe and acceptable manner. Do not dispose of used oil and filters in household trash, in sewers or onto the ground. Call any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer, service station or auto parts store for information concerning recycling or disposal.
- Do not leave used engine oil within the reach of children.

### $\wedge$

#### **NOTICE**

## ■ To prevent serious engine damage

Check the oil level on a regular basis.

#### ■When replacing the engine oil

- Be careful not to spill engine oil on the vehicle components.
- Avoid overfilling, or the engine could be damaged.
- Check the oil level on the dipstick every time you refill the vehicle.
- Be sure the engine oil filler cap is properly tightened.


## If oil is spilled on the engine cover

To prevent the engine cover from being damaged, remove any engine oil from the engine cover as soon as possible using a neutral detergent. Do not use an organic solvent such as brake cleaner.

#### Checking the coolant

The coolant level is satisfactory if it is between the "FULL" and "LOW" lines on the reservoir when the hybrid system is cold.

#### ■ Engine coolant reservoir

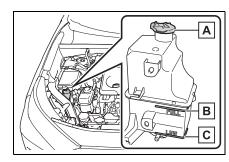


- A Reservoir cap
- B "FULL" line

#### C "LOW" line

If the level is on or below the "LOW" line, add coolant up to the "FULL" line.  $(\rightarrow P.469)$ 

## Power control unit coolant reservoir

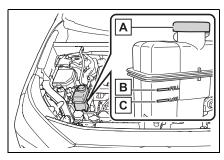

- A Reservoir cap
- B "FULL" line
- C "LOW" line

If the level is on or below the "LOW" line, add coolant up to the "FULL" line. ( $\rightarrow$ P.470)

#### ■ Coolant selection

Only use "Toyota Super Long Life Coolant" or a similar high quality ethylene glycol based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology. "Toyota Super Long Life Coolant" is a mixture of 50% coolant and 50% deionized water. (Minimum temperature: - 35°C [-31°F])

For more details about coolant, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

## If the coolant level drops within a short time of replenishing

Visually check the radiators, hoses, engine/power control unit coolant reservoir caps, drain cock and water pump. If you cannot find a leak, have any

authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer, test the cap and check for leaks in the cooling system.

### A

#### **WARNING**

#### ■When the hybrid system is hot

Do not remove the engine/power control unit coolant reservoir caps.

The cooling system may be under pressure and may spray hot coolant if the cap is removed, causing serious injuries, such as burns.



#### **NOTICE**

#### ■When adding coolant

Coolant is neither plain water nor straight antifreeze. The correct mixture of water and antifreeze must be used to provide proper lubrication, corrosion protection and cooling. Be sure to read the antifreeze or coolant label.

#### If you spill coolant

Be sure to wash it off with water to prevent it from damaging parts or paint.

# Checking the radiator and condenser

Check the radiator and condenser, and clear away any foreign objects. If either of the above parts is extremely dirty or you are not sure of their condition, have your vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

## **WARNING**

#### ■When the hybrid system is hot

Do not touch the radiator or condenser as they may be hot and cause serious injuries, such as burns.

#### ■When the electric cooling fan is operating

Do not touch the engine compartment.


With the power switch in ON, the electric cooling fan may automatically start to run if the air conditioning is on and/or the coolant temperature is high. Be sure the power switch is off when working near the electric cooling fan or radiator grille.

### Checking and adding the washer fluid

#### ▶ Without level gauge


Type A: If any washer does not work, the washer tank may be empty. Add washer fluid.

Type B: If any washer does not work or the warning message appears on the multi-information display, the washer tank may be empty. Add washer fluid.

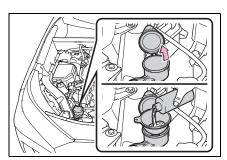

#### ▶ With level gauge


If the washer fluid level is at "LOW", add washer fluid.

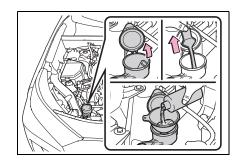

### ■ Using the gauge (if equipped)

The washer fluid level can be checked by observing the position of the level on the liquid-covered holes in the gauge.

If the level falls below the second hole from the bottom (the "LOW" position), refill the washer fluid.

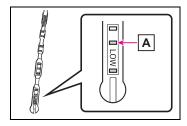

A Current fluid level



### **WARNING**

#### ■When adding washer fluid

Do not add washer fluid when the hybrid system is hot or operating as washer fluid contains alcohol and may catch fire if spilled on the hybrid system, etc.

### <u>^</u>

#### **NOTICE**

## ■ Do not use any fluid other than washer fluid

Do not use soapy water or engine antifreeze instead of washer fluid. Doing so may cause streaking on the vehicle's painted surfaces, as well as damaging the pump leading to problems of the washer fluid not spraying.

#### Diluting washer fluid


Dilute washer fluid with water as necessary.

Refer to the freezing temperatures listed on the label of the washer fluid bottle

### 12-volt battery

#### Location

The 12-volt battery is located in the right-hand side of luggage compartment.

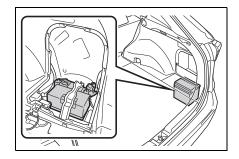

#### ■ Before recharging

When recharging, the 12-volt battery produces hydrogen gas which is flammable and explosive. Therefore, observe the following precautions before recharging:

- If recharging with the 12-volt battery installed on the vehicle, be sure to disconnect the ground cable.
- Make sure the power switch on the charger is off when connecting and disconnecting the charger cables to the 12-volt battery.

#### ■ After recharging/reconnecting the 12-volt battery

- The hybrid system may not start. Follow the procedure below to initialize the system.
- 1 Shift the shift lever to P.
- 2 Open and close any of the doors.
- 3 Restart the hybrid system.
- Unlocking the doors using the smart entry & start system may not be possible immediately after reconnecting the 12-volt battery. If this happens, use the wireless remote control or the mechanical key to lock/unlock the

- Start the hybrid system with the power switch in ACC. The hybrid system may not start with the power switch turned off. However, the hybrid system will operate normally from the second attempt.
- The power switch mode is recorded by the vehicle. If the 12-volt battery is reconnected, the vehicle will return the power switch mode to the status it was in before the 12-volt battery was disconnected. Make sure to turn off the power switch before disconnect the 12-volt battery. Take extra care when connecting the 12-volt battery if the power switch mode prior to discharge is unknown.

If the hybrid system will not start even after multiple attempts at all methods above, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

## A

#### **WARNING**

#### ■ Chemicals in the 12-volt battery

The 12-volt battery contains poisonous and corrosive sulfuric acid and may produce hydrogen gas which is flammable and explosive. To reduce the risk of death or serious injury, take the following precautions while working on or near the 12-volt battery:

- Do not cause sparks by touching the 12-volt battery terminals with tools.
- Do not smoke or light a match near the 12-volt battery.
- Avoid contact with eyes, skin and clothes.
- Never inhale or swallow electrolyte.
- Wear protective safety glasses when working near the 12-volt battery.

- Keep children away from the 12volt battery.
- Where to safely charge the 12volt battery

Always charge the 12-volt battery in an open area. Do not charge the 12volt battery in a garage or closed room where there is not sufficient ventilation.

## Emergency measures regarding electrolyte

- If electrolyte gets in your eyes
  Flush your eyes with clean water for
  at least 15 minutes and get immediate
  medical attention. If possible, continue to apply water with a sponge or
  cloth while traveling to the nearest
  medical facility.
- If electrolyte gets on your skin
   Wash the affected area thoroughly. If you feel pain or burning, get medical attention immediately.
- If electrolyte gets on your clothes It can soak through clothing on to your skin. Immediately take off the clothing and follow the procedure above if necessary.
- If you accidentally swallow electrolyte

Drink a large quantity of water or milk. Get emergency medical attention immediately.

## When there is insufficient 12-volt battery fluid

Do not use if there is insufficient fluid in the 12-volt battery. There is a possible danger that the 12-volt battery may explode.

### <u>^</u>

#### NOTICE


## ■ When recharging the 12-volt battery

Never recharge the 12-volt battery while the hybrid system is operating. Also, be sure all accessories are turned off.

### Removing the 12-volt battery cover


- **1** Open the deck board (→P.348)
- 2 Disengage the 12 claws and pull the luggage side cover to remove it.

When installing the luggage side cover, make sure that the claws are installed securely.

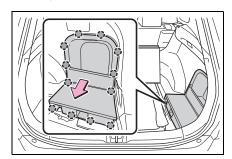

### **Exterior**

Make sure that the 12-volt battery terminals are not corroded and that there are no loose connections, cracks, or loose clamps.

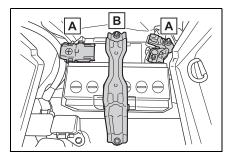

- **A** Terminals
- **B** Hold-down clamp


### Tires

Replace or rotate tires in accordance with maintenance schedules and treadwear.

#### Checking tires

Check if the treadwear indicators are showing on the tires. Also check the tires for uneven wear. such as excessive wear on one side of the tread.

Check the spare tire condition and pressure if not rotated.

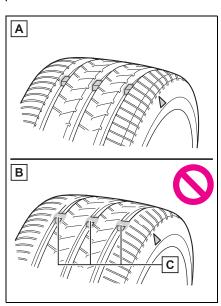

- A New tread
- **B** Worn tread
- C Treadwear indicator

The location of treadwear indicators is shown by a "TWI" or "  $\triangle$  " marks, etc., molded into the sidewall of each tire. Replace the tires if the treadwear indicators are showing on a tire.

## ■When to replace your vehicle's

Tires should be replaced if:

- The treadwear indicators are showing on a tire.
- You have tire damage such as cuts, splits, cracks deep enough to expose the fabric, and bulges indicating internal damage.
- A tire goes flat repeatedly or cannot be properly repaired due to the size or location of a cut or other damage.

If you are not sure, consult with any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

#### **■** Tire life

Any tire over 6 years old must be checked by a qualified technician even if it has seldom or never been used or damage is not obvious.

#### ■ If the tread on snow tires wears down below 4 mm (0.16 in.)

The effectiveness of the tires as snow tires is lost.



## **WARNING**

## When inspecting or replacing

Observe the following precautions to prevent accidents.

Failure to do so may cause damage to parts of the drive train as well as dangerous handling characteristics, which may lead to an accident resulting in death or serious injury.

Do not mix tires of different makes, models or tread patterns. Also, do not mix tires of remarkably different treadwear.

### $\mathbf{A}$

#### **WARNING**

- Do not use tire sizes other than those recommended by Toyota.
- Do not mix differently constructed tires (radial, bias-belted or bias-ply tires).
- Do not mix summer, all season and snow tires.
- Do not use tires that have been used on another vehicle.
   Do not use tires if you do not know how they were used previously.
- Vehicles with compact spare tire:
   Do not tow if your vehicle has a compact spare tire installed.
- Vehicles with emergency tire puncture repair kit: Do not tow anything if a tire that has been repaired using the emergency tire puncture repair kit is installed. The load on the tire may cause unexpected damage to the tire.



#### NOTICE

#### ■ Driving on rough roads

Take particular care when driving on roads with loose surfaces or potholes. These conditions may cause losses in tire inflation pressure, reducing the cushioning ability of the tires. In addition, driving on rough roads may cause damage to the tires themselves, as well as the vehicle's wheels and body.

■ If tire inflation pressure of each tire becomes low while driving

Do not continue driving, or your tires and/or wheels may be ruined.

#### Tire rotation

Rotate the tires in the order shown.

2WD models:

To equalize tire wear and help extend tire life, Toyota recommends that tire rotation is carried out approximately every 10000 km (6000 miles).


Do not fail to initialize the tire pressure warning system after tire rotation. (if equipped)

#### AWD models:

To equalize tire wear and help extend tire life, Toyota recommends that tire rotation is carried out approximately every 5000 km (3000 miles).


Do not fail to initialize the tire pressure warning system after tire rotation. (if equipped)

Vehicles without full-size spare tire

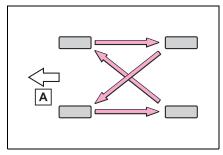

A Front

▶ Vehicles with full-size spare tire

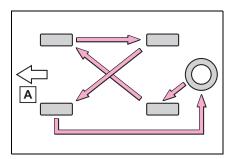

A Front

## Tire pressure warning system

Your vehicle is equipped with a tire pressure warning system that uses tire pressure warning valves and transmitters to detect low tire inflation pressure before serious problems arise.

If the tire pressure drops below a predetermined level, the driver is warned by a message and a warning light. (→P.433)

## ■ Routine tire inflation pressure checks

The tire pressure warning system does not replace routine tire inflation pressure checks. Make sure to check tire inflation pressure as part of your routine of daily vehicle checks.

# ■ Situations in which the tire pressure warning system may not operate properly

- In the following cases, the tire pressure warning system may not operate properly.
- If non-genuine Toyota wheels are used.
- A tire has been replaced with a tire that is not an OE (Original Equipment) tire.
- A tire has been replaced with a tire that is not of the specified size.
- Tire chains, etc. are equipped.
- An auxiliary-supported run-flat tire is equipped.
- If a window tint that affects the radio wave signals is installed.
- If there is a lot of snow or ice on the vehicle, particularly around the wheels or wheel housings.
- If the tire inflation pressure is extremely higher than the specified level.
- · If wheels without tire pressure warning

valves and transmitters are used.

- If the ID code on the tire pressure warning valves and transmitters is not registered in the tire pressure warning computer.
- If the spare tire is in a location subject to poor radio wave signal reception.
- If a large metallic object which can interfere with signal reception is put in the luggage compartment.\*
- \*: Vehicles with full-size spare tire only
- Performance may be affected in the following situations.
- Near a TV tower, electric power plant, gas station, radio station, large display, airport or other facility that generates strong radio waves or electrical noise
- When carrying a portable radio, cellular phone, cordless phone or other wireless communication device
- When the vehicle is parked, the time taken for the warning to start or go off could be extended.
- When tire inflation pressure declines rapidly for example when a tire has burst, the warning may not function.

## ■ Warning performance of the tire pressure warning system

The warning of the tire pressure warning system will change in accordance with the conditions under which it was initialized. For this reason, the system may give a warning even if the tire pressure does not reach a low enough level, or if the pressure is higher than the pressure that was adjusted to when the system was initialized.

# Installing tire pressure warning valves and transmitters

When replacing tires or wheels, tire pressure warning valves and transmitters must also be installed.

When new tire pressure warning valves and transmitters are

installed, new ID codes must be registered in the tire pressure warning computer and the tire pressure warning system must be initialized. Have tire pressure warning valve and transmitter ID codes registered by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. (→P.390)

## ■ When replacing the tires and wheels

If the ID code of the tire pressure warning valve and transmitter is not registered, the tire pressure warning system will not work properly. After driving for about 10 minutes, the tire pressure warning light blinks for 1 minute and stays on to indicate a system malfunction.



#### NOTICE

- Repairing or replacing tires, wheels, tire pressure warning valves, transmitters and tire valve caps
- When removing or fitting the wheels, tires or the tire pressure warning valves and transmitters, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as the tire pressure warning valves and transmitters may be damaged if not handled correctly.
- Make sure to install the tire valve caps. If the tire valve caps are not installed, water could enter the tire pressure warning valves and the tire pressure warning valves could be bound.

 When replacing tire valve caps, do not use tire valve caps other than those specified.

The cap may become stuck.

■ To avoid damage to the tire pressure warning valves and transmitters

When a tire is repaired with liquid sealants, the tire pressure warning valve and transmitter may not operate properly. If a liquid sealant is used, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer or other qualified service shop as soon as possible. Make sure to replace the tire pressure warning valve and transmitter when repairing or replacing the tire. (→P.387, 392)

# Initializing the tire pressure warning system

- The tire pressure warning system must be initialized in the following circumstances:
- When rotating the tires.
- When changing the tire.
- After registering the ID codes. (→P.390)

When the tire pressure warning system is initialized, the current tire inflation pressure is set as the benchmark pressure.


- How to initialize the tire pressure warning system
- 1 Park the vehicle in a safe place and stop the hybrid system.

Initialization cannot be performed while the vehicle is moving.

2 Adjust the tire inflation pressure to the specified cold tire inflation pressure level. (→P.484)

Make sure to adjust the tire pressure to the specified cold tire inflation pressure level. The tire pressure warning system will operate based on this pressure

- 3 Turn the power switch to ON.
- 4 Press or of the meter control switches on the steering wheel and select .

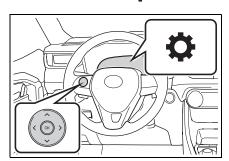

- 5 Press → or → of the meter control switches, select "Vehicle Settings" and then press and hold .
- 6 Press or of the meter control switches, select "TPWS" and then press or.
- 7 Press or of the meter control switches, select the "Set Pressure". Then press and hold



"Setting Tire Pressure Warning System" will be displayed on the multi-information display and the tire pressure warning light will blink 3 times. When the message disappears, initialization is complete.

#### ■ When initializing

Make sure to carry out initialization after adjusting the tire inflation pressure. Also, make sure the tires are cold before carrying out initialization or tire inflation pressure adjustment.

#### ■ The initialization operation

- If you have accidentally turned the power switch to OFF during initialization, it is not necessary to restart the initialization again as initialization will restart automatically when the power switch has been turned to ON for the next time.
- If you accidentally perform initialization when initialization is not necessary, adjust the tire inflation pressure to the specified level when the tires are cold, and conduct initialization again.

#### ■When initialization of the tire pressure warning system has failed

Initialization can be completed in a few minutes. However, in the following cases, the settings have not been recorded and the system will not operate properly. If repeated attempts to record tire inflation pressure settings are unsuccessful, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

- When operating the tire pressure warning reset switch, the tire pressure warning light does not blink 3 times.
- After driving for a certain period of time since the initialization has been completed, the warning light comes on after blinking for 1 minute.

6

Maintenance and care

### A

#### **WARNING**

#### When initializing the tire pressure warning system

Do not initialize tire inflation pressure without first adjusting the tire inflation pressure to the specified level. Otherwise, the tire pressure warning light may not come on even if the tire inflation pressure is low, or it may come on when the tire inflation pressure is actually normal.

#### Registering ID codes

Every tire pressure warning valve and transmitter has a unique ID code. In addition to the set of tire pressure warning system sensor ID codes initially registered to the vehicle, a second set of ID codes can be registered. A second set of tire pressure warning system sensor ID codes can be registered by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. When 2 sets of ID codes have been registered, either ID code set can be selected.

#### **Tire inflation pressure**

Make sure to maintain the proper tire inflation pressure. Tire inflation pressure should be checked at least once per month. However, Toyota recommends that tire inflation pressure be checked once every two weeks. (→P.484)

## ■ Effects of incorrect tire inflation pressure

Driving with incorrect tire inflation pressure may result in the following:

- Reduced fuel economy
- Reduced driving comfort and poor handling
- Reduced tire life due to wear
- Reduced safety
- Damage to the drive train

If a tire needs frequent inflating, have it checked by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

## ■ Instructions for checking tire inflation pressure

When checking tire inflation pressure, observe the following:

- Check only when the tires are cold. If your vehicle has been parked for at least 3 hours or has not been driven for more than 1.5 km or 1 mile, you will get an accurate cold tire inflation pressure reading.
- Always use a tire pressure gauge.
   It is difficult to judge if a tire is properly inflated based only on its appearance.
- It is normal for the tire inflation pressure to be higher after driving as heat is generated in the tire. Do not reduce tire inflation pressure after driving.
- Passengers and luggage weight

#### **WARNING**

#### Proper inflation is critical to save tire performance

Keep your tires properly inflated. If the tires are not properly inflated, the following conditions may occur which could lead to an accident resulting in death or serious injury:

- Excessive wear
- Uneven wear
- Poor handling
- Possibility of blowouts resulting from overheated tires
- Air leaking from between tire and
- Wheel deformation and/or tire damage
- Greater possibility of tire damage while driving (due to road hazards, expansion joints, sharp edges in the road, etc.)



#### **NOTICE**

#### When inspecting and adjusting tire inflation pressure

Be sure to put the tire valve caps back

If a valve cap is not installed, dirt or moisture may get into the valve and cause an air leak, resulting in decreased tire inflation pressure.

#### Wheels

If a wheel is bent, cracked or heavily corroded, it should be replaced. Otherwise, the tire may separate from the wheel or cause a loss of handling control.

#### Wheel selection

When replacing wheels, care should be taken to ensure that they are equivalent to those removed in load capacity, diameter, rim width and inset.

Replacement wheels are available at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

\*: Conventionally referred to as offset. Toyota does not recommend using the following:

- Wheels of different sizes or types
- Used wheels
- Bent wheels that have been straightened

#### ■When replacing wheels

The wheels of your vehicle are equipped with tire pressure warning valves and transmitters that allow the tire pressure warning system to provide advance warning in the event of a loss in tire inflation pressure. Whenever wheels are replaced, tire pressure warning valves and transmitters must be installed. (→P.387, 392)

Maintenance and care

### **WARNING**

#### When replacing wheels

- Do not use wheels that are a different size from those recommended in the Owner's Manual, as this may result in a loss of handling control.
- Never use an inner tube in a leaking wheel which is designed for a tubeless tire. Doing so may result in an accident, causing death or serious injury.

#### When installing the wheel nuts

Never use oil or grease on the wheel bolts or wheel nuts. Oil and grease may cause the wheel nuts to be excessively tightened, leading to bolt or disc wheel damage. In addition, the oil or grease can cause the wheel nuts to loosen and the wheel may fall off, causing an accident and resulting in death or serious injury. Remove any oil or grease from the wheel bolts or wheel nuts.

#### ■Use of defective wheels prohibited

Do not use cracked or deformed wheels.

Doing so could cause the tire to leak air during driving, possibly causing an accident.

#### **NOTICE**

#### Replacing tire pressure warning valves and transmitters

- Because tire repair or replacement may affect the tire pressure warning valves and transmitters, make sure to have tires serviced by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer or other qualified service shop. In addition, make sure to purchase your tire pressure warning valves and transmitters at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Ensure that only genuine Toyota wheels are used on your vehicle. Tire pressure warning valves and transmitters may not work properly with non-genuine wheels.

### Aluminum wheel precautions

- Use only Toyota wheel nuts and wrenches designed for use with your aluminum wheels.
- When rotating, repairing or changing your tires, check that the wheel nuts are still tight after driving 1600 km (1000 miles).
- Be careful not to damage the aluminum wheels when using tire chains.
- Use only Toyota genuine balance weights or equivalent and a plastic or rubber hammer when balancing your wheels.


Maintenance and care

### Air conditioning filter


The air conditioning filter must be changed regularly to maintain air conditioning efficiency.

### Removal method

- ▶ Left-hand drive vehicles
- 1 Turn the power switch to OFF.
- 2 Open the glove box and slide off the damper.

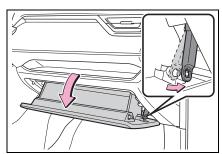


3 Push in each side of the glove box to disconnect the claws, and then slowly and fully open the glove box while supporting it.

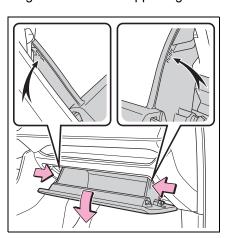


4 With the glove box fully open, slightly lift up the glove box and pull toward the seat to detach the bottom of the glove box.


Do not use excessive force if the glove box does not detach when lightly pulled. Instead, pull toward the seat while slightly adjusting the height of the glove box.

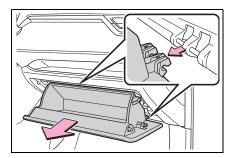

Unlock the filter cover (A), pull the filter cover out of the claws
 (B), and remove the filter cover.

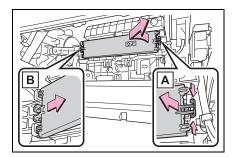


6 Remove the filter case.

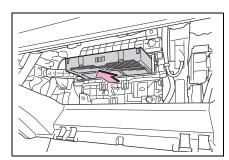


7 Remove the air conditioning filter from the filter case and replace it with a new one.


The " The " UP" marks shown on the filter should be pointing up.

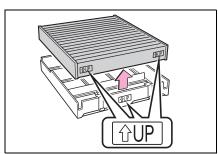

- **8** When installing, reverse the steps listed.
- ▶ Right-hand drive vehicles
- 1 Turn the power switch to OFF.
- 2 Open the glove box and slide off the damper.

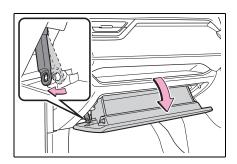


3 Push in each side of the glove box to disconnect the claws, and then slowly and fully open the glove box while supporting it.

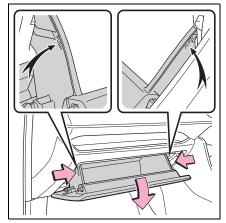


With the glove box fully open, slightly lift up the glove box and pull toward the seat to detach the bottom of the glove box.

Do not use excessive force if the glove box does not detach when lightly pulled. Instead, pull toward the seat while slightly adjusting the height of the glove box.

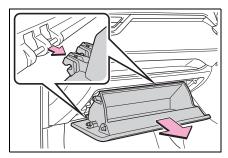


5 Unlock the filter cover (A), pull the filter cover out of the claws


(B), and remove the filter cover.

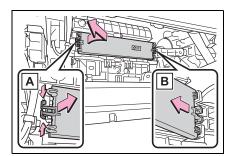

6 Remove the filter case.

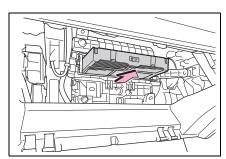

7 Remove the air conditioning filter and replace it with a new one.

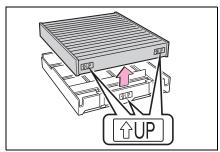

**8** When installing, reverse the steps listed.

#### ■ Checking interval

Inspect and replace the air conditioning filter according to the maintenance schedule. In dusty areas or areas with heavy traffic flow, early replacement may be required. (For scheduled maintenance information, please refer to the "Toyota Service Booklet" or "Toyota Warranty Booklet".)

# If air flow from the vents decreases dramatically

The filter may be clogged. Check the filter and replace if necessary.



#### **NOTICE**

# When using the air conditioning system

Make sure that a filter is always installed.

Using the air conditioning system without a filter may cause damage to the system.


#### ■When removing the glove box


Always follow the specified procedure to remove the glove box (→P.393). If the glove box is removed without following the specified procedure, the hinge of the glove box may become damaged.

# ■ To prevent damage to the filter cover

When moving the filter cover in the direction of arrow to release the fitting, pay attention not to apply excessive force to the claws. Otherwise, the claws may be damaged.

▶ Left-hand drive vehicles

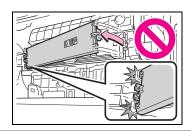

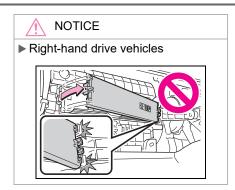


Cleaning the hybrid battery (traction battery) air intake vent and filter

To prevent the fuel economy from being affected, visually inspect the hybrid battery (traction battery) air intake vent periodically for dust and clogs. If it is dusty or clogged or if "Maintenance Required for Traction Battery Cooling Parts See Owner's Manual" is shown on the multi-information display, clean the air intake vent using the following procedures:

#### Cleaning the air intake vent

Remove the dust from the air intake vent with a vacuum cleaner, etc.


Make sure to only use a vacuum to suck out dust and clogs. Attempting to blow out dust and clogs using an airgun, etc. may push it into the air intake vent. (→P.399)

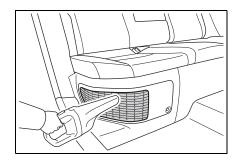

# If dust and clogs cannot be completely removed


If dust and clogs cannot be completely removed with the air intake vent cover installed, remove the cover and clean the filter.

- 1 Turn the power switch to OFF.
- **2** Using a Phillips screwdriver, remove the clip.

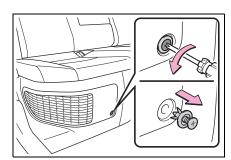


3 Remove the air intake vent cover.

Pull the cover as shown in the illustration to disengage the 8 claws, starting from the claw in the upper right corner and pull the cover toward the front of the vehicle to remove it.

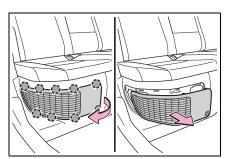


**4** Remove the air intake vent filter. Disengage the 4 center claws from the

filter.

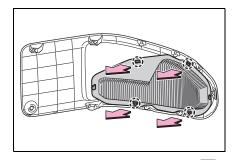


Disengage the claws in the order of A and B to remove the filter from the cover.

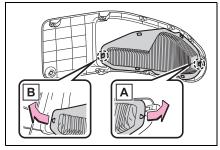

5 Remove the dust and clogs from the filter using a vacuum cleaner, etc.


Make sure to also remove the dust and clogs from the inside of the air intake vent cover.

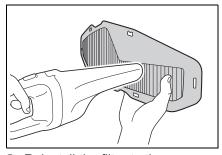

6 Reinstall the filter to the cover.


Engage the claws in the order of B

and A .

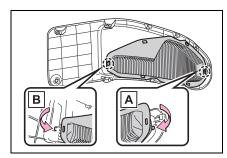


Engage the 4 center claws to install the filter.

Make sure that the filter is not crooked or deformed when installing it.

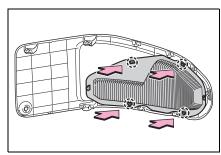


7 Install the air intake vent cover.

Insert the tab of the cover as shown in the illustration and push the cover to engage the 8 claws.

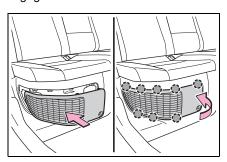

8 Install the clip.

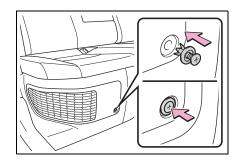

## Scheduled maintenance of the air intake vent is necessary when

In some situations such as when the vehicle is used frequently or in heavy traffic or dusty areas, the air intake vent may need to be cleaned more regularly. For details, refer to the "Toyota Service Booklet" or "Toyota Warranty Booklet".

#### ■ Cleaning the air intake vent

- Dust in the air intake vent may interfere with the cooling of the hybrid battery (traction battery). If charging/discharging of the hybrid battery (traction battery) becomes limited, the distance that the vehicle can be driven using the electric motor (traction motor) may be reduced and the fuel economy may be reduced. Inspect and clean the air intake vent periodically.
- Improper handling of the air intake vent cover and filter may result in damage to them. If you have any concerns about cleaning the filter, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

#### ■If "Maintenance Required for Traction Battery Cooling Parts See Owner's Manual" is shown on the multi-information display

- If this warning message is shown on the multi-information display, remove the air intake vent cover and clean the filter. (→P.397)
- After cleaning the air intake vent, start

#### A

#### **WARNING**

#### When cleaning the air intake vent

- Before cleaning the air intake vent, make sure to turn the power switch to OFF to stop the hybrid system.
- Do not use water or other liquids to clean the air intake vent. If water is applied to the hybrid battery (traction battery) or other components, a malfunction or fire may occur.
- When removing the air intake vent cover

Do not touch the service plug located near the air intake vent. ( $\rightarrow$ P.83)



#### **NOTICE**

#### ■When cleaning the air intake vent

When cleaning the air intake vent, make sure to only use a vacuum to suck out dust and clogs. If a compressed air blow gun, etc. is used to blow out dust and clogs, the dust or clogs may be pushed into the air intake vent, which may affect the performance of the hybrid battery (traction battery) and cause a malfunction.



#### ■To prevent damage to the vehicle

- Do not allow water or foreign matter to enter the air intake vent when the cover is removed.
- Carefully handle the removed filter so that it will not be damaged. If the filter is damaged, have it replaced with a new filter by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Make sure to reinstall the filter and cover to their original positions after cleaning.
- Do not install anything to the air intake vent other than the exclusive filter for this vehicle or use the vehicle without the filter installed.
- If "Maintenance Required for Traction Battery Cooling Parts See Owner's Manual" is shown on the multi-information display

If the vehicle is continuously driven with the warning message (indicating that charging/discharging of the hybrid battery (traction battery) may become limited) displayed, the hybrid battery (traction battery) may malfunction. If the warning message is displayed, clean the air intake vent immediately.

6


# Wiper insert replacement

When replacing the wiper insert, perform the following procedure to operate each wiper.

#### Windshield wipers

- Windshield wiper blade removal and installation
- While holding the hook portion
  A of the wiper arm, first lift up the driver side, and then lift up the passenger side.


When returning the wiper arms to their original positions, first lower the passenger side, and then lower the driver side.

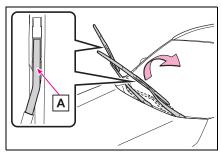

2 Lift the stopper using a flat-head screwdriver as shown in the illustration.


To prevent damage to the wiper arm, protect the tip of the screwdriver with a

rag.

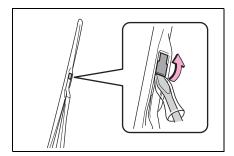

**3** Slide the wiper blade to remove it from the wiper arm.


When installing, reverse the steps listed.

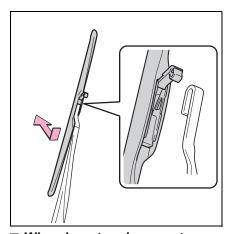

#### ■ Wiper insert replacement


1 Pull the wiper insert to remove the claw of the wiper blade from

the stopper, and pull out the wiper insert.

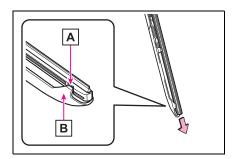

- A Stopper
- **B** Claw
- 2 Remove the 2 metal plates from the wiper insert pulled out, and install the plates to a new wiper insert.


Make sure that the cutout location and warp direction of the metal blades are same as the original.

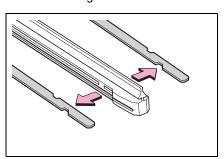

- 3 Install the wiper insert to the wiper blade from the side without the stopper.
- 4 Secure the stopper of the wiper insert with the claw of the wiper blade.


#### Rear window wiper

Move the wiper blade until a click sound can be heard and the claw detaches, and then remove the wiper blade from the wiper arm.

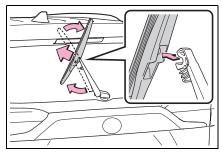


Pull the wiper insert out past the stopper on the wiper blade, and then continue to pull until it is completely removed.

Lightly grasp between the claws of the wiper blade to allow the wiper insert to lift up, making it easier to remove.

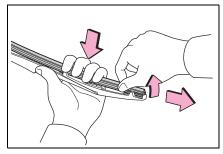


Remove the 2 metal plates from the old wiper insert and install

them to the replacement wiper insert.

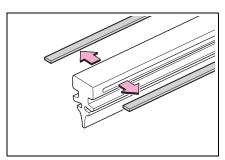

4 Insert the wiper insert starting from the claw at the center of the wiper blade. Pass the wiper insert through the 3 claws so that it sticks out from the stopper, and then pass the wiper insert through the final remaining claw.

Applying a small amount of washer fluid to the wiper insert can make it easier to insert the claws into the grooves.

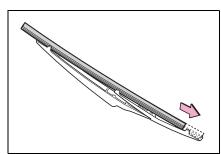


5 Check that the wiper blade claws are fitted in the grooves of the wiper insert.

If the wiper blade claws are not fitted in the grooves of the wiper insert, grasp the wiper insert and slide it back and forth multiple times to insert the claws into the grooves.

Lightly lift up the center of the wiper insert to make the rubber easier to

slide.

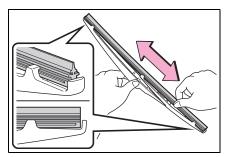

When installing a wiper blade, reverse the procedure in step 1.

After installing the wiper blade, check that the connection is locked.

# ■ Wiper blade and wiper insert handling

Improper handling may result in damage to the wiper blades or wiper insert. If you have any concerns about replacing the wiper blades or wiper insert yourself, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.



#### **NOTICE**

### When lifting the windshield wip-

- When raising the wiper arms off the windshield, lift up the driver side first, and then lift up passenger side. When returning the wipers to their original position, return the passenger side first.
- Do not lift a windshield wiper by the wiper blade. Otherwise, the wiper blade may be deformed.
- Do not operate the wiper lever when the windshield wipers are lifted. Otherwise, the windshield wipers may contact the hood, possibly resulting in damage to the windshield wipers and/or hood.

#### **NOTICE**

#### ■To prevent damage

- Be careful not to damage the claws when replacing the wiper insert.
- After the wiper blade is removed from the wiper arm, place a cloth, etc., between the rear window and wiper arm to prevent damage to the rear window.
- Be sure not to pull excessively on the wiper insert or deform its metal plates.

#### **Electronic key battery**

# Replace the battery with a new one if it is depleted.

#### ■ If the key battery is depleted

The following symptoms may occur:

- The smart entry & start system and wireless remote control will not function properly.
- The operational range will be reduced.

#### Items to prepare

Prepare the following before replacing the battery:

- Flathead screwdriver
- Small flathead screwdriver
- Lithium battery CR2032


#### ■ Use a CR2032 lithium battery

- Batteries can be purchased at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer, local electrical appliance shops or camera stores.
- Replace only with the same or equivalent type recommended by the manufacturer.
- Dispose of used batteries according to the local laws.

Maintenance and care

#### Replacing the battery


1 Release the lock and remove the mechanical key.

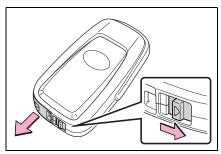

Remove the key cover.

Use a screwdriver of an appropriate size. Forcedly prying may cause the cover damaged.

To prevent damage to the key, cover the tip of the flathead screwdriver with a rag.

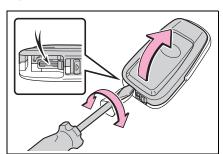


Remove the depleted battery using a small flathead screwdriver.

When removing the cover, the electronic key module may stick to the cover and the battery may not be visible. In this case, remove the electronic key module in order to remove the battery.

Insert a new battery with the "+" termi-

nal facing up.

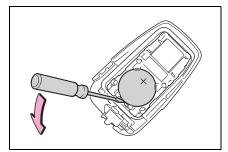

When installing, reverse the steps listed.



#### **WARNING**

#### Battery precautions

Observe the following precautions. Failure to do so may result in death or serious injury.

- Do not swallow the battery. Doing so may cause chemical burns.
- A coin battery or button battery is used in the electronic key. If a battery is swallowed, it may cause severe chemical burns in as little as 2 hours and may result in death or serious injury.
- Keep away new and removed batteries from children.
- If the cover cannot be firmly closed, stop using the electronic key and stow the key in the place where children cannot reach, and then contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- If you accidentally swallow a battery or put a battery into a part of your body, get emergency medical attention immediately.

#### WARNING

- ■To prevent battery explosion or leakage of flammable liquid or gas
- Replace the battery with a new battery of the same type. If a wrong type of battery is used, it may explode.
- Do not expose batteries to extremely low pressure due to high altitude or extremely high temperatures.
- Do not burn, break or cut a battery.



#### NOTICE

#### For normal operation after replacing the battery

Observe the following precautions to prevent accidents:

- Always work with dry hands. Moisture may cause the battery to
- Do not touch or move any other component inside the remote con-
- Do not bend either of the battery terminals.


#### **Checking and replacing** fuses

If any of the electrical components do not operate, a fuse may have blown. If this happens, check and replace the fuses as necessary.

#### Checking and replacing fuses


- 1 Turn the power switch to OFF.
- 2 Open the fuse box cover.
- ▶ Engine compartment: Type A fuse box

Push claws **A** and **B** to completely release the lock, and then lift up the cover.

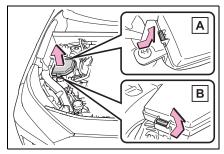


► Engine compartment: Type B fuse box


Push claws **A** and **B** to completely release the lock, and then lift up the cover.

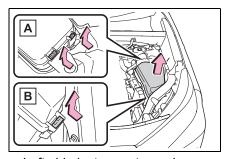


► Left side instrument panel Left-hand drive vehicles: Remove the lid.

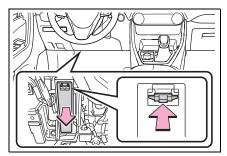

Right-hand drive vehicles: Push the tab in and remove the cover, and then remove the lid.

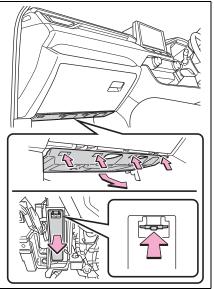


▶ Right side luggage compartment Open the deck board. (→P.348)
Disengage the 12 claws and pull the luggage side cover to remove it.
When installing the luggage side cover, make sure that the claws are installed

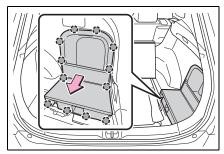


Remove the cover

securely.

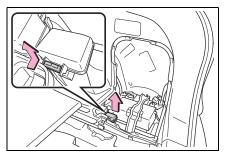

#### 3 Remove the fuse.


Only type A fuse can be removed using the pullout tool.

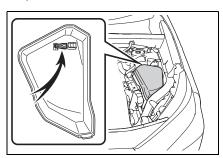

#### 4 Check if the fuse is blown.


Replace the blown fuse with a new fuse of an appropriate amperage rating. The amperage rating can be found on the fuse box lid.

#### ▶ Type A

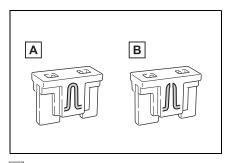


- A Normal fuse
- **B** Blown fuse

#### ▶ Type B

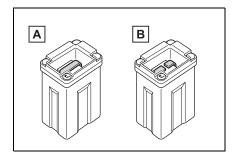

- A Normal fuse
- **B** Blown fuse
- ▶ Type C

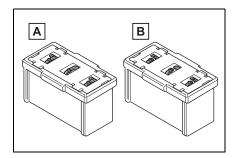

- A Normal fuse
- **B** Blown fuse

#### ■ After a fuse is replaced

- When installing the lid, make sure that the tab is installed securely.
- If the lights do not turn on even after the fuse has been replaced, a bulb may need replacement. (→P.408)
- If the replaced fuse blows again, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

#### ■ If there is an overload in a circuit

The fuses are designed to blow, protecting the wiring harness from damage.

#### $\Lambda$

#### **WARNING**

# ■ To prevent system breakdowns and vehicle fire

Observe the following precautions. Failure to do so may cause damage to the vehicle, and possibly a fire or injury.

- Never use a fuse of a higher amperage rating than that indicated, or use any other object in place of a fuse.
- Always use a genuine Toyota fuse or equivalent.
   Never replace a fuse with a wire, even as a temporary fix.
- Do not modify the fuses or fuse boxes.



#### NOTICE

#### ■ Before replacing fuses

Have the cause of electrical overload determined and repaired by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.

# ■ To prevent damage to the engine compartment fuse box cover

When opening the fuse box, completely release the claw locks before lifting up the cover. Otherwise, the claws may be damaged.

### Light bulbs


You may replace the following bulbs by yourself. The difficulty level of replacement varies depending on the bulb. As there is a danger that components may be damaged, we recommend that replacement is carried out by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

# Preparing for light bulb replacement


Check the wattage of the light bulb to be replaced. ( $\rightarrow$ P.485)

#### **Bulb location**

▶ Front

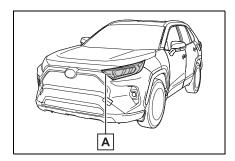


A Front turn signal lights

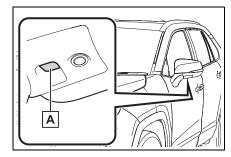

A Outer foot lights (if equipped)

▶ Rear

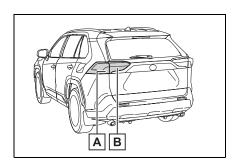

- A Rear turn signal lights
- B Back-up lights
- Lights that need to be replaced by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer
- Headlights
- Front turn signal lights (Vehicles with projector headlights)
- Daytime running lights
- Front position lights
- Front fog lights (if equipped)
- Side turn signal lights
- Tail lights

- Stop lights
- Rear fog light (if equipped)
- High mounted stoplight
- License plate lights

#### **■LED lights**

The lights other than the following lights each consist of a number of LEDs. If any of the LEDs burn out, take your vehicle to any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer to have the light replaced.

- Front turn signal lights (Vehicles without projector headlights)
- Rear turn signal lights
- Back-up lights
- Outer foot lights (if equipped)
- Condensation build-up on the inside of the lens

Temporary condensation build-up on the inside of the light lens does not indicate a malfunction. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for more information in the following situations:

- Large drops of water have built up on the inside of the lens.
- Water has built up inside the light.


6

Maintenance and care


#### Replacing light bulb

#### ■ Front turn signal lights


**1** Turn the bulb base counter-clockwise.

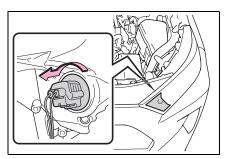

2 Remove the light bulb.

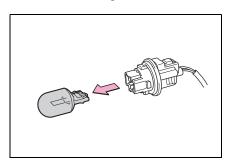


3 Install a new light bulb then install the bulb base to the light unit by inserting it and turning the bulb base clockwise.

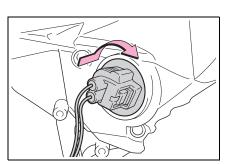


#### ■ Rear turn signal lights

1 Open the back door and remove the cover.

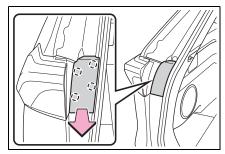



Remove the screws and remove the light unit.

Remove the light unit by pulling it directly backward from the rear of the vehicle.

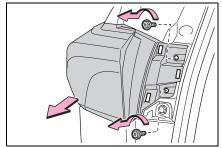


3 Turn the bulb base counterclockwise.

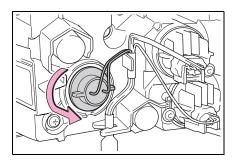

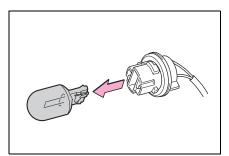


5 Install a new light bulb then install the bulb base to the light unit by inserting it and turning the bulb base clockwise.

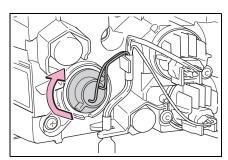


6 Align the grooves on the light unit with the claws, and insert the light unit straight so that the pin on the light unit fit into the hole.

Confirm that the light unit is completely


secured.

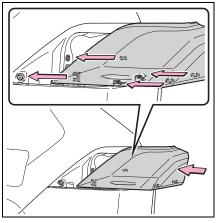

7 Reinstall the screws.

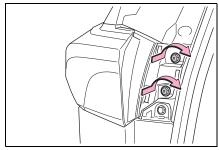

8 Reinstall the cover.

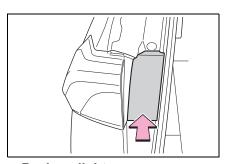


■ Back-up lights

Open the back door and remove the cover.

To prevent damage to the cover, pro-


Maintenance and care

tect the tip of the screwdriver with a rag.

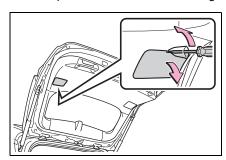


2 Turn the bulb base counterclockwise.


Remove the cord from the clip before turning the bulb base.

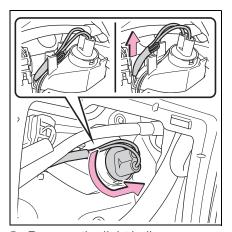

3 Remove the light bulb.

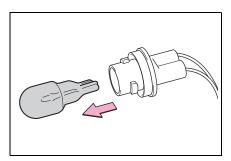


4 Install a new light bulb.

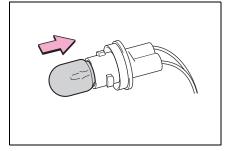


5 Install the bulb base to the light unit by inserting it and turning the bulb base clockwise.

Secure the cord with the clip back again after installing the bulb base.

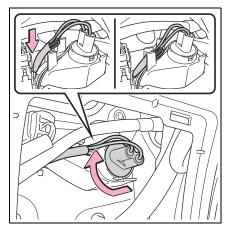

6 Reinstall the cover.

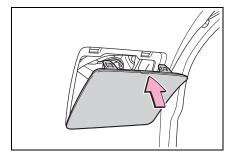


#### ■ Outer foot lights (if equipped)

Press the upper part of the outside rear view mirror to tilt the mirror face upward, and disconnect the four tabs behind the mirror.

Pry the mirror out toward you, and disconnect two tabs at a time.


Work carefully, ensuring that you do not drop the mirror.

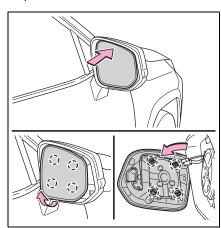


**2** Disconnect the connectors behind the mirror, and remove the mirror.

Make sure to check the connectors, to avoid connecting upside down when reinstalling.

Work carefully, ensuring that you do not

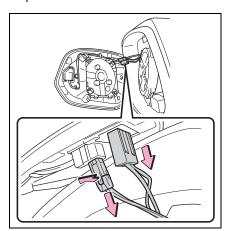


3 Disconnect the tabs behind the mirror cover, and remove the mirror cover.

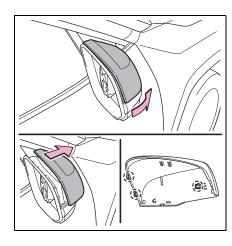

6


**4** Fold the mirror before removing the light unit.

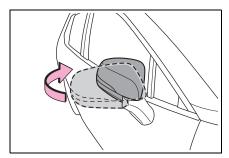

**5** Remove the light unit.

Remove the two screws, and disengage the two tabs with a flat-head screwdriver.


Work carefully, ensuring that you do not damage the tabs.

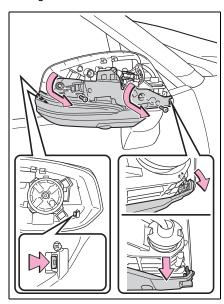


6 Turn the bulb base counterclockwise.

Remove the cord from the clip before

turning the bulb base.

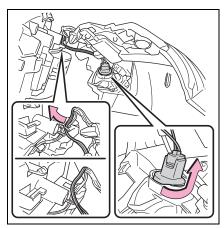


7 Remove the light bulb.

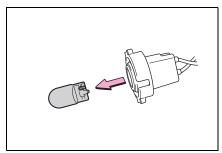

Install a new light bulb then install the bulb base to the light unit by inserting it and turning the bulb base clockwise.


Secure the cord with the clip back again

after installing the bulb base.

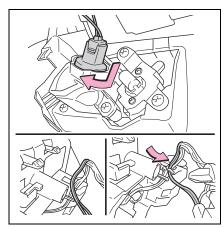


9 Install the light unit.


Make sure that the two tabs of the light unit are engaged securely, and install the two screws.

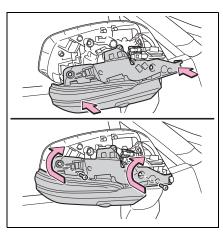


10 Extend the mirror.

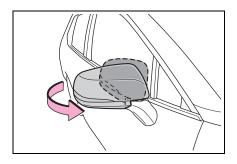

11 Install the mirror cover.

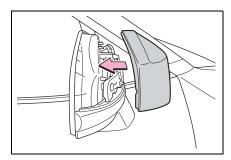

**12**Reconnect the connectors of the mirror.

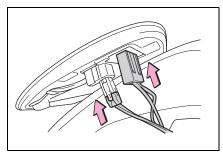


13 Align the tabs, and secure the mirror by pushing in each diagonally-opposite pair of tabs in order.

Make sure to insert the tabs in order as shown in the illustration, and push them in until a click is heard.

If you do not hear the click, do not force the tabs in. Instead, remove the mirror

and check that the tabs are aligned.

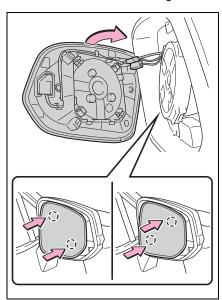

### **WARNING**

#### Replacing light bulb

- Turn off the light. Do not attempt to replace the bulb immediately after turning off the light. The bulb become very hot and may cause burns.
- Do not touch the glass portion of the light bulb with bare hands. When it is unavoidable to hold the glass portion, use and hold with a clean dry cloth to avoid getting moisture and oils on the bulb. Also, if the bulb is scratched or dropped, it may blow out or crack.
- Fully install light bulb and any parts used to secure it. Failure to do so may result in heat damage, fire, or water entering the light unit. This may damage the light or cause condensation to build up on the lens.

Do not attempt to repair or disassemble light bulbs, connectors, electric circuits or component parts. Doing so may result in death or serious injury due to electric shock.

#### ■To prevent damage or fire

- Make sure bulb is fully seated and
- Check the wattage of the bulb before installing to prevent heat damage.

### When trouble arises

7-1.	Essential information
	Emergency flashers418
	If your vehicle has to be
	stopped in an emergency418
	If the vehicle is submerged or
	water on the road is rising
7.0	
7-2.	Steps to take in an emer- gency
	If your vehicle needs to be towed421
	If you think something is wrong425
	If a warning light turns on or a warning buzzer sounds427
	If a warning message is displayed436
	If you have a flat tire (vehicles without spare tire)440
	If you have a flat tire (vehicles with spare tire)451
	If the hybrid system will not start460
	If you lose your keys461
	If the fuel filler door cannot be opened462
	If the electronic key does not operate properly462
	If the 12-volt battery is discharged464
	If your vehicle overheats469
	If the vehicle becomes stuck
	472


#### **Emergency flashers**

The emergency flashers are used to warn other drivers when the vehicle has to be stopped in the road due to a breakdown, etc.

#### Operating instructions

Press the switch.

All the turn signal lights will flash. To turn them off, press the switch once again.

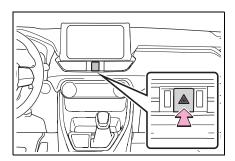

#### ■ Emergency flashers

• If the emergency flashers are used for a long time while the hybrid system is not operating (while the "READY" indicator is not illuminated), the 12-volt battery may discharge.

If any of the SRS airbags deploy

(inflate) or in the event of a strong rear impact, the emergency flashers will turn on automatically. The emergency flashers will turn off automatically after operating for approximately 20 minutes. To manually turn the emergency flashers off, press the switch twice. (The emergency flashers may not turn on automatically depending on the force of the impact and conditions of the collision.)

If your vehicle has to be stopped in an emergency


Only in an emergency, such as if it becomes impossible to stop the vehicle in the normal way, stop the vehicle using the following procedure:

#### Stopping the vehicle

 Steadily step on the brake pedal with both feet and firmly depress it.

Do not pump the brake pedal repeatedly as this will increase the effort required to slow the vehicle.

- 2 Shift the shift lever to N.
- ▶ If the shift lever is shifted to N
- 3 After slowing down, stop the vehicle in a safe place by the road.
- 4 Stop the hybrid system.
- If the shift lever cannot be shifted to N
- 3 Keep depressing the brake pedal with both feet to reduce vehicle speed as much as possible.
- 4 To stop the hybrid system, press and hold the power switch for 2 consecutive seconds or more,

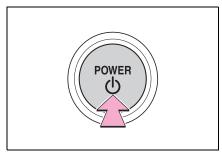

**5** Stop the vehicle in a safe place by the road.

#### Λ

#### WARNING

# If the hybrid system has to be turned off while driving

Power assist for the steering wheel will be lost, making the steering wheel heavier to turn. Decelerate as much as possible before turning off the hybrid system.

If the vehicle is submerged or water on the road is rising

This vehicle is not designed to be able to drive on roads that are deeply flooded with water. Do not drive on roads where the roads may be submerged or the water may be rising. It is dangerous to remain in the vehicle, if it anticipated that the vehicle will be flooded or set a drift. Remain calm and follow the following.

- If the door can be opened, open the door and exit the vehicle.
- If the door can not be opened, open the window using the power window switch and ensure an escape route.
- If the window can be opened, exit the vehicle through the window.
- If the door and window cannot be opened due to the rising water, remain calm, wait until the water level inside the vehicle rises to the point that the water pressure inside of the vehicle equals the water pressure outside of the vehicle and then open the door after waiting for the rising water to enter the vehicle, and exit the vehicle. When the outside water level exceeds half the height of the door, the door cannot be opened from the inside due to

water pressure.

#### ■ Water level exceeds the floor

When the water level exceeds the floor and time has passed, the electrical equipment will get damaged, the power windows will not operate, the engine and motor stop, and the vehicle may not be able to get moving.

# ■Using an emergency escape ham-

Laminated glass is used in the windshield on this vehicle. Laminated glass cannot be shattered with an emergency hammer\*. Tempered glass is used in the windows on this vehicle.

\*: Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer or aftermarket accessory manufacturer for further information about an emergency hammer.



#### **WARNING**

#### Caution while driving

Do not drive on roads where the roads may be submerged or the water may be rising. Otherwise the vehicle may be damaged and cannot move, as well as become flooded and set a drift, which may lead to death.

#### If your vehicle needs to be towed

If towing is necessary, we recommend having your vehicle towed by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer or commercial towing service, using a wheellift type truck or flatbed truck.

Use a safety chain system for all towing, and abide by all state/provincial and local laws.

2WD models: If towing your vehicle with a wheel-lift type truck from the front, the vehicle's rear wheels and axles must be in good conditions. (→P.421, 422)

If they are damaged, use a towing dolly or flatbed truck.

AWD models: If towing your vehicle with a wheel-lift type truck, use a towing dolly. (→P.421, 422)


#### **WARNING**

Observe the following precautions. Failure to do so may result in death or serious injury.

#### When towing the vehicle


#### ▶ 2WD models

Be sure to transport the vehicle with the front wheels raised or with all four wheels raised off the ground. If the vehicle is towed with the front wheels contacting the ground, the drivetrain and related parts may be damaged or electricity generated by the operation of the motor may cause a fire to occur depending on the nature of the damage or malfunction.

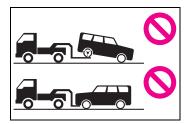

#### ▶ AWD models

Be sure to transport the vehicle with all four wheels raised off the ground. If the vehicle is towed with the tires contacting the ground, the drivetrain or related parts may be damaged, the vehicle may fly off the truck, or electricity generated by the operation of the motor may cause a fire to occur depending on the nature of the damage or malfunction.

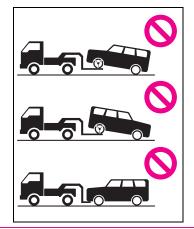

When trouble arises

#### A

#### WARNING

#### While towing

- When towing using cables or chains, avoid sudden starts, etc. which place excessive stress on the towing eyelets, cables or chains. The towing eyelets, cables or chains may become damaged, broken debris may hit people, and cause serious damage.
- Do not turn the power switch to OFF.
   There is a possibility that the ste

There is a possibility that the steering wheel is locked and cannot be operated.

## Installing towing eyelets to the vehicle

Make sure that towing eyelets are installed securely. If not securely installed, towing eyelets may come loose during towing.

#### $\triangle$

#### NOTICE

- To prevent damage to the vehicle when towing using a wheel-lift type truck
- Do not tow the vehicle from the rear when the power switch is off. The steering lock mechanism is not strong enough to hold the front wheels straight.
- When raising the vehicle, ensure adequate ground clearance for towing at the opposite end of the raised vehicle. Without adequate clearance, the vehicle could be damaged while being towed.
- To prevent damage to the vehicle when towing with a sling-type truck

Do not tow with a sling-type truck, either from the front or rear.

# To prevent damage to the vehicle during emergency towing

Do not secure cables or chains to the suspension components.

#### Situations when it is necessary to contact dealers before towing


The following may indicate a problem with your transmission. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer or commercial towing service before towing.

- The hybrid system warning message is shown on the multi-information display and the vehicle does not move.
- The vehicle makes an abnormal sound.


# Towing with a wheel-lift type truck

► From the front (2WD models) Release the parking brake.

Turn automatic mode off.  $(\rightarrow P.211)$ 

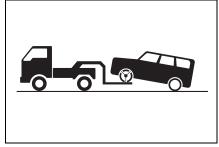


► From the front (AWD models)
Use a towing dolly under the rear

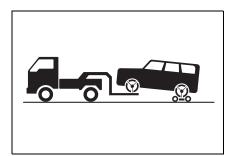

#### ▶ From the rear

Use a towing dolly under the front wheels.

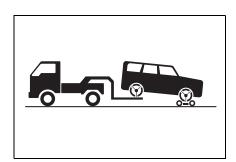


#### **NOTICE**


#### ■ Towing with a sling-type truck

Do not tow with a sling-type truck to prevent body damage.

▶ 2WD models

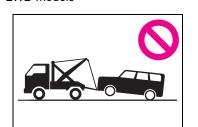

#### ▶ AWD models

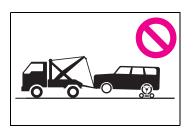

#### Using a flatbed truck

When using a flat-bed truck to transport the vehicle, use tire strapping belts. Refer to the owner's manual of the flat-bed truck for the tire strapping method.

In order to suppress vehicle movement during transportation, set the parking brake and turn the power switch to OFF.

### **Emergency towing**

If a tow truck is not available in an emergency, your vehicle may be temporarily towed using cables or chains secured to the emergency towing eyelets. This should only be attempted on hard surfaced roads for short distances at under 30 km/h (18 mph).

A driver must be in the vehicle to steer and operate the brakes. The vehicle's wheels, drive train, axles, steering and brakes must be in good condition.


# Emergency towing procedure

To have your vehicle towed by another vehicle, the towing eyelet must be installed to your vehicle. Install the towing eyelet using the following procedure.


- 1 Take out the wheel nut wrench and towing eyelet. (→P.441, 452)
- 2 Using a flathead screwdriver, remove eyelet cover (A), and then remove eyelet cover (B).

To protect the bodywork, place a rag between the screwdriver and the vehicle body as shown in the illustration.


#### ▶ Type A

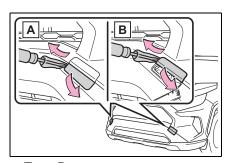


▶ Type B

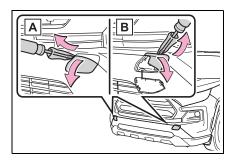


- 3 Insert the towing eyelet into the hole and tighten partially by hand.
- ▶ Type A

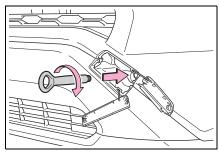


▶ Type B

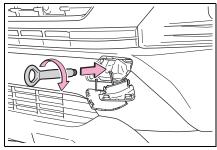

- 4 Tighten down the towing eyelet securely using a wheel nut wrench or hard metal bar.
- ▶ Type A

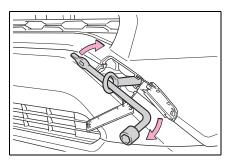

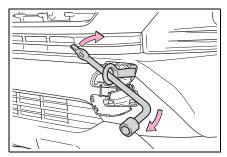

Securely attach cables or chains to the towing eyelet.

Take care not to damage the vehicle body.

6 Enter the vehicle being towed and start the hybrid system.

Turn off the Parking Support Brake function (if equipped): →P.300 If the hybrid system does not start, turn the power switch to ON.

Shift the shift lever to N and release the parking brake.

Turn automatic mode off. (→P.211) When the shift lever cannot be shifted: →P.207

#### ■ While towing

If the hybrid system is not running, the power assist for the brakes and steering will not function, making steering and braking more difficult.

#### ■ Wheel nut wrench

Vehicles with wheel nut wrench: Wheel nut wrench is installed in the deck under tray (vehicles without spare tire) or tool bag (vehicles with spare tire). (→P.441, 452)

#### If you think something is wrong

If you notice any of the following symptoms, your vehicle probably needs adjustment or repair. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.

#### Visible symptoms

- Fluid leaks under the vehicle (Water dripping from the air conditioning after use is normal.)
- Flat-looking tires or uneven tire
- Engine coolant temperature gauge needle continually points higher than normal.

#### Audible symptoms

- Changes in exhaust sound
- Excessive tire squeal when cornering
- Strange noises related to the suspension system
- Pinging or other noises related to the hybrid system

#### **Operational symptoms**

- Engine missing, stumbling or running roughly
- Appreciable loss of power

When trouble arises

#### 426 7-2. Steps to take in an emergency

- Vehicle pulls heavily to one side when braking
- Vehicle pulls heavily to one side when driving on a level road
- Loss of brake effectiveness, spongy feeling, pedal almost touches the floor

Calmly perform the following actions if any of the warning lights comes on or flashes. If a light comes on or flashes, but then goes off, this does not necessarily indicate a malfunction in the system. However, if this continues to occur, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

#### Actions to the warning lights or warning buzzers

#### ■ Brake system warning light (warning buzzer)

Warning light	Details/Actions
	Indicates that:  ■ The brake fluid level is low; or  ■ The brake system is malfunctioning  → Immediately stop the vehicle in a safe place and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. Continuing to drive the vehicle may be dangerous.

#### ■ Brake system warning light

Warning light	Details/Actions
(Yellow)	Indicates a malfunction in:  ■ The parking brake system;  ■ The regenerative braking system; or  ■ The electronically controlled brake system  → Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

#### ■ Charging system warning light\*

Warning light	Details/Actions
= +	Indicates a malfunction in the vehicle's charging system  → Immediately stop the vehicle in a safe place and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

<sup>\*:</sup> This light illuminates on the multi-information display (with 7-inch display only).

### ■ High coolant temperature warning light\* (warning buzzer)

Warning light	Details/Actions
<b>₽</b>	Indicates that the engine is overheating  → Immediately stop the vehicle in a safe place.  Handling method (→P.469)

<sup>\*:</sup> This light illuminates on the multi-information display with a message.

#### ■ Hybrid system overheat warning light<sup>\*</sup> (warning buzzer)

Warning light	Details/Actions
=	Indicates that the hybrid system has overheated  → Stop the vehicle in a safe place.  Handling method (→P.469)

<sup>\*:</sup> This light illuminates on the multi-information display with a message.

#### ■ Low engine oil pressure warning light\* (warning buzzer)

Warning light	Details/Actions
وسيح.	Indicates that the engine oil pressure is too low  → Immediately stop the vehicle in a safe place and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

<sup>\*:</sup> This light illuminates on the multi-information display with a message.

#### ■ Malfunction indicator lamp\*

Warning light	Details/Actions
<b>F</b>	Indicates a malfunction in:  ■ The hybrid system;  ■ The electronic engine control system;  ■ The electronic throttle control system; or  ■ The emission control system (if equipped)  → Have the vehicle inspected by any authorized
	Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

<sup>\*:</sup> This light illuminates on the multi-information display (with 7-inch display only).

#### **■** SRS warning light

Warning light	Details/Actions
	Indicates a malfunction in:  ■ The SRS airbag system; or  ■ The seat belt pretensioner system  → Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

#### ■ ABS warning light

Warning light	Details/Actions
(ABS)	Indicates a malfunction in:  ■ The ABS; or  ■ The brake assist system  → Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

### ■ Electric power steering system warning light\* (warning buzzer)

Warning light	Details/Actions
(Red/yellow)	Indicates a malfunction in the EPS (Electric Power Steering) system  → Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

<sup>\*:</sup> This light illuminates on the multi-information display (with 7-inch display only).

### ■ PCS warning light (warning buzzer)

Warning light	Details/Actions
	When a buzzer sounds simultaneously: Indicates a malfunction has occurred in the PCS (Pre-Collision System).
	→ Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.
OFF (Flashes or illuminates) (If equipped)	When a buzzer does not sound: The PCS (Pre-Collision System) has become temporarily unavailable, corrective action may be necessary.
, , , ,	$\rightarrow$ Follow the instructions displayed on the multi-information display. ( $\rightarrow$ P.232, 438)
	If the PCS (Pre-Collision System) or VSC (Vehicle Stability Control) system is disabled, the PCS warning light will illuminate.
	→ P.242

### ■ LTA indicator<sup>\*</sup> (warning buzzer)

Warning light	Details/Actions
(Orange)	Indicates a malfunction in the LTA (Lane Tracing Assist)  → Follow the instructions displayed on the multi-
(If equipped)	information display. (→P.251)

<sup>\*:</sup> This light illuminates on the multi-information display.

### ■ Toyota parking assist-sensor OFF indicator\* (warning buzzer)

Warning light	Details/Actions
	When a buzzer sounds: Indicates a malfunction in the Toyota parking assist- sensor function
Pw≜ OFF	→ Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.
(Flashes) (If equipped)	When a buzzer does not sound: Indicates that the system is temporarily unavailable, possibly due to a sensor being dirty or covered with ice, etc.
	ightarrow Follow the instructions displayed on the multi-information display. ( $ ightarrow$ P.293, 436)

<sup>\*:</sup> This light illuminates on the multi-information display (with 7-inch display only).

### ■ PKSB OFF indicator<sup>\*</sup>

Warning light	Details/Actions
OFF (Flashes) (If equipped)	When a buzzer sounds: Indicates a malfunction in the PKSB (Parking Support Brake) system
	→ Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.
	When a buzzer does not sound: Indicates that the system is temporarily unavailable, possibly due to a sensor being dirty or covered with ice, etc.
	$\rightarrow$ Follow the instructions displayed on the multi-information display. ( $\rightarrow$ P.304, 436)

<sup>\*:</sup> This light illuminates on the multi-information display (with 7-inch display only).

### ■ RCTA OFF indicator\* (warning buzzer)

Warning light	Details/Actions
RCTA OFF (Flashes) (If equipped)	When a buzzer sounds: Indicates a malfunction in the RCTA (Rear Crossing Traffic Alert) function
	→ Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.
	When a buzzer does not sound: Indicates that the rear bumper around the radar sensor is covered with dirt, etc. (→P.284)
	$\rightarrow$ Follow the instructions displayed on the multi-information display. ( $\rightarrow$ P.274, 436)

<sup>\*:</sup> This light illuminates on the multi-information display (with 7-inch display only).

### ■ Slip indicator light

Warning light	Details/Actions
	Indicates a malfunction in:  ■ The VSC/Trailer Sway Control system;  ■ The TRC system;  ■ The Trail Mode function (if equipped); or  ■ The hill-start assist control system
	→ Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

### ■ Inappropriate pedal operation warning light<sup>\*</sup> (warning buzzer)

Warning light	Details/Actions
	When a buzzer sounds:  ■ Brake Override System is malfunctioning  ■ Drive-Start Control is malfunctioning  ■ Drive-Start Control is operating  → Follow the instructions displayed on the multi-information display.  When a buzzer does not sound:  Brake Override System is operating  → Release the accelerator pedal and depress the brake pedal.

### \*: This light illuminates on the multi-information display.

### ■ Brake hold operated indicator (warning buzzer)

Warning light	Details/Actions
HOLD (Flashes)	Indicates a malfunction in the brake hold system  → Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

### ■ Parking brake indicator

Warning light	Details/Actions
(P)	It is possible that the parking brake is not fully engaged or released → Operate the parking brake switch once again.
(Flashes)	This light comes on when the parking brake is not released. If the light turns off after the parking brake is fully released, the system is operating normally.

### ■ Tire pressure warning light\*

Warning light	Details/Actions
(If equipped)	When the light comes on after blinking for 1 minute: Malfunction in the tire pressure warning system
	→ Have the system checked by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
	When the light comes on: Low tire inflation pressure such as  ● Natural causes  ● Flat tire
	→ Immediately stop the vehicle in a safe place. Handling method (→P.435)

<sup>\*:</sup> This light illuminates on the multi-information display (with 7-inch display only).

### ■ Low fuel level warning light

Warning light	Details/Actions
	Indicates that remaining fuel is approximately 8.3 L (2.2 gal., 1.8 lmp. gal.) or less  → Refuel the vehicle.

## ■ Driver's and front passenger's seat belt reminder light (warning buzzer)\*

Warning light	Details/Actions
	Warns the driver and/or front passenger to fasten their seat belts
	→ Fasten the seat belt. If the front passenger's seat is occupied, the front passenger's seat belt also needs to be fastened to make the warning light (warning buzzer) turn off.

<sup>\*:</sup> Driver's and front passenger's seat belt warning buzzer:

The driver's and front passenger's seat belt warning buzzer sounds to alert the driver and front passenger that his or her seat belt is not fastened. If the seat belt is unfastened, the buzzer sounds intermittently for a certain period of time after the vehicle reaches a certain speed.

### ■ Rear passengers' seat belt reminder lights\*1 (warning buzzer)\*2

Warning light	Details/Actions
REAR A	Warns the rear passengers to fasten their seat belts $\rightarrow$ Fasten the seat belt.

<sup>\*1:</sup> These lights illuminate on the multi-information display.

\*2: Rear passengers' seat belt warning buzzer:

The rear passengers' seat belt warning buzzer sounds to alert the rear passenger that his or her seat belt is not fastened. If the seat belt is unfastened, the buzzer sounds intermittently for a certain period of time after the vehicle reaches

### ■ Warning buzzer

a certain speed.

In some cases, the buzzer may not be heard because of noisy place or an audio sound.

# Front passenger detection sensor, seat belt reminder and warning buzzer

• If luggage is placed on the front passenger seat, the front passenger detection sensor may cause the warning light to flash and the warning buzzer to sound even if a passenger is not sitting in the seat.

• If a cushion is placed on the seat, the sensor may not detect a passenger, and the warning light may not operate properly.

## If the malfunction indicator lamp comes on while driving

The malfunction indicator lamp will come on if the fuel tank becomes completely empty. If the fuel tank is empty, refuel the vehicle immediately. The malfunction indicator lamp will go off after several trips.

If the malfunction indicator lamp does not go off, contact any authorized Toyota retailer or Toyota authorized

### ■ Electric power steering system warning light (warning buzzer)

When the 12-volt battery charge becomes insufficient or the voltage temporarily drops, the electric power steering system warning light may come on and the warning buzzer may sound.

### ■When the tire pressure warning light comes on

Inspect the tires to check if a tire is punctured.

If a tire is punctured: →P.440, 451 If none of the tires are punctured:

Turn the power switch to OFF then turn it to ON. Check if the tire pressure warning light comes on or blinks.

▶ If the tire pressure warning light blinks for approximately 1 minute then stays

There may be a malfunction in the tire pressure warning system. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

- ▶ If the tire pressure warning light comes on
- After the temperature of the tires has lowered sufficiently, check the inflation pressure of each tire and adjust them to the specified level.
- 2 If the warning light does not turn off even after several minutes have elapsed, check that the inflation pressure of each tire is at the specified level and perform initialization. (→P.388)

### ■ The tire pressure warning light may come on due to natural causes

The tire pressure warning light may come on due to natural causes such as natural air leaks and tire inflation pressure changes caused by temperature. In this case, adjusting the tire inflation pressure will turn off the warning light (after a few minutes).

### ■ When a tire is replaced with a compact spare tire (vehicles with compact spare tire and tire pressure warning system)

The compact spare tire is not equipped with a tire pressure warning valve and transmitter. If a tire goes flat, the tire pressure warning light will not turn off even though the flat tire has been replaced with the spare tire. Replace the spare tire with the standard tire and adjust the tire inflation pressure. The tire pressure warning light will go off after a few minutes.

### ■ Conditions that the tire pressure warning system may not function properly

→P.387

### **WARNING**

### ■ If a warning light comes on or a warning buzzer sounds when a warning message is shown on the multi-information display

Check and follow the message shown on the multi-information display.

Failure to do so may result in death or serious injury.

- : Warning lights illuminate in red or yellow and the warning buzzer beeps once or sounds continuously.
- ■When the electric power steering system warning light comes

When the light comes on yellow, the assist to the power steering is restricted. When the light comes on red, the assist to the power steering is lost and handling operations of the steering wheel become extremely heavy.

If the steering wheel becomes heavier than usual when operating, hold firmly and operate using more force than usual.

When trouble arises

### A

### **WARNING**

### If the tire pressure warning light comes on

Be sure to observe the following precautions. Failure to do so could cause a loss of vehicle control and result in death or serious injury.

- Stop your vehicle in a safe place as soon as possible. Adjust the tire inflation pressure immediately.
- If the tire pressure warning light comes on even after tire inflation pressure adjustment, it is probable that you have a flat tire. Check the tires. If a tire is flat, change it with the spare tire and have the flat tire repaired by the nearest authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Avoid abrupt maneuvering and braking. If the vehicle tires deteriorate, you could lose control of the steering wheel or the brakes.

### If a blowout or sudden air leakage should occur

The tire pressure warning system may not activate immediately.




### NOTICE

## ■ To ensure the tire pressure warning system operates properly

Do not install tires with different specifications or makers, as the tire pressure warning system may not operate properly.

# If a warning message is displayed

The multi-information display shows warnings of system malfunctions, incorrectly performed operations, and messages that indicate a need for maintenance. When a message is shown, perform the correction procedure appropriate to the message.

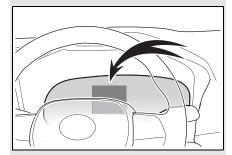

If a warning message is displayed again after the appropriate actions have been performed, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

### ■ Warning messages

The warning messages explained below may differ from the actual messages according to operation conditions and vehicle specifications.

### ■ If a message about an operation is shown

- If a message about an operation of the accelerator pedal or brake pedal is shown
- A warning message about an operation of the brake pedal may be shown while the driving support systems

- A warning message is shown when Brake Override System operates. (→P.183)
- A warning message is shown when Drive-Start Control or Parking Support Brake (if equipped) (→P.187, 300) operates. Follow the instructions on the multi-information display.
- If a message about an operation of the power switch is shown

An instruction for operation of the power switch is shown when the incorrect procedure for starting the hybrid system is performed or the power switch is operated incorrectly. Follow the instructions shown on the multi-information display to operate the power switch again.

If a message about a shift lever operation is shown

To prevent the shift lever from being operated incorrectly or the vehicle from moving unexpectedly, a message that requires shifting the shift lever may be shown on the multi-information display. In that case, follow the instruction of the message and shift the shift lever.

 If a message or image about an open/close state of a part or replenishment of a consumable is shown

Confirm the part indicated by the multiinformation display or a warning light, and then perform the coping method such as closing the open door or replenishing a consumable.

### If a message that indicates the need for visiting any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer is displayed

The system or part shown on the multiinformation display is malfunctioning. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

### ■ If a message that indicates the need for referring to Owner's Manual is displayed

- If the following messages are shown, follow the instructions, accordingly.
- "Engine Coolant Temp High" (→P.469)
- "Exhaust Filter Full" (→P.314)
- If the following messages are shown, there may be a malfunction.

Immediately have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

- "Hybrid System Malfunction"
- "Check Engine"
- · "Hybrid Battery System Malfunction"
- "Accelerator System Malfunction"
- "Smart Entry & Start System Malfunction"
- If the following messages are shown, there may be a malfunction.

Immediately stop the vehicle in a safe place and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. Continuing to drive the vehicle may be dangerous.

- "Oil Pressure Low"
- "Braking Power Low"
- If "Maintenance Required for Traction Battery Cooling Parts See Owner's Manual" is shown, the filter may be clogged, the air intake vent may be blocked, or there may be a gap in the duct. Therefore, perform the following correction procedure.

7

When trouble arises

- If the air intake vent or filter of the hybrid battery (traction battery) are dirty, perform the procedures on P.396 to clean them.
- If the warning message is shown when the air intake vent and filter of the hybrid battery (traction battery) are not dirty, have the vehicle inspected at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

## ■If "Hybrid System Overheated Output Power Reduced" is shown

The message may be shown when driving under severe operating conditions. (For example, when driving up a long steep hill or driving up a steep hill in reverse.)

Coping method: →P.469

#### ■If "Traction Battery Needs to be Protected Refrain from the Use of N Position" is shown

This message may be displayed when the shift lever is in N.

As the hybrid battery (traction battery) cannot be charged when the shift lever is in N, shift the shift lever to P when the vehicle is stopped.

#### ■If "Traction Battery Needs to be Protected Shift into P to Restart" is shown

This message is displayed when the hybrid battery (traction battery) charge has become extremely low because the shift lever has been left in N for a certain amount of time.

When operating the vehicle, shift to P and restart the hybrid system.

### ■ If "Shift to P when Parked" is shown

Message is displayed when the driver's door is opened without turning the power switch to OFF with the shift lever in any position other than P.

Shift the shift lever to P.

## ■If "Shift is in N Release Accelerator Before Shifting" is shown

Message is displayed when the accelerator pedal has been depressed and the shift lever is in N. Release the accelerator pedal and shift the shift lever to D or R

#### ■If "Press Brake when Vehicle is Stopped Hybrid System may Overheat" is shown

Message is displayed when the accelerator pedal is depressed to maintain the vehicle position when stopped on a upward slope, etc.

If this continues, the hybrid system may overheat.

Release the accelerator pedal and depress the brake pedal.

### ■ If "Auto Power OFF to Conserve Battery" is shown

Power was turned off due to the automatic power off function.

Next time when starting the hybrid system, operate the hybrid system for approximately 5 minutes to recharge the 12-volt battery.

#### ■If "Engine Oil Level Low Add or Replace" is displayed

The engine oil level may be low. Check the level of the engine oil, and add engine oil if necessary. This message may be displayed if the vehicle is stopped on a slope. Move the vehicle to a level surface and check if the message disappears.

### If a message that indicates the malfunction of front camera is displayed

The following systems may be suspended until the problem shown in the message is resolved. (→P.232, 427)

- PCS (Pre-Collision System)\*
- LTA (Lane Tracing Assist)\*
- AHB (Automatic High Beam)\*
- RSA (Road Sign Assist)\*

When trouble arises

- Dynamic radar cruise control with fullspeed range
- \*: If equipped

### ■ If a message that indicates the malfunction of radar sensor is displayed

The following systems may be suspended until the problem shown in the message is resolved. (→P.232, 427)

- PCS (Pre-Collision System)\*
- LTA (Lane Tracing Assist)\*
- Dynamic radar cruise control with fullspeed range\*
- : If equipped

### ■ If "Radar Cruise Control Unavailable See Owner's Manual" is shown

The dynamic radar cruise control with full-speed range (if equipped) system is suspended temporarily or until the problem shown in the message is resolved. (causes and coping methods: →P.232)

#### ■ If "Radar Cruise Control Unavailable" is shown

The dynamic radar cruise control with full-speed range (if equipped) system cannot be used temporarily. Use the system when it becomes available again.

### ■Warning buzzer

→P.434



#### **WARNING**

If a warning light comes on or a warning buzzer sounds when a warning message is shown on the multi-information display

→P.435



### **NOTICE**

### "High Power Consumption Partial Limit On AC/Heater Operation" is frequently shown

There is a possible malfunction relating to the charging system or the 12volt battery may be deteriorating. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

### ■ If "Maintenance Required For **Traction Battery At Your Dealer"** is shown

The hybrid battery (traction battery) is scheduled to be inspected or replaced. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

- Continuing to drive the vehicle without having the hybrid battery (traction battery) inspected will cause the hybrid system not to start.
- If the hybrid system does not start, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.

If you have a flat tire (vehicles without spare tire)

Your vehicle is not equipped with a spare tire, but instead is equipped with an emergency tire puncture repair kit.

A puncture caused by a nail or screw passing through the tire tread can be repaired temporarily using the emergency tire puncture repair kit. (The kit contains a bottle of sealant. The sealant can be used only once to temporarily repair one tire without removing the nail or screw from the tire.)

Depending on the damage condition of the flat tire, it may not

After temporarily repairing the tire with the kit, have the tire repaired or replaced by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

be able to repaired with the

emergency tire puncture repair



### WARNING

kit. (→P.441)

#### If you have a flat tire

Do not continue driving with a flat tire. Driving even a short distance with a flat tire can damage the tire and the wheel beyond repair, which could result in an accident.

Driving with a flat tire may cause a circumferential groove on the side wall.


In such a case, the tire may explode when using a repair kit.

### Before repairing the vehicle

- Stop the vehicle in a safe place on a hard, flat surface.
- Set the parking brake.
- Shift the shift lever to P.
- Turn off the intrusion sensor and tilt sensor (if equipped) (→P.90)
- Stop the hybrid system.
- Turn on the emergency flashers.
   (→P.418)
- For vehicles with power back door: Turn off the power back door system. (→P.137)
- Check the degree of the tire damage.

A tire should only be repaired with the emergency tire puncture repair kit if the damage is caused by a nail or screw passing through the tire tread.

- Do not remove the nail or screw from the tire. Removing the object may widen the opening and prevent emergency repair with the repair kit.
- To avoid sealant leakage, move the vehicle until the area of the puncture, if known, is positioned at the top of the tire.

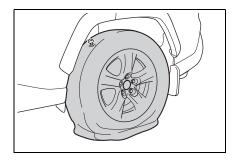


### A flat tire that cannot be repaired with the emergency tire puncture repair kit

In the following cases, the tire cannot be repaired with the emergency tire puncture repair kit. Contact any authorized Toyota retailer or Toyota authorized

repairer, or any reliable repairer.

- When the tire is damaged due to driving without sufficient air pressure
- When the tire lost air pressure due to a crack or damage in the tire sidewall
- When the tire is visibly separated from the wheel
- When the cut or damage to the tread is 4 mm (0.16 in.) long or more
- When the wheel is damaged
- When two or more tires have been punctured
- When there is more than one hole or cut in the damaged tire
- When the sealant has expired

## Location of the emergency tire puncture repair kit, jack and tools

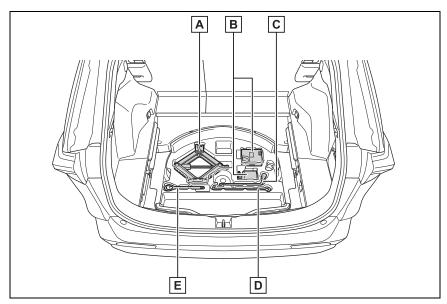


- A Jack (if equipped)\*1, 2
- B Emergency tire puncture repair kit
- C Wheel nut wrench (if equipped)

When trouble arises


- D Jack handle (if equipped)
- E Towing eyelet
- \*1: Taking out the jack (→P.453)
- \*2: Use of the jack ( $\rightarrow$ P.454)

# Emergency tire puncture repair kit components

#### **■** Bottle

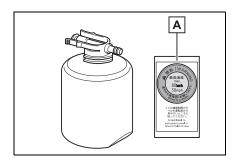

- A Sticker
- Compressor

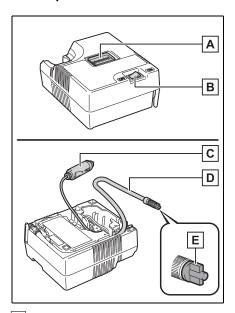

A Air pressure gauge

- **B** Compressor switch
- C Power plug
- **D** Hose
- E Air release cap

## ■ Note for checking the emergency tire puncture repair kit

Check the sealant expiry date occasionally. The expiry date is shown on the bottle. Do not use sealant whose expiry date has already passed. Otherwise, repairs conducted using the emergency tire puncture repair kit may not be performed properly.

### ■ Emergency tire puncture repair kit

- The emergency tire puncture repair kit is for filling the car tire with air.
- The sealant has a limited life span. The expiry date is marked on the bottle. The sealant should be replaced before the expiry date. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for replacement.
- The sealant stored in the emergency tire puncture repair kit can be used only once to temporarily repair a single tire. If the sealant in the bottle and other parts of the kit have been used and need to be replaced, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- The compressor can be used repeatedly.
- The sealant can be used when the outside temperature is from -30°C (-22°F) to 60°C (140°F).

- If the sealant gets on your clothes, it may stain.
- If the sealant adheres to a wheel or the surface of the vehicle body, the stain may not be removable if it is not cleaned at once. Immediately wipe away the sealant with a wet cloth.
- During operation of the repair kit, a loud operation noise is produced. This does not indicate a malfunction.
- Do not use to check or to adjust the tire pressure.

### A

#### **WARNING**

### Do not drive the vehicle with a flat tire

Do not continue driving with a flat tire. Driving even a short distance with a flat tire can damage the tire and the wheel beyond repair.

Driving with a flat tire may cause a circumferential groove on the side wall. In such a case, the tire may explode when using a repair kit.

### ■ Caution while driving

- Store the repair kit in the luggage compartment.
   Injuries may result in the event of an accident or sudden braking.
- The repair kit is exclusively only for your vehicle.
   Do not use repair kit on other vehicles, which could lead to an accident causing death or serious injury.


### Do not use repair kit for tires that are different size than the original ones, or for any other purpose. If the tires have not been completely repaired, it could lead to an accident causing death or serious injury.

### ■ Precautions for use of the sealant

- Ingesting the sealant is hazardous to your health. If you ingest sealant, consume as much water as possible, and then immediately consult a doctor.
- If sealant gets in eyes or adheres to skin, immediately wash it off with water. If discomfort persists, consult a doctor.

## Taking out the emergency tire puncture repair kit

- Open the deck board. (→P.348).
- 2 Take out the emergency tire puncture repair kit.

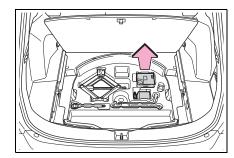


### Emergency repair method

1 Take out the repair kit from the plastic bag.

Attach the sticker enclosed with the bottle on the specified locations. (See step **10**.)


7

**2** Pull out the hose and power plug from the bottom side of the compressor.

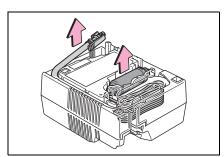


3 Connect the bottle to the compressor.

Make sure to press the bottle until its claws are securely engaged to the compressor and no longer visible.

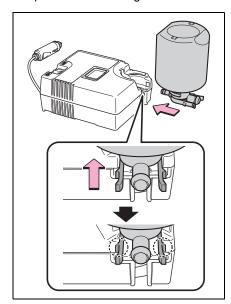


**4** Connect the hose to the bottle. Make sure to insert the hose until its

claw is securely engaged to the bottle.

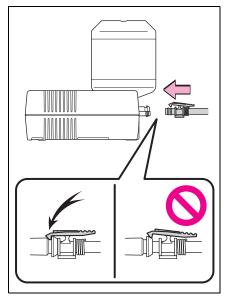


**5** Remove the valve cap from the valve of the punctured tire.

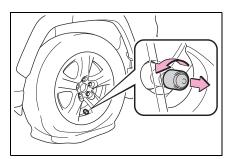

**6** Extend the hose. Remove the air release cap from the hose.


You will use the air release cap again.

Therefore keep it in a safe place.

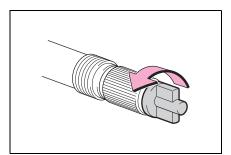


7 Connect the hose to the valve.


Screw the end of the hose clockwise as far as possible.

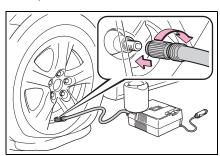


8 Make sure that the compressor switch is off.

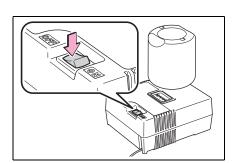

9 Connect the power plug to the power outlet socket. (→P.353)

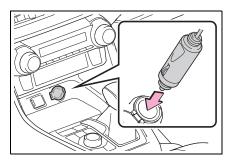


**10** Attach the sticker provided with the tire puncture repair kit to a position easily seen from the driver's seat.

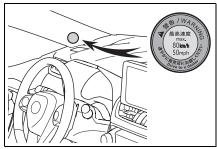


**11** Check the specified tire inflation pressure.

Tire inflation pressure is specified on the label on the driver's side pillar as shown. ( $\rightarrow$ P.484)

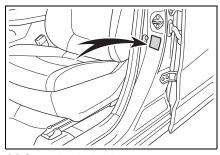


**12**Start the hybrid system. (→P.199)

**13**To inject the sealant and inflate the tire, turn the compressor switch on.

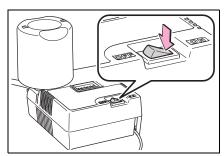

**14** Inflate the tire until the specified air pressure is reached.

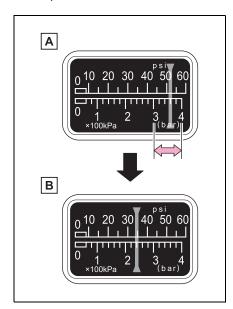

- A The sealant will be injected and the pressure will spike to between 300 kPa (3.0 kgf/cm<sup>2</sup> or bar, 44 psi) and 400 kPa (4.0 kgf/cm<sup>2</sup> or bar, 58 psi), then gradually decrease.
- B The air pressure gauge will dis-

play the actual tire inflation pressure about 1 to 5 minutes after the switch is turned on.

Turn the compressor switch off and then check the tire inflation pressure. Being careful not to over inflate, check and repeat the inflation procedure until the specified tire inflation pressure is reached.

The tire can be inflated for about 5 to 20 minutes (depending on the outside temperature). If the tire inflation pressure is still lower than the specified point after inflation for 25 minutes, the tire is too damaged to be repaired. Turn the compressor switch off and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

If the tire inflation pressure exceeds the specified air pressure, let out some air to adjust the tire inflation pressure.  $(\rightarrow P.448, 484)$ 


**15**With the compressor switch off, disconnect the hose from the valve on the tire and then pull out the power plug from the power outlet socket.

Some sealant may leak when the hose is removed.

- **16** Install the valve cap onto the valve of the emergency repaired tire
- **17** Attach the air release cap to the end of the hose.


If the air release cap is not attached, the sealant may leak and the vehicle

may get dirty.

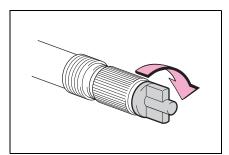


- 18 Temporarily store the bottle in the luggage compartment while it is connected to the compressor.
- 19 To spread the liquid sealant evenly within the tire, immediately drive safely for about 5 km (3 miles) below 80 km/h (50 mph).
- 20 After driving, stop your vehicle in a safe place on a hard, flat surface and reconnect the repair kit.

Remove the air release cap from the hose before reconnecting the hose.

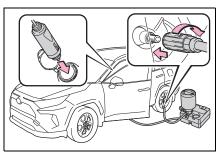

**21** Turn the compressor switch on and wait for several seconds,

then turn it off. Check the tire inflation pressure.

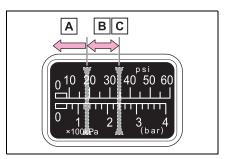

- A If the tire inflation pressure is under 130 kPa (1.3 kgf/cm² or bar, 19 psi): The puncture cannot be repaired. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- B If the tire inflation pressure is 130 kPa (1.3 kgf/cm<sup>2</sup> or bar, 19 psi) or higher, but less than the specified air pressure: Proceed to step **22**.
- C If the tire inflation pressure is the specified air pressure (→P.484): Proceed to step 23.
- 22 Turn the compressor switch on to inflate the tire until the specified air pressure is reached.


  Drive for about 5 km (3 miles) and then perform step 20.
- **23** Attach the air release cap to the end of the hose.

If the air release cap is not attached, the sealant may leak and the vehicle

7

When trouble arises

may get dirty.

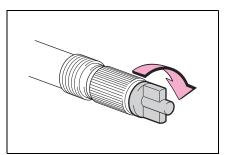

- **24** Store the bottle in the luggage compartment while it is connected to the compressor.
- 25 Taking precautions to avoid sudden braking, sudden acceleration and sharp turns, drive carefully at under 80 km/h (50 mph) to the nearest authorized Toyota retailer or Toyota authorized repairer, or reliable repairer that is less than 100 km (62 miles) away for tire repair or replacement.


For repair and replacement of a tire or disposal of the tire puncture repair kit, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

When having the tire repaired or replaced, make sure to tell the authorized Toyota retailer or Toyota authorized repairer, or reliable repairer that the sealant is injected.

### ■ Taking out the jack (if equipped)


Take out the jack from the deck under tray.

Do not touch the threaded portion of the jack as it is greased.

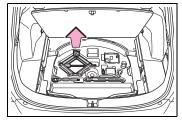

### ■ If the tire is inflated to more than the specified air pressure

- Disconnect the hose from the valve.
- Install the air release cap to the end of the hose and push the protrusion on the air release cap into the tire valve to let some air out.

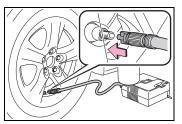

- 3 Disconnect the hose from the valve, remove the air release cap from the hose and then reconnect the hose.
- 4 Turn the compressor switch on and wait for several seconds, and then turn it off. Check that the air pressure indicator shows the specified air pressure.

If the air pressure is under the designated pressure, turn the compressor switch on again and repeat the inflation procedure until the specified air pressure is reached.

- After a tire is repaired with the emergency tire puncture repair kit
- The tire pressure warning valve and transmitter should be replaced.
- Even if the tire inflation pressure is at the recommended level, the tire pressure warning light may come on/flash.

### **WARNING**

### When fixing the flat tire

- Stop your vehicle in a safe and flat area.
- Do not touch the wheels or the area around the brakes immediately after the vehicle has been driven. After the vehicle has been driven, the wheels and the area around the brakes may be extremely hot. Touching these areas with hands, feet or other body parts may result in burns.
- Connect the valve and hose securely with the tire installed on the vehicle. If the hose is not properly connected to the valve, air leakage may occur as sealant may be sprayed out.
- If the hose comes off the valve while inflating the tire, there is a risk that the hose will move abruptly due to air pressure.
- After inflation of the tire has completed, the sealant may splatter when the hose is disconnected or some air is let out of the tire.
- Follow the operation procedure to repair the tire. If the procedures not followed, the sealant may spray
- Keep back from the tire while it is being repaired, as there is a chance of it bursting while the repair operation is being performed. If you notice any cracks or deformation of the tire, turn off the compressor switch and stop the repair operation immediately.
- The repair kit may overheat if operated for a long period of time. Do not operate the repair kit continuously for more than 40 minutes.

- Parts of the repair kit become hot during operation. Be careful handling the repair kit during and after operation. Do not touch the metal part connecting the bottle and the compressor. It will be extremely
- Do not attach the vehicle speed warning sticker to an area other than the one indicated. If the sticker is attached to an area where an SRS airbag is located, such as the pad of the steering wheel, it may prevent the SRS airbag from operating properly.

### Driving to spread the liquid sealant evenly

Observe the following precautions to reduce the risk of accidents.

Failing to do so may result in a loss of vehicle control and cause death or serious injury.

- Drive the vehicle carefully at a low speed. Be especially careful when turning and cornering.
- If the vehicle does not drive straight or you feel a pull through the steering wheel, stop the vehicle and check the following
- Tire condition. The tire may have separated from the wheel.
- Tire inflation pressure. If the tire inflation pressure is 130 kPa (1.3 kgf/cm<sup>2</sup> or bar, 19 psi) or less, the tire may be severely damaged.

### $\Lambda$

### **NOTICE**

### When performing an emergency repair

- A tire should only be repaired with the emergency tire puncture repair kit if the damage is caused by a sharp object such as nail or screw passing through the tire tread. Do not remove the sharp object from the tire. Removing the object may widen the opening and disenable emergency repair with the repair kit.
- The repair kit is not waterproof.
   Make sure that the repair kit is not exposed to water, such as when it is being used in the rain.
- Do not put the repair kit directly onto dusty ground such as sand at the side of the road. If the repair kit vacuums up dust etc., a malfunction may occur.
- Make sure to stand the kit with the bottle vertical. The kit cannot work properly if it is laid on its side.

### ■ Precautions for the emergency tire puncture repair kit

- The repair kit power source should be 12 V DC suitable for vehicle use.
   Do not connect the repair kit to any other source.
- If fuel splatters on the repair kit, the repair kit may deteriorate. Take care not to allow fuel to contact it.
- Place the repair kit in a storage to prevent it from being exposed to dirt or water.
- Store the repair kit in the luggage compartment out of reach of children
- Do not disassemble or modify the repair kit. Do not subject parts such as the air pressure indicator to impacts. This may cause a malfunction.

### To avoid damage to the tire pressure warning valves and transmitters

When a tire is repaired with liquid sealants, the tire pressure warning valve and transmitter may not operate properly. If a liquid sealant is used, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer or other qualified service shop as soon as possible. After use of liquid sealant, make sure to replace the tire pressure warning valve and transmitter when repairing or replacing the tire. (→P.387)

Your vehicle is equipped with a spare tire. The flat tire can be replaced with the spare tire.

For details about tires: →P.385



### **WARNING**

### If you have a flat tire


Do not continue driving with a flat tire.

Driving even a short distance with a flat tire can damage the tire and the wheel beyond repair, which could result in an accident.

### Before jacking up the vehicle

- Stop the vehicle in a safe place on a hard, flat surface.
- Set the parking brake.
- Shift the shift lever to P.
- Turn off the intrusion sensor and tilt sensor (if equipped) (→P.90)
- Stop the hybrid system.
- Turn on the emergency flashers. (→P.418)
- For vehicles with power back door: Turn off the power back door system. (→P.146)

### Location of the spare tire, jack and tools

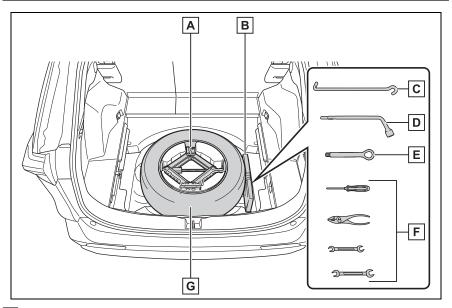

- A Jack
- **B** Tool bag
- C Jack handle
- **D** Wheel nut wrench
- **E** Towing eyelet
- F Screw driver, pliers and wrenches (if equipped)
- **G** Spare tire

### $\Lambda$

### **WARNING**

### ■Using the tire jack


Observe the following precautions. Improper use of the tire jack may cause the vehicle to suddenly fall off the jack, leading to death or serious injury.

 Do not use the tire jack for any purpose other than replacing tires or installing and removing tire chains.

- The equipped jack can only be used with your vehicle. Do not use it with other vehicles.
- And do not use jacks from other vehicles with your vehicle.

### **WARNING**

Put the jack properly in its jack point.

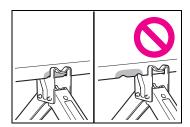

- Do not put any part of your body under the vehicle while it is supported by the jack.
- Do not start the hybrid system or drive the vehicle while the vehicle is supported by the jack.
- Do not raise the vehicle while someone is inside.
- When raising the vehicle, do not put an object on or under the jack.
- Do not raise the vehicle to a height greater than that required to replace the tire.
- Use a jack stand if it is necessary to get under the vehicle.
- Stop the vehicle on firm, flat and level ground, firmly set the parking brake and shift the shift lever to P. Block the wheel diagonally opposite to the one being changed if neces-
- When lowering the vehicle, make sure that there is no-one near the vehicle. If there are people nearby, warn them vocally before lowering.


### Taking out the jack

1 Vehicles without full-size spare tire: Open the deck board. (→P.348).

Vehicles with full-size spare tire: Take out the deck board.


2 Take out the jack.

Do not touch the threaded portion of the jack as it is greased.

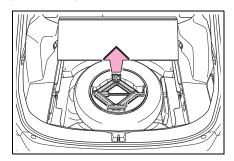


### Taking out the tool bag

Take out the tool bag.

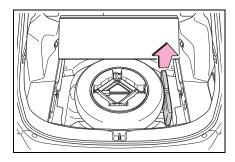


### Taking out the spare tire

Take out the jack holder.

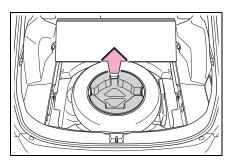

2 Loosen the center fastener that secures the spare tire.

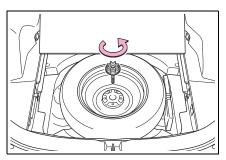


### **WARNING**

### ■When storing the spare tire

Be careful not to catch fingers or other body parts between the spare tire and the body of the vehicle.


### Replacing a flat tire

1 Chock the tires.

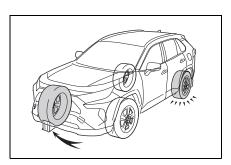

Flat tire	Wheel chock positions
Front left-	Behind the rear right-
hand side	hand side tire
Front right- hand side	Behind the rear left-hand side tire
Rear left-	In front of the front right-
hand side	hand side tire
Rear right-	In front of the front left-
hand side	hand side tire


2 Slightly loosen the wheel nuts (one turn).

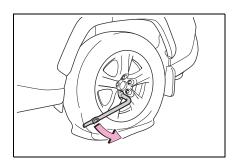


**3** Turn the tire jack portion **A** by hand until the notch of the jack is in contact with the jack point.


After removing the jack from the jack holder, turn the jack portion A in the opposite direction to lower the jack, and then adjust the jack set position.

The jack point guides are located under the rocker panel. They indicate the jack point positions.

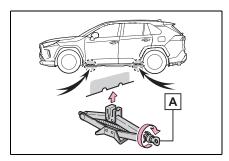

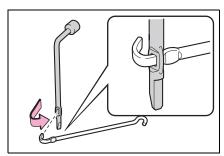


5 Raise the vehicle until the tire is slightly raised off the ground.

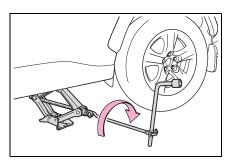

6 Remove all the wheel nuts and the tire.

When resting the tire on the ground, place the tire so that the wheel design faces up to avoid scratching the wheel surface.

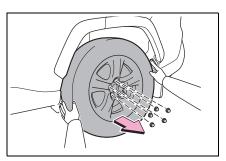

### A

### **WARNING**

### Replacing a flat tire

 Do not touch the disc wheels or the area around the brakes immediately after the vehicle has been driven.

After the vehicle has been driven the disc wheels and the area around the brakes will be extremely hot. Touching these areas with hands, feet or other body parts while changing a tire, etc. may result in burns.

- Failure to follow these precautions could cause the wheel nuts to loosen and the tire to fall off, resulting in death or serious injury.
- Have the wheel nuts tightened with a torque wrench to 103 N•m (10.5 kgf•m, 76 ft•lbf) as soon as possible after changing wheels.
- When installing a tire, only use wheel nuts that have been specifically designed for that wheel.
- If there are any cracks or deformations in the bolt screws, nut threads or bolt holes of the wheel, have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- When installing the wheel nuts, be sure to install them with the tapered ends facing inward.
- For vehicles with power back door: In cases such as when replacing tires, make sure to turn off the power back door system (→P.146). Failure to do so may cause the back door to operate unintentionally if the power back door switch is accidentally touched, resulting in hands and fingers being caught and injured.


7

When trouble arises

### Installing the spare tire


 Remove any dirt or foreign matter from the wheel contact surface.

If foreign matter is on the wheel contact surface, the wheel nuts may loosen while the vehicle is in motion, causing the tire to come off.

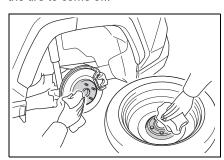


Install the spare tire and loosely tighten each wheel nut by hand by approximately the same amount.

When replacing an aluminum wheel with a steel wheel, tighten the wheel nuts until the tapered portion A comes into loose contact with the disc wheel seat B.

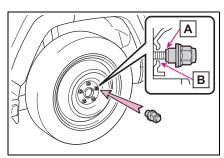


When replacing an aluminum wheel with an aluminum wheel, turn the wheel nuts until the washers  $\boxed{\mathbf{A}}$  come into

contact with the disc wheel B.

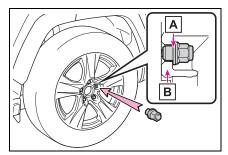


3 Lower the vehicle.

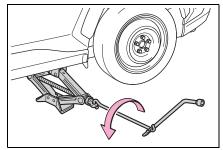

**4** Firmly tighten each wheel nut two or three times in the order shown in the illustration.

Tightening torque: 103 N•m (10.5 kgf•m, 76 ft•lbf)

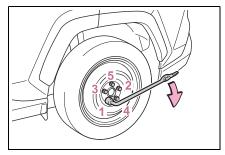

- **5** Stow the flat tire, tire jack and all tools.
- The compact spare tire (if equipped)
- The compact spare tire is identified by

Use the compact spare tire temporarily, and only in an emergency.

 Make sure to check the tire inflation pressure of the compact spare tire.
 (→P.485)

## ■ When using the compact spare tire (if equipped)

As the compact spare tire is not equipped with a tire pressure warning valve and transmitter, low inflation pressure of the spare tire will not be indicated by the tire pressure warning system. Also, if you replace the compact spare tire after the tire pressure warning light comes on, the light remains on.

## ■ When the compact spare tire (if equipped) is attached

The vehicle height may become lower when driving with the compact spare tire compared to when driving with standard tires


### If you have a flat front tire on a road covered with snow or ice (vehicles with compact spare tire)

Install the compact spare tire on one of the rear wheels of the vehicle. Perform the following steps and fit tire chains to the front tires:

- 1 Replace a rear tire with the compact spare tire.
- 2 Replace the flat front tire with the tire removed from the rear of the vehicle.
- 3 Fit tire chains to the front tires.

### ■When stowing the jack

Before storing the jack, adjust the height of the jack to match the shape of the jack holder.

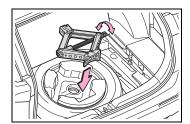

7

### ■ Certification for the jack

### **EC Declaration of Conformity**

We, WAKO INDUSTRY CO., LTD., 1823 Shinmachi Takasaki Gumma 370-1301 Japan, hereby declare that the machine described below.

This declaration shall cease to be valid if modifications, that includes disassemble and re-built, are made to the product. If usage is other than specific model of vehicle this declaration shall cease also.

Product:	Jack Sub-assy,	Pantograph,	applied to the specific vehicle
Model:	0.8ton , 1.1ton , 1.35ton , 1.5ton		

Applicable EU directives covered by this declaration is the Machinery Directive 89/392/EEC. The products identified above complies with the requirements of the Machinery above by applied standard is "JIS D8103-2006". It is ensured through internal measures that production units confirm at all times to requirement of current EC Directives and relevant standards. A sample of the products has been tested by our quality assurance department.

Signed by:

Tamotsu Sekiguchi

Tamotsu Sekiguchi

Operating Officer, Quality Assurance

Date of Issue:

21/Feb/2018

### A

### **WARNING**

- When using the compact spare tire (if equipped)
- Remember that the compact spare tire provided is specifically designed for use with your vehicle.
   Do not use your compact spare tire on another vehicle.
- Do not use more than one compact spare tire simultaneously.
- Replace the compact spare tire with a standard tire as soon as possible.

- Avoid sudden acceleration, abrupt steering, sudden braking and shifting operations that cause sudden engine braking.
- When the compact spare tire (if equipped) is attached

The vehicle speed may not be correctly detected, and the following systems may not operate correctly:

- ABS & Brake assist
- VSC/Trailer Sway Control

### **WARNING**

- TRC
- · Cruise control (if equipped)
- · Dynamic radar cruise control with full-speed range (if equipped)
- · PCS (Pre-Collision System) (if equipped)
- EPS
- · LTA (Lane Tracing Assist) (if equipped)
- · Tire pressure warning system
- · AHB (Automatic High Beam) (if equipped)
- · BSM (Blind Spot Monitor) (if equipped)
- · Rear view monitor system (if equipped)
- Panoramic view monitor (if equipped)
- · Toyota parking assist monitor (if equipped)
- · Toyota parking assist-sensor (if equipped)
- Navigation system (if equipped)

Also, not only can the following system not be utilized fully, but it may actually negatively affect the drivetrain components:

- · E-Four (Electronic On-Demand AWD system) (if equipped)
- ■Speed limit when using the compact spare tire (if equipped)

Do not drive at speeds in excess of 80 km/h (50 mph) when a compact spare tire is installed on the vehicle.

The compact spare tire is not designed for driving at high speeds. Failure to observe this precaution may lead to an accident causing death or serious injury.

### After using the tools and jack

Before driving, make sure all the tools and jack are securely in place in their storage location to reduce the possibility of personal injury during a collision or sudden braking.



### **NOTICE**

■Be careful when driving over bumps with the compact spare tire installed on the vehicle (if equipped)

The vehicle height may become lower when driving with the compact spare tire compared to when driving with standard tires. Be careful when driving over uneven road surfaces.

### Driving with tire chains and the compact spare tire (if equipped)

Do not fit tire chains to the compact spare tire.

Tire chains may damage the vehicle body and adversely affect driving performance.

### When replacing the tires

When removing or fitting the wheels, tires or the tire pressure warning valve and transmitter, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as the tire pressure warning valve and transmitter may be damaged if not handled correctly.

## If the hybrid system will not start

Reasons for the hybrid system not starting vary depending on the situation. Check the following and perform the appropriate procedure:

The hybrid system will not start even though the correct starting procedure is being followed (→P.199)

One of the following may be the cause of the problem:

- The electronic key may not be functioning properly. (→P.462)
- There may not be sufficient fuel in the vehicle's tank.
   Refuel the vehicle. (→P.227)
- There may be a malfunction in the immobilizer system. (→P.87)
- There may be a malfunction in the steering lock system.
- The hybrid system may be malfunctioning due to an electrical problem such as electronic key battery depletion or a blown fuse. However, depending on the type of malfunction, an interim measure is available to start the hybrid system. (→P.460)
- There is a possibility that the temperature of the hybrid battery (traction battery) is extremely low (approximately below -30°C [-

22°F]). (→P.83, 199)

### The interior lights and headlights are dim, or the horn does not sound or sounds at a low volume

One of the following may be the cause of the problem:

- The 12-volt battery may be discharged. (→P.464)
- The 12-volt battery terminal connections may be loose or corroded. (→P.384)

### The interior lights and headlights do not turn on, or the horn does not sound

One of the following may be the cause of the problem:

- The 12-volt battery may be discharged. (→P.464)
- One or both of the 12-volt battery terminals may be disconnected. (→P.384)

Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer if the problem cannot be repaired, or if repair procedures are unknown.

# Starting the hybrid system in an emergency

When the hybrid system does not start, the following steps can be used as an interim measure to start

Pull the parking brake switch to check that the parking brake is set. (→P.210)

Parking brake indicator will come on.

- 2 Shift the shift lever to P.
- 3 Turn the power switch to ACC.
- 4 Press and hold the power switch for about 15 seconds while depressing the brake pedal firmly.

Even if the hybrid system can be started using the above steps, the system may be malfunctioning. Have the vehicle inspected by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

### If you lose your keys

New genuine keys can be made by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer using the other key and the key number stamped on your key number plate. Keep the plate in a safe place such as your wallet, not in the vehicle.



### ■When an electronic key is lost

If the electronic key remains lost, the risk of vehicle theft increases significantly. Visit any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately with all remaining electronic keys that were provided with your vehicle.


### If the fuel filler door cannot be opened

If the fuel filler door opener switch cannot be operated, the following procedure can be used to open the fuel filler door.

### Opening the fuel filler door


1 Remove the cover inside the luggage compartment by inserting a screwdriver.

When removing the cover, to prevent damage, cover the tip of the screw-driver with a rag.

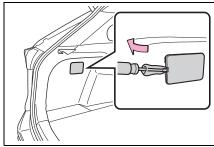

### 2 Pull the lever.

After removing the cover, pull the lever to unlock the fuel filler door and it will be ready to open as usual.

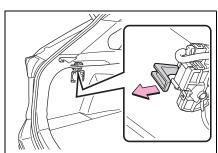

# If the electronic key does not operate properly

If communication between the electronic key and vehicle is interrupted (→P.148) or the electronic key cannot be used because the battery is depleted, the smart entry & start system and wireless remote control cannot be used. In such cases, the doors can be opened and the hybrid system can be started by following the procedure below.

### When the electronic key does not work properly

- Make sure that the smart entry & start system has not been deactivated in the customization setting. If it is off, turn the function on. (Customizable features: →P.492)
- Check if battery-saving mode is set. If it is set, cancel the function. (→P.148)
- The electronic key function may have stopped. (→P.148)




### NOTICE

■ In case of a smart entry & start system malfunction, or other key related problems

Take your vehicle with all the electronic keys provided with your vehicle to any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.


## Locking and unlocking the doors

Use the mechanical key (→P.128) in order to perform the following operations.

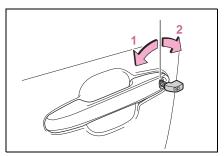

- 1 Locks all the doors
- 2 Unlocks all the doors

### ■ Key linked functions

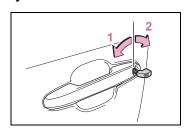

- 1 Closes the windows and the panoramic moon roof\*1 (turn and hold)\*2
- 2 Opens the windows and the panoramic moon roof<sup>\*1</sup> (turn and hold)<sup>\*2</sup>
- \*1: If equipped
- \*2: These settings must be customized at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

### lack

### **WARNING**

When using the mechanical key and operating the power windows or the panoramic moon roof (if equipped)


Operate the power window or the panoramic moon roof after checking to make sure that there is no possibility of any passenger having any of their body parts caught in the window or the panoramic moon roof. Also, do not allow children to operate the mechanical key. It is possible for children and other passengers to get caught in the power window or the panoramic moon roof.

### Starting the hybrid system

- 1 Ensure that the shift lever is in P and depress the brake pedal.
- 2 Touch the Toyota emblem side of the electronic key to the power switch.

When the electronic key is detected, a buzzer sounds and the power switch will turn to ON.

When the smart entry & start system is deactivated in customization setting, the power switch will turn to ACC.

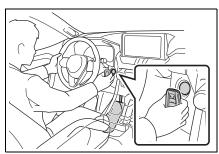

3 Firmly depress the brake pedal and check that a is displayed on the multi-information display. **4** Press the power switch shortly and firmly.

In the event that the hybrid system still cannot be started, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

#### ■ Stopping the hybrid system

Shift the shift lever to P, set the parking brake and press the power switch as you normally do when stopping the hybrid system.

### ■ Replacing the key battery

As the above procedure is a temporary measure, it is recommended that the electronic key battery be replaced immediately when the battery is depleted. (→P.403)

#### ■ Alarm (if equipped)

Using the mechanical key to lock the doors will not set the alarm system.

If a door is unlocked using the mechanical key when the alarm system is set, the alarm may be triggered. (→P.89)

### ■ Changing power switch modes

Release the brake pedal and press the power switch in step 3 above. The hybrid system does not start and modes will be changed each time the switch is pressed. ( $\rightarrow$ P.201)

## If the 12-volt battery is discharged

The following procedures may be used to start the hybrid system if the vehicle's 12-volt battery is discharged.

You can also call any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer or a qualified repair shop.

## Restarting the hybrid system

If you have a set of jumper (or booster) cables and a second vehicle with a 12-volt battery, you can jump start your vehicle by following the steps below.


1 Vehicles with alarm (→P.89) Confirm that the electronic key is being carried.

When connecting the jumper (or booster) cables, depending on the situation, the alarm may activate and the doors locked. (→P.90)




2 Open the hood (→P.374) and fuse box cover.


Push claws **A** and **B** to completely release the lock, and then lift up the cover.

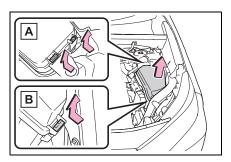

3 Open the exclusive jump starting terminal cover.

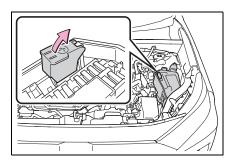

4 Connect a positive jumper cable clamp to A on your vehicle and connect the clamp on the other end of the positive cable to B on the second vehicle. Then, connect a negative cable clamp to C on the second vehicle and connect the clamp at the other end of the negative cable to D.

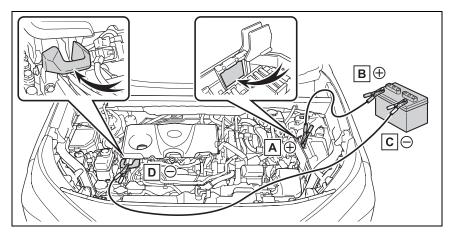

- A Exclusive jump starting terminal (your vehicle)
- B Positive (+) battery terminal (second vehicle)
- C Negative (-) battery terminal (second vehicle)
- D Solid, stationary, unpainted metallic point away from the exclusive jump starting terminal and any moving parts as shown in the illustration
- **5** Start the engine of the second vehicle. Increase the engine

speed slightly and maintain at that level for approximately 5

When trouble arises

- minutes to recharge the 12-volt battery of your vehicle.
- 6 Open and close any of the doors of your vehicle with the power switch OFF.
- 7 Maintain the engine speed of the second vehicle and start the hybrid system of your vehicle by turning the power switch to ON.
- 8 Make sure the "READY" indicator comes on. If the indicator light does not come on, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- 9 Once the hybrid system has started, remove the jumper cables in the exact reverse order from which they were connected.
- 10 Close the exclusive jump starting terminal cover, and reinstall the fuse box cover to its original position.

Once the hybrid system starts, have the vehicle inspected at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.

### Starting the hybrid system when the 12-volt battery is discharged

The hybrid system cannot be started by push-starting.

## ■To prevent 12-volt battery discharge

 Turn off the headlights and the audio system while the hybrid system is off.  Turn off any unnecessary electrical components when the vehicle is running at a low speed for an extended period, such as in heavy traffic.

### ■ When the 12-volt battery is removed or discharged

- Information stored in the ECU is cleared. When the 12-volt battery is depleted, have the vehicle inspected at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- Some systems may require initialization. (→P.500)

### ■ When removing the 12-volt battery terminals

When the 12-volt battery terminals are removed, the information stored in the ECU is cleared. Before removing the 12-volt battery terminals, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

### ■ Charging the 12-volt battery

The electricity stored in the 12-volt battery will discharge gradually even when the vehicle is not in use, due to natural discharge and the draining effects of certain electrical appliances. If the vehicle is left for a long time, the 12-volt battery may discharge, and the hybrid system may be unable to start. (The 12-volt battery recharges automatically while the hybrid system is operating.)

### ■ When recharging or replacing the 12-volt battery

- In some cases, it may not be possible to unlock the doors using the smart entry & start system when the 12-volt battery is discharged. Use the wireless remote control or the mechanical key to lock or unlock the doors.
- The hybrid system may not start on the first attempt after the 12-volt battery has recharged but will start normally after the second attempt. This is not a malfunction.
- The power switch mode is memorized


by the vehicle. When the 12-volt battery is reconnected, the system will return to the mode it was in before the 12-volt battery was discharged. Before disconnecting the 12-volt battery, turn the power switch to OFF. If you are unsure what mode the power switch was in before the 12-volt battery discharged, be especially careful when reconnecting the 12-volt battery.

#### ■When replacing the 12-volt battery

- Use a 12-volt battery that conforms to European regulations.
- Use a 12-volt battery that the case size is same as the previous one (LN1), 20 hours rate capacity (20HR) is equivalent (45Ah) or greater, and performance rating (CCA) is equivalent (285A) or greater.
- If the sizes differ, the 12-volt battery cannot be properly secured.
- If the 20 hour rate capacity is low, even if the time period where the vehicle is not used is a short time, the 12volt battery may discharge and hybrid system may not be able to start.
- Use a ventilation type calcium battery
- Use a 12-volt battery with a handle. If a 12-volt battery without a handle is used, removal is more difficult.
- When removing the 12-volt battery: →P.384
- After replacing, firmly attach the following items to the exhaust hole of the 12-volt battery.
- Use the exhaust hose that was attached to the 12-volt battery before replacing and confirm that it is firmly connected to the hole section of the vehicle.
- Use the exhaust hole plug included with the new 12-volt battery or the one installed on the battery prior to the replacement. (Depending on the new 12-volt battery installed, the exhaust hole may be plugged.)

For details, consult any authorized Toyota retailer or Toyota authorized

repairer, or any reliable repairer.

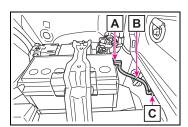

- A Exhaust hole
- **B** Exhaust hose
- C Hole section of the vehicle



#### **WARNING**

## When removing the battery terminals

Always remove the negative (-) terminal first. If the positive (+) terminal contacts any metal in the surrounding area when the positive (+) terminal is removed, a spark may occur, leading to a fire in addition to electrical shocks and death or serious injury.

#### Avoiding 12-volt battery fires or explosions

Observe the following precautions to prevent accidentally igniting the flammable gas that may be emitted from the 12-volt battery:

- Make sure each jumper cable is connected to the correct terminal and that it is not unintentionally in contact with any other than the intended terminal.
- Do not allow the other end of the jumper cable connected to the "+" terminal to come into contact with any other parts or metal surfaces in the area, such as brackets or unpainted metal.
- Do not allow the + and clamps of the jumper cables to come into contact with each other.

## **WARNING**

Do not smoke, use matches, cigarette lighters or allow open flame near the 12-volt battery.

#### 12-volt battery precautions

The 12-volt battery contains poisonous and corrosive acidic electrolyte, while related parts contain lead and lead compounds. Observe the following precautions when handling the 12-volt battery:

- When working with the 12-volt battery, always wear safety glasses and take care not to allow any battery fluids (acid) to come into contact with skin, clothing or the vehicle body.
- Do not lean over the 12-volt battery.
- In the event that battery fluid comes into contact with the skin or eyes, immediately wash the affected area with water and seek medical attention.

Place a wet sponge or cloth over the affected area until medical attention can be received.

- Always wash your hands after handling the 12-volt battery support, terminals, and other battery-related parts.
- Do not allow children near the 12volt battery.

## ■ After recharging the 12-volt bat-

Have the 12-volt battery inspected at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible. If the 12-volt battery is deteriorating, continued use may cause the 12-volt battery to emit a malodorous gas, which may be detrimental to the health of passengers.

#### ■When replacing the 12-volt battery

- For information regarding 12-volt battery replacement, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.
- After replacing, securely attach the exhaust hose and exhaust hole plug to the exhaust hole of the replaced 12-volt battery. If not properly installed, gases (hydrogen) may leak into the vehicle interior, and there is the possible danger of the gas igniting and exploding.





#### **NOTICE**

#### When handling jumper cables

When connecting the jumper cables, ensure that they do not become entangled in the cooling fan, etc.

#### ■To prevent damaging the vehicle

The exclusive jump starting terminal is to be used when charging the 12volt battery from another vehicle in an emergency. It cannot be used to jump start another vehicle.


# The following may indicate that your vehicle is overheating.

- The needle of the engine coolant temperature gauge
   (→P.99, 103) enters the red
   zone, or a loss of hybrid system power is experienced.
   (For example, the vehicle speed does not increase.)
- "Engine Coolant Temp High Stop in a Safe Place See Owner's Manual" or "Hybrid System Overheated Output Power Reduced" is shown on the multi-information display.
- Steam comes out from under the hood.

**Correction procedures** 

- If the engine coolant temperature gauge enters the red zone or "Engine Coolant Temp High Stop in a Safe Place See Owner's Manual" is shown on the multi-information display
- Stop the vehicle in a safe place and turn off the air conditioning system, and then stop the hybrid system.
- 2 If you see steam: Carefully lift the hood after the steam subsides. If you do not see steam: Carefully lift the hood.


3 After the hybrid system has cooled down sufficiently, inspect the hoses and radiator core (radiator) for any leaks.

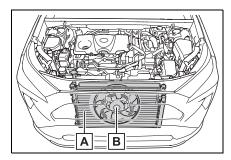

- **A** Radiator
- **B** Cooling fan

If a large amount of coolant leaks, immediately contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

**4** The coolant level is satisfactory if it is between the "FULL" and "LOW" lines on the reservoir.

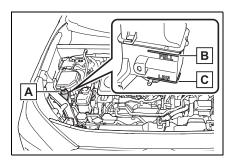

- A Reservoir
- B "FULL" line
- C "LOW" line
- 5 Add coolant if necessary.


Water can be used in an emergency if engine coolant is unavailable.

If water was added in an emergency,

7

When trouble arises

have the vehicle inspected at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.

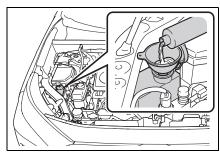

6 Start the hybrid system and turn the air conditioning system on to check that the radiator cooling fan operates and to check for coolant leaks from the radiator or hoses.

The fan operates when the air conditioning system is turned on immediately after a cold start. Confirm that the fan is operating by checking the fan sound and air flow. If it is difficult to check these, turn the air conditioning system on and off repeatedly. (The fan may not operate in freezing temperatures.)


7 If the fan is not operating: Stop the hybrid system immediately and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

If the fan is operating: Have the vehicle inspected at the nearest authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

8 Check if "Engine Coolant Temp High Stop in a Safe Place See Owner's Manual" is shown on the multi-information display. If the message does not disappear:

Stop the hybrid system and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. If the message is not displayed: Have the vehicle inspected at the nearest authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.


- If "Hybrid System Overheated Output Power Reduced" is shown on the multi-information display
- 1 Stop the vehicle in a safe place.
- 2 Stop the hybrid system and carefully lift the hood.
- 3 After the hybrid system has cooled down, inspect the hoses and radiator core (radiator) for any leaks.

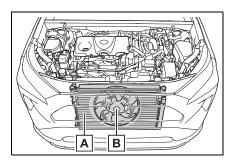

**A** Radiator

**B** Cooling fan


If a large amount of coolant leaks, immediately contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

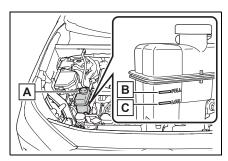

- A Reservoir
- B "FULL" line
- C "LOW" line
- 5 Add coolant if necessary.

Water can be used in an emergency if power control unit coolant is unavailable.

If water was added in an emergency, have the vehicle inspected at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer as soon as possible.

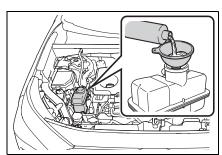

After stopping the hybrid system and waiting for 5 minutes or more, start the hybrid system again and check the multi-information display.

If the message does not disappear: Stop the hybrid system

and contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

If the message is not displayed: The hybrid system temperature has dropped and the vehicle may be driven normally.

However, if the message appears again frequently, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

### $\Lambda$

#### **WARNING**

## ■ When inspecting under the hood of your vehicle

Observe the following precautions. Failure to do so may result in serious injury such as burns.

- If steam is seen coming from under the hood, do not open the hood until the steam has subsided. The engine compartment may be very hot.
- After the hybrid system has been turned off, check that the "READY" indicator is off.
  When the hybrid system is operating, the gasoline engine may automatically start, or the cooling fan may suddenly operate even if the gasoline engine stops. Do not touch or approach rotating parts such as the fan, which may lead to fingers or clothing (especially a tie, a scarf or a muffler) getting caught, resulting in serious injury.
- Do not loosen the coolant reservoir cap while the hybrid system and radiator are hot.
   High temperature steam or coolant could spray out.

When trouble arises

## $\wedge$

#### **NOTICE**

## ■ When adding engine/power control unit coolant

Add coolant slowly after the hybrid system has cooled down sufficiently. Adding cool coolant to a hot hybrid system too quickly can cause damage to the hybrid system.

## ■ To prevent damage to the cooling system

Observe the following precautions:

- Avoid contaminating the coolant with foreign matter (such as sand or dust, etc.).
- Do not use any coolant additive.


# If the vehicle becomes stuck

Carry out the following procedures if the tires spin or the vehicle becomes stuck in mud, dirt or snow:

#### Recovering procedure

- Stop the hybrid system. Set the parking brake and shift the shift lever to P.
- 2 Remove the mud, snow or sand from around the stuck tire.
- 3 Place wood, stones or some other material to help provide traction under the tires.
- 4 Restart the hybrid system.
- 5 Shift the shift lever to D or R and release the parking brake. Then, while exercising caution, depress the accelerator pedal.

## ■ When it is difficult to free the vehicle

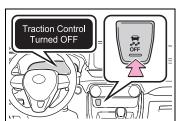

## **WARNING**

#### ■When attempting to free a stuck vehicle

If you choose to push the vehicle back and forth to free it, make sure the surrounding area is clear to avoid striking other vehicles, objects or people. The vehicle may also lunge forward or lunge back suddenly as it becomes free. Use extreme caution.

#### ■When shifting the shift lever

Be careful not to shift the shift lever with the accelerator pedal depressed.

This may lead to unexpected rapid acceleration of the vehicle that may cause an accident resulting in death or serious injury.



#### NOTICE

- ■To avoid damaging the transmission and other components
- Avoid spinning the wheels and depressing the accelerator pedal more than necessary.
- If the vehicle remains stuck even after these procedures are performed, the vehicle may require towing to be freed.

## **Vehicle specifications**

8-1.	Specifications	
	Maintenance data (fuel, oil level, etc.)476	
	Fuel information486	
8-2.	Customization	
	Customizable features488	
8-3.	Initialization	
	Items to initialize500	

## Maintenance data (fuel, oil level, etc.)

## Dimensions

Overall length*1		4600 mm (181.1 in.)*2
		4610 mm (181.5 in.)*3
Overall width*1		1855 mm (73.0 in.)*2
		1865 mm (73.4 in.)*3
Overall height*1		1685 mm (66.3 in.)*4
		1690 mm (66.5 in.) <sup>*5</sup>
Wheelbase*1		2690 mm (105.9 in.)
	Front	1605 mm (63.2 in.)*4
Tread <sup>*1</sup>		1595 mm (62.8 in.)*5
пеац	Rear	1625 mm (64.0 in.)*4
		1615 mm (63.6 in.)*5

<sup>\*1:</sup> Unladen vehicle

### Weights

### ■ 2WD models

Left-hand drive vehicles	2135 kg (4707 lb.)
Right-hand drive vehicles	2130 kg (4696 lb.)

 $<sup>^{*2}</sup>$ : Except for AXAH54L-ANXVBW, AXAL54L-ANXVBW, AXAH54R-ANXVBW, AXAL54R-ANXVBW models $^{*6}$ 

 $<sup>^{\</sup>star3}\!\!:$  For AXAH54L-ANXVBW, AXAL54L-ANXVBW, AXAH54R-ANXVBW, AXAL54R-ANXVBW models  $^{\star6}$ 

<sup>\*4:</sup> Vehicles without 235/55R19 tires

<sup>\*5:</sup> Vehicles with 235/55R19 tires

 $<sup>^{*6}</sup>$ : The model code is indicated on the manufacturer's label. ( $\rightarrow$ P.477)

Maximum permissi-	Front	1150 kg (2535 lb.)
ble axle capacity	Rear	1150 kg (2535 lb.)
Drawbar load*		70 kg (154 lb.)
Towing capacity*	Without brake	750 kg (1653 lb.)
	With brake	800 kg (1764 lb.)

<sup>\*:</sup> Vehicles that can tow a trailer. (→P.190)

#### ■ AWD models

Gross vehicle mass	Left-hand drive vehicles	2225 kg (4905 lb.)
Cross vernole mass	Right-hand drive vehicles	2215 kg (4883 lb.)
Maximum permissi-	Front	1220 kg (2690 lb.)
ble axle capacity	Rear	1220 kg (2690 lb.)
Drawbar load*		70 kg (154 lb.)
Towing consoity*	Without brake	750 kg (1653 lb.)
Towing capacity	With brake	1650 kg (3638 lb.)


<sup>\*:</sup> Vehicles that can tow a trailer. (→P.190)

### Vehicle identification


#### ■ Vehicle identification number

The vehicle identification number (VIN) is the legal identifier for your vehicle. This is the primary identification number for your Toyota. It is used in registering the ownership of your vehicle.


On some models, this number is on the top left of the instrument panel.

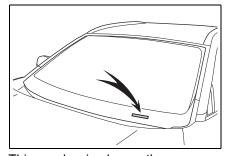

This number is also on the manufacturer's label.

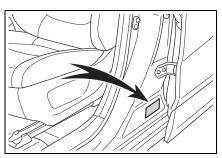


This number is also stamped under the right-hand front seat.

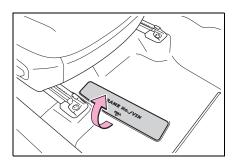

### **■** Engine number

The engine number is stamped on the engine block as shown.

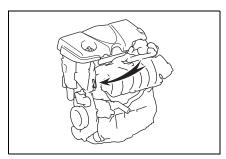

## Engine

Model	A25A-FXS
Туре	4-cylinder in line, 4-cycle, gasoline
Bore and stroke	87.50 × 103.48 mm (3.44 × 4.07 in.)
Displacement	2487 cm <sup>3</sup> (151.8 cu. in.)
Valve clearance	Automatic adjustment

## Fuel

Fuel type	When you find these types of fuel label at the gas station, use only the fuel with one of the following labels.  E5 E10  EU area: Unleaded gasoline conforming to European
	standard EN228 only Except EU area:
	Unleaded gasoline only
	EU area:
Research Octane Number	95 or higher
Research Octane Number	Except EU area:
	91 or higher
Fuel tank capacity (Reference)	55 L (14.5 gal., 12.1 lmp.gal.)

## Electric motor (traction motor)

### ▶ Front

Туре	Permanent magnet synchronous motor
Maximum output	88 kW
Maximum torque	202 N•m (20.6 kgf•m, 149 ft•lbf)

## ► Rear (AWD models)

Туре	Permanent magnet synchronous motor
Maximum output	40 kW
Maximum torque	121 N•m (12.3 kgf•m, 89.2 ft•lbf)

#### Hybrid battery (traction battery)

Model code <sup>*</sup>	AXAH52L/AXAH52R/AXAH54 L/AXAH54R	AXAL52L/AXAL52R/AXAL54L /AXAL54R
Туре	Nickel-Metal hydride battery	Lithium-ion battery
Voltage	7.2 V/module	3.7 V/cell
Capacity	6.5 Ah (3HR)	4.3 Ah
Quantity	34 modules	70 cells
Nominal voltage	244.8 V	259.0 V

 $<sup>^{\</sup>star}$ : The model code is indicated on the manufacturer's label. (ightarrowP.477)

#### Lubrication system

### ■ Oil capacity (Drain and refill — reference\*)

With filter	4.5 L (4.8 qt., 4.0 lmp. qt.)
Without filter	4.2 L (4.4 qt., 3.7 lmp. qt.)

<sup>\*:</sup> The engine oil capacity is a reference quantity to be used when changing the engine oil. Warm up the engine and turn off the hybrid system, wait more than 5 minutes, and check the oil level on the dipstick.

#### ■ Engine oil selection

"Toyota Genuine Motor Oil" is used in your Toyota vehicle. Toyota recommends the use of approved "Toyota Genuine Motor Oil". Another motor oil of matching quality can also be used.

Oil grade:

0W-16:

API grade SN "Resource-Conserving", SN PLUS "Resource-Conserving" or SP "Resource-Conserving"; or ILSAC GF-6B multigrade engine oil

0W-20 and 5W-30:

API grade SM "Energy-Conserv-

ing", SN "Resource-Conserving", SN PLUS "Resource-Conserving" or SP "Resource-Conserving"; or ILSAC GF-6A multigrade engine oil Recommended viscosity (SAE):

SAE 0W-16 is filled into your Toyota vehicle at manufacturing, and the best choice for good fuel economy and good starting in cold weather.

If SAE 0W-16 oil is not available, SAE 0W-20 oil may be used. However, it should be replaced with SAE 0W-16 at the next oil change. A Temperature range anticipated before next oil change


#### **B** Preferred

Oil viscosity (0W-16 is explained here as an example):

- The 0W in 0W-16 indicates the characteristic of the oil which allows cold startability. Oils with a lower value before the W allow for easier starting of the engine in cold weather.
- The 16 in 0W-16 indicates the viscosity characteristic of the oil when the oil is at high temperature. An oil with a higher viscosity (one with a higher value) may be better suited if the vehicle is operated at high speeds, or under extreme load conditions.

How to read oil container labels:

Either or both API registered marks are added to some oil containers to help you select the oil you should use.

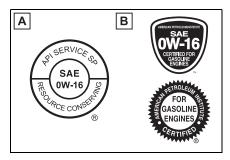

#### A API Service Symbol

Top portion: "API SERVICE SP" means the oil quality designation by American Petroleum Institute (API).

Center portion: "SAE 0W-16" means the SAE viscosity grade.

Lower portion: "Resource-Conserving" means that the oil has fuel-saving and environmental protection capabilities.

### **B** ILSAC Certification Mark

The International Lubricant Specification Advisory Committee (ILSAC) Certification Mark is displayed on the front of the container.

### Cooling system

Canacity*	Gasoline engine	6.1 L (6.4 qt., 5.4 Imp. qt.)
Capacity	Power con- trol unit	1.6 L (1.7 qt., 1.4 lmp. qt.)
Coolant type		Use either of the following:  "Toyota Super Long Life Coolant"  Similar high-quality ethylene glycol-based non-silicate, non-amine, non-nitrite, and non-borate coolant with long-life hybrid organic acid technology  Do not use plain water alone.

<sup>\*:</sup> The coolant capacity is the quantity of reference.

If replacement is necessary, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

## Ignition system (spark plug)

Make	DENSO FC16HR-Q8
Gap	0.8 mm (0.031 in.)

## $\triangle$

NOTICE

#### ■Iridium-tipped spark plugs

Use only iridium-tipped spark plugs. Do not adjust the spark plug gap.

## Electrical system (12-volt Battery)

Specific voltage reading at 20°C (68°F):		12.0 V or higher (Turn the power switch to OFF and turn on the high beam headlights for 30 sec- onds.) If the voltage is lower than the standard value, charge the 12-volt battery.	
Charging rates	Quick charge	15 A max.	
Charging rates	Slow charge	5 A max.	

### Hybrid transmission

Fluid capacity*	3.9 L (4.1 qt., 3.4 Imp.qt.)
Fluid type	Toyota Genuine ATF WS

The fluid capacity is the quantity of reference.

If replacement is necessary, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.



#### NOTICE

#### ■ Hybrid transmission fluid type

Using transmission fluid other than the above type may cause abnormal noise or vibration, or ultimately damage the transmission of your vehicle.

### Rear differential (rear electric motor) (AWD models)

Fluid capacity*	1.7 L (1.8 qt., 1.5 lmp.qt.)
Fluid type	Toyota Genuine ATF WS

\*: The fluid capacity is the quantity of reference.

If replacement is necessary, contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.



NOTICE

#### ■ Rear differential fluid type

Using transmission fluid other than the above type may cause abnormal noise or vibration, or ultimately damage the transmission of your vehicle.

#### Brakes

Pedal clear-	Left-hand drive vehicles	129 mm (5.1 in.) Min.	
ance <sup>*</sup>	Right-hand drive vehicles	146 mm (5.7 in.) Min.	
Pedal free play		1.0 — 6.0 mm (0.04 — 0.24 in.)	
Fluid type		SAE J1703 or FMVSS No. 116 DOT 3	
		SAE J1704 or FMVSS No. 116 DOT 4	

<sup>\*:</sup> Minimum pedal clearance when depressed with a force of 300 N (30.5 kgf, 67.4 lbf) while the hybrid system is operating.

## 484

## Steering

Free play	Less than 30 mm (1.2 in.)
-----------	---------------------------

## Tires and wheels

### ■ Full-size tire

## ► Type A

Tire size		225/65R17 102H
Tire inflation pres- sure (Recom-	Front	230 kPa (2.3 kgf/cm <sup>2</sup> or bar, 33 psi)
mended cold tire inflation pressure)	Rear	230 kPa (2.3 kgf/cm <sup>2</sup> or bar, 33 psi)
Wheel size		17 × 7J
Wheel nut torque		103 N•m (10.5 kgf•m, 76 ft•lbf)

## ▶ Type B

Tire size		225/60R18 100H
Tire inflation pres- sure (Recom-	Front	230 kPa (2.3 kgf/cm <sup>2</sup> or bar, 33 psi)
mended cold tire inflation pressure)	Rear	230 kPa (2.3 kgf/cm <sup>2</sup> or bar, 33 psi)
Wheel size		18 × 7J
Wheel nut torque		103 N•m (10.5 kgf•m, 76 ft•lbf)

## ▶ Type C

Tire size		235/55R19 101V
Tire inflation pres- sure (Recom-	Front	230 kPa (2.3 kgf/cm <sup>2</sup> or bar, 33 psi)
mended cold tire inflation pressure)	Rear	230 kPa (2.3 kgf/cm <sup>2</sup> or bar, 33 psi)
Wheel size	<u>'</u>	19 × 7 1/2J
Wheel nut torque		103 N•m (10.5 kgf•m, 76 ft•lbf)

### **■** Compact spare tire (if equipped)

Tire size	T165/80D17 104M
Tire inflation pressure (Recommended cold tire inflation pressure)	420 kPa (4.2 kgf/cm <sup>2</sup> or bar, 60 psi)
Wheel size	17 × 4T
Wheel nut torque	103 N•m (10.5 kgf•m, 76 ft•lbf)

### ▶ Type B

Tire size	T165/90D18 107M
Tire inflation pressure (Recommended cold tire inflation pressure)	420 kPa (4.2 kgf/cm <sup>2</sup> or bar, 60 psi)
Wheel size	18 × 4T
Wheel nut torque	103 N•m (10.5 kgf•m, 76 ft•lbf)

### $\blacksquare$ When towing a trailer (vehicles that can tow a trailer: $\rightarrow$ P.190)

Add 20.0 kPa (0.2 kgf/cm $^2$  or bar, 3 psi) to the recommended tire inflation pressure and drive at speeds below 100 km/h (62 mph).

## Light bulbs

Light bulbs	W	Туре
Front turn signal lights (bulb type)	21	А
Rear turn signal lights	21	А
Back-up lights	16	В
Outer foot lights*	5	В

A: Wedge base bulbs (amber)

B: Wedge base bulbs (clear)

\*: If equipped

8

#### **Fuel information**

When you find these types of fuel label at the gas station, use only the fuel with one of the following labels.



#### EU area:

You must only use unleaded gasoline conforming to European standard EN228.

Select unleaded gasoline with a Research Octane Number of 95 or higher for optimum engine performance.

#### **Except EU area:**

You must only use unleaded gasoline.

Select unleaded gasoline with a Research Octane Number of 91 or higher for optimum engine performance.

## Use of ethanol blended gasoline in a gasoline engine

Toyota allows the use of ethanol blended gasoline where the ethanol content is up to 10%. Make sure that the ethanol blended gasoline to be used has a Research Octane Number that follows the above.

#### ■ If your engine knocks

 Consult any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

You may occasionally notice light knocking for a short time while accelerating or driving uphill. This is normal and there is no need for concern.



#### NOTICE

#### ■ Notice on fuel quality

- Do not use improper fuels. If improper fuels are used, the engine will be damaged.
- Do not use gasoline with metallic additives, for example manganese, iron or lead, otherwise it may cause damage on your engine or emission control system.
- Do not add aftermarket fuel additives which contain metallic additives
- Do not use the methanol blended gasoline such as M15, M85, M100.
   The use of gasoline containing methanol may cause engine damage or failure.
- EU area: Bioethanol fuel sold under names such as "E50" or "E85" and fuel containing a large amount of ethanol should not be used. The use of these fuels will damage the vehicle's fuel system. In case of any doubt, ask any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

#### NOTICE

Except EU area: Bioethanol fuel sold under names such as "E50" or "E85" and fuel containing a large amount of ethanol should not be used. Your vehicle can use gasoline mixed with 10% max ethanol. The use of fuel with more than 10% ethanol content (E10) will damage the vehicle's fuel system. You must ensure that refueling is carried out only from a source where fuel specification and quality can be guaranteed. In case of any doubt, ask any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

#### **Customizable features**

Your vehicle includes a variety of electronic features that can be personalized to suit your preferences. The settings of these features can be changed using the multi-information display, navigation/multimedia system, or at any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

### Customizing vehicle features

- Changing using the navigation/multimedia system
- 1 Press the "MENU" button.
- 2 Select "Setup" on the menu screen and select "Vehicle".
- 3 Select "Vehicle Customization".

Various setting can be changed. Refer to the list of settings that can be changed for details.

- Changing using the multiinformation display
- 1 Press < or > of the meter control switches and select .
- 2 Press or of the meter control switches, select the item.
- 3 To switch the function on and off, press to switch to the desired setting.

4 To perform detailed setting of functions that support detailed settings, press and hold ( and display the setting screen.

The method of performing detailed setting differs for each screen. Please refer to the advice sentence displayed on the screen.

To go back to the previous screen or exit the customize mode, press 🗢.

#### ■When customizing using the navigation/multimedia system or multiinformation display

Stop the vehicle in a safe place, apply the parking brake, and shift the shift lever to P. Also, to prevent 12-volt battery discharge, leave the hybrid system operating while customizing the features.



## **WARNING**

#### During customization

As the hybrid system needs to be operating during customization, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.



#### NOTICE

#### During customization

To prevent 12-volt battery discharge, ensure that the hybrid system is operating while customizing features.

Some function settings are changed simultaneously with other functions being customized. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer for further details.

- A Vehicles with navigation system or multimedia system: Settings that can be changed using the navigation system or multimedia system
- **B** Settings that can be changed using the multi-information display
- © Settings that can be changed by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer

Definition of symbols: O = Available, -=Not available

### ■ Alarm\* (→P.89)

Function	Default setting	Customized setting	Α	В	С
Sensitivity adjustment of the intrusion sensor when the window is open*	Standard	Low	_	_	0
Deactivates the alarm when the doors are unlocked using the mechanical key	Off	On	_	_	0

<sup>\*:</sup> If equipped

### ■ Gauges, meters and multi-information display (→P.99, 103, 109)

Function*1	Default setting	Customized setting	Α	В	С
Clock (time adjustment)	_	_	0	O*2	-
Clock (display type)*3	12-hour display	24-hour display	0	O*2	_
Language <sup>*3</sup>	"English" (English)	Except English*4	-	0	_
Units*3	km (L/100 km)	km (km/L)		0	
Office		miles (MPG)*5			
Speedometer display*6	Analog	Digital	_	0	_
EV indicator	On	Off	-	0	-

## 490

#### 8-2. Customization

Function*1	Default setting	Customized setting	Α	В	С	
"Eco Guidance" (ECO Accelerator Guidance)	On	Off	_	0	_	
"Fuel Economy"	"Total Average"	"Trip Average"		0		
T del Economy	Total Average	"Tank Average"	_			
Audio system linked display*5	On	Off	_	0	-	
Energy monitor	On	Off	_	0	-	
AWD system display*7	On	Off	_	0	-	
Drive information type	Trip	Total	_	0	-	
Drive information items (first	Distance	Average Speed	_	0	0	
item)	Distance	Total Time	_		_	
Drive information items (second	Total Time	Average Speed		0		
item)	Total Time	Distance	_	U	_	
"Trip Summary"	"ECO Guidance"	"Drive Info"	-	0	-	
Pop-up display	On	Off	_	0	-	
Multi-Information display off	Off	On	-	0	-	
Rear seat reminder function	On	Off	-	0	-	
Convenience Services (Suggestion function)	On	On (when the vehicle is stopped)	0	_	0	
		Off				

<sup>\*1:</sup> For details about each function: →P.115

<sup>\*2:</sup> Vehicles without navigation system or multimedia system only

<sup>\*3:</sup> The default setting varies according to country.

<sup>\*4:</sup> Available languages may differ depending on the target region.

<sup>\*5:</sup> If equipped

<sup>\*6:</sup> Vehicles with 7-inch display only

<sup>\*7:</sup> AWD models

Function	Default setting	Customized setting	Α	В	С
Unlocking using a mechanical key	All doors unlocked in first step	Driver's door unlocked in first step, all doors unlocked in sec- ond step	1	1	0
Speed linked door locking function	On	Off	0	-	0
Shift position linked door locking function	Off	On	0	-	0
Shift position linked door unlocking function	Off	On	0	_	0
Driver's door linked door unlocking function	On	Off	0	-	0

# ■ Smart entry & start system\*1 and wireless remote control (→P.127, 147)

Function	Default setting	Customized setting	Α	В	С
Operation signal (emergency flashers)*2	On	Off	0	_	0
Operation buzzer volume <sup>*2</sup>	5	Off	0		0
	3	1 to 7		_	J
Time elapsed before the auto-		60 seconds			
matic door lock function is acti- vated if a door is not opened after being unlocked	30 seconds	120 seconds	0	_	0
Open door reminder buzzer (When locking the vehicle)	On	Off	_	-	0

<sup>\*1:</sup> If equipped

<sup>\*2:</sup> On some models

## ■ Smart entry & start system\*1 (→P.147)

Function	Default setting	Customized setting	Α	В	С
Smart entry & start system	On	Off	0	_	0
Smart door unlocking	All the doors	Driver's door	0	_	0
Number of consecutive door lock operations	2 times*2	As many as desired*2			0
	As many as desired*3	2 times*3			0
Time elapsed before unlocking		1.5 seconds			
all the door when gripping and holding the driver's door han-	Off	2 seconds	_	_	0
dle <sup>*4</sup>		2.5 seconds			

<sup>\*1:</sup> If equipped

## ■ Wireless remote control (→P.127)

Function	Default setting	Customized setting	Α	В	С
Wireless remote control	On	Off	_	-	0
Unlocking operation	All doors unlocked in first step	Driver's door unlocked in first step, all doors unlocked in sec- ond step	0	_	0
The function that activates the switch of the wireless remote control when locking the	Off	On (Unlocking all the door) On (Unlocking	_	_	0
door (→P.137)*		back door only)			

<sup>\*:</sup> If equipped

<sup>\*2:</sup> For vehicles without double locking system

<sup>\*3:</sup> For vehicles with double locking system

<sup>\*4:</sup> This setting can be changed when the smart door unlocking setting is set to Driver's door.

## ■ Power back door\*1 (→P.134)

Function	Default setting	Customized setting	Α	В	С
Power back door operations	On	Off	1	0	_
Operations of the power back door switch on the instrument panel	Press and hold	One short press	_	_	0
		One short press			
switch of the wireless remote control operation	Off	Push twice	_	_	0
remote control operation		Press and hold			
Operation buzzer volume	3	1		С	
Operation buzzer volume		2			_
Operation buzzer while the back door is operating*2	Off	On	-	-	0
On anima anala	5	1 to 4		(	
Opening angle	5	User setting*3	-	0	_
Power back door open operation when the back door opener switch is pressed	On	Off	1	1	0
Back door closing assist	On	Off	_	_	0
Hands Free Power Back Door <sup>*1,</sup>	On	Off	-	0	0

<sup>\*1:</sup> If equipped

 $<sup>^{\</sup>star 2}$ : The operation buzzer that sounds when the back door begins to operate cannot be turned off. ( $\rightarrow$ P.137)

 $<sup>^{*3}</sup>$ : The open position is set by the power back door switch. ( $\rightarrow$ P.146)

<sup>\*4:</sup> When the towing hitch is installed, Hands Free Power Back Door does not work.

## ■ Driving position memory $^*$ ( $\rightarrow$ P.155)

Function	Default setting	Customized setting	Α	В	С
Function to prevent contact between the head restraint and ceiling (while moving to memory location)	On	Off	_	_	0

<sup>\*:</sup> If equipped

## ■ Outside rear view mirrors (→P.171)

Function	Default setting	Customized setting	Α	В	С
Automatic folding and extend-	Linked to lock-	Off			
ing operation*	ing/unlocking of the doors	Linked to power switch operation	_	_	0

<sup>\*:</sup> If equipped

## ■ Power windows and panoramic moon roof\* (→P.173, 176)

Function	Default setting	Customized setting	Α	В	С
Key linked operation (open)	Off	On	_	_	0
Key linked operation (close)	Off	On	_	-	0
Wireless remote control linked operation (open)	Off	On	_	_	0
Wireless remote control linked operation (close)	Off	On	_	_	0
Wireless remote control linked operation signal (buzzer)	On	Off	_	_	0
Side windows open warning function	On	Off	-	_	0
Sliding roof open warning function	On	Off	_	_	0

<sup>\*:</sup> If equipped

## **■** Lights (→P.216)

Function	Default setting	Customized setting	Α	В	С
Light reminder buzzer	On	Off	_	ı	0

### ■ Automatic light control system (→P.216)

Function	Default setting	Customized setting	Α	В	С
Light sensor sensitivity	Standard	–2 to 2	0	_	0
Time elapsed before the head- lights turn off (Extended Head- light Lighting)	30 seconds	60 seconds		_	
		90 seconds	-		0
		120 seconds			

### ■ Rear window wiper (→P.225)

Function	Default setting	Customized setting	Α	В	С
Back door opening linked rear window wiper stop function	Off	On	_	_	0
Washer linked rear window wiper operation	On	Off	_	_	0
Shift position linked rear window wiper operation (→P.226)	Only once	Off		_	0
		Continuous			)

## ■ PCS (Pre-Collision System)\*1 (→P.234)

Function	Customized setting		В	С
PCS (Pre-Collision System)*2	On, Off	-	0	_
Adjust alert timing	Early, Middle, Late	-	0	-

<sup>\*1:</sup> If equipped

## ■ LTA (Lane Tracing Assist)\* (→P.242)

Function	Customized setting		В	С
Lane centering function	On, Off	-	0	_
Steering assist function	On, Off	-	0	_

<sup>\*2:</sup> The system is automatically enabled each time the power switch is turned to ON.

### 496 8-2. Customization

Function	Customized setting		В	С
Alert sensitivity	High, Standard	_	0	-
Vehicle sway warning function	On, Off	-	0	-
Vehicle sway warning sensitivity	High, Standard, Low	-	0	_

<sup>\*:</sup> If equipped

## ■ RSA (Road Sign Assist)\*1 (→P.252)

Function	Customized setting	Α	В	С
RSA (Road Sign Assist)*2	On, Off	_	0	-
Excess speed notification method*3	No notification, Display only, Display and buzzer	_	0	-
Excess speed notification level	2 km/h (1 mph), 5 km/h (3 mph), 10 km/h (5 mph)	_	0	-
No-overtaking notification method	No notification, Display only, Display and buzzer	_	0	_
Other notifications method (No- entry notification)*4	No notification, Display only, Display and buzzer	_	0	-

<sup>\*1:</sup> If equipped

## ■ Dynamic radar cruise control with full-speed range\* (→P.256)

Function	Customized setting	Α	В	С
Dynamic Radar Cruise Control with Road Sign Assist*	On, Off	_	0	_

<sup>\*:</sup> If equipped

<sup>\*2:</sup> RSA function becomes On when the power switch is turned to ON.

<sup>\*3:</sup> If a Speed limit with supplemental mark is exceeded, the notification buzzer does not operate.

<sup>\*4:</sup> Vehicles with navigation system

Function	Default setting	Customized setting	Α	В	С
BSM (Blind Spot Monitor)	On	Off	_	0	-
Outside rear view mirror indicator brightness	Bright	Dim	_	0	_
	Intermediate	Early			
Alert timing for presence of		Late			
approaching vehicle (sensitivity)		Only when vehi- cle detected in blind spot	_	0	_

<sup>\*:</sup> If equipped

## ■ RCTA (Rear Crossing Traffic Alert) function\*1 (→P.273)

Function	Default setting	Customized setting	Α	В	С
RCTA (Rear Crossing Traffic Alert) function	On	Off	_	0	_
Buzzer volume*2	Level 2	Level 1		0	
		Level 3	_	0	_

<sup>\*1:</sup> If equipped

## ■ Toyota parking assist-sensor\*1 (→P.291)

Function	Default setting	Customized setting	Α	В	С
Toyota parking assist-sensor	On	Off	_	0	0
Buzzer volume*2	2	1 3	_	0	0

<sup>\*1:</sup> If equipped

<sup>\*2:</sup> This setting is linked with the buzzer volume of the Toyota parking assist-sensor.

<sup>\*2:</sup> This setting is linked with the buzzer volume of the RCTA (Rear Crossing Traffic Alert) function.

## ■ PKSB (Parking Support Brake) $^*$ ( $\rightarrow$ P.300)

Function	Default setting	Customized setting	Α	В	С
PKSB (Parking Support Brake) function	On	Off	_	0	-

<sup>\*:</sup> If equipped

## ■ Automatic air conditioning system (→P.332)

Function	Default setting	Customized setting	Α	В	С
Switching between outside air and recirculated air mode linked to "AUTO" switch operation	On	Off	0	_	0
A/C Auto switch operation	On	Off	0	_	0
Switching to the outside air mode when the vehicle is parked	On	Off	_	_	0

## ■ Illumination (→P.341)

Function	Default setting	Customized setting	Α	В	С
Time elapsed before the interior lights turn off	15 seconds	Off	0		
		7.5 seconds		_	0
		30 seconds			
Operation after the power switch is turned off	On	Off	_	1	0
Operation when the doors are unlocked	On	Off	_	1	0
Operation when you approach the vehicle with the electronic key on your person*1	On	Off	_	1	0
Footwell lighting*2	On	Off	-	-	0

<sup>\*1:</sup> Vehicles with smart entry & start system only

<sup>\*2:</sup> If equipped

- When the speed linked door locking function and shift position linked door locking function are both on, the door lock operates as follows.
- If the vehicle is started with all the doors locked, the speed linked door locking function would not operate.
- If the vehicle is started with any door unlocked, the speed linked door locking function will operate.
- When shifting the shift lever to any position other than P, all the doors will be locked.
- When the smart entry & start system is off, the selecting door to unlock cannot be customized.
- When the doors remain closed after unlocking the doors and the automatic door lock function is activated, the signals will be generated in accordance with the Operation signal (emergency flashers) settings.

### Items to initialize

The following items must be initialized for normal system operation after such cases as the 12-volt battery being reconnected, or maintenance being performed on the vehicle:

## List of the items to initialize

Item	When to initialize	Reference	
Power back door*	After reconnecting or changing	P.142	
Toyota parking assist-sensor*	the 12-volt battery	P.294	
Parking Support Brake <sup>*</sup>	After changing a fuse	P.305	
Power windows	When functioning abnormally	P.173	
Panoramic moon roof*	vinen functioning abnormally	P.177	
Tire pressure warning system*	<ul><li> When rotating the tires</li><li> When changing the tire</li><li> After registering the ID codes</li></ul>	P.388	
Toyota parking assist monitor*		Refer to "Navigation	
Panoramic view monitor <sup>*</sup>	<ul> <li>After reconnecting or changing the 12-volt battery</li> <li>After changing a fuse</li> </ul>	and multime- dia system Owner's manual" or "Multimedia Owner's Manual"	

<sup>\*:</sup> If equipped

## Index

What to do if... (Troubleshooting) ......502
Alphabetical Index ......505

## What to do if... (Troubleshooting)

If you have a problem, check the following before contacting any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer.

# The doors cannot be locked, unlocked, opened or closed



#### You lose your keys

- If you lose your mechanical keys, new genuine mechanical keys can be made by any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer. (→P.461)
- If you lose your electronic keys, the risk of vehicle theft increases significantly. Contact any authorized Toyota retailer or Toyota authorized repairer, or any reliable repairer immediately.
   (→P.461)



## The doors cannot be locked or unlocked

- Is the key battery weak or depleted? (→P.403)
- Is the power switch in ON?
   When locking the doors, turn the power switch to OFF. (→P.201)
- Is the electronic key left inside the vehicle?

- When locking the doors, make sure that you have the electronic key on your person.
- The function may not operate properly due to the condition of the radio wave. (→P.148)



## The rear door cannot be opened

• Is the child-protector lock set? The rear door cannot be opened from inside the vehicle when the lock is set. Open the rear door from outside and then unlock the child-protector lock. (→P.133)

# If you think something is wrong



## The hybrid system does not start

- Did you press the power switch while firmly depressing the brake pedal? (→P.199)
- Is the shift lever in P? (→P.199)
- Is the electronic key anywhere detectable inside the vehicle? (→P.147)
- Is the steering wheel unlocked? (→P.200)
- Is the electronic key battery weak or depleted?
   In this case, the hybrid system can be started in a temporary

way. (→P.463)

 Is the 12-volt battery discharged? (→P.464)



The shift lever cannot be shifted from P even if you depress the brake pedal

 Is the power switch in ON? If you cannot release the shift lever by depressing the brake pedal with the power switch in ON.
 (→P.207)



The steering wheel cannot be turned after the hybrid system is stopped

It is locked automatically to prevent theft of the vehicle.
 (→P.200)



The windows do not open or close by operating the power window switches

pressed?
The power window except for the one at the driver's seat cannot be operated if the window lock switch is pressed. (→P.175)

Is the window lock switch



The power switch is turned off automatically

 The auto power off function will be operated if the vehicle is left in ACC or ON (the hybrid system is not operating) for a period of time. (→P.202)



## A warning buzzer sounds during driving

 The seat belt reminder light is flashing

Are the driver and the passengers wearing the seat belts? ( $\rightarrow$ P.434)

 The parking brake indicator is on Is the parking brake released? (→P.210)

Depending on the situation, other types of warning buzzer may also sound. (→P.427, 436)



## An alarm is activated and the horn sounds (if equipped)

 Did anyone inside the vehicle open a door during setting the alarm?

The sensor detects it and the alarm sounds.  $(\rightarrow P.89)$ 

To stop the alarm, turn the power switch to ON or start the hybrid system.



## A warning buzzer sounds when leaving the vehicle

 Is the message displayed on the multi-information display?
 Check the message on the multiinformation display. (→P.436)



# A warning light turns on or a warning message is displayed

 When a warning light turns on or a warning message is displayed, refer to P.427, 436.

## When a problem has occurred



#### If you have a flat tire

- Vehicles without spare tire: Stop the vehicle in a safe place and repair the flat tire temporarily with the emergency tire puncture repair kit. (→P.440)
- Vehicles with spare tire:
   Stop the vehicle in a safe place and replace the flat tire with the spare tire. (→P.451)



### The vehicle becomes stuck

 Try the procedure for when the vehicle becomes stuck in mud, dirt, or snow. (→P.472)

A	
A/C 222	Blower
A/C	Front s
Air conditioning filter393 Automatic air conditioning system	mode
	Alarm
Blower customization	Alarm.
Front seat concentrated airflow	Warnir
mode (S-FLOW)336	Antenna
ABS (Anti-lock Brake System) 315	Smart
Function315	Anti-lock
Warning light429	Function
ACA (Active Cornering Assist)316	Warnir
Acoustic Vehicle Alerting System 81	Approacl Armrest.
Active Cornering Assist (ACA)316	
Airbag manual on-off system48	Ashtray . Assist gr
Airbags39	Assist gr Automati
Airbag manual on-off system 48	Automati
Airbag operating conditions41	Air con
Airbag precautions for your child .44	Blower
Airbag warning light429	Automati
Correct driving posture33	
Curtain shield airbag operating con-	Automati
ditions41	Automati
Curtain shield airbag precautions 44	Auxiliary
General airbag precautions44	Average
Locations of airbags39	Average
Modification and disposal of airbags	Average
46	_
Side airbag operating conditions41	
Side airbag precautions44	Da ala da a
Side and curtain shield airbags oper-	Back doo Hands
ating conditions41	Power
Side and curtain shield airbags pre-	Wirele
cautions44	Back-up
SRS airbags	Replac
SRS warning light	Wattag
Air conditioning filter	Battery (
Air conditioning system332 Air conditioning filter393	If the 1
Automatic air conditioning system	
Automatic all conditioning system	Prenar

	.332
Blower customization	.334
Front seat concentrated airflow	
mode (S-FLOW)	.336
Alarm	89
Alarm	89
Warning buzzer	.427
Antenna	
Smart entry & start system	.147
Anti-lock brake system (ABS)	.315
Function	
Warning light	
Approach warning	.263
Armrest	
Ashtray	
Assist grips	.362
Automatic air conditioning syste	
Air conditioning filter	
Blower customization	
Automatic headlight leveling sys	
Automatic High Beam	
Automatic light control system	
Auxiliary box	
Average fuel consumption	
Average fuel economy	
Average vehicle speed114	121
В	
Back door	
Hands Free Power Back Door	
Power back door	
Wireless remote control	.137
Back-up lights	
Replacing light bulbs	
Wattage	
Battery (12-volt battery)	
If the 12-volt battery is discharge	
Preparing and checking before	win-

ter324	Airbag precautions44
Replacing467	Back door precautions134
Warning light428	Heated steering wheel and seat
Battery (traction battery)82	heater precautions339
Blind Spot Monitor (BSM)273	How your child should wear the seat
Blind Spot Monitor function 284	belt36
Rear Cross Traffic Alert function 287	Panoramic moon roof precautions
Bottle holders346	178
Brake	Power window lock switch175
Brake Hold213	Power window precautions174
Parking brake210	Rear door child-protectors133
Regenerative braking80	Removed key battery precautions
Warning light427	404
Brake assist315	Seat belt precautions35
Brake Hold213	Seat heater precautions339
Break-in tips183	Cleaning364, 367
BSM (Blind Spot Monitor)273	Aluminum wheels364
Blind Spot Monitor function 284	Exterior364
Rear Cross Traffic Alert function 287	Interior367
	Radar sensor230
	0 11 11
C	Seat belts367
	Clock101, 107
Card holder347	Clock101, 107 Coat hooks362
Card holder347 Care	Clock
Card holder	Clock
Card holder	Clock
Card holder       347         Care       Aluminum wheels       364         Exterior       364         Interior       367	Clock       101, 107         Coat hooks       362         Condenser       380         Console box       345         Consumption screen       119         Convenience Services (Suggestion
Card holder       347         Care       Aluminum wheels       364         Exterior       364         Interior       367         Seat belts       367	Clock       101, 107         Coat hooks       362         Condenser       380         Console box       345         Consumption screen       119         Convenience Services (Suggestion function)       118
Card holder       347         Care       Aluminum wheels       364         Exterior       364         Interior       367         Seat belts       367         Cargo hooks       348	Clock       101, 107         Coat hooks       362         Condenser       380         Console box       345         Consumption screen       119         Convenience Services (Suggestion function)       118         Coolant
Card holder       347         Care       Aluminum wheels       364         Exterior       364         Interior       367         Seat belts       367         Cargo hooks       348         Chains       326	Clock
Card holder       347         Care       364         Aluminum wheels       364         Exterior       364         Interior       367         Seat belts       367         Cargo hooks       348         Chains       326         Child-protectors       133	Clock
Card holder       347         Care       Aluminum wheels       364         Exterior       364         Interior       367         Seat belts       367         Cargo hooks       348         Chains       326         Child-protectors       133         Child restraint system       50	Clock
Card holder       347         Care       364         Aluminum wheels       364         Exterior       364         Interior       367         Seat belts       367         Cargo hooks       348         Chains       326         Child-protectors       133	Clock       101, 107         Coat hooks       362         Condenser       380         Console box       345         Consumption screen       119         Convenience Services (Suggestion function)       118         Coolant       379         Preparing and checking before winter       324         Warning light       428
Card holder       347         Care       Aluminum wheels       364         Exterior       364         Interior       367         Seat belts       367         Cargo hooks       348         Chains       326         Child-protectors       133         Child restraint system       50         Child restraint system installation	Clock       101, 107         Coat hooks       362         Condenser       380         Console box       345         Consumption screen       119         Convenience Services (Suggestion function)       118         Coolant       379         Preparing and checking before winter       324         Warning light       428         Cooling system       379
Card holder       347         Care       Aluminum wheels       364         Exterior       367         Seat belts       367         Cargo hooks       348         Chains       326         Child-protectors       133         Child restraint system       50         Child restraint system installation method       61	Clock
Card holder       347         Care       Aluminum wheels       364         Exterior       367         Seat belts       367         Cargo hooks       348         Chains       326         Child-protectors       133         Child restraint system       50         Child restraint system installation       61         Fixed with a seat belt       62	Clock       101, 107         Coat hooks       362         Condenser       380         Console box       345         Consumption screen       119         Convenience Services (Suggestion function)       118         Coolant       379         Preparing and checking before winter       324         Warning light       428         Cooling system       379         Hybrid system overheating       469         Cruise control
Card holder       347         Care       Aluminum wheels       364         Exterior       364         Interior       367         Seat belts       367         Cargo hooks       348         Chains       326         Child-protectors       133         Child restraint system       50         Child restraint system installation       61         Fixed with a seat belt       62         Fixed with an ISOFIX lower anchor-	Clock       101, 107         Coat hooks       362         Condenser       380         Console box       345         Consumption screen       119         Convenience Services (Suggestion function)       118         Coolant       379         Preparing and checking before winter       324         Warning light       428         Cooling system       379         Hybrid system overheating       469         Cruise control       268
Card holder       347         Care       Aluminum wheels       364         Exterior       364         Interior       367         Seat belts       367         Cargo hooks       348         Chains       326         Child-protectors       133         Child restraint system       50         Child restraint system installation       61         Fixed with a seat belt       62         Fixed with an ISOFIX lower anchorage       63	Clock       101, 107         Coat hooks       362         Condenser       380         Console box       345         Consumption screen       119         Convenience Services (Suggestion function)       118         Coolant       379         Preparing and checking before winter       324         Warning light       428         Cooling system       379         Hybrid system overheating       469         Cruise control       268         Dynamic radar cruise control with
Card holder       347         Care       Aluminum wheels       364         Exterior       364         Interior       367         Seat belts       367         Cargo hooks       348         Chains       326         Child-protectors       133         Child restraint system       50         Child restraint system installation       61         Fixed with a seat belt       62         Fixed with an ISOFIX lower anchorage       63         Points to remember       51	Clock       101, 107         Coat hooks       362         Condenser       380         Console box       345         Consumption screen       119         Convenience Services (Suggestion function)       118         Coolant       379         Preparing and checking before winter       324         Warning light       428         Cooling system       379         Hybrid system overheating       469         Cruise control       268         Dynamic radar cruise control with full-speed range       256
Card holder         347           Care         Aluminum wheels         364           Exterior         364           Interior         367           Seat belts         367           Cargo hooks         348           Chains         326           Child-protectors         133           Child restraint system         50           Child restraint system installation         61           Fixed with a seat belt         62           Fixed with an ISOFIX lower anchorage         63           Points to remember         51           Riding with children         49	Clock       101, 107         Coat hooks       362         Condenser       380         Console box       345         Consumption screen       119         Convenience Services (Suggestion function)       118         Coolant       379         Preparing and checking before winter       324         Warning light       428         Cooling system       379         Hybrid system overheating       469         Cruise control       268         Dynamic radar cruise control with

Current fuel economy111	Open door warning buzzer132
Curtain shield airbags39	Outside rear view mirrors171
Customizable features488	Rear door child-protectors133
	Side doors129
D	Double locking system88
Parties and in the back and the control of the cont	Drive information114
Daytime running light system 216	Driver's seat belt reminder light434
Replacing light bulbs408	Driver's seat position memory155
Deck board	Driving position memory155
Deck under tray350	Memory recall function156
Defogger	Drive-Start Control (DSC)
Outside rear view mirrors334	Sudden start restraint control 187
Rear window	Driving
Windshield	Break-in tips183
Digital Rear-view Mirror162	Correct posture33
Dimensions476	Driving mode select switch311
Display	Hybrid Electric Vehicle driving tips
BSM (Blind Spot Monitor)273	322
Consumption screen119	Procedures182
Cruise control	Winter drive tips324
Drive information114	Driving information display111
Driving information111	Driving mode select switch311
Dynamic radar cruise control with	Driving position memory155
full-speed range256	Memory recall function156
Energy monitor119	Driving support system information
LTA (Lane-Tracing Assist) 248	display113
Multi-information display	DSC (Drive-Start Control)
RCTA273	Sudden start restraint control 187
Toyota parking assist-sensor291	Dynamic radar cruise control with
Warning messages436	full-speed range
Do-it-yourself maintenance . 370, 372	Function256
Door lock	Warning message436
Back door134	3 3
Side doors129	E
Smart entry & start system147	
Wireless remote control127	ECB (Electronically Controlled Brake
Doors	System)315
Automatic door locking and unlock-	Eco drive mode311
ing system133	E-Four (Electronic On-Demand AWD
Back door134	system)316
Door glasses173	Elapsed time114
Door lock129	Electric motor

Location79	Hood374
Specification479	Identification number478
Electric Power Steering (EPS)	Engine coolant
Function316	Capacity482
Warning light429	Checking379
Electronic key	Preparing and checking before win-
Battery-saving function148	ter324
If the electronic key does not operate	Warning light428
properly462	Engine coolant temperature gauge
Replacing the battery403	99, 103
Electronic sunshade176	Engine oil
Jam protection function177	Capacity480
Operation176	Checking377
Emergency, in case of	Preparing and checking before win-
If a warning buzzer sounds427	ter324
If a warning light turns on427	Warning light428
If a warning message is displayed	EPS (Electric Power Steering)
436	Function316
If the 12-volt battery is discharged	Warning light429
464	EV drive mode203
If the electronic key does not operate	EV indicator80
properly462	Extended Headlight Lighting system
If the fuel filler door cannot be	218
opened462	
If the hybrid system will not start 460	F
If the vehicle is submerged or water	Flat tire440, 451
on the road is rising419	Tire pressure warning system387
If you have a flat tire440, 451	Floor mats32
If you lose your keys461	Fluid
If you think something is wrong. 425	Brake483
If your vehicle becomes stuck472	Hybrid transmission483
If your vehicle has to be stopped in	Rear differential483
an emergency418	Washer381
If your vehicle needs to be towed	Fog lights
421	Replacing light bulbs408
If your vehicle overheats469	Switch221
Emergency brake signal316	Wattage485
Emergency flashers418	Footwell lights341
Energy monitor119	FUULWEII IIGIILS
<b>-</b> • •	
Engine	Front fog lights
Engine Compartment377	

Front passenger's seat belt reminder	system314
light434	
Front position lights	Н
Light switch216	Headlight cleaner222
Replacing light bulbs408	Headlights216
Front seat heaters339	Automatic headlight leveling217
Front seats 152	Automatic High Beam system218
Adjustment152	Extended Headlight Lighting system
Cleaning367	218
Correct driving posture33	Light switch216
Driving position memory155	Replacing light bulbs408
Head restraints158	Head restraints158
Memory recall function156	Heated steering wheel339
Seat heaters339	Heated Windshield Defroster336
Seat position memory155	Heaters
Seat ventilators339	Automatic air conditioning system
Front turn signal lights	332
Replacing light bulbs408	Heated steering wheel339
Turn signal lever209	Outside rear view mirrors334
Wattage485	Seat heaters339
Fuel	High mounted stoplight
Fuel gauge99, 103	Replacing light bulbs408
Gas station information648	Hill-start assist control316
Information486	Hood374
Refueling227	Warning message132, 436
Warning light433	Hooks
Fuel consumption information	Cargo hooks348
Average fuel consumption 121	Coat hooks
Current fuel consumption121	Retaining hooks (floor mat)32
Fuel filler door228	Horn160
If the fuel filler door cannot be	Hybrid battery (traction battery)
opened462	Location82
Refueling227	Specification480
Fuel gauge99, 103	Hybrid battery air vent85
Fuses405	Hybrid system79
	ACCESSORY mode201
G	Emergency shut off system86
Gas station information648	Energy monitor/consumption screen
Gauges99, 103	119
Glove box345	EV drive mode203
GPF (Gasoline Particulate Filter)	High voltage components82
o (Sassinio i articulato i litti)	gii voitago componento02

н	
Headlight cleaner222	2
Headlights216	ò
Automatic headlight leveling217	,
Automatic High Beam system218	3
Extended Headlight Lighting system	
218	
Light switch216	
Replacing light bulbs408	
Head restraints158	
Heated steering wheel339	
Heated Windshield Defroster336	ì
Heaters	
Automatic air conditioning system	
332	
Heated steering wheel339	
Outside rear view mirrors334	
Seat heaters339	)
High mounted stoplight	
Replacing light bulbs408	
Hill-start assist control316	
Hood374	
Warning message132, 436	)
Hooks Cargo hooks348	,
Coat hooks362	
Retaining hooks (floor mat)32	
Horn160	
Hybrid battery (traction battery)	,
Location82	,
Specification480	
Hybrid battery air vent85	
Hybrid system79	
ACCESSORY mode201	
Emergency shut off system86	
Energy monitor/consumption screen	
119	
EV drive mode203	
High voltage components82	

How to start the hybrid system199	Switch341
Hybrid Electric Vehicle driving tips	Intrusion sensor90
322	
Hybrid System Indicator99, 103	J
Hybrid system precautions82	Jack
If the hybrid system will not start 460	Positioning a floor jack375
If your vehicle has to be stopped in	Vehicle-equipped jack441, 452
an emergency418	Jack handle441, 452
Ignition switch (power switch) 199	Jam protection function
Overheating469	Electronic sunshade177
Power (ignition) switch199	Panoramic moon roof177
Regenerative braking80	Power back door opener and closer
Starting the hybrid system199	140
Hybrid System Indicator 99, 103	Power windows173
Hybrid transmission205	Power willdows173
	K
ı	, r
Identification	Keyless entry
Engine478	Smart entry & start system147
Vehicle477	Wireless remote control127
Ignition switch (power switch) 199	Keys126
Auto power off function	Battery-saving function148
Changing the power switch modes	Electronic key126
201	If the electronic key does not operate
If your vehicle has to be stopped in	properly462
an emergency418	If you lose your keys461
Starting the hybrid system 199	Key number plate126
Illuminated entry system342	Keyless entry127, 147
Immobilizer system87	Mechanical key128
Indicators94	Power switch199
Initialization	Replacing the battery403
Items to initialize500	Warning buzzer147
Panoramic moon roof177	Wireless remote control key127
Parking Support Brake305	Knee airbags39
Power back door142	
Power windows 173	L
Tire pressure warning system388	Lane Tracing Assist (LTA)242
Inside rear view mirror161, 162	Operation242
Installing a child restraint system to	Warning messages251
a front passenger seat52	Language (multi-information dis-
Interior lights341	J J. (

play)117, 489	Meter
Lever	Clock101, 107
Auxiliary catch lever374	Indicators94
Hood lock release lever374	Meter control switches110
Shift lever205	Meters99, 103
Turn signal lever209	Multi-information display109
Wiper lever222, 225	Settings115, 489
License plate lights	Units117, 489
Light switch216	Warning lights427
Replacing light bulbs408	Warning messages118, 436
Light bulbs	Meter control switches110
Replacing408	Mirrors
Wattage485	Digital Rear-view Mirror162
Lights	Inside rear view mirror161
Automatic High Beam system218	Outside rear view mirror defoggers
Extended Headlight Lighting system	334
218	Outside rear view mirrors171
Fog light switch221	Vanity mirrors353
Front interior lights341	Multi-information display
Headlight switch216	Audio system-linked display114
Interior lights341	Changing the display110
Personal lights342	Convenience Services (Suggestion
Rear interior light342	function)118
Replacing light bulbs408	Display contents109
Turn signal lever209	Driving information display111
Vanity lights353	Driving support system information
Wattage485	display113
Lock steering column200	Dynamic radar cruise control with
LTA (Lane Tracing Assist)242	full-speed range256
Operation242	Hybrid System Indicator 100, 106
Warning messages251	Language117, 489
Luggage compartment light 136, 139	LTA (Lane-Tracing Assist)248
Luggage cover351	Menu icons110
	Meter control switches110
M	Navigation system-linked display114
Maintenance	PCS (Pre-Collision System)234
Do-it-yourself maintenance372	Pop-up display117, 489
Maintenance data476	Settings115, 489
Maintenance requirements370	Toyota parking assist-sensor291
Malfunction indicator lamp429	Units117, 489
Menu icons 110	Vehicle information display114

Warning message display118	Warning light43	33
Warning messages436	Warning message21	12
	Parking Support Brake (PKSB)30	)(
N	Indicator	97
Normal mode311	Parking Support Brake function	
Normai mode311	(rear-crossing vehicles)30	)(
•	Parking Support Brake function	
0	(static objects)30	)(
Odometer99, 103	Warning light43	31
Odometer and trip meter display	PCS (Pre-Collision System)	
"ODO TRIP" switch101, 107	Enabling/disabling the pre-collision	
"ODO TRIP" switch101, 107	system23	36
Oil	Function23	
Engine oil480	Warning light43	3(
Opener	Warning message232, 43	38
Back door136, 138	Personal lights34	42
Hood374	Switch34	12
Outer foot lights	PKSB (Parking Support Brake)30	)(
Replacing light bulbs408	Indicator	97
Wattage485	Parking Support Brake function	
Outside rear view mirrors171	(rear-crossing vehicles)30	)(
Adjusting and folding171	Parking Support Brake function	
BSM (Blind Spot Monitor)273	(static objects)30	
Outside rear view mirror defoggers	Warning light43	
334	Power back door switch137, 13	
Outside temperature display100, 106	Power outlets35	53
Overheating469	Power steering (Electric Power	
	Steering system)31	16
Р	Warning light42	29
Daddla shift switches 007	Power switch19	)
Paddle shift switches207	Auto power off function20	)2
Panoramic moon roof	Changing the power switch modes	;
Jam protection function	20	) 1
Operation	Starting the hybrid system19	96
Warning message	Power windows	
Parking assist sensors (Toyota park-	Door lock linked window operation	
ing assist-sensor)291	17	74
Parking brake	Jam protection function17	
Operation	Operation17	
Parking brake engaged warning	Window lock switch17	75
buzzer212	Pre-Collision System (PCS)	

Enabling/disabling the pre-collision	Electronic key battery403
system236	Fuses405
Function234	Light bulbs408
Warning light430	Tires451
Warning message232, 438	Wiper insert400
	Wireless remote control battery .403
R	Road accident cautions83
Deden emice control	Road Sign Assist252
Radar cruise control	RSA (Road Sign Assist)252
Dynamic radar cruise control with	
full-speed range	S
Radiator380	Coat half remainder limbt 424
RCTA (Rear Cross Traffic Alert)	Seat belt reminder light434
RCTA Function273, 287	Seat belts35
Warning message	Adjusting the seat belt shoulder
Rear Cross Traffic Alert (RCTA)273	anchor height37
Rear fog light	Child restraint system installation.62
Replacing light bulbs408	Cleaning and maintaining the seat
Switch221	belt
Rear passengers' seat belt reminder	Emergency Locking Retractor37
light434	How to wear your seat belt36
Rear seat	How your child should wear the seat
Folding down the rear seatbacks154	belt36
Head restraints158	Pregnant women, proper seat belt
Seat heaters339	use35
Rear seat heaters339	Reminder light and buzzer434
Rear turn signal lights	Seat belt pretensioners37
Replacing light bulbs408	SRS warning light429
Turn signal lever209	Seat heaters339
Wattage485	Seat position memory155
Rear view mirror	Seats
Digital Rear-view Mirror162	Adjustment precautions152, 153
Inside rear view mirror161	Adjustment152, 153
Outside rear view mirrors171	Cleaning367
Rear window defogger334	Driving position memory155
Rear window wiper225	Folding down the rear seatbacks154
Refueling227	Head restraint158
If the fuel filler door cannot be	Properly sitting in the seat33
opened462	Seat heaters339
Opening the fuel tank cap227	Seat position memory155
Regenerative braking80	Seat ventilators339
Replacing	Seat ventilators339

Secondary Collision Brake316	Spark plug482
Sensor	Specifications476
Automatic headlight system216	Speedometer99, 103
Automatic High Beam system218	Sport mode311
BSM (Blind Spot Monitor)284	Steering lock
Digital Rear-view Mirror166	Column lock release200
Inside rear view mirror162	Steering lock system warning mes-
LTA (Lane Tracing Assist)242	sage200
Parking Support Brake function	Steering wheel
(rear-crossing vehicles)284	Adjustment160
Parking Support Brake function	Heated steering wheel339
(static objects)291	Meter control switches110
Rain-sensing windshield wipers. 224	Stop lights
RCTA284	Replacing light bulbs408
Tilt sensor90	Storage feature344
Toyota parking assist-sensor291	Storage precautions345
Toyota Safety Sense229	Stuck
Service plug82	If the vehicle becomes stuck472
Shift lever205	Sunglass holder347
If the shift lever cannot be shifted	Sunshade176
from P207	Sun visors353
Shift lock system207	Switches
Side airbags39	"ODO TRIP" switch101, 107
Side auxiliary box351	Automatic High Beam switch218
Side doors129	Brake hold switch213
Side mirrors171	BSM (Blind Spot Monitor)273
Adjustment171	Cruise control switch268
BSM (Blind Spot Monitor)273	Digital Rear-view Mirror control
Folding172	switches162
Side turn signal lights	Door lock switch132
Replacing light bulbs408	Driving mode select switch311
Turn signal lever209	Driving position memory switches
Side windows173	155
Smart entry & start system147	Dynamic radar cruise control with
Antenna location147	full-speed range256
Entry functions129, 135	Electronic sunshade switch176
Starting the hybrid system199	Emergency flashers switch418
Warning message436	EV drive mode switch203
Snow tires324	Fog light switch221
Spare tire	Heated steering wheel339
Storage location452	Ignition switch (power switch)199

Intrusion sensor cancel switch90	Immobilizer system	87
Light switch216	Intrusion sensor	90
LTA switch247	Tilt sensor	90
Meter control switches110	Tilt sensor	90
Outside rear view mirror switches	Tire inflation pressure	
171	Warning light	433
Paddle shift switches 207, 208	Tire pressure warning sys	tem
Panoramic moon roof switches 176	Function	387
Parking brake switch210	Initializing	388
PKSB (Parking Support Brake)302	Installing tire pressure wa	ırning
Power back door switch 137, 138	valves and transmitters.	387
Power door lock switch132	Registering ID codes	390
Power switch199	Warning light	433
Power window switch173	Tires	385
RCTA274	Chains	326
Rear window and outside rear view	Checking	385
mirror defoggers switch334	If you have a flat tire	440, 451
Rear window wiper and washer	Inflation pressure	390
switch225	Replacing	440, 451
Seat heater switches339, 340	Rotating tires	386
Seat ventilators340	Snow tires	324
Tire pressure warning reset switch	Spare tire	451
388	Tire pressure warning sys	stem387
Toyota parking assist-sensor292	Warning light	433
Vehicle-to-vehicle distance switch	Tools	,
256	Top tether anchorages	64
VSC OFF switch317	Towing	
Window lock switch175	Emergency towing	
Windshield defogger switch 333	Towing eyelet42	
Windshield wiper de-icer switch. 336	Trailer sway control	
Windshield wipers and washer	Trailer towing	
switch222	Toyota parking assist-sen	
Wireless charger switch356	Function	291
	Warning message	
Т	Toyota Safety Sense	
Tail lights	Automatic High Beam	
Light switch216	Dynamic radar cruise cor	
Replacing light bulbs408	full-speed range	
Theft deterrent system	LTA (Lane Tracing Assist	•
Alarm89	PCS (Pre-Collision Syste	
Double locking system88	RSA (Road Sign Assist)	252

Traction battery (Hybrid battery)82	Brake hold	433
Hybrid battery (traction battery) air	Brake Override System	432
intake and discharge vents85	Brake system	427
Location82	Downshifting20	8, 209
Specification480	Drive-Start Control	432
Warning messages86	Electric power steering	429
Traction control316	High coolant temperature	428
Traction motor (electric motor)79	Low engine oil pressure	428
Trailer sway control316	LTA (Lane Tracing Assist)	242
Trailer towing189, 190	Open door	132
Trail Mode313	Open hood	132
Transmission	Open window	174
Hybrid transmission205	PKSB OFF indicator	43
TRC (Traction Control)316	Pre-collision warning	234
Trip meters99, 103	RCTA (Rear Cross Traffic Ale	rt) 273
Turn signal lights	RCTA OFF indicator	432
Replacing light bulbs408	Seat belt reminder	434
Turn signal lever209	Toyota parking assist	29
Wattage485	Toyota parking assist-sensor (	
	indicator	
U	Vehicle sway warning	240
USB charging ports355	Warning lights	420
Utility vehicle precautions327	ABS	
	Brake hold operated indicator Brake Override System	
V	Brake system	
		+4
Vanity lights		
Vanity lights	Charging system	428
Vanity lights353	Charging system Drive-Start Control	428 432
Vanity lights353 Vanity mirrors353	Charging system Drive-Start Control Electric power steering	428 432 429
Vanity lights353 Vanity mirrors353 Vehicle data recordings7	Charging system Drive-Start Control Electric power steering Engine	428 432 429 429
Vanity lights	Charging system Drive-Start Control Electric power steering Engine High coolant temperature	428 429 429 428
Vanity lights353 Vanity mirrors353 Vehicle data recordings7	Charging system Drive-Start Control Electric power steering Engine	428 429 429 428 432
Vanity lights	Charging system  Drive-Start Control  Electric power steering  Engine  High coolant temperature  Inappropriate pedal operation	428 429 429 428 428
Vanity lights	Charging system  Drive-Start Control  Electric power steering  Engine  High coolant temperature  Inappropriate pedal operation  Low engine oil pressure	428 429 429 428 432 433
Vanity lights	Charging system  Drive-Start Control  Electric power steering  Engine  High coolant temperature  Inappropriate pedal operation Low engine oil pressure  Low fuel level	428429428428428432433
Vanity lights	Charging system  Drive-Start Control  Electric power steering  Engine  High coolant temperature  Inappropriate pedal operation Low engine oil pressure  Low fuel level  LTA indicator	428429428428428432436436
Vanity lights	Charging system  Drive-Start Control  Electric power steering  Engine  High coolant temperature  Inappropriate pedal operation  Low engine oil pressure  Low fuel level  LTA indicator  Malfunction indicator lamp	428429429428428428430430430
Vanity lights	Charging system Drive-Start Control Electric power steering Engine High coolant temperature Inappropriate pedal operation Low engine oil pressure Low fuel level LTA indicator Malfunction indicator lamp Parking brake indicator	428429429428432436436436436
Vanity lights	Charging system Drive-Start Control Electric power steering Engine High coolant temperature Inappropriate pedal operation Low engine oil pressure Low fuel level LTA indicator Malfunction indicator lamp Parking brake indicator PCS warning light	428429428432432433433
Vanity lights	Charging system  Drive-Start Control  Electric power steering  Engine  High coolant temperature  Inappropriate pedal operation  Low engine oil pressure  Low fuel level  LTA indicator  Malfunction indicator lamp  Parking brake indicator  PCS warning light  PKSB (Parking Support Brake	428429428432432433433433

RCTA OFF indicator	432
Seat belt reminder light	434
Slip indicator	432
SRS	429
Tire pressure	433
Toyota parking assist-sensor OF	F
indicator	431
Warning messages	436
Washer	
Checking	381
Low washer fluid warning messa	age
381,	436
Preparing and checking before v	vin-
ter	324
Switch222,	225
Washing and waxing	
Wheels	391
Replacing wheels	391
Window glasses	
Power windows	
Window lock switch	173
Windows	
Power windows	
Rear window defogger	
Washer222,	
Windshield defogger	
Windshield Defroster	
Windshield wiper de-icer	336
Windshield wipers	
Intermittent windshield wipers	
Position222,	
Rain-sensing windshield wipers.	
Replacing the wiper insert	
Winter driving tips	
Wiper insert	
Wireless charger	
Wireless remote control	
Battery-saving function	
Locking/Unlocking	
Replacing the battery	403

For vehicles with navigation system or multimedia system, refer to "Navigation and multimedia system Owner's manual" or "Multimedia Owner's Manual" for information regarding the equipment listed below.

- Navigation system
- · Audio system
- Rear view monitor system
- Toyota parking assist monitor
- Panoramic view monitor

Toyota Motor Europe NV/SA, Avenue du Bourget 60-1140 Brussels, Belgium www.toyota-europe.com Toyota (GB) PLC Great Burgh, Burgh Heath, Epsom, Surrey, KT18 5UX, UK

#### **Certifications**

#### Immobilizer system

Hereby, TOKAI RIKA CO., LTD. declares that the radio equipment type RI-57BTY is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: <a href="http://www.tokai-rika.co.jp/pc">http://www.tokai-rika.co.jp/pc</a>

Frequency band: 119 - 135 kHz

Maximum radio-frequency power: 55dBµA/m@10m

TOKAI RIKA CO., LTD. vakuuttaa, että radiolaitetyyppi RI-57BTY on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:

http://www.tokai-rika.co.jp/pc

Radiotaajuus: 119 - 135 kHz

suurin mahdollinen lähetysteho: 55dBµA/m@10m

Hierbij verklaar ik, TOKAI RIKA CO., LTD., dat het type radioapparatuur RI-57BTY conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:

http://www.tokai-rika.co.jp/pc

Frequentieband: 119 - 135 kHz

Maximaal radiofrequentievermogen: 55dBµA/m@10m

Le soussigné, TOKAI RIKA CO., LTD., déclare que l'équipement radioélectrique du type RI-57BTY est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: http://www.tokai-rika.co.jp/pc

Bande de fréquences: 119 - 135 kHz

Puissance de radiofréquence maximale: 55dBµA/m@10m

Härmed försäkrar TOKAI RIKA CO., LTD. att denna typ av radioutrustning RI-57BTY överensstämmer med direktiv 2014/53/EU.

Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: <a href="http://www.tokai-rika.co.jp/pc">http://www.tokai-rika.co.jp/pc</a>

Frekvensband: 119 - 135 kHz

Maximal radiofrekvenseffekt: 55dBµA/m@10m

Hermed erklærer TOKAI RIKA CO., LTD., at radioudstyrstypen RI-57BTY er i overensstemmelse med direktiv 2014/53/EU.

EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: http://www.tokai-rika.co.jp/pc

Frekvensbånd: 119 - 135 kHz

Maksimal radiofrekvenseffekt: 55dBµA/m@10m

Hiermit erklärt TOKAI RIKA CO., LTD., dass der Funkanlagentyp RI-57BTY der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

http://www.tokai-rika.co.jp/pc

Frequenzband: 119 - 135 kHz

Abgestrahlte maximale Sendeleistung: 55dBµA/m@10m

Με την παρούσα ο/η ΤΟΚΑΙ RIKA CO., LTD., δηλώνει ότι ο ραδιοεξοπλισμός RI-57BTY πληροί την οδηγία 2014/53/ΕΕ.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:

http://www.tokai-rika.co.jp/pc

Ζώνη συχνοτήτων: 119 - 135 kHz

Μέγιστη ισχύς ραδιοσυχνότητας: 55dBμA/m@10m

II fabbricante, TOKAI RIKA CO., LTD., dichiara che il tipo di apparecchiatura radio RI-57BTY è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:

http://www.tokai-rika.co.jp/pc

Banda di frequenza: 119 - 135 kHz

Potenza massima radiofrequenza: 55dBµA/m@10m

Por la presente, TOKAI RIKA CO., LTD. declara que el tipo de equipo radioeléctrico RI-57BTY es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:

http://www.tokai-rika.co.jp/pc

Banda de frecuencia: 119 - 135 kHz

Potencia máxima de radiofrecuencia: 55dBµA/m@10m

O(a) abaixo assinado(a) TOKAI RIKA CO., LTD. declara que o presente tipo de equipamento de rádio RI-57BTY está em conformidade com a Diretiva 2014/53/UE.

O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: http://www.tokai-rika.co.jp/pc

Banda de frequência: 119 - 135 kHz

Potência máxima de radiofrequências: 55dBµA/m@10m

B'dan, TOKAI RIKA CO., LTD., niddikjara li dan it-tip ta' tagħmir tar-radju RI-57BTY huwa konformi mad-Direttiva 2014/53/UE.

It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: <a href="http://www.tokai-rika.co.jp/pc">http://www.tokai-rika.co.jp/pc</a>

Tíðnisvið: 119 - 135 kHz

Hámarks útvarpsbylgjutíðni: 55dBµA/m@10m

Käesolevaga deklareerib TOKAI RIKA CO., LTD., et käesolev raadioseadme tüüp RI-57BTY vastab direktiivi 2014/53/EL nõuetele.

ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:

http://www.tokai-rika.co.jp/pc

Sagedusriba: 119 - 135 kHz

Maksimaalne saatevõimsus: 55dBµA/m@10m

TOKAI RIKA CO., LTD. igazolja, hogy a RI-57BTY típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:

http://www.tokai-rika.co.jp/pc

Frekvenciasáv: 119 - 135 kHz

Maximális jelerősség: 55dBµA/m@10m

TOKAI RIKA CO., LTD. týmto vyhlasuje, že rádiové zariadenie typu RI-57BTY je v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:

http://www.tokai-rika.co.jp/pc

Frekvenčné pásmo: 119 - 135 kHz

Maximálny rádiofrekvenčný výkon: 55dBµA/m@10m

Tímto TOKAI RIKA CO., LTD. prohlašuje, že typ rádiového zařízení RI-57BTY je v souladu se směrnicí 2014/53/EU.

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:

http://www.tokai-rika.co.jp/pc

Kmitočtové pásmo: 119 - 135 kHz

Maximální radiofrekvenční výkon: 55dBµA/m@10m

TOKAI RIKA CO., LTD. potrjuje, da je tip radijske opreme RI-57BTY skladen z Direktivo 2014/53/EU.

Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:

http://www.tokai-rika.co.jp/pc

Frekvenčni pas: 119 - 135 kHz

Največja moč radijske frekvence: 55dBµA/m@10m

Aš, TOKAI RIKA CO., LTD., patvirtinu, kad radijo įrenginių tipas RI-57BTY atitinka Direktyvą 2014/53/ES.

Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:

http://www.tokai-rika.co.jp/pc

Dažnių juosta: 119 - 135 kHz

Didžiausia radijo dažnių galia: 55dBµA/m@10m

Ar šo TOKAI RIKA CO., LTD. deklarē, ka radioiekārta RI-57BTY atbilst Direktīvai 2014/53/ES.

Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:

http://www.tokai-rika.co.jp/pc

Frekvenču josla: 119 - 135 kHz

Maksimālā radiofrekvenču jauda: 55dBµA/m@10m

TOKAI RIKA CO., LTD. niniejszym oświadcza, że typ urządzenia radiowego RI-57BTY jest zgodny z dyrektywą 2014/53/UE.

Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: <a href="http://www.tokai-rika.co.jp/pc">http://www.tokai-rika.co.jp/pc</a>

Zakres częstotliwości: 119 - 135 kHz

Maksymalna moc częstotliwości radiowej: 55dBµA/m@10m

TOKAI RIKA CO., LTD. lýsir því hér með yfir að fjarskiptatækið af gerð RI-57BTY er í samræmi við tilskipun 2014/53/EU.

Öll ESB-samræmisyfirlýsingin er tiltæk á eftirfarandi vefslóð: http://www.tokai-rika.co.jp/pc

Tíðnisvið: 119 - 135 kHz

Hámarks útvarpsbylgjutíðni: 55dBµA/m@10m

TOKAI RIKA CO., LTD. erklærer herved at radioutstyrtypen RI-57BTY er i samsvar med direktivet 2014/53/EU.

Hele teksten av EU-samsvarserklæringen kan leses på det følgende nettstedet:

http://www.tokai-rika.co.jp/pc

Frekvensbånd: 119 - 135 kHz

Maksimal radiofrekvenseffekt: 55dBµA/m@10m

С настоящото TOKAI RIKA CO., LTD. декларира, че този тип радиосъоръжение RI-57BTY е в съответствие с Директива 2014/53/EC.

Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: <a href="http://www.tokai-rika.co.jp/pc">http://www.tokai-rika.co.jp/pc</a>

Радиочестотна лента: 119 - 135 kHz

Максимална радиочестотна мощност: 55dBµA/m@10m

Prin prezenta, TOKAI RIKA CO., LTD. declară că tipul de echipamente radio RI-57BTY este în conformitate cu Directiva 2014/53/UE.

Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: <a href="http://www.tokai-rika.co.jp/pc">http://www.tokai-rika.co.jp/pc</a>

Banda de frecvență: 119 - 135 kHz

Puterea maximă de radiofrecvență: 55dBµA/m@10m

Ovime TOKAI RIKA CO., LTD. potvrđuje da je radio-oprema tipa RI-57BTY u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na slijedećoj internet adresi:

http://www.tokai-rika.co.jp/pc

Frekvencijski opseg: 119 - 135 kHz

Maksimalna radio-frekvencijska snaga: 55dBµA/m@10m

Me anë të këtij dokumenti, TOKAI RIKA CO., LTD. deklaron se tipi i radiopajisjes RI-57BTY është në përputhje me Direktivën 2014/53/EU.

Teksti i plotë i deklaratës së konformitetit të Bashkimit Evropian është i disponueshëm në adresën e mëposhtme të internetit: <a href="http://www.tokai-rika.co.jp/pc">http://www.tokai-rika.co.jp/pc</a>

Brezi i frekuencës: 119 - 135 kHz

Fuqia maksimale e radiofrekuencës: 55dBµA/m@10m

TOKAI RIKA CO., LTD. ovime izjavljuje da je radijska oprema tipa RI-57BTY u skladu s Direktivom 2014/53/EU.

Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:

http://www.tokai-rika.co.jp/pc

Frekvencijski pojas: 119 - 135 kHz Maksimalna RF snaga: 55dBµA/m@10m Ovim TOKAI RIKA CO., LTD. potvrđuje da je radio-oprema tipa RI-57BTY u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na sledećoj internet adresi:

http://www.tokai-rika.co.jp/pc

Frekventni opseg: 119 - 135 kHz

Maksimalna radio-frekventna snaga: 55dBµA/m@10m

TOKAI RIKA CO., LTD., işbu belgeyle telsiz cihazı türünün RI-57BTY 2014/53/EU nolu Direktif ile uyumlu olduğunu beyan etmektedir.

AB uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşabilirsiniz:

http://www.tokai-rika.co.jp/pc

Frekans bandı: 119 - 135 kHz

Maksimum radyo frekans gücü: 55dBµA/m@10m



Address: 3-260 Toyota, Oguchi-cho, Niwa-gun, Aichi 480-0195, Japan

Hereby, TOYOTA MOTOR CORPORATION declares that the radio equipment type TMIMB-3 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: http://www.tokai-rika.co.jp/pc

Frequency band: 119 - 135 kHz

Maximum radio-frequency power: 55dBµA/m @10m

TOYOTA MOTOR CORPORATION vakuuttaa, että radiolaitetyyppi TMIMB-3 on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:

http://www.tokai-rika.co.jp/pc

Radiotaajuus: 119 - 135 kHz

suurin mahdollinen lähetysteho: 55dBµA/m @10m

Hierbij verklaar ik, TOYOTA MOTOR CORPORATION, dat het type radioapparatuur TMIMB-3 conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:

http://www.tokai-rika.co.jp/pc

Frequentieband: 119 - 135 kHz

Maximaal radiofrequentievermogen: 55dBµA/m @10m

Le soussigné, TOYOTA MOTOR CORPORATION, déclare que l'équipement radioélectrique du type TMIMB-3 est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante: http://www.tokai-rika.co.jp/pc

Bande de fréquences: 119 - 135 kHz

Puissance de radiofréquence maximale: 55dBµA/m @10m

Härmed försäkrar TOYOTA MOTOR CORPORATION att denna typ av radioutrustning TMIMB-3 överensstämmer med direktiv 2014/53/EU.

Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: http://www.tokai-rika.co.jp/pc

Frekvensband: 119 - 135 kHz

Maximal radiofrekvenseffekt: 55dBµA/m @10m

Hermed erklærer TOYOTA MOTOR CORPORATION, at radioudstyrstypen TMIMB-3 er i overensstemmelse med direktiv 2014/53/EU.

EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: http://www.tokai-rika.co.jp/pc

Frekvensbånd: 119 - 135 kHz

Maksimal radiofrekvenseffekt: 55dBµA/m @10m

Hiermit erklärt TOYOTA MOTOR CORPORATION, dass der Funkanlagentyp TMIMB-3 der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

http://www.tokai-rika.co.jp/pc

Frequenzband: 119 - 135 kHz

Abgestrahlte maximale Sendeleistung: 55dBµA/m @10m

Με την παρούσα ο/η ΤΟΥΟΤΑ MOTOR CORPORATION, δηλώνει ότι ο ραδιοεξοπλισμός ΤΜΙΜΒ-3 πληροί την οδηγία 2014/53/ΕΕ.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:

http://www.tokai-rika.co.jp/pc

Ζώνη συχνοτήτων: 119 - 135 kHz

Μέγιστη ισχύς ραδιοσυχνότητας: 55dBμA/m @10m

Il fabbricante, TOYOTA MOTOR CORPORATION, dichiara che il tipo di apparecchiatura radio TMIMB-3 è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:

http://www.tokai-rika.co.jp/pc

Banda di frequenza: 119 - 135 kHz

Potenza massima radiofrequenza: 55dBµA/m @10m

Por la presente, TOYOTA MOTOR CORPORATION declara que el tipo de equipo radioeléctrico TMIMB-3 es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:

http://www.tokai-rika.co.jp/pc

Banda de frecuencia: 119 - 135 kHz

Potencia máxima de radiofrecuencia: 55dBµA/m @10m

O(a) abaixo assinado(a) TOYOTA MOTOR CORPORATION declara

conformidade com a Diretiva 2014/53/UE.

O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:

que o presente tipo de equipamento de rádio TMIMB-3 está em

http://www.tokai-rika.co.jp/pc

Banda de frequência: 119 - 135 kHz

Potência máxima de radiofrequências: 55dBµA/m @10m

B'dan, TOYOTA MOTOR CORPORATION, niddikjara li dan it-tip ta' tagħmir tar-radju TMIMB-3 huwa konformi mad-Direttiva 2014/53/UE.

It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: <a href="http://www.tokai-rika.co.jp/pc">http://www.tokai-rika.co.jp/pc</a>

Tíðnisvið: 119 - 135 kHz

Hámarks útvarpsbylgjutíðni: 55dBµA/m @10m

Käesolevaga deklareerib TOYOTA MOTOR CORPORATION, et käesolev raadioseadme tüüp TMIMB-3 vastab direktiivi 2014/53/EL nõuetele.

ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:

http://www.tokai-rika.co.jp/pc

Sagedusriba: 119 - 135 kHz

Maksimaalne saatevõimsus: 55dBµA/m @10m

TOYOTA MOTOR CORPORATION igazolja, hogy a TMIMB-3 típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő

internetes címen:

http://www.tokai-rika.co.jp/pc

Frekvenciasáv: 119 - 135 kHz

Maximális jelerősség: 55dBµA/m @10m

TOYOTA MOTOR CORPORATION týmto vyhlasuje, že rádiové zariadenie typu TMIMB-3 je v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:

http://www.tokai-rika.co.jp/pc

Frekvenčné pásmo: 119 - 135 kHz

Maximálny rádiofrekvenčný výkon: 55dBµA/m @10m

Tímto TOYOTA MOTOR CORPORATION prohlašuje, že typ rádiového zařízení TMIMB-3 je v souladu se směrnicí 2014/53/EU.

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:

http://www.tokai-rika.co.jp/pc

Kmitočtové pásmo: 119 - 135 kHz

Maximální radiofrekvenční výkon: 55dBµA/m @10m

TOYOTA MOTOR CORPORATION potrjuje, da je tip radijske opreme TMIMB-3 skladen z Direktivo 2014/53/EU.

Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:

http://www.tokai-rika.co.jp/pc

Frekvenčni pas: 119 - 135 kHz

Največja moč radijske frekvence: 55dBµA/m @10m

Aš, TOYOTA MOTOR CORPORATION, patvirtinu, kad radijo įrenginių tipas TMIMB-3 atitinka Direktyvą 2014/53/ES.

Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:

http://www.tokai-rika.co.jp/pc

Dažnių juosta: 119 - 135 kHz

Didžiausia radijo dažnių galia: 55dBµA/m @10m

Ar šo TOYOTA MOTOR CORPORATION deklarē, ka radioiekārta TMIMB-3 atbilst Direktīvai 2014/53/ES.

Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:

http://www.tokai-rika.co.jp/pc

Frekvenču josla: 119 - 135 kHz

Maksimālā radiofrekvenču jauda: 55dBµA/m @10m

TOYOTA MOTOR CORPORATION niniejszym oświadcza, że typ urządzenia radiowego TMIMB-3 jest zgodny z dyrektywą 2014/53/UE.

Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:

http://www.tokai-rika.co.jp/pc

Zakres częstotliwości: 119 - 135 kHz

Maksymalna moc częstotliwości radiowej: 55dBµA/m @10m

TOYOTA MOTOR CORPORATION lýsir því hér með yfir að fjarskiptatækið af gerð TMIMB-3 er í samræmi við tilskipun 2014/53/EU.

Öll ESB-samræmisyfirlýsingin er tiltæk á eftirfarandi vefslóð: http://www.tokai-rika.co.jp/pc

Tíðnisvið: 119 - 135 kHz

Hámarks útvarpsbylgjutíðni: 55dBµA/m @10m

TOYOTA MOTOR CORPORATION erklærer herved at radioutstyrtypen TMIMB-3 er i samsvar med direktivet 2014/53/EU.

Hele teksten av EU-samsvarserklæringen kan leses på det følgende nettstedet:

http://www.tokai-rika.co.jp/pc

Frekvensbånd: 119 - 135 kHz

Maksimal radiofrekvenseffekt: 55dBµA/m @10m

С настоящото TOYOTA MOTOR CORPORATION декларира, че този тип радиосъоръжение TMIMB-3 е в съответствие с Директива 2014/53/EC.

Цялостният текст на EC декларацията за съответствие може да се намери на следния интернет адрес:

http://www.tokai-rika.co.jp/pc

Радиочестотна лента: 119 - 135 kHz

Максимална радиочестотна мощност: 55dBµA/m @10m

Prin prezenta, TOYOTA MOTOR CORPORATION declară că tipul de echipamente radio TMIMB-3 este în conformitate cu Directiva 2014/53/UE.

Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: <a href="http://www.tokai-rika.co.jp/pc">http://www.tokai-rika.co.jp/pc</a>

Banda de frecvență: 119 - 135 kHz

Puterea maximă de radiofrecvență: 55dBµA/m @10m

Ovime TOYOTA MOTOR CORPORATION potvrđuje da je radio-oprema tipa TMIMB-3 u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na slijedećoj internet adresi:

http://www.tokai-rika.co.jp/pc

Frekvencijski opseg: 119 - 135 kHz

Maksimalna radio-frekvencijska snaga: 55dBµA/m @10m

Me anë të këtij dokumenti, TOYOTA MOTOR CORPORATION deklaron se tipi i radiopajisjes TMIMB-3 është në përputhje me Direktivën 2014/53/EU.

Teksti i plotë i deklaratës së konformitetit të Bashkimit Evropian është i disponueshëm në adresën e mëposhtme të internetit: http://www.tokai-rika.co.jp/pc

Brezi i frekuencës: 119 - 135 kHz

Fuqia maksimale e radiofrekuencës: 55dBµA/m @10m

TOYOTA MOTOR CORPORATION ovime izjavljuje da je radijska oprema tipa TMIMB-3 u skladu s Direktivom 2014/53/EU.

Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:

http://www.tokai-rika.co.jp/pc

Frekvencijski pojas: 119 - 135 kHz Maksimalna RF snaga: 55dBµA/m @10m Ovim TOYOTA MOTOR CORPORATION potvrđuje da je radio-oprema tipa TMIMB-3 u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na sledećoj internet adresi:

http://www.tokai-rika.co.jp/pc

Frekventni opseg: 119 - 135 kHz

Maksimalna radio-frekventna snaga: 55dBµA/m @10m

TOYOTA MOTOR CORPORATION, işbu belgeyle telsiz cihazı türünün TMIMB-3 2014/53/EU nolu Direktif ile uyumlu olduğunu beyan etmektedir.

AB uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşabilirsiniz:

http://www.tokai-rika.co.jp/pc

Frekans bandı: 119 - 135 kHz

Maksimum radyo frekans gücü: 55dBµA/m @10m

CE

Address: 1, Toyota-cho, Toyota, Aichi, 471-8572, Japan

#### ▶ For vehicles sold in Ukraine

Справжнім ТОКАІ RIKA CO., LTD. заявляє, що тип радіообладнання RI-57BTY відповідає Технічному регламенту радіообладнання;

КАБІНЕТ МІНІСТРІВ УКРАЇНИ ПОСТАНОВА №.355

Повний текст декларації про відповідність доступний на веб-сайті за такою адресою:

http://www.tokai-rika.co.jp/pc

Діапазон частот : 119 - 135 kHz Максимальна потужність радіочастотного випромінювання : 55dBµA/m @10m



Адреса: 3-260 Toyota, Oguchi-cho, Niwa-gun, Aichi 480-0195, Japan

Справжнім TOYOTA MOTOR CORPORATION заявляє, що тип радіообладнання TMIMB-3 відповідає Технічному регламенту радіообладнання;

КАБІНЕТ МІНІСТРІВ УКРАЇНИ ПОСТАНОВА №.355

Повний текст декларації про відповідність доступний на веб-сайті за такою адресою:

http://www.tokai-rika.co.jp/pc

Діапазон частот : 119 - 135 kHz Максимальна потужність радіочастотного випромінювання : 55dBµA/m @10m



Адреса: 1, Toyota-cho, Toyota, Aichi-ken, 471-8572, Japan

## ▶ For vehicles sold in Serbia



## Smart entry & start system

Hereby, TOYOTA MOTOR CORPORATION declares that the radio equipment type TMLF15-1 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: <a href="http://www.tokai-rika.co.jp/pc">http://www.tokai-rika.co.jp/pc</a>

Frequency band: 119 - 135 kHz

Maximum radio-frequency power: 55dBµA/m @10m

TOYOTA MOTOR CORPORATION vakuuttaa, että radiolaitetyyppi TMLF15-1 on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:

http://www.tokai-rika.co.jp/pc

Radiotaajuus: 119 - 135 kHz

suurin mahdollinen lähetysteho: 55dBµA/m @10m

Hierbij verklaar ik, TOYOTA MOTOR CORPORATION, dat het type radioapparatuur TMLF15-1 conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:

http://www.tokai-rika.co.jp/pc

Frequentieband: 119 - 135 kHz

Maximaal radiofrequentievermogen: 55dBµA/m @10m

Le soussigné, TOYOTA MOTOR CORPORATION, déclare que l'équipement radioélectrique du type TMLF15-1 est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:

http://www.tokai-rika.co.jp/pc

Bande de fréquences: 119 - 135 kHz

Puissance de radiofréquence maximale: 55dBµA/m @10m

Härmed försäkrar TOYOTA MOTOR CORPORATION att denna typ av radioutrustning TMLF15-1 överensstämmer med direktiv 2014/53/EU.

Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: <a href="http://www.tokai-rika.co.jp/pc">http://www.tokai-rika.co.jp/pc</a>

Frekvensband: 119 - 135 kHz

Maximal radiofrekvenseffekt: 55dBµA/m @10m

Hermed erklærer TOYOTA MOTOR CORPORATION, at radioudstyrstypen TMLF15-1 er i overensstemmelse med direktiv 2014/53/EU.

EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: http://www.tokai-rika.co.jp/pc

Frekvensbånd: 119 - 135 kHz

Maksimal radiofrekvenseffekt: 55dBµA/m @10m

Hiermit erklärt TOYOTA MOTOR CORPORATION, dass der Funkanlagentyp TMLF15-1 der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

http://www.tokai-rika.co.jp/pc

Frequenzband: 119 - 135 kHz

Abgestrahlte maximale Sendeleistung: 55dBµA/m @10m

Με την παρούσα ο/η ΤΟΥΟΤΑ ΜΟΤΟR CORPORATION, δηλώνει ότι ο ραδιοεξοπλισμός TMLF15-1 πληροί την οδηγία 2014/53/ΕΕ.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:

http://www.tokai-rika.co.jp/pc

Ζώνη συχνοτήτων: 119 - 135 kHz

Μέγιστη ισχύς ραδιοσυχνότητας: 55dBμA/m @10m

Il fabbricante, TOYOTA MOTOR CORPORATION, dichiara che il tipo di apparecchiatura radio TMLF15-1 è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: <a href="http://www.tokai-rika.co.jp/pc">http://www.tokai-rika.co.jp/pc</a>

Banda di freguenza: 119 - 135 kHz

Potenza massima radiofrequenza: 55dBµA/m @10m

Por la presente, TOYOTA MOTOR CORPORATION declara que el tipo de equipo radioeléctrico TMLF15-1 es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:

http://www.tokai-rika.co.jp/pc

Banda de frecuencia: 119 - 135 kHz

Potencia máxima de radiofrecuencia: 55dBµA/m @10m

O(a) abaixo assinado(a) TOYOTA MOTOR CORPORATION declara que o presente tipo de equipamento de rádio TMLF15-1 está em conformidade com a Diretiva 2014/53/UE.

O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: http://www.tokai-rika.co.jp/pc

Banda de frequência: 119 - 135 kHz

Potência máxima de radiofrequências: 55dBµA/m @10m

B'dan, TOYOTA MOTOR CORPORATION, niddikjara li dan it-tip ta' tagħmir tar-radju TMLF15-1 huwa konformi mad-Direttiva 2014/53/UE.

It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li gej: http://www.tokai-rika.co.jp/pc

Tíðnisvið: 119 - 135 kHz

Hámarks útvarpsbylgjutíðni: 55dBµA/m @10m

Käesolevaga deklareerib TOYOTA MOTOR CORPORATION, et käesolev raadioseadme tüüp TMLF15-1 vastab direktiivi 2014/53/EL nõuetele.

ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:

http://www.tokai-rika.co.jp/pc

Sagedusriba: 119 - 135 kHz

Maksimaalne saatevõimsus: 55dBµA/m @10m

TOYOTA MOTOR CORPORATION igazolja, hogy a TMLF15-1 típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő

internetes címen:

http://www.tokai-rika.co.jp/pc

Frekvenciasáv: 119 - 135 kHz

Maximális jelerősség: 55dBµA/m @10m

TOYOTA MOTOR CORPORATION týmto vyhlasuje, že rádiové zariadenie typu TMLF15-1 je v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:

http://www.tokai-rika.co.jp/pc

Frekvenčné pásmo: 119 - 135 kHz

Maximálny rádiofrekvenčný výkon: 55dBµA/m @10m

Tímto TOYOTA MOTOR CORPORATION prohlašuje, že typ rádiového zařízení TMLF15-1 je v souladu se směrnicí 2014/53/EU.

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:

http://www.tokai-rika.co.jp/pc

Kmitočtové pásmo: 119 - 135 kHz

Maximální radiofrekvenční výkon: 55dBµA/m @10m

TOYOTA MOTOR CORPORATION potrjuje, da je tip radijske opreme TMLF15-1 skladen z Direktivo 2014/53/EU.

Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:

http://www.tokai-rika.co.jp/pc

Frekvenčni pas: 119 - 135 kHz

Največja moč radijske frekvence: 55dBµA/m @10m

Aš, TOYOTA MOTOR CORPORATION, patvirtinu, kad radijo įrenginių tipas TMLF15-1 atitinka Direktyvą 2014/53/ES.

Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:

http://www.tokai-rika.co.jp/pc

Dažnių juosta: 119 - 135 kHz

Didžiausia radijo dažnių galia: 55dBµA/m @10m

Ar šo TOYOTA MOTOR CORPORATION deklarē, ka radioiekārta TMLF15-1 atbilst Direktīvai 2014/53/ES.

Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:

http://www.tokai-rika.co.jp/pc

Frekvenču josla: 119 - 135 kHz

Maksimālā radiofrekvenču jauda: 55dBµA/m @10m

TOYOTA MOTOR CORPORATION niniejszym oświadcza, że typ urządzenia radiowego TMLF15-1 jest zgodny z dyrektywą 2014/53/UE.

Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:

http://www.tokai-rika.co.jp/pc

Zakres częstotliwości: 119 - 135 kHz

Maksymalna moc częstotliwości radiowej: 55dBµA/m @10m

TOYOTA MOTOR CORPORATION lýsir því hér með yfir að fjarskiptatækið af gerð TMLF15-1 er í samræmi við tilskipun 2014/53/EU.

Öll ESB-samræmisyfirlýsingin er tiltæk á eftirfarandi vefslóð: <a href="http://www.tokai-rika.co.jp/pc">http://www.tokai-rika.co.jp/pc</a>

Tíðnisvið: 119 - 135 kHz

Hámarks útvarpsbylgjutíðni: 55dBµA/m @10m

TOYOTA MOTOR CORPORATION erklærer herved at radioutstyrtypen TMLF15-1 er i samsvar med direktivet 2014/53/EU.

Hele teksten av EU-samsvarserklæringen kan leses på det følgende nettstedet:

http://www.tokai-rika.co.jp/pc

Frekvensbånd: 119 - 135 kHz

Maksimal radiofrekvenseffekt: 55dBµA/m @10m

С настоящото TOYOTA MOTOR CORPORATION декларира, че този тип радиосъоръжение TMLF15-1 е в съответствие с Директива 2014/53/EC.

Цялостният текст на EC декларацията за съответствие може да се намери на следния интернет адрес:

http://www.tokai-rika.co.jp/pc

Радиочестотна лента: 119 - 135 kHz

Максимална радиочестотна мощност: 55dBµA/m @10m

Prin prezenta, TOYOTA MOTOR CORPORATION declară că tipul de echipamente radio TMLF15-1 este în conformitate cu Directiva 2014/53/UE.

Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: <a href="http://www.tokai-rika.co.jp/pc">http://www.tokai-rika.co.jp/pc</a>

Banda de frecvență: 119 - 135 kHz

Puterea maximă de radiofrecvență: 55dBµA/m @10m

Ovime TOYOTA MOTOR CORPORATION potvrđuje da je radio-oprema tipa TMLF15-1 u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na slijedećoj internet adresi:

http://www.tokai-rika.co.jp/pc

Frekvencijski opseg: 119 - 135 kHz

Maksimalna radio-frekvencijska snaga: 55dBµA/m @10m

Me anë të këtij dokumenti, TOYOTA MOTOR CORPORATION deklaron se tipi i radiopajisjes TMLF15-1 është në përputhje me Direktivën 2014/53/EU.

Teksti i plotë i deklaratës së konformitetit të Bashkimit Evropian është i disponueshëm në adresën e mëposhtme të internetit: http://www.tokai-rika.co.jp/pc

Brezi i frekuencës: 119 - 135 kHz

Fuqia maksimale e radiofrekuencës: 55dBµA/m @10m

TOYOTA MOTOR CORPORATION ovime izjavljuje da je radijska oprema tipa TMLF15-1 u skladu s Direktivom 2014/53/EU.

Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:

http://www.tokai-rika.co.jp/pc

Frekvencijski pojas: 119 - 135 kHz

Maksimalna RF snaga: 55dBµA/m @10m

Ovim TOYOTA MOTOR CORPORATION potvrđuje da je radio-oprema tipa TMLF15-1 u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na sledećoj internet adresi:

http://www.tokai-rika.co.jp/pc

Frekventni opseg: 119 - 135 kHz

Maksimalna radio-frekventna snaga: 55dBµA/m @10m

TOYOTA MOTOR CORPORATION, işbu belgeyle telsiz cihazı türünün TMLF15-1 2014/53/EU nolu Direktif ile uyumlu olduğunu beyan etmektedir.

AB uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşabilirsiniz:

http://www.tokai-rika.co.jp/pc

Frekans bandı: 119 - 135 kHz

Maksimum radyo frekans gücü: 55dBµA/m @10m

CE

Address: 1, Toyota-cho, Toyota, Aichi, 471-8572, Japan

## ▶ For vehicles sold in Ukraine

Справжнім TOYOTA MOTOR CORPORATION заявляє, що тип радіообладнання TMLF15-1 відповідає Технічному регламенту радіообладнання;

КАБІНЕТ МІНІСТРІВ УКРАЇНИ ПОСТАНОВА №.355

Повний текст декларації про відповідність доступний на веб-сайті за такою адресою: <a href="http://www.tokai-rika.co.jp/pc">http://www.tokai-rika.co.jp/pc</a>

Діапазон частот : 119 - 135 kHz Максимальна потужність радіочастотного випромінювання : 55dBµA/m @10m



Адреса: 1, Toyota-cho, Toyota, Aichi-ken, 471-8572, Japan

Hereby, TOKAI RIKA CO., LTD. declares that the radio equipment type BG2KV is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD. vakuuttaa, että radiolaitetyyppi BG2KV on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:

Hierbij verklaar ik, TOKAI RIKA CO., LTD., dat het type radioapparatuur BG2KV conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:

http://www.tokai-rika.co.jp/pc

Le soussigné, TOKAI RIKA CO., LTD., déclare que l'équipement radioélectrique du type BG2KV est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:

http://www.tokai-rika.co.jp/pc

Härmed försäkrar TOKAI RIKA CO., LTD. att denna typ av radioutrustning BG2KV överensstämmer med direktiv 2014/53/EU.

Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:

http://www.tokai-rika.co.jp/pc

Hermed erklærer TOKAI RIKA CO., LTD., at radioudstyrstypen BG2KV er i overensstemmelse med direktiv 2014/53/EU.

EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:

http://www.tokai-rika.co.jp/pc

Hiermit erklärt TOKAI RIKA CO., LTD., dass der Funkanlagentyp BG2KV der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

Με την παρούσα ο/η ΤΟΚΑΙ RIKA CO., LTD., δηλώνει ότι ο ραδιοεξοπλισμός BG2KV πληροί την οδηγία 2014/53/ΕΕ.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:

http://www.tokai-rika.co.jp/pc

II fabbricante, TOKAI RIKA CO., LTD., dichiara che il tipo di apparecchiatura radio BG2KV è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:

http://www.tokai-rika.co.jp/pc

Por la presente, TOKAI RIKA CO., LTD. declara que el tipo de equipo radioeléctrico BG2KV es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:

http://www.tokai-rika.co.jp/pc

O(a) abaixo assinado(a) TOKAI RIKA CO., LTD. declara que o presente tipo de equipamento de rádio BG2KV está em conformidade com a Diretiva 2014/53/UE.

O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:

http://www.tokai-rika.co.jp/pc

B'dan, TOKAI RIKA CO., LTD., niddikjara li dan it-tip ta' tagħmir tar-radju BG2KV huwa konformi mad-Direttiva 2014/53/UE.

It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej:

Käesolevaga deklareerib TOKAI RIKA CO., LTD., et käesolev raadioseadme tüüp BG2KV vastab direktiivi 2014/53/EL nõuetele.

ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:

http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD. igazolja, hogy a BG2KV típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:

http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD. týmto vyhlasuje, že rádiové zariadenie typu BG2KV je v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:

http://www.tokai-rika.co.jp/pc

Tímto TOKAI RIKA CO., LTD. prohlašuje, že typ rádiového zařízení BG2KV je v souladu se směrnicí 2014/53/EU.

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:

http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD. potrjuje, da je tip radijske opreme BG2KV skladen z Direktivo 2014/53/EU.

Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:

Aš, TOKAI RIKA CO., LTD., patvirtinu, kad radijo įrenginių tipas BG2KV atitinka Direktyvą 2014/53/ES.

Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:

http://www.tokai-rika.co.jp/pc

Ar šo TOKAI RIKA CO., LTD. deklarē, ka radioiekārta BG2KV atbilst Direktīvai 2014/53/ES.

Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:

http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD. niniejszym oświadcza, że typ urządzenia radiowego BG2KV jest zgodny z dyrektywą 2014/53/UE.

Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:

http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD. lýsir því hér með yfir að fjarskiptatækið af gerð BG2KV er í samræmi við tilskipun 2014/53/EU.

Öll ESB-samræmisyfirlýsingin er tiltæk á eftirfarandi vefslóð: http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD. erklærer herved at radioutstyrtypen BG2KV er i samsvar med direktivet 2014/53/EU.

Hele teksten av EU-samsvarserklæringen kan leses på det følgende nettstedet:

С настоящото TOKAI RIKA CO., LTD. декларира, че този тип радиосъоръжение BG2KV е в съответствие с Директива 2014/53/EC.

Цялостният текст на EC декларацията за съответствие може да се намери на следния интернет адрес:

http://www.tokai-rika.co.jp/pc

Prin prezenta, TOKAI RIKA CO., LTD. declară că tipul de echipamente radio BG2KV este în conformitate cu Directiva 2014/53/UE.

Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:

http://www.tokai-rika.co.jp/pc

Ovime TOKAI RIKA CO., LTD. potvrđuje da je radio-oprema tipa BG2KV u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na slijedećoj internet adresi:

http://www.tokai-rika.co.jp/pc

Me anë të këtij dokumenti, TOKAI RIKA CO., LTD. deklaron se tipi i radiopajisjes BG2KV është në përputhje me Direktivën 2014/53/EU.

Teksti i plotë i deklaratës së konformitetit të Bashkimit Evropian është i disponueshëm në adresën e mëposhtme të internetit: http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD. ovime izjavljuje da je radijska oprema tipa BG2KV u skladu s Direktivom 2014/53/EU.

Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:

Ovim TOKAI RIKA CO., LTD. potvrđuje da je radio-oprema tipa BG2KV u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na sledećoj internet adresi:

http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD., işbu belgeyle telsiz cihazı türünün BG2KV 2014/53/EU nolu Direktif ile uyumlu olduğunu beyan etmektedir.

AB uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşabilirsiniz:

http://www.tokai-rika.co.jp/pc



Address: 3-260 Toyota, Oguchi-cho, Niwa-gun, Aichi 480-0195, Japan

Receiver Category (EN300 220): 2

Hereby, TOKAI RIKA CO., LTD. declares that the radio equipment type BF3US is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD. vakuuttaa, että radiolaitetyyppi BF3US on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:
<a href="http://www.tokai-rika.co.jp/pc">http://www.tokai-rika.co.jp/pc</a>

Hierbij verklaar ik, TOKAI RIKA CO., LTD., dat het type radioapparatuur BF3US conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: http://www.tokai-rika.co.jp/pc

Le soussigné, TOKAI RIKA CO., LTD., déclare que l'équipement radioélectrique du type BF3US est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:

http://www.tokai-rika.co.jp/pc

Härmed försäkrar TOKAI RIKA CO., LTD. att denna typ av radioutrustning BF3US överensstämmer med direktiv 2014/53/EU.

Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:

http://www.tokai-rika.co.jp/pc

Hermed erklærer TOKAI RIKA CO., LTD., at radioudstyrstypen BF3US er i overensstemmelse med direktiv 2014/53/EU.

EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:

Hiermit erklärt TOKAI RIKA CO., LTD., dass der Funkanlagentyp BF3US der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

http://www.tokai-rika.co.jp/pc

Με την παρούσα ο/η ΤΟΚΑΙ RIKA CO., LTD., δηλώνει ότι ο ραδιοεξοπλισμός BF3US πληροί την οδηγία 2014/53/ΕΕ.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:

http://www.tokai-rika.co.jp/pc

Il fabbricante, TOKAI RIKA CO., LTD., dichiara che il tipo di apparecchiatura radio BF3US è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:

http://www.tokai-rika.co.jp/pc

Por la presente, TOKAI RIKA CO., LTD. declara que el tipo de equipo radioeléctrico BF3US es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:

O(a) abaixo assinado(a) TOKAI RIKA CO., LTD. declara que o presente tipo de equipamento de rádio BF3US está em conformidade com a Diretiva 2014/53/UE.

O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:

http://www.tokai-rika.co.jp/pc

B'dan, TOKAI RIKA CO., LTD., niddikjara li dan it-tip ta' tagħmir tar-radju BF3US huwa konformi mad-Direttiva 2014/53/UE.

It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej:

http://www.tokai-rika.co.jp/pc

Käesolevaga deklareerib TOKAI RIKA CO., LTD., et käesolev raadioseadme tüüp BF3US vastab direktiivi 2014/53/EL nõuetele.

ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:

http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD. igazolja, hogy a BF3US típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:

TOKAI RIKA CO., LTD. týmto vyhlasuje, že rádiové zariadenie typu BF3US je v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:

http://www.tokai-rika.co.jp/pc

Tímto TOKAI RIKA CO., LTD. prohlašuje, že typ rádiového zařízení BF3US je v souladu se směrnicí 2014/53/EU.

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:

http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD. potrjuje, da je tip radijske opreme BF3US skladen z Direktivo 2014/53/EU.

Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:

http://www.tokai-rika.co.jp/pc

Aš, TOKAI RIKA CO., LTD., patvirtinu, kad radijo įrenginių tipas BF3US atitinka Direktyvą 2014/53/ES.

Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:

Ar šo TOKAI RIKA CO., LTD. deklarē, ka radioiekārta BF3US atbilst Direktīvai 2014/53/ES.

Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:

http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD. niniejszym oświadcza, że typ urządzenia radiowego BF3US jest zgodny z dyrektywą 2014/53/UE.

Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:

http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD. lýsir því hér með yfir að fjarskiptatækið af gerð BF3US er í samræmi við tilskipun 2014/53/EU.

Öll ESB-samræmisyfirlýsingin er tiltæk á eftirfarandi vefslóð: http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD. erklærer herved at radioutstyrtypen BF3US er i samsvar med direktivet 2014/53/EU.

Hele teksten av EU-samsvarserklæringen kan leses på det følgende nettstedet:

С настоящото TOKAI RIKA CO., LTD. декларира, че този тип радиосъоръжение BF3US е в съответствие с Директива 2014/53/EC.

Цялостният текст на EC декларацията за съответствие може да се намери на следния интернет адрес:

http://www.tokai-rika.co.jp/pc

Prin prezenta, TOKAI RIKA CO., LTD. declară că tipul de echipamente radio BF3US este în conformitate cu Directiva 2014/53/UE.

Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:

http://www.tokai-rika.co.jp/pc

Ovime TOKAI RIKA CO., LTD. potvrđuje da je radio-oprema tipa BF3US u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na slijedećoj internet adresi:

http://www.tokai-rika.co.jp/pc

Me anë të këtij dokumenti, TOKAI RIKA CO., LTD. deklaron se tipi i radiopajisjes BF3US është në përputhje me Direktivën 2014/53/EU.

Teksti i plotë i deklaratës së konformitetit të Bashkimit Evropian është i disponueshëm në adresën e mëposhtme të internetit: <a href="http://www.tokai-rika.co.jp/pc">http://www.tokai-rika.co.jp/pc</a>

TOKAI RIKA CO., LTD. ovime izjavljuje da je radijska oprema tipa BF3US u skladu s Direktivom 2014/53/EU.

Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:

http://www.tokai-rika.co.jp/pc

Ovim TOKAI RIKA CO., LTD. potvrđuje da je radio-oprema tipa BF3US u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na sledećoj internet adresi:

http://www.tokai-rika.co.jp/pc

TOKAI RIKA CO., LTD., işbu belgeyle telsiz cihazı türünün BF3US 2014/53/EU nolu Direktif ile uyumlu olduğunu beyan etmektedir.

AB uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşabilirsiniz:

http://www.tokai-rika.co.jp/pc



Address: 3-260 Toyota, Oguchi-cho, Niwa-gun, Aichi 480-0195, Japan

Receiver Category (EN300 220): 2

## ▶ For vehicles sold in Ukraine

Справжнім ТОКАІ RIKA CO., LTD. заявляє, що тип радіообладнання BG2KV відповідає Технічному регламенту радіообладнання;

КАБІНЕТ МІНІСТРІВ УКРАЇНИ ПОСТАНОВА №.355

Повний текст декларації про відповідність доступний на веб-сайті за такою адресою: <a href="http://www.tokai-rika.co.jp/pc">http://www.tokai-rika.co.jp/pc</a>

Категорія приймача: 2



Адреса: 3-260 Toyota, Oguchi-cho, Niwa-gun, Aichi 480-0195, Japan

Hereby, TOKAI RIKA CO., LTD. declares that the radio equipment type B2T2K2R is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: <a href="http://www.tokai-rika.co.jp/pc">http://www.tokai-rika.co.jp/pc</a>

Frequency band: 433.050 - 434.790 MHz Maximum radio-frequency power: 10mW(ERP)

TOKAI RIKA CO., LTD. vakuuttaa, että radiolaitetyyppi B2T2K2R on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa: http://www.tokai-rika.co.jp/pc

Radiotaajuus: 433.050 - 434.790 MHz suurin mahdollinen lähetysteho: 10mW(ERP)

Hierbij verklaar ik, TOKAI RIKA CO., LTD., dat het type radioapparatuur B2T2K2R conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: <a href="http://www.tokai-rika.co.jp/pc">http://www.tokai-rika.co.jp/pc</a>

Frequentieband: 433.050 - 434.790 MHz

Maximaal radiofrequentievermogen: 10mW(ERP)

Le soussigné, TOKAI RIKA CO., LTD., déclare que l'équipement radioélectrique du type B2T2K2R est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:

http://www.tokai-rika.co.jp/pc

Bande de fréquences: 433.050 - 434.790 MHz Puissance de radiofréquence maximale: 10mW(ERP)

Härmed försäkrar TOKAI RIKA CO., LTD. att denna typ av radioutrustning B2T2K2R överensstämmer med direktiv 2014/53/EU.

Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress: http://www.tokai-rika.co.jp/pc

Frekvensband: 433.050 - 434.790 MHz Maximal radiofrekvenseffekt: 10mW(ERP)

Hermed erklærer TOKAI RIKA CO., LTD., at radioudstyrstypen B2T2K2R er i overensstemmelse med direktiv 2014/53/EU.

EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse: http://www.tokai-rika.co.jp/pc

Frekvensbånd: 433.050 - 434.790 MHz Maksimal radiofrekvenseffekt: 10mW(ERP) Hiermit erklärt TOKAI RIKA CO., LTD., dass der Funkanlagentyp B2T2K2R der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

http://www.tokai-rika.co.jp/pc

Frequenzband: 433.050 - 434.790 MHz

Abgestrahlte maximale Sendeleistung: 10mW(ERP)

Με την παρούσα ο/η ΤΟΚΑΙ RIKA CO., LTD., δηλώνει ότι ο ραδιοεξοπλισμός B2T2K2R πληροί την οδηγία 2014/53/ΕΕ.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:

http://www.tokai-rika.co.jp/pc

Ζώνη συχνοτήτων: 433.050 - 434.790 MHz Μέγιστη ισχύς ραδιοσυχνότητας: 10mW(ERP)

Il fabbricante, TOKAI RIKA CO., LTD., dichiara che il tipo di apparecchiatura radio B2T2K2R è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: http://www.tokai-rika.co.jp/pc

Banda di frequenza: 433.050 - 434.790 MHz Potenza massima radiofrequenza: 10mW(ERP) Por la presente, TOKAI RIKA CO., LTD. declara que el tipo de equipo radioeléctrico B2T2K2R es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: http://www.tokai-rika.co.jp/pc

Banda de frecuencia: 433.050 - 434.790 MHz Potencia máxima de radiofrecuencia: 10mW(ERP)

O(a) abaixo assinado(a) TOKAI RIKA CO., LTD. declara que o presente tipo de equipamento de rádio B2T2K2R está em conformidade com a Diretiva 2014/53/UE.

O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet: <a href="http://www.tokai-rika.co.jp/pc">http://www.tokai-rika.co.jp/pc</a>

Banda de frequência: 433.050 - 434.790 MHz Potência máxima de radiofrequências: 10mW(ERP)

B'dan, TOKAI RIKA CO., LTD., niddikjara li dan it-tip ta' tagħmir tar-radju B2T2K2R huwa konformi mad-Direttiva 2014/53/UE.

It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li ġej: http://www.tokai-rika.co.jp/pc

Tíðnisvið: 433.050 - 434.790 MHz

Hámarks útvarpsbylgjutíðni: 10mW(ERP)

Käesolevaga deklareerib TOKAI RIKA CO., LTD., et käesolev raadioseadme tüüp B2T2K2R vastab direktiivi 2014/53/EL nõuetele.

ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:

http://www.tokai-rika.co.jp/pc

Sagedusriba: 433.050 - 434.790 MHz Maksimaalne saatevõimsus: 10mW(ERP)

TOKAI RIKA CO., LTD. igazolja, hogy a B2T2K2R típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:

http://www.tokai-rika.co.jp/pc

Frekvenciasáv: 433.050 - 434.790 MHz Maximális jelerősség: 10mW(ERP)

TOKAI RIKA CO., LTD. týmto vyhlasuje, že rádiové zariadenie typu B2T2K2R je v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:

http://www.tokai-rika.co.jp/pc

Frekvenčné pásmo: 433.050 - 434.790 MHz Maximálny rádiofrekvenčný výkon: 10mW(ERP) Tímto TOKAI RIKA CO., LTD. prohlašuje, že typ rádiového zařízení B2T2K2R je v souladu se směrnicí 2014/53/EU.

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:

http://www.tokai-rika.co.jp/pc

Kmitočtové pásmo: 433.050 - 434.790 MHz Maximální radiofrekvenční výkon: 10mW(ERP)

TOKAI RIKA CO., LTD. potrjuje, da je tip radijske opreme B2T2K2R skladen z Direktivo 2014/53/EU.

Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:

http://www.tokai-rika.co.jp/pc

Frekvenčni pas: 433.050 - 434.790 MHz Največja moč radijske frekvence: 10mW(ERP)

Aš, TOKAI RIKA CO., LTD., patvirtinu, kad radijo įrenginių tipas B2T2K2R atitinka Direktyvą 2014/53/ES.

Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:

http://www.tokai-rika.co.jp/pc

Dažnių juosta: 433.050 - 434.790 MHz Didžiausia radijo dažnių galia: 10mW(ERP) Ar šo TOKAI RIKA CO., LTD. deklarē, ka radioiekārta B2T2K2R atbilst Direktīvai 2014/53/ES.

Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:

http://www.tokai-rika.co.jp/pc

Frekvenču josla: 433.050 - 434.790 MHz Maksimālā radiofrekvenču jauda: 10mW(ERP)

TOKAI RIKA CO., LTD. niniejszym oświadcza, że typ urządzenia radiowego B2T2K2R jest zgodny z dyrektywą 2014/53/UE.

Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym: http://www.tokai-rika.co.jp/pc

Zakres częstotliwości: 433.050 - 434.790 MHz Maksymalna moc częstotliwości radiowej: 10mW(ERP)

TOKAI RIKA CO., LTD. lýsir því hér með yfir að fjarskiptatækið af gerð B2T2K2R er í samræmi við tilskipun 2014/53/EU.

Öll ESB-samræmisyfirlýsingin er tiltæk á eftirfarandi vefslóð: http://www.tokai-rika.co.jp/pc

Tíðnisvið: 433.050 - 434.790 MHz Hámarks útvarpsbylgjutíðni: 10mW(ERP) TOKAI RIKA CO., LTD. erklærer herved at radioutstyrtypen B2T2K2R er i samsvar med direktivet 2014/53/EU.

Hele teksten av EU-samsvarserklæringen kan leses på det følgende nettstedet:

http://www.tokai-rika.co.jp/pc

Frekvensbånd: 433.050 - 434.790 MHz Maksimal radiofrekvenseffekt: 10mW(ERP)

С настоящото TOKAI RIKA CO., LTD. декларира, че този тип радиосъоръжение B2T2K2R е в съответствие с Директива 2014/53/EC.

Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес: <a href="http://www.tokai-rika.co.jp/pc">http://www.tokai-rika.co.jp/pc</a>

Радиочестотна лента: 433.050 - 434.790 MHz Максимална радиочестотна мощност: 10mW(ERP)

Prin prezenta, TOKAI RIKA CO., LTD. declară că tipul de echipamente radio B2T2K2R este în conformitate cu Directiva 2014/53/UE.

Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet: http://www.tokai-rika.co.jp/pc

Banda de frecvență: 433.050 - 434.790 MHz Puterea maximă de radiofrecvență: 10mW(ERP) Ovime TOKAI RIKA CO., LTD. potvrđuje da je radio-oprema tipa B2T2K2R u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na slijedećoj internet adresi:

http://www.tokai-rika.co.jp/pc

Frekvencijski opseg: 433.050 - 434.790 MHz

Maksimalna radio-frekvencijska snaga: 10mW(ERP)

Me anë të këtij dokumenti, TOKAI RIKA CO., LTD. deklaron se tipi i radiopajisjes B2T2K2R është në përputhje me Direktivën 2014/53/EU.

Teksti i plotë i deklaratës së konformitetit të Bashkimit Evropian është i disponueshëm në adresën e mëposhtme të internetit: <a href="http://www.tokai-rika.co.jp/pc">http://www.tokai-rika.co.jp/pc</a>

Brezi i frekuencës: 433.050 - 434.790 MHz Fuqia maksimale e radiofrekuencës: 10mW(ERP)

TOKAI RIKA CO., LTD. ovime izjavljuje da je radijska oprema tipa B2T2K2R u skladu s Direktivom 2014/53/EU.

Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:

http://www.tokai-rika.co.jp/pc

Frekvencijski pojas: 433.050 - 434.790 MHz

Maksimalna RF snaga: 10mW(ERP)

Ovim TOKAI RIKA CO., LTD. potvrđuje da je radio-oprema tipa B2T2K2R u skladu sa Direktivom 2014/53/EU.

Potpuni tekst EU deklaracije o usaglašenosti dostupan je na sledećoj internet adresi:

http://www.tokai-rika.co.jp/pc

Frekventni opseg: 433.050 - 434.790 MHz

Maksimalna radio-frekventna snaga: 10mW(ERP)

TOKAI RIKA CO., LTD., işbu belgeyle telsiz cihazı türünün B2T2K2R 2014/53/EU nolu Direktif ile uyumlu olduğunu beyan etmektedir.

AB uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşabilirsiniz:

http://www.tokai-rika.co.jp/pc

Frekans bandı: 433.050 - 434.790 MHz Maksimum radyo frekans gücü: 10mW(ERP)



Address: 3-260 Toyota, Oguchi-cho, Niwa-gun, Aichi 480-0195, Japan

⚠: This mark is a safety/warning mark.

· Do not ingest battery.

#### **Chemical Burn Hazard**

- · This product contains a coin / button cell battery.
- If the coin / button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.
- · Keep new and used batteries away from children.
- $\cdot$  If the battery compartment does not close securely, stop using the product and keep it away from children.
- · If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

#### CAUTION

- Risk of explosion if the battery is replaced by an incorrect type.
- · Replace battery with the same type.

#### CAUTION

- · Risk of explosion or the leakage of flammable liquid or gas.
- $\cdot$  Do not use in /store in /bring into environment of extremely high temperature or extremely low pressure due to the very high altitude.
- · Do not attempt to burn, crush, or cut used battery.
- ∴ Tämä on turva-/varoitusmerkki.
- ·Paristoa ei saa laittaa suuhun.

## Kemiallisen palovamman vaara

- ·Laitteessa on kolikko-/nappiparisto.
- •Elimistöön joutunut kolikko-/nappiparisto voi aiheuttaa vakavia sisäisiä palovammoja vain 2 tunnissa, jolloin seurauksena voi olla hengen menetys.
- Uudet ja käytetyt paristot on pidettävä poissa lasten ulottuvilta.
- •Jos paristolokero ei sulkeudu kunnolla, laitteen käyttö on lopetettava, ja laite on pidettävä poissa lasten ulottuvilta.
- \*Jos on syytä epäillä, että paristo on nielaistu tai muuten päässyt elimistöön, ota välittömästi yhteyttä lääkäriin.

# TÄRKEÄ HUOMAUTUS

- •Käytetyn pariston vaihtaminen tyypiltään väärään voi aiheuttaa räjähdysvaaran.
- ·Vaihda paristo tyypiltään samanlaiseen.

# TÄRKEÄ HUOMAUTUS

- Räjähdysvaara tai syttyvän nesteen tai kaasun vuotovaara.
- •Ei saa käyttää/säilyttää/tuoda lämpötilaltaan tai merenpinnasta mitattuna erittäin korkeaan ympäristöön, jossa ilmanpaine on erittäin alhainen.
- ·Käytettyä paristoa ei saa polttaa, murskata tai halkaista.

- 1 : Dit teken is een veiligheids-/waarschuwingsteken.
- ·Slik de batterij niet in.

#### Risico op chemische brandwonden

- Dit product bevat een munt-/knoopcelbatterij.
- •Als de munt-/knoopcelbatterij wordt ingeslikt, kan het al binnen 2 uur ernstige interne brandwonden veroorzaken en de dood tot gevolg hebben.
- ·Houd nieuwe en gebruikte batterijen buiten bereik van kinderen.
- •Als het batterijcompartiment niet goed sluit, stop dan met het gebruik van het product en houd het buiten bereik van kinderen.
- ·Als u denkt dat batterijen zijn ingeslikt of in enig deel van het lichaam zijn gestopt, roep dan onmiddellijk medische hulp in.

#### **VOORZICHTIG**

- •Er bestaat een risico op ontploffing als de batterij wordt vervangen door een verkeerd type.
- ·Vervang de batterij door een van hetzelfde type.

#### **VOORZICHTIG**

- •Er bestaat een risico op ontploffing of lekkage van brandbare vloeistof of gas.
- •Niet gebruiken in/bewaren in/meenemen naar een omgeving met extreem hoge temperatuur of met extreem lage druk als gevolg van zeer grote hoogte.
- Een gebruikte batterij niet verbranden, platdrukken, of doorsnijden.
- ∴ : Ce pictogramme est une marque de sécurité/avertissement.
- ·Ne pas ingérer la pile.

# Risques de brûlure chimique

- •Ce produit contient une pile bouton.
- •Si la pile bouton est avalée, elle peut causer de graves brûlures internes en seulement 2 heures et peut entraîner la mort.
- •Conservez les piles neuves et usagées hors de portée des enfants.
- •Si le compartiment de la pile ne ferme pas correctement, cessez d'utiliser le produit et conservez-le hors de portée des enfants.
- •Si vous pensez que des piles ont pu être avalées ou placées à l'intérieur d'une partie du corps, consultez immédiatement un médecin.

# AVERTISSEMENT

- •Risque d'explosion si la pile est remplacée par un type incorrect.
- •Remplacez la pile par une pile du même type.

# **AVERTISSEMENT**

- •Risque d'explosion ou de fuite de liquide ou de gaz inflammable.
- •Ne jamais utiliser, stocker, placer dans un environnement à la température extrêmement élevée ou à la pression extrêmement basse en raison d'une très haute altitude.
- •Ne jamais essayer de brûler, écraser ou couper des piles usagées.

- 1: Det här märket är ett säkerhets-/varningsmärke.
- · Förtär inte batteriet.

#### Risk för kemisk brännskada

- •Den här produkten innehåller ett mynt-/knappbatteri.
- •Om mynt-/knappbatteriet sväljs kan det orsaka allvarliga interna brännskador på bara två timmar, vilket kan leda till dödsfall.
- ·Håll nya och använda batterier borta från barn.
- •Om batterifacket inte stängs ordentligt, sluta använda produkten och håll den undan från barn.
- •Om du misstänker att batterier har svalts eller placerats inuti någon del av kroppen, sök omedelbart läkarvård.

#### **VARNING**

- Risk för explosion om batteriet byts ut mot ett av fel typ.
- •Byt ut batteriet mot ett av samma typ.

#### **VARNING**

- •Risk för explosion eller läckage av brandfarliga vätskor och gaser.
- •Använd inte, förvara inte och ta inte in i miljö med extremt hög temperatur eller extremt lågt tryck p.g.a. hög höjd.
- •Försök inte bränna, krossa eller skära använt batteri.
- 1 : Dette mærke er et sikkerheds-/advarselsmærke.
- ·Batteriet må ikke indtages.

## Fare for kemisk forbrænding

- Dette produkt indeholder et mønt-/knapcellebatteri.
- •Hvis mønt-/knapcellebatteriet sluges, kan det medføre alvorlige indre forbrændinger i løbet af kun 2 timer og kan føre til dødsfald.
- •Opbevar nye og brugte batterier utilgængeligt for børn.
- •Hvis batterirummet ikke kan lukkes ordentligt, skal du indstille brugen af produktet og opbevare det utilgængeligt for børn.
- •Hvis du har mistanke om, at der måske er blevet slugt batterier, eller batterier på anden måde er kommet ind i kroppen, skal du øjeblikkeligt søge lægehjælp.

## **FORSIGTIG**

- •Risiko for eksplosion, hvis batteriet udskiftes med en forkert type.
- ·Udskift batteriet med et batteri af samme type.

## **FORSIGTIG**

- •Risiko for eksplosion eller lækage af brændbar væske eller gas.
- ·Må ikke anvendes på/opbevares på/tages med til meget varme steder eller steder med meget lavt tryk som følge af ekstreme højder.
- •Forsøg ikke at brænde, knuse eller adskille brugte batterier.

1: Dieses Symbol ist ein Sicherheits-/Warnsymbol.

·Verschlucken Sie die Batterie nicht.

#### Verätzungsgefahr

- ·Dieses Produkt enthält eine Knopfzellenbatterie.
- Falls die Knopfzellenbatterie verschluckt wird, kann dies innerhalb von nur 2 Stunden schwere innere Verätzungen verursachen und zum Tode führen.
- ·Halten Sie neue und gebrauchte Batterien von Kindern fern.
- •Falls sich das Batteriefach nicht sicher schließen lässt, stellen Sie die Verwendung des Produkts ein und halten Sie es von Kindern fern.
- •Falls Sie glauben, dass Batterien eventuell verschluckt oder in einen Teil des Körpers eingeführt worden sind, begeben Sie sich sofort in ärztliche Behandlung.

#### **ACHTUNG**

- •Es besteht Explosionsgefahr, falls die Batterie durch eine Batterie der falschen Art ersetzt wird.
- · Ersetzen Sie Batterien nur durch die gleiche Art.

#### **ACHTUNG**

- •Es besteht Explosionsgefahr oder die Gefahr eines Austritts von brennbarer Flüssigkeit oder entzündlichem Gas.
- •Das Produkt darf nicht in Umgebungen mit hohen Temperaturen oder extrem niedrigem Luftdruck aufgrund von extremen Höhenlagen verwendet / aufbewahrt / gebracht werden.
- •Versuchen Sie nicht, gebrauchte Batterien zu verbrennen, zu zerstoßen oder zu schneiden.
- Το σήμα αυτό είναι ένα σήμα ασφαλείας/προειδοποίησης.
- Μην καταπίνετε την μπαταρία.

# Κίνδυνος χημικού εγκαύματος

- Αυτό το προϊόν περιέχει μια μπαταρία σχήματος νομίσματος / κουμπιού.
- Αν η μπαταρία σχήματος νομίσματος / κουμπιού καταποθεί, μπορεί να προκαλέσει σοβαρά εσωτερικά εγκαύματα σε μόλις 2 ώρες και μπορεί να επέλθει θάνατος.
- Διατηρείτε τις καινούργιες και τις χρησιμοποιημένες μπαταρίες μακριά από παιδιά.
- Εάν το διαμέρισμα της μπαταρίας δεν κλείνει καλά, σταματήστε τη χρήση του προϊόντος και κρατήστε το μακριά από παιδιά.
- Αν νομίζετε ότι οι μπαταρίες ενδέχεται να έχουν καταποθεί ή τοποθετηθεί μέσα σε οποιοδήποτε μέρος του σώματος, ζητήστε αμέσως ιατρική φροντίδα.

# ΠΡΟΣΟΧΗ

- Υπάρχει κίνδυνος έκρηξης εάν η μπαταρία αντικατασταθεί με μπαταρία εσφαλμένου τύπου.
- Αντικαταστήστε την μπαταρία με μπαταρία του ίδιου τύπου.

#### ΠΡΟΣΟΧΗ

- Υπάρχει κίνδυνος έκρηξης ή διαρροής εύφλεκτων υγρών ή αερίων.
- Μη χρησιμοποιείτε / αποθηκεύετε / μεταφέρετε το προϊόν σε περιβάλλον με εξαιρετικά υψηλή θερμοκρασία ή εξαιρετικά χαμηλή πίεση λόγω πολύ μεγάλου υψομέτρου.
- Μην επιχειρήσετε να κάψετε, να συνθλίψετε ή να κόψετε μια χρησιμοποιημένη μπαταρία.

- 1 : Questo è un simbolo di sicurezza/avvertenza.
- · Non ingerire la batteria.

#### Pericolo di ustioni chimiche

- · Questo prodotto contiene una batteria a bottone/moneta.
- Se la batteria a bottone/moneta viene ingerita, può causare gravi ustioni interne in sole
   2 ore e provocare la morte.
- · Tenere le batterie nuove e usate lontano dalla portata dei bambini.
- Se il vano batteria non si chiude in modo saldo, interrompere l'utilizzo del prodotto e tenerlo lontano dalla portata dei bambini.
- Se si ritiene che le batterie siano state ingerite o inserite in qualsiasi parte del corpo, consultare immediatamente un medico.

#### **ATTENZIONE**

- · Rischio di esplosione in caso di sostituzione della batteria con una di tipo errato.
- · Sostituire la batteria con una dello stesso tipo.

#### ATTENZIONE

- · Rischio di esplosione o di perdita di liquidi o gas infiammabili.
- Non utilizzare / immagazzinare / portare in ambienti con temperatura estremamente alta o pressione estremamente a causa dell'elevata altitudine.
- · Non provare a bruciare, schiacciare o tagliare la batteria usata.
- ⚠: Este símbolo es un símbolo de seguridad/precaución.
- ·No ingerir la batería.

# Peligro de quemadura química

- •Este producto contiene una batería de pila de botón.
- •Si se ingiere la batería de pila de botón, esta puede causar graves quemaduras internas en solo 2 horas y puede provocar la muerte.
- •Mantenga las baterías nuevas y usadas alejadas de los niños.
- •Si el compartimento de la batería no se cierra correctamente, deje de usar el producto y manténgalo alejado de los niños.
- •Si cree que las baterías hayan podido ser ingeridas o introducidas en alguna parte del cuerpo, busque inmediatamente atención médica.

# **ATENCIÓN**

- •Riesgo de explosión si la batería es reemplazada por una del tipo incorrecto.
- •Reemplace la batería por una del mismo tipo.

#### ATENCIÓN

- •Riesgo de explosión o escape de líquido o gas inflamable.
- •No usar / almacenar / introducir en un ambiente de temperatura extremadamente alta o de presión extremadamente baja a causa de la alta altitud.
- •No intente quemar, aplastar, o cortar la batería usada.

- ⚠: Esta marca é uma marca de segurança/aviso.
- ·Não ingerir a pilha.

#### Perigo de Queimadura Química

- •Este produto contém uma pilha de tipo moeda/botão.
- •Se a pilha de tipo moeda/botão for engolida, poderá causar queimaduras internas graves em apenas 2 horas e levar à morte.
- ·Manter as pilhas novas e usadas longe de crianças.
- •Se o compartimento da pilha não se fechar completamente, cessar a utilização do produto e manter fora do alcance das crianças.
- •Caso seja possível que as pilhas tenham sido engolidas ou colocadas dentro de qualquer parte do corpo, procurar cuidados médicos imediatamente.

#### **CUIDADO**

- •Risco de explosão se a pilha for substituída por uma de tipo incorreto.
- ·Substituir a pilha por uma do mesmo tipo.

#### **CUIDADO**

- ·Risco de explosão ou fuga de líquidos ou gases inflamáveis.
- Não utilizar/armazenar/colocar em ambiente de temperatura extremamente alta, ou pressão extremamente baixa devido a altitude muito alta.
- •Não tentar queimar, esmagar ou cortar a pilha usada.

⚠: Din il-marka hija marka ta' sigurtá/twissija.

· Tiblax il-batteriia.

# Periklu ta' Ħruq Kimiku

- •Dan il-prodott fih batterija munita / button cell.
- Jekk tinbela' l-batterija munita / button cell, tista' tikkawża ħruq intern sever f'temp ta' sagħtejn biss u tista' twassal għall-mewt.
- •Żomm il-batteriji ġodda u użati 'l bogħod mit-tfal.
- Jekk il-kompartiment tal-batterija ma jagħlaqx sew, waqqaf l-użu tal-prodott u żommu 'l bogħod mit-tfal.
- Jekk taħseb li l-batteriji setgħu nbelgħu jew tpoġġew ġewwa xi parti tal-ġisem, fittex attenzjoni medika immedjata.

## **ATTENZJONI**

- •Riskju ta' splużjoni jekk il-batterija tiġi ssostitwita b'tip inkorrett.
- · Ibdel il-batterija bl-istess tip.

## **ATTENZJONI**

- •Riskju ta' splużjoni jew tnixxija ta' likwidu jew gass fjammabbli.
- •Tużahx / taħżnux / iġġibux f'ambjent ta' temperatura estremament għolja jew pressjoni estremament baxxa minħabba l-altitudni għolja ħafna.
- •Tippruvax taħraq, tfarrak jew tqatta' l-batteriji użati.

⚠: See märk on ohutus-/hoiatusmärk.

·Ärge patareid alla neelake.

## Keemilise põletuse oht

- •See toode sisaldab mündi/nööbi tüüpi elemendiga patareid.
- •Mündi/nööbi tüüpi elemendiga patarei allaneelamine võib põhjustada raskeid sisemisi põletusi juba 2 tunni jooksul ning võib lõppeda surmaga.
- ·Hoidke uued ja kasutatud patareid lastele kättesaamatus kohas.
- •Kui patareipesa ei sulgu kindlalt, lõpetage toote kasutamine ja hoidke seda lastele kättesaamatus kohas.
- •Kui te arvate, et patareid võivad olla alla neelatud või mistahes kehaossa sattunud, pöörduge viivitamatult arsti poole.

#### **ETTEVAATUST**

- •Plahvatusoht vahetamisel vale tüüpi patareiga.
- ·Vahetage sama tüüpi patareiga.

#### **ETTEVAATUST**

- •Plahvatuse või tuleohtliku vedeliku või gaasi lekke oht.
- •Ärge kasutage, hoidke ega tooge keskkonda eriti kõrge temperatuuriga või eriti madala rõhuga väga suure kõrguse tõttu merepinnast.
- •Ärge üritage põletada, purustada ega lõigata kasutatud patareid.

⚠ : Ez a jelzés biztonsági/figyelmeztető jelzés.

•Ne nyelje le az elemet.

# Vegyi anyag okozta égésisérülés-veszély

- •Ez a termék gombelemet tartalmaz.
- •Amennyiben a gombelemet lenyeli, az mindössze 2 órán belül komoly belső égési sérüléseket okozhat és halálhoz vezethet.
- · Az új és használt elemeket tartsa távol a gyermekektől.
- Amennyiben az elemtartó rekesz nem zárható biztonságosan, függessze fel a termék használatát és tartsa gyermekektől távol.
- •Amennyiben úgy véli, hogy az elemet lenyelték vagy bármely testrészbe helyezték, haladéktalanul forduljon orvoshoz.

## **VIGYÁZAT**

- •Nem megfelelő típusú csereelem használata robbanásveszélyes.
- -Az elemcseréhez azonos típusú elemet használjon.

#### **VIGYÁZAT**

- Robbanásveszély vagy gyúlékony folyadékok vagy gázok szivárgása.
- •Ne használja/ne tárolja/ne helyezze szélsőségesen magas hőmérsékletű környezetbe, és ne tegye ki a nagy magasságokban kialakuló rendkívül alacsony nyomásnak.
- A használt elemet ne kísérelje meg elégetni, összezúzni vagy szétvágni.

- 1 : Toto je bezpečnostná/výstražná značka.
- •Dbajte na to, aby nedošlo k prehltnutiu batérie.

## Nebezpečenstvo poleptania chemikáliou

- Tento výrobok obsahuje mincovú/gombíkovú batériu.
- •Ak dôjde k prehltnutiu mincovej/gombíkovej batérie, už v priebehu 2 hodín môže spôsobiť vážne vnútorné poleptanie a viesť k usmrteniu.
- ·Nové a použité batérie uchovávajte mimo dosahu detí.
- •Ak sa priestor pre batériu nezatvorí bezpečne, prestaňte používať výrobok a uchovávajte ho mimo dosahu detí.
- •Ak si myslíte, že mohlo dôjsť k prehltnutiu batérií alebo ich umiestneniu do ktorejkoľvek časti tela, okamžite vyhľadajte lekársku pomoc.

#### **UPOZORNENIE**

- ·Hrozí nebezpečenstvo výbuchu, ak sa batéria vymení za nesprávny typ.
- Vymeňte batériu za rovnaký typ.

#### **UPOZORNENIE**

- Nebezpečenstvo výbuchu alebo úniku horľavej kvapaliny alebo horľavého plynu.
- Nepoužívajte/neskladujte v prostredí/neprinášajte do prostredia s mimoriadne vysokou teplotou, alebo mimoriadne nízkym tlakom v dôsledku veľmi vysokej nadmorskej výšky.
- •Nepokúšajte sa spáliť, rozdrviť ani rozrezať použitú batériu.
- 1 : Tento symbol je bezpečnostním/výstražným symbolem.
- ·Baterii nepolykejte.

## Nebezpečí chemických popálenin

- Tento výrobek obsahuje mincovou/knoflíkovou baterii.
- •Pokud dojde ke spolknutí mincové/knoflíkové baterie, může za pouhé 2 hodiny způsobit závažné vnitřní popáleniny a v jejich důsledku případně i smrt.
- ·Použité a nové baterie udržujte mimo dosah dětí.
- •Pokud nelze prostor pro baterii pevně uzavřít, přestaňte výrobek používat a udržujte jej mimo dosah dětí.
- •Pokud si myslíte, že mohlo dojít ke spolknutí baterie nebo jejímu vsunutí dovnitř kterékoliv části těla, okamžitě vyhledejte lékařskou pomoc.

# **UPOZORNĚNÍ**

- •Nebezpečí výbuchu v případě výměny baterie za nesprávný druh baterie.
- ∙Proto baterii vždy vyměňte za jinou stejného typu.

# UPOZORNĚNÍ

- ·Nebezpečí výbuchu nebo úniku hořlavé kapaliny či plynu.
- Nepoužívejte/neskladujte/nepřinášejte je do prostředí s nesmírně vysokou teplotou nebo nesmírně nízkým tlakem zapříčiněným vysokou nadmořskou výškou.
- ·Nesnažte se baterii spálit, rozdrtit či rozříznout.

- 1 : Ta oznaka je varnostna/opozorilna oznaka.
- ·Ne zaužijte baterije.

#### Nevarnost kemijske opekline

- ·Ta izdelek vsebuje gumbasto baterijo.
- •Če se gumbasto baterijo zaužije, lahko to povzroči hude notranje opekline v le 2 urah in lahko vodi v smrt.
- •Nove in rabljene baterije hranite izven dosega otrok.
- •Če se predalček za baterijo ne zapira pravilno, prenehajte z uporabo izdelka in ga hranite izven dosega otrok.
- •Če sumite, da je morda nekdo zaužil baterijo ali jo dal v kateri koli del telesa, takoj poiščite zdravniško pomoč.

#### **POZOR**

- •Nevarnost eksplozije, če baterijo zamenjate z baterijo napačne vrste.
- ·Zamenjajte baterijo z istim tipom.

#### **POZOR**

- •Tveganje za eksplozijo ali puščanje vnetljivih tekočin ali plinov.
- •Ne uporabljajte/shranjujte/prinašajte v okolje izredno visoke temperature ali izredno nizkega tlaka zaradi zelo visoke nadmorske višine.
- •Ne poskušajte zažigati, uničiti, ali rezati rabljene baterije.
- ⚠: Šis ženklas yra saugos/jspėjamasis ženklas.
- Neprarvkite baterijos.

# Cheminio nudegimo pavojus

- •Šiame gaminyje yra monetos/sagos formos baterija.
- •Prarijęs monetos/sagos formos bateriją, asmuo per 2 valandas gali patirti sunkius vidinius nudegimus ir netgi mirti.
- •Naujas ir panaudotas baterijas laikykite vaikams nepasiekiamoje vietoje.
- -Jei baterijų skyrelio nepavyksta tvirtai uždaryti, nebenaudokite gaminio ir laikykite jį vaikams nepasiekiamoje vietoje.
- Jei manote, kad baterijos buvo prarytos arba pateko į kūną, nedelsdami kreipkitės į gydytoją.

# **PERSPĖJIMAS**

- -Bateriją pakeitus netinkamo tipo baterija, kyla sprogimo pavojus.
- ·Pakeiskite seną bateriją tik to paties tipo nauja baterija.

# PERSPĖJIMAS

- Sprogimo arba degių skysčių ar dujų nuotėkio pavojus.
- •Negalima naudoti/laikyti/turėti labai aukštos temperatūros arba labai dideliame aukštyje esančioje itin žemo slėgio aplinkoje.
- ·Naudotos baterijos nebandykite deginti, ardyti ar perpjauti.

- 1: Šī zīme ir drošības/brīdinājuma zīme.
- ·Nenorijiet bateriju.

#### Ķīmisku apdegumu briesmas

- ·Šis izstrādājums satur tabletes tipa bateriju.
- •Ja ir norīta tabletes tipa baterija, tā 2 stundu laikā var radīt smagus apdegumus un izraisīt nāvi.
- -Jaunas un lietotas baterijas uzglabājiet bērniem nepieejamā vietā.
- Ja bateriju nodalījumu nevar droši aizvērt, pārtrauciet lietot izstrādājumu un novietojiet to bērniem nepieejamā vietā.
- Ja jūsuprāt baterijas ir norītas vai ievietotas kādā ķermeņa daļā, nekavējoties vērsieties pēc medicīniskās palīdzības.

#### **UZMANĪBU!**

- •Eksplozijas risks, ja baterija tiek nomainīta ar nepareiza tipa bateriju.
- ·Bateriju nomainiet pret tāda paša tipa bateriju.

#### **UZMANĪBU!**

- •Eksplozijas vai uzliesmojoša šķidruma vai gāzes noplūdes risks.
- •Nelietojiet, neuzglabājiet un neievietojiet vidē ar ļoti augstu temperatūru, kā arī vidē, kur ļoti lielā augstuma virs jūras līmeņa dēļ ir ļoti zems spiediens.
- ·Nemēģiniet sadedzināt, sagraut vai sagriezt nolietoto bateriju.

1 : ten symbol oznacza niebezpieczeństwo/ostrzeżenie.

·Nie połykać baterii.

# Ryzyko oparzenia chemicznego

- •Ten produkt zawiera baterię guzikową.
- •Połknięta bateria guzikowa może spowodować poważne oparzenia wewnętrzne w czasie jedynie 2 godzin i prowadzić do śmierci.
- •Przechowywać nowe i zużyte baterie z dala od dzieci.
- Jeśli solidne zamknięcie komory baterii jest niemożliwe, zaprzestać użytkowania produktu i przechowywać go w miejscu niedostępnym dla dzieci.
- •W przypadku podejrzenia, że mogło dojść do połknięcia baterii lub ich umieszczenia w dowolnym otworze ciała, niezwłocznie uzyskać pomoc lekarską.

#### **PRZESTROGA**

- •Istnieje ryzyko wybuchu, jeśli bateria zostanie zastąpiona baterią niewłaściwego typu.
- ·Wymieniać baterię na baterię tego samego typu.

#### **PRZESTROGA**

- •Ryzyko wybuchu lub wycieku łatwopalnego płynu lub gazu.
- Nie używać i nie przechowywać w otoczeniu o skrajnie wysokiej temperaturze lub skrajnie niskim ciśnieniu wynikającym z bardzo dużej wysokości ani nie wnosić do takiego otoczenia.
- ·Nie podejmować prób spalenia, zgniecenia lub przecięcia zużytej baterii.

1: Този знак е знак за безопасност/предупреждение.

•Не поглъщайте батерията.

#### Опасност от химическо изгаряне

- •Този продукт съдържа плоска/бутонна батерия.
- •Ако плоската/бутонна батерия бъде погълната, тя може да причини тежки вътрешни изгаряния само за 2 часа и може да доведе до смърт.
- •Пазете новите и използваните батерии далеч от деца.
- •Ако отделението за батериите не се затваря добре, спрете да използвате продукта и го дръжте далеч от деца.
- •Ако смятате, че батериите може да са били погълнати или поставени в някоя част на тялото, незабавно потърсете медицинска помощ.

#### ВНИМАНИЕ

- •Опасност от експлозия, ако батерията бъде сменена с неправилен тип.
- •Сменете батерията със същия вид.

#### ВНИМАНИЕ

- •Опасност от експлозия или изтичане на запалими течности или газове.
- •Не използвайте/съхранявайте/носете в среда с изключително висока температура или изключително ниско налягане, причинено от голямата височина.
- •Не се опитвайте да изгаряте, смачквате или режете използваната батерия.

: Acest marcaj este un marcaj de securitate/avertizare.

·Nu ingerati bateria.

## Pericol de arsuri chimice

- ·Acest produs conține o baterie tip pastilă.
- •Dacă bateria tip pastilă este înghițită, aceasta poate cauza arsuri interne grave în numai 2 ore și poate duce la deces.
- •Nu lăsați bateriile noi și bateriile uzate la îndemâna copiilor.
- •În cazul în care compartimentul bateriei nu se închide bine, încetați utilizarea produsului și nu îl lăsați la îndemâna copiilor.
- •Dacă bănuiți că este posibil ca bateriile să fi fost înghițite sau introduse în orice parte a corpului, consultați imediat medicul.

## **ATENȚIE**

- •Risc de explozie dacă bateria este înlocuită cu un tip incorect.
- ·Înlocuiți bateria cu una de același tip.

## **ATENȚIE**

- •Risc de explozie sau de scurgeri de lichide sau gaze inflamabile.
- •Nu utilizați/depozitați într-un mediu cu temperatură extrem de înaltă sau cu presiune extrem de joasă din cauza altitudinii foarte mari.
- •Nu încercați să ardeți, să spargeți sau să tăiați bateriile uzate.

- 1 : Ova oznaka je oznaka sigurnosti/upozorenja.
- ·Nemojte gutati bateriju.

# Opasnost od kemijskih opeklina

- Ovaj proizvod sadrži novčić/gumb bateriju.
- •Ako se novčić/gumb baterija proguta, može uzrokovati ozbiljne unutarnje opekline u samo 2 sata i može dovesti do smrti.
- •Držite nove i rabljene baterije izvan dohvata djece.
- •Ako se pretinac za baterije ne zatvara sigurno, prestanite koristiti proizvod i držite ga dalje od djece.
- •Ako smatrate da su baterije možda progutane ili smještene unutar bilo kojeg dijela tijela, zatražite hitnu medicinsku pomoć.

#### **OPREZ**

- •Ako je baterija zamijenjena pogrešnim tipom, postoji rizik od eksplozije.
- •Zamijenite bateriju s baterijama iste vrste.

# **OPREZ**

- ·Rizik od eksplozije ili istjecanja zapaljive tekućine ili plina.
- •Nemojte koristiti u /pohranjivati u /unijeti u prostoru izuzetno visoke temperature ili izuzetno niskog tlaka zbog visoke nadmorske visine.
- •Ne pokušavajte spaliti, lomiti ili rezati istrošenu bateriju.
- 1 : Þetta tákn er öryggis-/aðvörunartákn.
- · Gleypið ekki rafhlöðuna.

# Hætta á efnabruna

- •Þessi vara inniheldur flata rafhlöðu.
- •Ef rafhlaðan er gleypt getur hún valdið alvarlegum innvortis bruna á innan við 2 klukkustundum sem getur leitt til dauða.
- •Geymið nýjar og notaðar rafhlöður þar sem börn ná ekki til.
- •Ef rafhlöðuhólfið lokast ekki örugglega skal hætta notkun vörunnar og geyma hana þar sem börn ná ekki til.
- •Ef þú telur að rafhlöður hafi verið gleyptar eða settar inn í eitthvert líkamsop, skaltu hafa samband við lækni tafarlaust.

## VARÚĐ

- ·Hætta á sprengingu ef rafhlöðunni er skipt út fyrir ranga tegund.
- •Skiptið rafhlöðunni ávallt út fyrir sömu tegund.

#### VARÚĐ

- •Hætta á sprengingu eða leka á eldfimum vökva eða lofttegundum.
- •Má ekki nota/geyma/setja í umhverfi þar sem er afar hár hiti, eða afar lágur þrýstingur vegna mikillar hæðar.
- •Ekki reyna að brenna, kremja eða skera notaða rafhlöðu.

- 1 : Dette merket er et sikkerhets-/advarselsmerke.
- · Ikke svelg batteriet.

#### Kjemisk brannfare

- •Dette produktet inneholder et mynt-/knappecellebatteri.
- •Dersom mynt-/knappecellebatteriet svelges, kan det frembringe alvorlige indre forbrenninger i løpet av kun to timer, og kan være dødelig.
- ·Hold nye og brukte batterier borte fra barn.
- •Lukkes ikke batterirommet sikkert må du stanse å bruke produktet og holde det utenfor barns rekkevidde.
- •Oppsøk medisinsk hjelp umiddelbart hvis du tror at batterier kan være svelget eller plassert inne i kroppen.

#### **FORSIKTIG**

- •Eksplosjonsfare hvis batteriet erstattes med feil type.
- •Bytt batteri med samme type.

#### **FORSIKTIG**

- Fare for eksplosjon eller lekkasje av brannfarlig væske eller gass.
- •Ikke bruk i/oppbevar i/ta med inn i miljø med ekstremt høy temperatur eller ekstremt lavt trykk på grunn av den svært store høyden.
- Ikke forsøk å brenne, knuse eller skjære opp et brukt batteri.
- 1 : Ova oznaka je sigurnosna/upozoravajuća oznaka.
- ·Nemojte gutati bateriju.

# Opasnost od hemijskih opekotina

- •Ovaj proizvod sadrži bateriju veličine kovanice/dugmeta.
- •Ako se baterija veličine kovanice/dugmeta proguta, može izazvati ozbiljne unutrašnje opekotine za samo 2 sata i može dovjesti do smrti.
- •Čuvajte nove i korišćene baterije dalje od djece.
- •Ako se prostor za baterije ne zatvori dobro, prestanite sa korišćenjem proizvoda i držite ga dalje od djece.
- •Ako mislite da su baterije možda progutane ili stavljene u unutrašnjost bilo kog dijela tijela, potražite hitnu medicinsku pomoć.

# **OPREZ**

- •Opasnost od eksplozije ako se baterija zamijeni s baterijom pogrešnog tipa.
- ·Zamijenite bateriju sa baterijom istog tipa.

## **OPREZ**

- ·Opasnost od eksplozije ili curenja zapaljive tečnosti ili gasa.
- •Nemojte koristiti /skladištiti /unositi u okruženje izuzetno visoke temperature ili izuzetno niskog pritiska usljed veoma velike visine.
- •Ne pokušavajte da spalite, lomite ili isječete iskorišćenu bateriju.

- 1: Kjo është shenjë sigurie/paralajmërimi.
- · Mos e gëlltisni baterinë.

#### Rrezik djegieje kimike

- •Ky produkt përmban një bateri të hollë në formë monedhe/kopse.
- •Nëse bateria e hollë në formë monedhe/kopse gëlltitet, ajo mund të shkaktojë djegie të rënda të brendshme brenda vetëm 2 orëve dhe mund të sjellë vdekjen.
- · Mbajini bateritë e reja dhe të përdorura larg nga fëmijët.
- •Nëse foleja e baterisë nuk mbyllet mirë, ndaloni përdorimin e produktit dhe mbajeni larg nga fëmijët.
- •Nëse mendoni se bateritë mund të jenë gëlltitur ose futur brenda ndonjë pjese trupi, kërkoni menjëherë vëmendjen e mjekut.

#### **KUJDES**

- •Rrezik shpërthimi nëse bateria zëvendësohet me një lloj të pasaktë.
- ·Zëvendësojeni baterinë me të njëjtin lloj.

#### **KUJDES**

- •Rrezik shpërthimi nga rrjedhja e lëngut apo gazit të ndezshëm.
- •Mos e përdorni / ruani / sillni në mjedise me temperaturë jashtëzakonisht të lartë ose presion jashtëzakonisht të ulët në lartësi shumë të mëdha.
- •Mos u përpiqni të digjni, shtypni ose prisni baterinë e përdorur.
- ⚠ : Ova oznaka je oznaka za bezbednost/upozorenje.
- ·Nemojte gutati bateriju.

## Opasnost od hemijskih opekotina

- Ovaj proizvod sadrži bateriju u obliku novčića/dugmeta.
- •Ako se baterija u obliku novčića/gumba proguta, može da izazove ozbiljne interne opekotine za samo 2 sada i može da dovede do smrti.
- •Nove i korišćene baterije čuvajte van domašaja dece.
- •Ako se odeljak za bateriju ne zatvori dobro, prestanite da koristite proizvod i čuvajte ga van domašaja dece.
- •Ako mislite da su baterije možda progutane ili stavljene unutar bilo kog dela tela, odmah zatražite medicinsku pomoć.

## **OPREZ**

- •Rizik od eksplozije ako je baterija zamenjena nepravilnim tipom.
- -Zamenite bateriju sa istim tipom.

## **OPREZ**

- •Rizik od eksplozije ili curenja zapaljive tečnosti ili gasa.
- •Ne koristite/ne čuvajte/ne donosite u sredinu izuzetno visoke temperature ili izuzetno niskog pritiska usled vrlo visoke visine.
- •Ne pokušavajte da zapalite, smrvite ili isečete korišćenu bateriju.

- $\triangle$ : Bu işaret bir güvenlik/uyarı işaretidir.
- ·Pili yutmayın.

# Kimyasal Yanma Tehlikesi

- •Bu üründe bir düğme pil bulunmaktadır.
- •Düğme pil yutulursa, sadece 2 saat içinde ağır iç yanıklara neden olabilir ve ölüme yol açabilir.
- ·Yeni ve kullanılmış pilleri çocuklardan uzak tutun.
- •Pil yuvası emniyetli bir şekilde kapanmıyorsa, ürünü kullanmayı bırakın ve çocuklardan uzak tutun.
- •Pillerin yutulduğunu veya vücudun herhangi bir parçasının içine yerleştirildiğini düşünüyorsanız, derhal tıbbi yardım alın.

# **DİKKAT**

- •Pil yanlış tür bir pille değiştirilirse patlama riski vardır.
- ·Pili aynı tür pillerle değiştirin.

#### DİKKAT

- •Patlama ya da yanıcı sıvı veya gaz sızıntısı riski vardır.
- Aşırı derecede yüksek sıcaklıktaki veya çok yüksek rakımdan dolayı aşırı derecede düşük basınca sahip ortamlarda kullanmayın /saklamayın veya bu ortamlara götürmeyin.
- •Kullanılmış pili yakmaya, ezmeye veya kesmeye çalışmayın.

#### ▶ For vehicles sold in Ukraine

Справжнім ТОКАІ RIKA CO., LTD. заявляє, що тип радіообладнання B2T2K2R відповідає Технічному регламенту радіообладнання;

КАБІНЕТ МІНІСТРІВ УКРАЇНИ ПОСТАНОВА №.355

Повний текст декларації про відповідність доступний на веб-сайті за такою адресою:

http://www.tokai-rika.co.jp/pc

Діапазон частот : 433.050 - 434.790 MHz Максимальна потужність радіочастотного випромінювання : 10 mW(ERP)



Адреса: 3-260 Toyota, Oguchi-cho, Niwa-gun, Aichi 480-0195, Japan

Дя позначка являє собою позначку про необхідність дотримання правил безпеки/застереження.

•Не допускайте проковтування батарейки.

# Небезпека хімічного опіку

- · Цей виріб містить батарейку монетного / таблеткового типу.
- •Проковтування батарейки монетного / таблеткового типу може спричинити тяжкі внутрішні опіки всього лише за 2 години і може призвести до смерті.
- •Зберігайте нові та використані батарейки подалі від дітей.
- •Якщо кришка батарейного відсіку надійно не закривається, припиніть користуватися виробом і зберігайте його подалі від дітей.
- •Якщо існує ймовірність проковтування батарейки або її розміщення всередині будь-якої частини тіла, негайно зверніться за медичною допомогою.

# ОБЕРЕЖНО

- •Ризик вибуху в разі заміни на батарейку неналежного типу.
- •Замінюйте батарейку на батарейку такого ж самого типу.

# ОБЕРЕЖНО

- •Ризик вибуху або витоку горючої рідини або газу.
- · Не використовуйте /не зберігайте /не розміщуйте в умовах надзвичайно високої температури або надзвичайно низького тиску через дуже велику висоту над рівнем моря.
- ·Не намагайтеся спалити, розбити або розрізати використану батарейку.
- ▶ For vehicles sold in Serbia



# Wireless remote control

Receiver: Model: 13BDR Model: 23ABF

Transmitter: Model: 12BFY

Operation frequency: 433.58/434.42 MHz Maximum output power(ERP): 0.01 mW

Model: 12BFE

Operation frequency: 433.92 MHz Maximum output power(ERP): 0.03 mW

Manufacturer: DENSO CORPORATION

Address: 1-1, Showa-cho, Kariya-shi, Aichi-ken, 448-8661

Japan

Hereby, DENSO CORPORATION declares that the radio equipment type is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

https://www.denso.com/global/en/contact-us/doc/

DENSO CORPORATION vakuuttaa, että radiolaitetyyppi on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:

https://www.denso.com/global/en/contact-us/doc/

Hierbij verklaar ik, DENSO CORPORATION, dat het type radioapparatuur conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:

https://www.denso.com/global/en/contact-us/doc/

Le soussigné, DENSO CORPORATION, déclare que l'équipement radioélectrique du type est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:

https://www.denso.com/global/en/contact-us/doc/

Härmed försäkrar DENSO CORPORATION att denna typ av radioutrustning överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstämmelse finns

på följande webbadress:

https://www.denso.com/global/en/contact-us/doc/

Hermed erklærer DENSO CORPORATION, at

radioudstyrstypen er i overensstemmelse med direktiv 2014/53/EU.

EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:

https://www.denso.com/global/en/contact-us/doc/

Hiermit erklärt DENSO CORPORATION, dass der

Funkanlagentyp der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

https://www.denso.com/global/en/contact-us/doc/

Με την παρούσα ο/η DENSO CORPORATION, δηλώνει

ότι ο ραδιοεξοπλισμός πληροί την οδηγία 2014/53/ΕΕ.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:

https://www.denso.com/global/en/contact-us/doc/

Il fabbricante, DENSO CORPORATION, dichiara che il tipo di apparecchiatura radio è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:

https://www.denso.com/global/en/contact-us/doc/

Por la presente, DENSO CORPORATION declara que el tipo de equipo radioeléctrico es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:

https://www.denso.com/global/en/contact-us/doc/

O(a) abaixo assinado(a) DENSO CORPORATION declara que o presente tipo de equipamento de rádio está em conformidade com a Diretiva 2014/53/UE.

O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:

https://www.denso.com/global/en/contact-us/doc/

B'dan, DENSO CORPORATION, niddikjara li dan it-tip ta' tagħmir tar-radju huwa konformi mad-Direttiva 2014/53/UE.

It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li gej:

https://www.denso.com/global/en/contact-us/doc/

Käesolevaga deklareerib DENSO CORPORATION, et

käesolev raadioseadme tüüp vastab direktiivi 2014/53/EL nõuetele.

ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:

https://www.denso.com/global/en/contact-us/doc/

DENSO CORPORATION igazolja, hogy a típusú

rádióberendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:

https://www.denso.com/global/en/contact-us/doc/

DENSO CORPORATION týmto vyhlasuje, že rádiové

zariadenie typu je v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:

https://www.denso.com/global/en/contact-us/doc/

Tímto DENSO CORPORATION prohlašuje, že typ rádiového zařízení je v souladu se směrnicí 2014/53/EU.

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:

https://www.denso.com/global/en/contact-us/doc/

DENSO CORPORATION potrjuje, da je tip radijske opreme skladen z Direktivo 2014/53/EU.

Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:

https://www.denso.com/global/en/contact-us/doc/

Aš, DENSO CORPORATION, patvirtinu, kad radijo įrenginių tipas atitinka Direktyvą 2014/53/ES.

Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:

https://www.denso.com/global/en/contact-us/doc/

Ar šo DENSO CORPORATION deklarē, ka radioiekārta atbilst Direktīvai 2014/53/ES.

Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:

https://www.denso.com/global/en/contact-us/doc/

DENSO CORPORATION niniejszym oświadcza, że typ

urządzenia radiowego jest zgodny z dyrektywą 2014/53/UE.

Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:

https://www.denso.com/global/en/contact-us/doc/

Hér með lýsir DENSO CORPORATION yfir því að er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU.

Samræmisyfirlýsing er einnig aðgengileg á eftirfarandi vefslóð: https://www.denso.com/global/en/contact-us/doc/

DENSO CORPORATION erklærer at er i overensstemmelse med direktiv 2014/53/EU.

Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse:

https://www.denso.com/global/en/contact-us/doc/

С настоящото DENSO CORPORATION декларира, че този тип радиосъоръжение е в съответствие с Директива 2014/53/EC.

Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:

https://www.denso.com/global/en/contact-us/doc/

Prin prezenta, DENSO CORPORATION declară că tipul de echipamente radio este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:

https://www.denso.com/global/en/contact-us/doc/

DENSO CORPORATION ovime izjavljuje da je radijska oprema tipa u skladu s Direktivom 2014/53/EU.

Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi:

https://www.denso.com/global/en/contact-us/doc/

Овиме, DENSO CORPORATION изјављује да је радио опрема тип усаглашена са Директивом 2014/53/EU.

Цео текст ЕУ декларације о усаглашености доступам је на следећој интернет адреси:

https://www.denso.com/global/en/contact-us/doc/

Amb aquest document, DENSO CORPORATION declara que el tipus d'equipament radioelèctric es conforme a la Directiva 2014/53/UE.

El text complet de la declaració UE de conformitat està disponible en la següent adreça d'Internet:

https://www.denso.com/global/en/contact-us/doc/

İşbu belge; DENSO CORPORATION telsiz ekipmanı

tipinin 2014/53/AB sayılı Direktif'e uygun olduğunu beyan eder.

AB uygunluk beyanının tam metni aşağıdaki internet adresinde mevcuttur:

https://www.denso.com/global/en/contact-us/doc/

Me anë të kësaj deklaratë, subjekti DENSO CORPORATION deklaron se pajisjet radio është në përputhje me këtë rregull teknik për pajisjet radio dhe fundore të komunikimeve elektronike.

Teksti i plotë i Deklaratës së Konformitetit është i disponueshëm në adresën e mëposhtme të internetit:

https://www.denso.com/global/en/contact-us/doc/



This mark is a safety/warning mark.

Do not ingest battery.

Chemical Burn Hazard

This product contains a coin / button cell battery.

If the coin / button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children.

If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

#### CAUTION

Risk of explosion if the battery is replaced by an incorrect type.

Replace battery with the same type.

#### CAUTION

Risk of explosion or the leakage of flammable liquid or gas.

Do not use in /store in /bring into environment of extremely high temperature or extremely low pressure due to the very high altitude.

Do not attempt to burn, crush, or cut used battery.



Tämä merkki on turvallisuus/varoitusmerkki.

Älä nielaise paristoa.

Syövyttävää!

Tuote sisältää nappipariston.

Jos nappiparisto joutuu nieluun, voi se aiheuttaa vakavia sisäisiä palovammoja kahden tunnin kuluessa ja aiheuttaa kuoleman.

Pidä uudet ja käytetyt paristot poissa lasten ulottuvilta.

Jos paristolokero ei sulkeudu kunnolla, lopeta tuotteen käyttö ja pidä se poissa lasten ulottuvilta.

Hakeudu välittömästi lääkärin hoitoon, jos epäilet, että paristoja on joutunut jonkun nieluun tai muun kehonosan sisään.

#### **VARO**

Vääräntyyppinen paristo voi räjähtää.

Vaihda aina paristo samantyyppiseen.

# VARO

Räjähdyksen tai syttyvien nesteiden tai kaasujen vuodon riski.

Älä käytä/säilytä tuotetta olosuhteissa, jossa se altistuu hyvin korkealle lämpötilalle tai paineelle tai suurten korkeuksien voimakkaalle alipaineelle. Älä yritä polttaa, murskata tai leikata käytettyjä paristoja.



Dit is een veiligheids-/waarschuwingsteken.

Slik de batterij niet in.

Gevaar voor chemische brandwonden

Dit product bevat een knoopcelbatterij.

Bij inslikken kan de knoopcelbatterij binnen slechts 2 uur ernstige inwendige brandwonden veroorzaken, wat de dood tot gevolg kan hebben.

Houd nieuwe en gebruikte batterijen buiten het bereik van kinderen.

Stop met het gebruik van het product als het batterijvak niet goed sluit en houd het product buiten het bereik van kinderen,

Raadpleeg onmiddellijk een arts als u vermoedt dat een batterij is ingeslikt of in het lichaam is gestopt.

#### WAARSCHUWING

Er bestaat explosiegevaar als u de batterij vervangt door de verkeerde soort batterij. Vervang de batterij door dezelfde soort batterij.

#### WAARSCHUWING

Explosiegevaar of gevaar voor lekken van brandbare vloeistof of brandbaar gas.

Niet gebruiken in/bewaren in/brengen naar een omgeving met extreem hoge temperatuur of extreem lage druk door zeer grote hoogte. Verbrand en verpletter de gebruikte batterij niet en snijd deze niet open.



Ce marquage est un marquage de sécurité/d'avertissement.

Ne pas ingérer la pile.

Risque de brûlure chimique

Ce produit contient une pile bouton.

Si la pile bouton est avalée, elle peut provoquer de graves brûlures internes en seulement 2 heures et entraîner la mort.

Gardez les piles neuves et usagées hors de la portée des enfants.

Si le compartiment de pile ne se ferme pas correctement, arrêtez d'utiliser le produit et gardez-le à l'écart des enfants.

Si vous croyez que des piles ont été avalées ou placées dans n'importe quelle partie du corps, consultez immédiatement un médecin.

# MISE EN GARDE

Risque d'explosion si la pile est remplacée par un type incorrect. Remplacez la pile par le même type.

# MISE EN GARDE

Risque d'explosion ou de fuite de liquide ou de gaz inflammable.

Ne pas utiliser / stocker / mettre dans un environnement de température extrêmement élevée ou de pression extrêmement basse en raison de l'altitude très élevée. N'essayez pas de brûler, écraser ou couper la pile usagée.



Denna etikett är en säkerhets-/varningsetikett.

Svälj inte batteriet (eller stoppa det i munnen).

Risk för kemisk brännskada

Denna produkt innehåller ett mynt-/knappbatteri.

Om mynt-/knappbatteriet sväljs ned kan det på bara 2 timmar orsaka allvarliga inre brännskador och kan leda till dödsfall.

Förvara nya och använda batterier utom räckhåll för barn.

Om batterifacket inte kan stängas säkert, sluta använda produkten och håll den borta från barn.

Om du tror att batterier har svalts ner eller kommit in i någon del av kroppen, sök omedelbart medicinsk hjälp.

#### OBSERVERA!

Explosionsrisk föreligger om batteriet ersätts med en felaktig typ. Ersätt batteriet med ett batteri av samma typ.

#### OBSERVERA!

Risk för explosion eller läckage av brandfarlig vätska eller gas.

Använd inte i/förvara inte i/för inte i omedelbar närhet av extremt hög temperatur eller extremt lågt tryck beroende på mycket hög höjd.

Försök inte bränna, krossa eller skära sönder ett använt batteri.



Dette mærke er et sikkerheds-/ advarselsmærke.

Indsæt ikke batteri.

Kemisk forbrændingsfare

Dette produkt indeholder et mønt-/knapcellebatteri.

Hvis mønt-/knapcellebatteriet sluges, kan det forårsage alvorlige indre forbrændinger på kun 2 timer og kan føre til døden.

Hold nye og brugte batterier væk fra børn.

Hvis batterirummet ikke lukker sikkert, skal du holde op med at bruge produktet og holde det væk fra børn.

Hvis du tror, at batterier kan være blevet slugt eller være blevet placeret i nogen del af kroppen, skal du straks søge lægehjælp.

#### **ADVARSEL**

Fare for eksplosion, hvis batteriet udskiftes med en forkert type. Udskift batteri med samme type.

# ADVARSEL

Risiko for eksplosion eller lækage af brandfarlig væske eller gas.

Må ikke anvendes i/opbevares i/indbringes i omgivelser med ekstremt høj temperatur eller ekstremt lavt tryk på grund af den meget høje højde. Forsøg ikke at brænde, knuse eller skære brugt batteri.

 $\Lambda$ 

Dieses Zeichen ist ein Sicherheits-/Warnzeichen.

Nehmen Sie keine Batterien zu sich.

Chemische Verbrennungsgefahr

Dieses Produkt enthält eine Knopfzellenbatterie.

Wird die Knopfzellenbatterie verschluckt, kann sie innerhalb von nur 2 Stunden schwere innere Verbrennungen verursachen und zum Tode führen.

Halten Sie neue und gebrauchte Batterien von Kindern fern.

Wenn das Batteriefach nicht sicher schließt, stellen Sie die Verwendung des Geräts ein und halten Sie es von Kindern fern.

Wenn Sie der Meinung sind, dass Batterien verschluckt oder in irgendeinen Teil des Körpers platziert wurden, suchen Sie sofort einen Arzt auf.

#### WARNUNG

Explosionsgefahr, wenn die Batterie durch einen falschen Typ ersetzt wird. Ersetzen Sie die Batterie durch den gleichen Typ.

#### WARNUNG

Gefahr von Explosion oder Austreten von brennbaren Flüssigkeiten oder Gasen.

Verwenden/lagern/bringen Sie das Gerät nicht in Umgebungen mit extrem hoher Temperatur oder extrem niedrigem Druck aufgrund von sehr großer Höhe. Versuchen Sie nicht, verbrauchte Batterien zu verbrennen, zu zerquetschen oder zu zerschneiden.



Σήμα για την ασφάλεια/προειδοποιητικό σήμα.

Μην καταπίνετε την μπαταρία.

Κίνδυνος χημικού εγκαύματος

Αυτό το προϊόν περιέχει επίπεδη μπαταρία.

Σε περίπτωση κατάποσης της επίπεδης μπαταρίας μπορούν να προκληθούν σοβαρά εσωτερικά εγκαύματα σε διάστημα μόλις 2 ωρών και να επέλθει θάνατος. Φυλάσσετε τις καινούριες και τις χρησιμοποιημένες μπαταρίες μακριά από τα παιδιά.

Εάν η θήκη της μπαταρίας δεν κλείνει καλά, σταματήστε να χρησιμοποιείτε το προϊόν και φυλάξτε το μακριά από τα παιδιά.

Εάν πιστεύετε ότι υπάρχει περίπτωση να έχει γίνει κατάποση μπαταρίας ή εισχώρησή της σε κάποιο μέρος του σώματος, ζητήστε αμέσως ιατρική συμβουλή.

#### ΠΡΟΣΟΧΗ

Υπάρχει κίνδυνος έκρηξης εάν τοποθετηθεί λάθος τύπος μπαταρίας. Αντικαταστήστε την μπαταρία με τον ίδιο τύπο μπαταρίας

#### ΠΡΟΣΟΧΗ

Υπάρχει κίνδυνος έκρηξης ή διαρροής εύφλεκτου υγρού ή αερίου.

Μην χρησιμοποιείτε/αποθηκεύετε/μεταφέρετε την μπαταρία σε περιβάλλον με υπερβολικά υψηλή θερμοκρασία ή υπερβολικά χαμηλή πίεση που οφείλεται σε πολύ υψηλό υψόμετρο. Μην επιχειρήσετε να κάψετε, να συνθλίψετε ή να κόψετε την χρησιμοποιημένη μπαταρία.



Questo simbolo è un simbolo di sicurezza / avvertenza.

Non ingerire la batteria.

Pericolo di ustione chimica

Il prodotto contiene una batteria a cella a moneta / bottone.

Se la batteria a cella a moneta / bottone viene inghiottita può causare delle gravi ustioni interne in sole due ore e provocare il decesso.

Tenere le batterie nuove e quelle usate fuori dalla portata dei bambini.

Se il vano batterie non si chiude in modo sicuro, smettere di usare il prodotto e tenerlo fuori dalla portata dei bambini.

Se si ritiene che delle batterie possano essere state inghiottite o essere state introdotte all'interno di qualsivoglia parte del corpo consultare immediatamente un medico.

#### **ATTENZIONE**

Se la batteria è sostituita con una di tipo scorretto c'è rischio che esploda. Sostituire la batteria con una del medesimo tipo.

Rischio di esplosione o di perdita di liquidi o gas infiammabili.

Non usare / custodire / mettere in ambienti con temperature estremamente alte o una pressione estremamente bassa dovuta a una notevole altitudine. Non cercare di bruciare, frantumare o tagliare delle batterie usate.



Esta marca es una marca de seguridad/advertencia.

No ingiera la pila.

Riesgo de Quemadura Química

Este producto contiene una pila tipo moneda/botón.

Si la pila de moneda/botón se traga, puede provocar quemaduras internas graves en solo 2 horas y puede causar la muerte.

Mantenga las pilas nuevas y las usadas lejos de los niños.

Si el compartimiento de la pila no se cierra de forma segura, deje de usar el producto y manténgalo alejado de los niños.

Si cree que las pilas pueden haberse tragado o colocado dentro de cualquier parte del cuerpo, busque atención médica inmediata.

#### PRECAUCIÓN

Riesgo de explosión si la batería es reemplazada por una de tipo incorrecto. Reemplace la batería con una del mismo tipo.

# **PRECAUCIÓN**

Riesgo de explosión o fuga de líquido o gas inflamables.

No use/almacene/lleve a un entorno de temperatura extremadamente alta o extremadamente baja, debido a la gran altitud.

No intente quemar, aplastar o cortar la batería usada.

Esta marca é uma marca de segurança/alerta.

Não ingerir a pilha.

Perigo de queimaduras químicas

Este produto contém uma pilha de tipo moeda/botão.

Se a pilha de moeda/botão for engolida, pode causar queimaduras internas graves em apenas 2 horas e conduzir à morte.

Mantenha as pilhas novas e usadas longe das crianças.

Se o compartimento da pilha não se fechar de forma segura, pare de usar o produto e mantenha-o afastado das crianças.

Se achar que as pilhas podem ter sido engolidas ou colocadas dentro de qualquer parte do corpo, procure imediatamente um médico.

#### CUIDADO

Risco de explosão se a pilha for substituída por um tipo incorreto. Substitua a pilha pelo mesmo tipo.

#### CUIDADO

Risco de explosão ou de vazamento de líquido ou gás inflamável.

Não use/armazene/coloque num ambiente com temperaturas extremamente altas ou pressões extremamente baixas devido a altitude elevada. Não tente queimar, esmagar ou cortar a pilha usada.



Din il-marka hija marka ta' sigurtà/avviż.

Tiblax il-batterija.

Periklu ta' ħrug kimiku

Dan il-prodott fih batterija ċatta qisha buttuna żgħira.

Jekk din il-batterija ċatta tinbelha, tista' tikkawża ħrug intern sever ftemm sagħtejn u tista' twassal għall-mewt.

Zomm il-batteriji godda u hziena 'l boghod minn fejn jistghu jilhquhom it-tfal. Jekk il-kompartiment tal-batterija ma jistax jinghalaq b'mod sigur, tużax aktar il-prodott u żommu 'l bogħod minn fejn jistgħu jilħquh it-tfal.

Jekk ikollok xi suspett li l-batteriji nbelghu jew gew imdeffsa f'xi parti tal-gisem, fittex għajnuna medika minnufih.

# **ATTENZJONI**

Riskju ta' splužjoni jekk il-batterija jekk il-batterija tinbidel ma' waħda tat-tip skorrett. Il-batterija għandha tinbidel ma' waħda tal-istess tip.

# **ATTENZJONI**

Riskju ta' splużjoni jew ħruġ ta' likwidu jew gass fjammabbli.

Tużax/taħżinx f'ambjent b'temperatura għolja ħafna jew pressjoni estremament baxxa minħabba faltitudni għolja ħafna.

Tipprovax taħraq, tgħaffeġ jew taqta' l-batterija ħażina.



Nee tähis on ohutus-/hoiatustähis.

Ärge neelake patareid alla.

Keemilise põletuse oht

See toode sisaldab kella-/nööppatareid.

Allaneelamisel võib kella-/nööppatarei juba kahe tunniga põhjustada raskeid sisemisi põletusi ning viia surmani.

Hoidke uusi ja kasutatud patareisid lastele kättesaamatus kohas.

Kui patareipesa ei sulgu kindlalt, lõpetage toote kasutamine ja paigutage see lastele kättesaamatusse kohta.

Kui kahtlustate patareide allaneelamist või kehasse sattumist, pöörduge viivitamata arsti poole.

# ETTEVAATUST!

Patarei asendamine vale tüüpi patareiga põhjustab plahvatusohtu. Asendage patarei sama tüüpi patareiga.

#### ETTEVAATUST!

Plahvatuse või tuleohtliku vedeliku või gaasi lekkimise oht.

Ärge kasutage/hoidke toodet keskkonnas ega viige keskkonda, kus on äärmiselt kõrge temperatuur või väga suurest kõrgusest tingitud äärmiselt madal õhurõhk. Ärge üritage kasutatud patareid põletada, purustada ega lõigata.



Ez egy biztonsági/figyelmeztető jelzés.

Ne nyelje le az elemeket.

Vegyi égés veszély

Ez a termék gombelemeket tartalmaz.

Ha lenyeli a gombelemeket, akkor alig 2 órán belül halálos következményű, komoly égést szenvedhet.

Az új és lemerült elemeket gyermekektől tartsa távol.

Ha az elemrekesz nem zár biztonságosan, akkor ne használja tovább a terméket és gyermekektől tartsa távol.

Ha úgy gondolja, hogy az elemeket lenyelték vagy más testrészbe dugták, akkor azonnal hívja fel a háziorvosát.

#### VIGYÁZAT

Robbanásveszély áll fenn, ha nem megfelelő típusúra cseréli ki az elemet. Az elemet mindig azonos típusúra cserélje.

# VIGYÁZAT

Robbanásveszély, illetve éghető folyadék-, vagy gázszivárgás-veszély áll fenn.

Ne használja, tárolja vagy vigye nagyon magas hőmérsékletű vagy nagy magasságok miatti nagyon alacsony nyomású környezetbe. A lemerült elemeket ne próbálja meg elégetni, széttörni vagy felvágni.

🍂 Táto značka je bezpečnostná značka/značka upozomenia.

Batériu nekonzumujte.

Nebezpečenstvo chemického popálenia

Tento výrobok obsahuje mincovú/gombíkovú článkovú batériu.

Ak dôjde k požitiu mincovej/gombíkovej článkovej batérie, v priebehu len 2 hodín môže dôjsť k vážnym vnútorným popáleninám a k smrti.

Nové a použité batérie uchovávajte mimo dosahu detí.

Ak priehradku na batérie nemožno bezpečne uzavrieť, prestaňte výrobok používať a uschovajte ho mimo dosahu detí.

Ak si myslíte, že došlo k požitiu batérií alebo k ich vloženiu do ktorejkoľvek časti tela, okamžite vyhľadajte zdravotnícku pomoc.

#### UPOZORNENIE

Ak batériu vymeníte za nesprávny typ, môže dôjsť k výbuchu. Batériu nahraďte rovnakým typom.

#### **UPOZORNENIE**

Riziko výbuchu alebo unikania horľavej kvapaliny alebo plynu.

Nepoužívajte/neskladujte/neprinášajte do prostredia s extrémne vysokou teplotou alebo extrémne nízkym tlakom vo veľmi vysokej nadmorskej výške. Použitú batériu sa nepokúšajte spaľovať, drviť ani prerezať.



Tato značka je bezpečnostní varovnou značkou.

# Baterii nepolykejte.

Nebezpečí poleptání žíravinou.

Tento výrobek obsahuje knoflíkovou elektrickou baterii.

Pokud byste knoflíkovou elektrickou baterii spolkli, může to i jen do 2 hodin způsobit těžké vnitřní poleptání a vést to až k úmrtí.

Nové i použité baterie držte mimo dosah dětí.

Pokud by schránka baterie nebyla bezpečně uzavřena, pak takový výrobek přestaňte používat a držte jej mimo dosah dětí.

Pokud byste si mysleli, že mohlo dojít ke spolknutí baterie nebo k jejímu umístění do nějaké části těla, vyhledejte okamžitou lékařskou pomoc.

# **UPOZORNĚNÍ**

Pokud by byla baterie vyměněna za nesprávný typ, hrozí riziko exploze. Baterii vyměňujte za stejný typ.

# **UPOZORNĚNÍ**

Hrozí exploze nebo únik hořlavých kapalin nebo plynů.

V prostředí s extrémně vysokou teplotou nebo extrémně nízkým tlakem kvůli hodně vysoké nadmořské výšce to nepoužívejte, neskladujte to v něm, ani to do něj nepřinášejte. Baterii se nepokoušejte spálit, rozbít nebo rozřezat.



Ta oznaka je varnostna/opozorilna oznaka.

Baterij ne zaužijte.

Nevanost kemiičnih opeklin.

Ta izdelek vsebuje baterijo v obliki kovanca / gumbasto celico.

V primeru zaužitja baterije v obliki kovanca / gumbaste celice, le ta lahko povzroči resne notranje opekline v samo 2 urah in celo smrt.

Nove in uporabljene baterije hranite izven dosega otrok.

Če razdelka za baterijo ne morete zaprete, prenehajte uporabljati izdelek in ga hranite izven dosega otrok.

Če menite, da je bila baterija zaužita ali pa se nahaja v notranjosti kateregakoli dela telesa, nemudoma poiščite zdravniško pomoč.

#### **POZOR**

Če baterijo zamenjate z nepravilno vrsto baterije, obstaja tveganje eksplozije. Baterijo zamenjajte z njej enako baterijo.

#### **POZOR**

Tveganje eksplozije ali uhajanja gorljive tekočine ali plina.

Ne uporabljajte / skladiščite / hranite baterije v okolju z izredno visoko temperaturo ali z izredno nizkim tlakom zaradi visoke nadmorske višine. Uporabljene baterije ne poskušajte zažgati, zdrobiti ali rezati.



Šis ženklas - tai saugos / įspėjamasis ženklas.

Neprarykite elemento.

Cheminio nudegimo pavojus

Šiame gaminyje yra monetos / sagos formos elementas.

Prarijus monetos / sagos formos elementą, vos per 2 valandas galima patirti sunkių vidinių nudegimų ir mirti.

Naujus ir naudotus elementus laikykite vaikams nepasiekiamoje vietoje.

Jei elementų skyrius tvirtai neužsidaro, nenaudokite gaminio ir laikykite jį vaikams nepasiekiamoje vietoje.

Jei manote, kad elementai galėjo būti praryti arba įkišti į bet kurią kūno dalį, nedelsdami kreipkitės į medicinos įstaigą.

#### DĖMESIO

Elementą pakeitus netinkamo tipo gaminiu kyla sprogimo pavojus.

Elementa pakeiskite tokio paties tipo gaminiu.

# **DÉMESIO**

Sprogimo arba degaus skysčio ar dujų nuotėkio pavojus.

Nenaudokite / nelaikykite / neatneškite į itin aukštos temperatūros aplinką ar aplinka, kurioje slėgis itin žemas dėl labai didelio aukščio. Nemėginkite naudotą elementą deginti, traiškyti ar pjaustyti.



Šī ir drošības/brīdinājuma atzīme.

Nenorijiet akumulatoru.

Kīmiska apdeguma risks

Šis produkts satur monētas/pogas elementa akumulatoru.

Monētas/pogas elementa akumulatora norīšanas gadījumā tas var izraisīt nopietnus iekšējus apdegumus 2 stundu laikā un, iespējams, nāvi.

Jaunus un lietotus akumulatorus sargājiet no bērniem.

Ja akumulatora nodalījumu nevar stingri aizvērt, pārtrauciet produkta lietošanu un sargājiet to no bērniem.

Ja domājat, ka akumulators ir norīts vai ievietots kādā kermena atverē, nekavējoties nepieciešama medicīniska palīdzība.

# UZMANĪBU

levietojot nepareiza veida akumulatoru, pastāv sprādziena risks. Nomainiet tikai ar tāda paša veida akumulatoriem.

#### UZMANĪBU

Sprādziena vai uzliesmojoša šķidruma vai gāzes noplūdes risks.

Nelietojiet/neglabājiet/neienesiet vidē, kurā ir ļoti augsta temperatūra vai ārkārtīgi zems spiediens loti liela augstuma ietekmē.

Izlietoto akumulatoru nemēģiniet dedzināt, sasmalcināt vai sagriezt.



Niniejszy znak jest znakiem bezpieczeństwa/ostrzeżenia.

Nie wolno połykać baterii.

Istnieje zagrożenie poparzeniem chemicznym.

Produkt ten zawiera baterię typu guzikowego.

W przypadku połknięcia może ona spowodować poważne poparzenia wewnętrzne w ciągu zaledwie 2 godzin i doprowadzić do śmierci.

Nowe i zużyte baterie należy przechowywać z dala od dzieci.

Jeśli komora baterii nie zamyka się prawidłowo, należy zaprzestać używania produktu i przechowywać go z dala od dzieci.

Jeśli istnieje prawdopodobieństwo, że bateria została połknięta albo znalazła się w inny sposób wewnątrz ciała, należy natychmiast zgłosić się do lekarza.

#### **UWAGA**

W przypadku wymiany baterii na baterię nieprawidłowego typu istnieje zagrożenie wybuchem. Wymieniać wyłącznie na baterię takiego samego typu.

# UWAGA

Zagrożenie wybuchem lub wyciekiem łatwopalnej cieczy lub gazu.

Nie stosować, nie przechowywać ani nie wprowadzać do środowiska o skrajnie wysokiej temperaturze lub skrajnie niskim ciśnieniu związanym z bardzo dużą wysokością nad poziomem morza. Nie próbować palić, miażdżyć ani ciąć baterii.



Þetta merki er öryggis-/viðvörunarmerki.

Gleypið ekki rafhlöðuna.

Hætta á efnabruna

Þessi vara inniheldur flata rafhlöðu.

Ef rafhlaðan er gleypt getur það valdið alvarlegum innvortis brunasárum á innan við 2 klukkutímum, sem getur leitt til dauða.

Geymið nýjar og notaðar rafhlöður þar sem börn ná ekki til.

Ef rafhlöðuhólfið lokast ekki örugglega, skal hætta notkun vörunnar og geyma hana þar sem börn ná ekki til.

Ef grunur leikur á að rafhlöður hafi verið gleyptar eða settar inn í eitthvert líkamsop, skal leita læknishjálpar tafarlaust.

#### VARÚĐ

Hætta á sprengingu ef rafhlöðunni er skipt út fyrir ranga gerð.

Notið sömu gerð af rafhlöðu þegar skipt er um hana.

#### VARÚĐ

Hætta á sprengingu eða leka á eldfimum vökva eða gasi.

Má ekki nota/geyma/flytja í umhverfi þar sem er afar hár hiti eða afar lágur loftþrýstingur vegna mikillar hæðar yfir sjávarmáli.

Ekki má reyna að brenna, kremja eða skera í notaða rafhlöðu.



Dette merket er sikkerhets-/advarselsmerke.

Du må ikke spise batterier.

Fare for kjemisk forbrenning

Dette produktet inneholder et cellebatteri.

Hvis cellebatteriet svelges, kan det forårsake alvorlige interne forbrenninger bare på 2 timer, og kan føre til døden.

Hold nye og brukte batterier utenfor barnas rekkevidde.

Hvis batterirommet ikke lukkes riktig, stopp bruken av produktet og hold det på avstand fra barn.

Hvis du har mistanke om at batteriene er blitt svelget eller kommet inn i kroppen, oppsøk lege umiddelbart.

# FORSIKTIG!

Fare for eksplosjon hvis batteriet byttes ut med et feil batteri.

Skift ut batteriet med ett av samme type.

#### FORSIKTIG!

Fare for eksplosjon eller lekkasje av antennelig væske eller gass.

Bruk ikke/oppbevar ikke under ekstrem temperatur eller ekstremt trykk på grunn av betraktelig høyde over havet.

Forsøk ikke å brenne, knuse eller kappe batteriet.

Този знак представлява знак за безопасност/предупреждение.

Не поглъщайте батерията.

Опасност от изгаряне на химикали

Този продукт съдържа кръгла плоска батерия.

Ако кръглата плоска батерия е погълната, тя може да причини тежки вътрешни изгаряния само за 2 часа и може да доведе до смърт.

Пазете новите и използвани батерии далеч от деца.

Ако отделението за батериите не се затваря добре, спрете да използвате продукта и го дръжте далеч от деца.

Ако смятате, че батериите биха могли да бъдат погълнати или поставени в някоя част на тялото, потърсете незабавно медицинска помощ.

Опасност от експлозия, ако батерията е заменена от неправилен тип. Сменете батерията със същия тип.

#### ВНИМАНИЕ

Опасност от експлозия или изтичане на запалима течност или газ.

Не използвайте/съхранявайте/въвеждайте в среда с изключително висока температура или изключително ниско налягане поради много високата височина. Не се опитвайте да изгаряте, смачквате или отрязвате използваната батерия.



Acest marcaj este un marcaj de siguranță/avertizare.

A nu se ingera bateria.

Pericol de arsură chimică

Acest produs conține o baterie tip monedă / nasture.

În cazul înghițirii bateriei tip monedă / nasture, în doar 2 ore se pot produce arsuri interne grave, care pot provoca decesul persoanei.

A nu se lăsa la îndemâna copiilor bateriile noi, precum nici cele uzate.

În cazul în care un compartiment pentru baterii nu se închide corect, întrerupeți utilizarea produsului și nu îl lăsați la îndemâna copiilor.

În cazul înghițirii sau al introducerii bateriei în orice parte a corpului, solicitați imediat îngrijire medicală.

# ATENTIE!

Risc de explozie în cazul înlocuirii bateriei cu una de alt tip. Înlocuiți bateria cu una de același tip.

# ATENTIE!

Risc de explozie sau de scurgeri de lichide sau gaze inflamabile.

A nu se folosi / depozita / amplasa în medii cu temperaturi extrem de ridicate sau cu presiuni extrem de scăzute generate de altitudinii foarte mari. A nu se arde, zdrobi sau tăia bateriile uzate.



Ovo je sigurnosna oznaka / oznaka upozorenja.

Nemojte gutati bateriju.

Opasnost od kemijskih opeklina

Ovaj proizvod sadržava kovanica-baterije ili gumb-baterije.

Ako se kovanica-baterija ili gumb-baterija proguta, to u roku od samo dva sata može uzrokovati ozbiljne unutarnje opekline te rezultirati smrću.

Nove i upotrijebljene baterije držite dalje od djece.

Ako utor za bateriju nije sigurno zatvoren, prestanite upotrebljavati proizvod i držite ga dalje od djece.

Ako mislite da su baterije možda progutane ili stavljene u bilo koji dio tijela, zatražite hitnu medicinsku pomoć.

# **OPREZ**

Rizik od eksplozije ako se baterija zamijeni neispravnim tipom baterije. Bateriju zamijenite istim tipom.

#### **OPREZ**

Rizik od eksplozije ili istjecanja zapaljive tekućine ili plina.

Nemojte upotrebljavati / pohranjivati / unositi u okruženje iznimno visokih temperatura ili iznimno niskog tlaka zbog vrlo visoke nadmorske visine. Nemojte pokušavati spaljivati, drobiti ili rezati iskorištenu bateriju.



Ovo je oznaka za bezbednost/oznaka upozorenja.

Ne gutajte baterije.

Rizik od hemijskih opekotina

Ovaj proizvod sadrži baterije u obliku novčića / dugmeta.

U slučaju gutanja baterije u obliku novčića / dugmeta, može doći do ozbiljnih unutrašnjih opekotina u roku od samo 2 sata, što može dovesti do smrtnog ishoda. Držite i nove i stare (korišćene) baterije van domašaja dece.

U slučaju da pregrada za baterije ne može da se zatvori na bezbedan način, prestanite da koristite proizvod i odložite ga van domašaja dece.

Ukoliko mislite da je došlo do gutanja baterija ili do njihovog umetanja u bilo koji deo tela, momentalno se obratite lekaru.

#### **OPREZ**

Rizik od eksplozije u slučaju zamene baterije drugom baterijom neodgovarajućeg tipa. Zamenite bateriju drugom baterijom istog tipa.

# OPREZ

Rizik od eksplozije ili curenja zapaljive tečnosti ili gasa.

Ne koristite / ne odlažite / ne unosite u okruženje sa izuzetno visokim temperaturama ili u okruženje sa izuzetno niskim pritiskom zbog velike nadmorske visine. Ne pokušavajte da zapalite, da zgnječite ili da presečete korišćenu bateriju.

Aquesta marca és una marca de seguretat/advertència.

No ingeriu la pila.

Perill de cremades químiques

Aquest producte conté una pila de botó.

Si s'empasseu la pila de botó, aquesta pot causar greus cremades internes en només 2 hores i provocar la mort.

Mantingueu les piles noves i usades lluny de l'abast dels nens.

Si el compartiment de la pila no es tanca de manera segura, deixeu d'utilitzar el producte i allunyeu-lo dels nens.

Si creieu que les piles podrien haver estat empassades o col·locades dins de qualsevol part del cos, busqueu atenció mèdica immediata.

#### **PRECAUCIÓ**

Risc d'explosió si la pila se substitueix per una altra d'un tipus incorrecte. Substituïu la pila per una altra del mateix tipus.

#### **PRECAUCIÓ**

Risc d'explosió o fuga de líquids o gasos inflamables.

No la utilitzeu/guardeu/porteu a un entorn de temperatura extremadament alta o amb una pressió extremadament baixa a causa de l'altitud molt elevada. No intenteu cremar, aixafar o tallar la pila usada.



Bu bir güvenlik uyarısı/damgasıdır.

Pili yutmayınız.

Kimyasal Yanık Tehlikesi

Bu ürün, düğme / hücre pil içermektedir.

Düğme / hücre pil yutulduğu takdirde, sadece 2 saat içerisinde tehlikeli iç yanıklara neden olabilir ve ölüme yol açabilir.

Yeni ve kullanılmış pilleri çocuklardan uzak tutunuz.

Pil bölmesi güvenli bir şekilde kapanmıyorsa, ürünü kullanmayınız ve çocuklardan uzak tutunuz.

Pillerin yutulmuş veya vücudun içinde herhangi bir yere yerleştirilmiş olduğundan şüphelenirseniz, derhal tıbbi müdahale başvurusunda bulununuz.

#### DİKKAT

Pil yanlış bir türle değiştirildiği takdirde patlama riski ortaya çıkabilir. Aynı türde bir pille değiştiriniz.

Patlama veya yanıcı sıvı ya da gaz sızıntısı riski.

Aşırı yüksek ısı veya çok yüksek rakım sebebiyle aşırı düşük basınç olan ortamlarda kullanmayınız / saklamayınız / bulundurmayınız. Kullanılmış pilleri yakma, ezme veya kesme girişiminde bulunmayınız.



Kjo shenjë është simbol sigurie/paralajmërimi.

Mos e përtypni baterinë.

Rrezik për Djegie Kimike

Ky produkt përmban pole/butona baterie.

Nëse poli/butoni gëlltitet, mund të shkaktojë djegje të brendshme të rënda në vetëm dy orë dhe mund të çojë drejt vdekjes.

Mbani bateritë e reja dhe të përdorura larg fëmijëve.

Nëse ndarja e baterisë nuk mbyllet mirë,, ndërpritni përdorimin e produktit dhe mbajeni larg fëmijëve.

Nëse mendoni se bateritë mund të jenë gëlltitur ose vendosur brenda çdo pjese të trupit, kërkoni kujdes të menjëhershëm mjekësor.

#### **KUJDES**

Rrezik shpërthimi nëse bateria zëvendësohet nga një tip tjetër i pasaktë. Zëvendësoni baterinë me të njëjtin tip baterie.

#### **KUJDES**

Rrezik shpërthimi ose rrjedhje të lëngut apo gazit.

Mos e përdorni apo ta ruani në mjedis me temperaturë jashtëzakonisht të lartë ose presion jashtëzakonisht të ulët për shkak të lartësisë gjeografike shumë të lartë. Mos u përpiqni të digjni, shtypni ose prisni me mjete baterinë e përdorur.

Dispose of used batteries according to the local laws.

Käytetyt paristot hävitetään paikallisten säännösten ja määräysten mukaisesti.

Gebruikte batterijen gerecycled in overeenstemming met de plaatselijke voorschriften.

Les batteries utilisées doivent être recyclées selon les lois locales.

Förbrukade batterier återvinns i enlighet med lokala föreskrifter.

De brugte batterier genbruges i overensstemmelse med lokale regler.

Verbrauchte Batterien werden entsprechend den lokalen Rechtsvorschriften entsorgt.

Οι χρησιμοποιημένες μπαταρίες απορρίπτονται σύμφωνα με τους τοπικούς κανονισμούς.

Smaltire le batterie esauste in base alle normative locali vigenti.

Deseche las baterías usadas de acuerdo con la ley local.

As baterias usadas são descartadas de acordo com as leis locais.

Armi I-batteriji qodma skont il-ligijiet lokali.

Kasutatud patareide utiliseerimine toimub vastavalt kohalikule seadusele.

A használt elemek megsemmisétése a helyi jogszabályok értelmében történik.

Použité batérie sa likvidujú podľa miestnych zákonov.

Použité baterie zlikvidujte v souladu s místními předpisy.

Uporabljene baterije odstranite v skladu z lokalnimi predpisi.

Naudotas baterijas utilizuokite pagal vietinius įstatymus.

Izmantotās baterijas utilizē saskaņā ar vietējo likumdošanu.

Zużyte baterie należy utylizować zgodnie z prawem lokalnym.

Fargaðu notuðum rafhlöðum samkvæmt innlendum lögum.

Brukte batterier resirkuleres i henhold til lokale bestemmelser.

Използваните батерии се рециклират в съответствие с местните разпоредби.

Aruncați bateriile uzate în conformitate cu legile locale.

Iskorištene baterije reciklirati u skladu s lokalnim propisima.

Искоришћене батерије одлажите у складу са локалним прописима.

Eliminació de bateries utilitzades d'acord amb les lleis locals.

Kullanılmış piller yerel mevzuata uygun olarak bertaraf edilecektir.

Hidhni bateritë e përdorura sipas ligjeve lokale.

# ▶ For vehicles sold in Ukraine

приймач: мо

модель:

23ABF

передавач: модель:

12BFY

смугу радіочастот:

433.58/434.42 МГц

максимальну потужність випромінювання (ERP):

0.01 мВт

виробник: DENSO CORPORATION

адреса:

1-1, Showa-cho, Kariya-shi, Aichi-ken, 448-8661, Japan

справжнім DENSO CORPORATION заявляє, що тип радіообладнання відповідає

Технічному регламенту радіообладнання;

повний текст декларації про відповідність доступний на веб-сайті за такою адресою:

https://www.denso.com/global/en/contact-us/doc/



▶ For vehicles sold in Serbia

 $\epsilon$ 

DENSO 12BFY

# ▶ For vehicles sold in Israel

טויוטה מוטור אירופה נו\סא, שדרות דו בורגט 60-1140 בריסל, בלגיה www.toyota-europe.com

	DENSO:	סימן רשום	
	ראה מוצר:	שנת ייצור	
מוצר: מערכת כניסה מרחוק ללא מפתח ו- TPMS (מקלט)			
	23ABF:	דגם	
	: יפן	ארץ ייצור	
מוצר: שלט רחוק להכנסת המערכת לפעולה (משרד)			
	12BFY:	דגם	
	: יפן	ארץ ייצור	

#### Millimeter wave radar sensor

#### Manufacturer Postal Address

ADC Automotive Distance Control Systems GmbH Peter-Dornier-Strasse 10, 88131 Lindau, Germany

# ОПРОСТЕНА ЕС ДЕКЛАРАЦИЯ ЗА СЪОТВЕТСТВИЕ

С настоящото ADC Automotive Distance Control Systems GmbH декла рира, че този тип радиосъоръжение ARS5-B е в съответствие с Дире ктива 2014/53/EC. Цялостният текст на EC декларацията за съответс твие може да се намери на следния интернет адрес: http://continental.automotive-approvals.com/

радиочестотната лента или ленти, в която или които работи радиосъ оръжението: 76–77 GHz

максималната радиочестотна мощност, излъчвана в радиочестотнат а лента или ленти, в която или които работи радиосъоръжението.: 2.0 W (33dBm RMS EIRP)

### DECLARACIÓN UE DE CONFORMIDAD SIMPLIFICADA

Por la presente, ADC Automotive Distance Control Systems GmbH declara que el tipo de equipo radioeléctrico ARS5-B es conforme con la Directiva 2014/53/UE. El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente: http://continental.automotive-approvals.com/

Banda o bandas de frecuencia en las que opera el equipo radioeléctrico: 76–77 GHz

Potencia máxima de radiofrecuencia transmitida en la banda o bandas de frecuencia en las que opera el equipo radioeléctrico: 2.0 W (33dBm RMS EIRP)

# ZJEDNODUŠENÉ EU PROHLÁŠENÍ O SHODĚ

Tímto ADC Automotive Distance Control Systems GmbH prohlašuje, že typ rádio-vého zařízení ARS5-B je v souladu se směrnicí 2014/53/EU. Ú plné znění EU prohlášení o shodě je k dispozici na této internetové adrese:

http://continental.automotive-approvals.com/

Kmitočtové pásmo (kmitočtová pásma), v němž (v nichž) rádiové zařízení pracuje: 76–77 GHz

Maximální radiofrekvenční výkon vysílaný v kmitočtovém pásmu (v kmito čtových pásmech), v němž (v nichž) je rádiové zařízení provozováno: 2.0 W (33dBm RMS EIRP)

### FORENKLET EU-OVERENSSTEMMELSESERKLÆRING

Hermed erklærer ADC Automotive Distance Control Systems GmbH, at ra-dioudstyrstypen ARS5-B er i overensstemmelse med direktiv 2014/53/EU. EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:

http://continental.automotive-approvals.com/

Frekvensbånd, som radioudstyret fungerer på: 76–77 GHz

Maksimal radiofrekvenseffekt, der udsendes i de frekvensbånd, som radioudstyret fungerer på: 2.0 W (33dBm RMS EIRP)

#### VEREINFACHTE EU-KONFORMITÄTSERKLÄRUNG

Hiermit erklärt ADC Automotive Distance Control Systems GmbH, dass der Funkanlagentyp ARS5-B der Richtlinie 2014/53/EU entspricht. Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

http://continental.automotive-approvals.com/

Das Frequenzband oder die Frequenzbänder, in dem bzw. denen die Funkanlage betrieben wird: 76–77 GHz

Die in dem Frequenzband oder den Frequenzbändern, in dem bzw. denen die Funkanlage betrieben wird, abgestrahlte maximale Sendeleistung: 2.0 W (33dBm RMS EIRP)

# LIHTSUSTATUD ELI VASTAVUSDEKLARATSIOON

Käesolevaga deklareerib ADC Automotive Distance Control Systems GmbH, et käesolev raadioseadme tüüp ARS5-B vastab direktiivi 2014/53/EL nõuetele. ELi vastavusdeklaratsiooni täielik tekst on kä ttesaadav järgmisel internetiaadressil:

http://continental.automotive-approvals.com/

Sagedusriba(d), millel raadioseade töötab: 76–77 GHz

Raadioseadme töösagedus(t)el edastatav maksimaalne saatevõimsus: 2.0 W (33dBm RMS EIRP)

#### ΑΠΛΟΥΣΤΕΥΜΕΝΗ ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ ΕΕ

Με την παρούσα ο/η ADC Automotive Distance Control Systems GmbH, δηλώνει ότι ο ραδιοεξοπλισμός ARS5-B πληροί την οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλο υθη ιστοσελίδα στο διαδίκτυο:

http://continental.automotive-approvals.com/

Οι ζώνες συχνοτήτων στις οποίες λειτουργεί ο ραδιοεξοπλισμός:: 76–77 GHz

η μέγιστη ραδιοηλεκτρική ισχύς στις ζώνες συχνοτήτων στις οποίες λειτο υργεί ο ραδιοεξοπλισμός: 2.0 W (33dBm RMS EIRP)

### SIMPLIFIED EU DECLARATION OF CONFORMITY

Hereby, ADC Automotive Distance Control Systems GmbH declares that the radio equipment type ARS5-B is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

http://continental.automotive-approvals.com/

Frequency band(s) in which the radio equipment operates: 76–77 GHz

Maximum radio-frequency power transmitted in the frequency band(s) in which the radio equipment operates: 2.0 W (33dBm RMS EIRP)

### **DECLARATION UE DE CONFORMITE SIMPLIFIEE**

Le soussigné, ADC Automotive Distance Control Systems GmbH, dé clare que l'équipement radioélectrique du type ARS5-B est conforme à la directive 2014/53/UE. Le texte complet de la déclaration UE de conformit é est disponible à l'adresse internet suivante:

http://continental.automotive-approvals.com/

Bandes de fréquences utilisées par l'équipement radioélectrique: 76–77 GHz

Puissance de radiofréquence maximale transmise sur les bandes de fré quences utilisées par l'équipement radioélectrique: 2.0 W (33dBm RMS EIRP)

### POJEDNOSTAVLJENA EU IZJAVA O SUKLADNOSTI

ADC Automotive Distance Control Systems GmbH ovime izjavljuje da je radijska oprema tipa ARS5-B u skladu s Direktivom 2014/53/EU. Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi::

http://continental.automotive-approvals.com/

Frekvencijski pojas (frekvencijski pojasi) u kojem (kojima) radijska oprema radi: 76–77 GHz

Najveća radiofrekvencijska snaga koja se prenosi u frekvencijskom pojasu (frekvencijskim pojasima) u kojem (kojima) radijska oprema radi: 2.0 W (33dBm RMS EIRP)

# DICHIARAZIONE DI CONFORMITÀ UE SEMPLIFICATA

Il fabbricante, ADC Automotive Distance Control Systems GmbH, dichiara che il tipo di apparecchiatura radio ARS5-B è conforme alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet: http://continental.automotive-approvals.com/

Thep://continental.datemetre approvale.com/

Bande di frequenza di funzionamento dell'apparecchiatura radio: 76–77 GHz

Massima potenza a radiofrequenza trasmessa nelle bande di frequenza in cui opera l'apparecchiatura radio:

2.0 W (33dBm RMS EIRP)

# VIENKĀRŠOTA ES ATBILSTĪBAS DEKLARĀCIJA

Ar šo ADC Automotive Distance Control Systems GmbH deklarē, ka radioiekārta ARS5-B atbilst Direktīvai 2014/53/ES. Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: http://continental.automotive-approvals.com/

Frekvenču joslu(-as), kurā(-ās) radioiekārtas darbojas: 76–77 GHz

Frekvenču joslā(-ās), kurā(-ās) darbojas radioiekārtas, maksimālo pārraid ītā signāla jaudu.: 2.0 W (33dBm RMS EIRP)

#### SUPAPRASTINTA ES ATITIKTIES DEKLARACIJA

Aš, ADC Automotive Distance Control Systems GmbH, patvirtinu, kad radijo įrenginių tipas ARS5-B atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: http://continental.automotive-approvals.com/

Dažnių juosta (-os), kurioje (-iose) veikia radijo įrenginiai: 76–77 GHz

Didžiausia radijo dažnių galia, perduodama toje (tose) dažnių juostoje (ose), kurioje (-iose) veikia radijo įrenginiai: 2.0 W (33dBm RMS EIRP)

# EGYSZERŰSÍTETT EU-MEGFELELŐSÉGI NYILATKOZAT

ADC Automotive Distance Control Systems GmbH igazolja, hogy a ARS5-B típusú rádióberendezés megfelel a 2014/53/EU irányelvnek. Az EU-megfelelőségi nyilat-kozat teljes szövege elérhető a következő internetes címen::

http://continental.automotive-approvals.com/

Az(ok) a frekvenciasáv(ok), amely(ek)en a rádióberendezés működik: 76 –77 GHz

Az abban a frekvenciasávban vagy azokban a frekvenciasávokban tová bbított max-imális jelerősség, amely(ek)ben a rádióberendezés üzemel: 2.0 W (33dBm RMS EIRP)

# DIKJARAZZJONI SSIMPLIFIKATA TA' KONFORMITÀ TAL-UE

B'dan, ADC Automotive Distance Control Systems GmbH, niddikjara li dan it-tip ta' tagħmir tar-radju ARS5-B huwa konformi mad-Direttiva 2014/53/UE. It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan I-indirizz tal-Internet li gej: http://continental.automotive-approvals.com/

II-medda/meded tal-frekwenza li jaħdem fihom it-tagħmir tar-radju: 76–77 GHz

II-potenza massima tal-frekwenza tar-radju trażmessa fil-medda/meded tal-frekwenza li jaħdem fihom it-tagħmir tar- radju: 2.0 W (33dBm RMS EIRP)

# VEREENVOUDIGDE EU-CONFORMITEITSVERKLARING

Hierbij verklaar ik, ADC Automotive Distance Control Systems GmbH, dat het type radioapparatuur ARS5-B conform is met Richtlijn 2014/53/EU. De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres: http://continental.automotive-approvals.com/

Frequentieband(en) waarin de radioapparatuur functioneert: 76–77 GHz

Maximaal radiofrequent vermogen uitgezonden in de frequentieband(en) waarin de radioapparatuur functioneert: 2.0 W (33dBm RMS EIRP)

### UPROSZCZONA DEKLARACJA ZGODNOŚCI UE

ADC Automotive Distance Control Systems GmbH niniejszym oś wiadcza, że typ urządzenia radiowego ARS5-B jest zgodny z dyrektywą 2014/53/UE. Pełny tekst deklaracji zgodności UE jest dostępny pod nast ępującym adresem internetowym:

http://continental.automotive-approvals.com/

Zakresu(-ów) częstotliwości, w którym (których) pracuje urządzenie radiowe: 76–77 GHz

Maksymalnej mocy częstotliwości radiowej emitowanej w zakresie(-ach) częstotli-wości, w którym (których) pracuje urządzenie radiowe: 2.0 W (33dBm RMS EIRP)

#### DECLARAÇÃO UE DE CONFORMIDADE SIMPLIFICADA

O(a) abaixo assinado(a) ADC Automotive Distance Control Systems GmbH declara que o presente tipo de equipamento de rádio ARS5-B est á em conformi-dade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:

http://continental.automotive-approvals.com/

A(s) banda(s) de frequências em que o equipamento de rádio funciona: 76–77 GHz

A potência máxima de radiofrequências transmitida na(s) banda(s) de frequênci-as em que o equipamento de rádio funciona: 2.0 W (33dBm RMS EIRP)

### DECLARAȚIA UE DE CONFORMITATE SIMPLIFICATĂ

Prin prezenta, ADC Automotive Distance Control Systems GmbH declară că tipul de echipamente radio ARS5-B este în conformitate cu Directiva 2014/53/UE. Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:

http://continental.automotive-approvals.com/

Banda (benzile) de frecvențe în care funcționează echipamentul radio: 76–77 GHz

Puterea maximă de radiofrecvență transmisă în banda (benzile) de frecvențe în care funcționează echipamentul radio: 2.0 W (33dBm RMS EIRP)

# ZJEDNODUŠENÉ EÚ VYHLÁSENIE O ZHODE

ADC Automotive Distance Control Systems GmbH týmto vyhlasuje, že rá diové zariadenie typu ARS5-B je v súlade so smernicou 2014/53/EÚ. Ú plné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: http://continental.automotive-approvals.com/

Frekvenčné pásmo resp. pásma, v ktorých rádiové zariadenie pracuje: 76–77 GHz

Maximálny vysokofrekvenčný výkon prenášaný vo frekvenčnom pásme, resp. pásmach, v ktorých rádiové zariadenie pracuje: 2.0 W (33dBm RMS EIRP)

#### POENOSTAVLJENA IZJAVA EU O SKLADNOSTI

ADC Automotive Distance Control Systems GmbH potrjuje, da je tip radijske opreme ARS5-B skladen z Direktivo 2014/53/EU. Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:

http://continental.automotive-approvals.com/

Frekvenčni pas ali pasovi, na katerih deluje radijska oprema: 76–77 GHz

Največja energija za radijsko frekvenco, preneseno po frekvenčnem pasu ali pasovih, na katerih radijska oprema deluje: 2.0 W (33dBm RMS EIRP)

### YKSINKERTAISTETTU EU-VAATIMUSTENMUKAISUUSVAKUUTUS

ADC Automotive Distance Control Systems GmbH vakuuttaa, että radiolaitetyyppi ARS5-B on direktiivin 2014/53/EU mukainen. EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraa-vassa internetosoitteessa:

http://continental.automotive-approvals.com/

Radiotaajuudet, joilla radiolaite toimii: 76-77 GHz

Suurin mahdollinen lähetysteho radiotaajuuksilla, joilla radiolaite toimii: 2.0 W (33dBm RMS EIRP)

# FÖRENKLAD EU-FÖRSÄKRAN OM ÖVERENSSTÄMMELSE

Härmed försäkrar ADC Automotive Distance Control Systems GmbH att denna typ av radioutrustning ARS5-B överensstämmer med direktiv 2014/53/EU. Den fullständiga texten till EU-försäkran om överensstä mmelse finns på följande webbadress:

http://continental.automotive-approvals.com/

Det eller de frekvensband där radioutrustningen arbetar: 76–77 GHz

Den maximala radiofrekvenseffekt som överförs inom det eller de frekvensband där radioutrustningen arbetar:

2.0 W (33dBm RMS EIRP)

# EINFÖLDUÐ ESB SAMRÆMISYFIRLÝSING

Hér með lýsir ADC Automotive Distance Control Systems GmbH því yfir, að fjarskiptabúnaðurinn að gerð ARS5-B er í samræmi við tilskipun 2014/53/ ESB. Textinn í fullri lengd um Samræmisyfirlýsingu ESB er að gengilegur á eftirfarandi veffangi:

http://continental.automotive-approvals.com/

Bandbreidd(ir), sem fjarskiptabúnaðurinn starfar í: 76–77 GHz

Hámarks fjarskiptatíðni sendistyrkleika í bandbreiddinni/bandbreiddunum sem fjarskiptabúnaðurinn starfar í: 2.0 W (33dBm RMS EIRP)

### BASİTLEŞTİRİLMİŞ AB UYGUNLUK BEYANI

Işbu belge ile, ADC Automotive Distance Control Systems GmbH şirketi ARS5-B tipi radyo ekipmanının 2014/53/AB sayılı direktife uygun olduğ unu beyan eder. AB uygunluk beyanının tam metni aşağıdaki İnternet adresinde mevcut-tur:

http://continental.automotive-approvals.com/

Radyo cihazının çalıştığı frekans bandı/bantları: 76–77 GHz

Radyo ekipmanının çalıştığı frekans bandında/bantlarında iletilen maksimum radyo frekansı gücü: 2.0 W (33dBm RMS EIRP)



#### **Manufacturer Postal Address**

ADC Automotive Distance Control Systems GmbH Peter-Dornier-Strasse 10, 88131 Lindau, Germany

# SIMPLIFIED UK DECLARATION OF CONFORMITY

Hereby, ADC Automotive Distance Control Systems GmbH declares that the radio equipment type ARS5-B is in compliance with Radio Equipment Regulations of the United Kingdom. The full text of the UK declaration of conformity is available at the following internet address: http://continental.automotive-approvals.com/

Frequency band(s) in which the radio equipment operates: 76–77 GHz

Maximum radio-frequency power transmitted in the frequency band(s) in which the radio equipment operates: 2.0 W (33dBm RMS EIRP)

#### ▶ For vehicles sold in Ukraine



## СПРОЩЕНА ДЕКЛАРАЦІЯ про відповідність

справжнім (найменування виробника ADC Automotive Distance Control Systems GmbH) заявляє, що тип радіообладнання (позначен ня типу радіообладнання ARS5-B) відповідає Технічному регламенту радіообладнання;

повний текст декларації про відповідність доступний на веб-сайті за такою адресою: http://continental.automotive-approvals.com/

#### найменування та адресу виробника

АДС Автомотів Дістанс Контрол Сістемс ГмбХ Пітер-Дорніер-Штрассе 10, 88131, Ліндау, Німеччина (ADC Automotive Distance Control Systems GmbH Peter-Dornier-Strasse 10, 88131, Lindau, Germany)

### СПРОЩЕНА ДЕКЛАРАЦІЯ ЄС ПРО ВІДПОВІДНІСТЬ

Цим ADC Automotive Distance Control Systems GmbH заявляє, що ра діообладнання типу ARS5-В відповідає вимогам Директиви 2014/53/EU. Повний текст декларації ЄС про відповідність доступний за наступною адресою в мережі Інтернет:

http://continental.automotive-approvals.com/

Частотний діапазон(-и), в якому працює радіообладнання: 76–77 ГГц Максимальна потужність радіочастотного сигналу, що передається у частотному діапазоні(-ах), в якому працює радіообладнання: 2.0 Вт (33 дБм) Пікова ефективна потужність випромінювання

ARS5-B has been registered with: UA RF: 1CONT0008

▶ For vehicles sold in Serbia



# Wireless charger

Manufacturer

- •Name: Panasonic Corporation
- · Address: 4261 Ikonobe-cho, Tsuzuki-ku, Yokohama-shi, Kanagawa-ken, 224-8520, Japan

Specifications of Wireless charger Frequency band:120.3-128.549kHz Maximum output power: 10W Max

Model No.[\*]
CA-QT2BX04D
CA-QT2BX14D
CA-QT2BX24D
CA-QT2BX34D
CA-QT2BX44D
CA-QT2BX54D
CA-QT2BX54D
CA-QT2BX64D
CA-QT2BX74D



Hereby, Panasonic Corporation declares that the radio equipment type [\*] is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

http://www.ptc.panasonic.eu/

С настоящото Panasonic Corporation декларира, че този тип радиосъоръжение [\*] е в съответствие с Директива 2014/53/ЕС. Цялостният текст на ЕС декларацията за съответствие може да се намери на следния интернет адрес:

http://www.ptc.panasonic.eu/

Tímto Panasonic Corporation prohlašuje, že typ rádiového zařízení [ \* ] je v souladu se směrnicí 2014/53/EU.

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese: http://www.ptc.panasonic.eu/

Hermed erklærer Panasonic Corporation, at radioudstyrstypen [\*] er i overensstemmelse med direktiv 2014/53/EU.

EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:

http://www.ptc.panasonic.eu/

Hiermit erklärt Panasonic Corporation, dass der Funkanlagentyp [ \* ] der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

http://www.ptc.panasonic.eu/

Käesolevaga deklareerib Panasonic Corporation, et käesolev raadioseadme tüüp [\*] vastab direktiivi 2014/53/EL nõuetele.

ELi vastavusdeklaratsiooni täielik tekst on kättesaadav järgmisel internetiaadressil:

http://www.ptc.panasonic.eu/

Με την παρούσα ο/η Panasonic Corporation, δηλώνει ότι ο ραδιοεξοπλισμός [ \* ] πληροί την οδηγία 2014/53/ΕΕ.

Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:

http://www.ptc.panasonic.eu/

Por la presente, Panasonic Corporation declara que el tipo de equipo radioeléctrico [ \* ] es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:

http://www.ptc.panasonic.eu/

Le soussigné, Panasonic Corporation, déclare que l'équipement radioélectrique du type [ \* ] est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:

http://www.ptc.panasonic.eu/

Il fabbricante, Panasonic Corporation, dichiara che il tipo di apparecchiatura radio [\*] è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:

http://www.ptc.panasonic.eu/

Ar šo Panasonic Corporation deklarē, ka radioiekārta [  $^{\star}$  ] atbilst Direktīvai 2014/53/ES.

Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē: http://www.ptc.panasonic.eu/

Aš, Panasonic Corporation, patvirtinu, kad radijo įrenginių tipas [\*] atitinka Direktyvą 2014/53/ES.

Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu: http://www.ptc.panasonic.eu/

Panasonic Corporation ovime izjavljuje da je radijska oprema tipa [  $^{\star}$  ] u skladu s Direktivom 2014/53/EU.

Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedećoj internetskoj adresi: http://www.ptc.panasonic.eu/

Panasonic Corporation igazolja, hogy a [ \* ] típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:

http://www.ptc.panasonic.eu/

B'dan, Panasonic Corporation, niddikjara li dan it-tip ta' tagħmir tar-radju [ \* ] huwa konformi mad-Direttiva 2014/53/UE.

lt-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li gej:

http://www.ptc.panasonic.eu/

Hierbij verklaar ik, Panasonic Corporation, dat het type radioapparatuur [\*] conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:

http://www.ptc.panasonic.eu/

Panasonic Corporation niniejszym oświadcza, że typ urządzenia radiowego [\*] jest zgodny z dyrektywą 2014/53/UE.

Pełny tekst deklaracji zgodności UE jest dostępny pod następującym adresem internetowym:

http://www.ptc.panasonic.eu/

O(a) abaixo assinado(a) Panasonic Corporation declara que o presente tipo de equipamento de rádio [\*] está em conformidade com a Diretiva 2014/53/UE. O texto integral da declaração de conformidade está disponível no seguinte endereço de Internet:

http://www.ptc.panasonic.eu/

Prin prezenta, Panasonic Corporation declară că tipul de echipamente radio [ \* ] este în conformitate cu Directiva 2014/53/UE.

Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:

http://www.ptc.panasonic.eu/

Panasonic Corporation týmto vyhlasuje, že rádiové zariadenie typu [\*] je v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese: http://www.ptc.panasonic.eu/

Panasonic Corporation potrjuje, da je tip radijske opreme [ \* ] skladen z Direktivo 2014/53/EU.

Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:

http://www.ptc.panasonic.eu/

Panasonic Corporation vakuuttaa, että radiolaitetyyppi [\*] on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:

http://www.ptc.panasonic.eu/

Härmed försäkrar Panasonic Corporation att denna typ av radioutrustning [\*] överensstämmer med direktiv 2014/53/EU.

Den fullständiga texten till EU-försäkran om överensstämmelse finns på följande webbadress:

http://www.ptc.panasonic.eu/

# ▶ For vehicles sold in United Kingdom

Manufacturer

·Name: Panasonic Corporation

•Address: 4261 Ikonobe-cho, Tsuzuki-ku, Yokohama-shi, Kanagawa-ken, 224-8520, Japan

Specifications of Wireless charger Frequency band:120.3-128.549kHz Maximum output power: 10W Max

Model No.[\*] CA-QT2BX44D CA-QT2BX54D CA-QT2BX64D CA-QT2BX74D



Hereby, Panasonic Corporation declares that the radio equipment type [  $^{\star}$  ] is in compliance with The Radio Equipment Regulations 2017.

The full text of the UK declaration of conformity is available at the following internet address:

https://www.ptc.panasonic.eu/

# ▶ For vehicles sold in Ukraine

Бездротовий зарядний пристрій смугу радіочастот, в якій працює радіообладнання; 119.3-128.6kHz максимальну потужність випромінювання в смузі радіочастот, в якій працює радіообладнання; 10W

моделі №.[\*] CA-QT2BX04D CA-QT2BX14D CA-QT2BX24D CA-QT2BX34D

справжнім Panasonic Corporation заявляє, що тип радіообладнання [ \* ] відповідає Технічному регламенту радіообладнання; повний текст декларації про відповідність доступний на веб-сайті за такою адресою: https://service.panasonic.ua/ (розділ «Технічне регулювання»)

# ▶ For vehicles sold in Moldova

Producător

Nume: Panasonic Corporation

Adresa: 4261 Ikonobe-cho, Tsuzuki-ku, Yokohama-shi, Kanagawa-ken, 224-

8520, Japonia

încărcător wireless

Banda de frecvență : 120.3-128.549kHz Puterea maximă a frecvenței radio : 10W

Numarul modelului.[\*] CA-QT2BX04D CA-QT2BX14D CA-QT2BX24D CA-QT2BX34D



Prin prezenta, Panasonic corporație declară că tipul de echipamente radio [\*] este în conformitate cu Reglementarea tehnică "Punerea la dispoziție pe piață aechipamentelor radio".

Textul integral al declarației de conformitate este disponibil la următoarea adresă de Internet:https://service.panasonic.ua

# ▶ For vehicles sold in Turkey

### Üretici firma

· İsim : Panasonic Corporation

Adres: 4261 Ikonobe-cho, Tsuzuki-ku, Yokohama-shi, Kanagawa-ken, 224-8520, Japonya

kablosuz şarj cihazı

Frekans bandı : 120.3-128.549kHz Maksimum radyo frekansı gücü : 10W



Panasonic Corporation, [\*] tipi radyo ekipmanının 2014/53 / AB Yönetmeliğine uygun olduğunu beyan eder.

Uygunluk beyanının tam metnine aşağıdaki internet adresinden ulaşılabilir:

http://www.ptc.panasonic.eu/

Model No.[\*] CA-QT2BX04D CA-QT2BX14D CA-QT2BX24D

CA-QT2BX34D

▶ For vehicles sold in the Albania, Gibraltar, Bosnia and Herzegovina, Macedonia, and Montenegro



Access to http://www.ptc.panasonic.eu/, enter the below Model No. into the keyword search box, you can download the latest "DECLARATION of CONFORMITY" (DoC).

Model No.[\*] CA-QT2BX04D CA-QT2BX14D CA-QT2BX24D CA-QT2BX34D

# ▶ For vehicles sold in Serbia

Спецификације бежичног пуњача

•Фреквенцијски опсег: 120.3-128.549 kHz

•Максимална излазна снага: 10 W

Овим путем Панасониц Цорпоратион изјављује да је тип радио опреме [\*] у складу са Директивом 2014/53/ЕУ.

Пун текст ЕУ изјаве о усаглашености доступан је на следећој интернет адреси:

https://www.ptc.panasonic.eu/

Model No.[\*]

CA-QT2BX04D

CA-QT2BX14D

CA-QT2BX24D

CA-QT2BX34D

# Tire pressure warning system

• Manufacturer's name: PACIFIC INDUSTRIAL CO., LTD.



This trademark is registered in the following countries: UK, Italy, Austria, Greece, Germany, France, Belgium, the Netherlands, Luxembourg, Portugal.

- Manufacturer's address: 1300-1 Yokoi, Godo-cho, Anpachi-gun, Gifu, 503-2397 JAPAN
- •Operating frequency band: 433.05 434.79MHz
- Maximum radio-frequency power: 100dBµV/m@3m(Radiated)

Hereby, PACIFIC INDUSTRIAL CO., LTD. declares that the radio equipment type PMV-E100 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

PACIFIC INDUSTRIAL CO., LTD. vakuuttaa, että radiolaitetyyppi PMV-E100 on direktiivin 2014/53/EU mukainen.

EU-vaatimustenmukaisuusvakuutuksen täysimittainen teksti on saatavilla seuraavassa internetosoitteessa:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Hierbij verklaar ik, PACIFIC INDUSTRIAL CO., LTD., dat het type radioapparatuur PMV-E100 conform is met Richtlijn 2014/53/EU.

De volledige tekst van de EU-conformiteitsverklaring kan worden geraadpleegd op het volgende internetadres:

Le soussigné, PACIFIC INDUSTRIAL CO., LTD., déclare que l'équipement radioélectrique du type PMV-E100 est conforme à la directive 2014/53/UE.

Le texte complet de la déclaration UE de conformité est disponible à l'adresse internet suivante:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Härmed försäkrar PACIFIC INDUSTRIAL CO., LTD. att denna typ av radioutrustning PMV-E100

överensstämmer med direktiv 2014/53/EU.

Den fullständiga texten till EU-försäkran om överensstä mmelse finns på följande webbadress:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Hermed erklærer PACIFIC INDUSTRIAL CO., LTD., at radioudstyrstypen PMV-E100 er i

overensstemmelse med direktiv 2014/53/EU.

EU-overensstemmelseserklæringens fulde tekst kan findes på følgende internetadresse:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Hiermit erklärt PACIFIC INDUSTRIAL CO., LTD., dass der Funkanlagentyp PMV-E100 der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Με την παρούσα ο/η PACIFIC INDUSTRIAL CO., LTD., δηλώνει ότι ο ραδιοεξοπλισμός PMV-E100 πληροίτην οδηγία 2014/53/ΕΕ.Το πλήρες κείμενο της δήλωσης συμμόρφωσης ΕΕ διατίθεται στην ακόλουθη ιστοσελίδα στο διαδίκτυο:

Il fabbricante, PACIFIC INDUSTRIAL CO., LTD., dichiara che il tipo di apparecchiatura radio PMV-E100 è conforme alla direttiva 2014/53/UE.

Il testo completo della dichiarazione di conformità UE è disponibile al seguente indirizzo Internet:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Por la presente, PACIFIC INDUSTRIAL CO., LTD. declara que el tipo de equipo radioeléctrico PMV-E100 es conforme con la Directiva 2014/53/UE.

El texto completo de la declaración UE de conformidad está disponible en la dirección Internet siguiente:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

O(a) abaixo assinado(a) PACIFIC INDUSTRIAL CO., LTD. declara que o presente tipo de equipamento de rádio PMV-E100 está em conformidade com a Diretiva 2014/53/UE.

O texto integral da declaração de conformidade está disponí vel no seguinte endereço de Internet:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

B'dan, PACIFIC INDUSTRIAL CO., LTD., niddikjara li dan ittip ta' taghmir tar-radju PMV-E100 huwa konformi mad-Direttiva 2014/53/UE.

It-test kollu tad-dikjarazzjoni ta' konformità tal-UE huwa disponibbli f'dan l-indirizz tal-Internet li gej:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Käesolevaga deklareerib PACIFIC INDUSTRIAL CO., LTD., et käesolev raadioseadme tüüp PMV-E100 vastab direktiivi 2014/53/EL nõuetele.

ELi vastavusdeklaratsiooni täielik tekst on kättesaadav jä rgmisel internetiaadressil:

PACIFIC INDUSTRIAL CO., LTD. igazolja, hogy a PMV-E100 típusú rádióberendezés megfelel a 2014/53/EU irányelvnek.

Az EU-megfelelőségi nyilatkozat teljes szövege elérhető a következő internetes címen:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

PACIFIC INDUSTRIAL CO., LTD. týmto vyhlasuje, že rádiové zariadenie typu PMV-E100 je

v súlade so smernicou 2014/53/EÚ.

Úplné EÚ vyhlásenie o zhode je k dispozícii na tejto internetovej adrese:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Tímto PACIFIC INDUSTRIAL CO., LTD. prohlašuje, že typ rá diového zařízení PMV-E100 je v souladu se směrnicí 2014/53/EU.

Úplné znění EU prohlášení o shodě je k dispozici na této internetové adrese:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

PACIFIC INDUSTRIAL CO., LTD. potrjuje, da je tip radijske opreme PMV-E100 skladen z Direktivo 2014/53/EU.

Celotno besedilo izjave EU o skladnosti je na voljo na naslednjem spletnem naslovu:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Aš, PACIFIC INDUSTRIAL CO., LTD., patvirtinu, kad radijo į renginių tipas PMV-E100 atitinka Direktyvą 2014/53/ES. Visas ES atitikties deklaracijos tekstas prieinamas šiuo interneto adresu:

Ar šo PACIFIC INDUSTRIAL CO., LTD. deklarē, ka radioiekā rta PMV-E100 atbilst Direktīvai 2014/53/ES.

Pilns ES atbilstības deklarācijas teksts ir pieejams šādā interneta vietnē:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

PACIFIC INDUSTRIAL CO., LTD. niniejszym oświadcza, że typ urządzenia radiowego PMV-E100 jest zgodny z dyrektyw a 2014/53/UE.

Pełny tekst deklaracji zgodności UE jest dostępny pod nastę pującym adresem internetowym:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Hér með lýsir PACIFIC INDUSTRIAL CO., LTD. yfir því að PMV-E100 er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 2014/53/EU.

Samræmisyfirlýsing er einnig aðgengileg á eftirfarandi vefslóð:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

PACIFIC INDUSTRIAL CO., LTD. erklærer at PMV-E100 er i overensstemmelse med direktiv 2014/53/EU.

Samsvarserklæringen i fulltekst er tilgjengelig på følgende internettadresse:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

С настоящото PACIFIC INDUSTRIAL CO., LTD. дек ларира, че този тип радиосъоръже ниеPMV-E100 е в съответствие с Директива 2014/53/ЕС.

Цялостният текст на ЕС декларац ията за съответствие може да се н амери на следния интернет адрес: https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/ Prin prezenta, PACIFIC INDUSTRIAL CO., LTD. declară că tipul de echipamente radio PMV-E100 este în conformitate cu Directiva 2014/53/UE.

Textul integral al declarației UE de conformitate este disponibil la următoarea adresă internet:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

U ovom dokumentu, PACIFIC INDUSTRIAL CO., LTD. deklariše da je radio oprema model PMV-E100 usklađena sa Directive 2014/53/EU.

Cio tekst EU deklaracije usklađenosti dostupan je na slijedećoj interent adresi:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Овим, PACIFIC INDUSTRIAL CO., LTD. изјављује да је радио опрема типа PMV-E100 усклађена са Directive 2014/53/EU.

Комплетан текст декларације ЕУ за усаглашеност доступан је на следећој веб адреси:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

PACIFIC INDUSTRIAL CO., LTD. ovime izjavljuje da je radijska oprema tipa PMV-E100 u skladu s Direktivom 2014/53/EU.

Cjeloviti tekst EU izjave o sukladnosti dostupan je na sljedeć oj internetskoj adresi:

https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

Këtu, PACIFIC INDUSTRIAL CO., LTD. deklaron se pajisja radio PMV-E100 është në përputhje me Directive 2014/53/EU.

Teksti i plotë i deklaratës së konformitetit të BE-së gjendet në adresën e mëposhtme të internetit: https://www.pacific-ind.co.jp/eng/products/car/tpms/doc/

#### ▶ For vehicles sold in Ukraine



• Модель: PMV-E100

• Виробник: Pacific Industrial Co., Ltd.

• Найменування та адреса виробника або його уповноваженого представника

Pacific Industrial Co., Ltd. 1300-1 Yokoi, Godo-cho, Anpachi-Gun, Gifu-Pref., 503-2397 Јарап/Японія.


- •Діапазон частот, МГц: 433,05 434,79
- Максимальна вихідна потужність передавача, мВт (дБм): 1,0 (0);
- •Справжнім Pacific Industrial Co., Ltd. заявляє, що радіопередавач системи контролю тиску та температури в шинах автомобіля відповідає Технічному регламенту радіообладнання; повний текст декларації про відповідність доступний на веб-сайті за такою адресою: <a href="https://www.pacific-ind.co.jp//eng/products/car/tpms/doc/ukr/">https://www.pacific-ind.co.jp//eng/products/car/tpms/doc/ukr/</a>
- ▶ For vehicles sold in Serbia



▶ For vehicles sold in Belarus



# GAS STATION INFORMATION

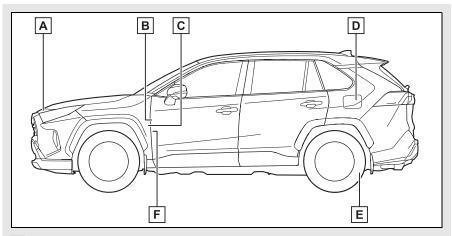

- A Auxiliary catch lever (→P.374)
- **B** Power back door switch<sup>\*</sup> (→P.137)
- $\fbox{\textbf{C}}$  Fuel filler door opener switch ( $\rightarrow$ P.228)
- **D** Fuel filler door (→P.228)
- **E** Tire inflation pressure (→P.484)
- F Hood lock release lever (→P.374)
- \*: Vehicles with power back door

Fuel tank capacity (Reference)	55 L (14.5 gal., 12.1 Imp.gal.)	
Fuel type	Unleaded gasoline only	P.479
Cold tire inflation pressure		P.484
Engine oil capacity (Drain and refill — reference)		P.480
Engine oil type		P.480